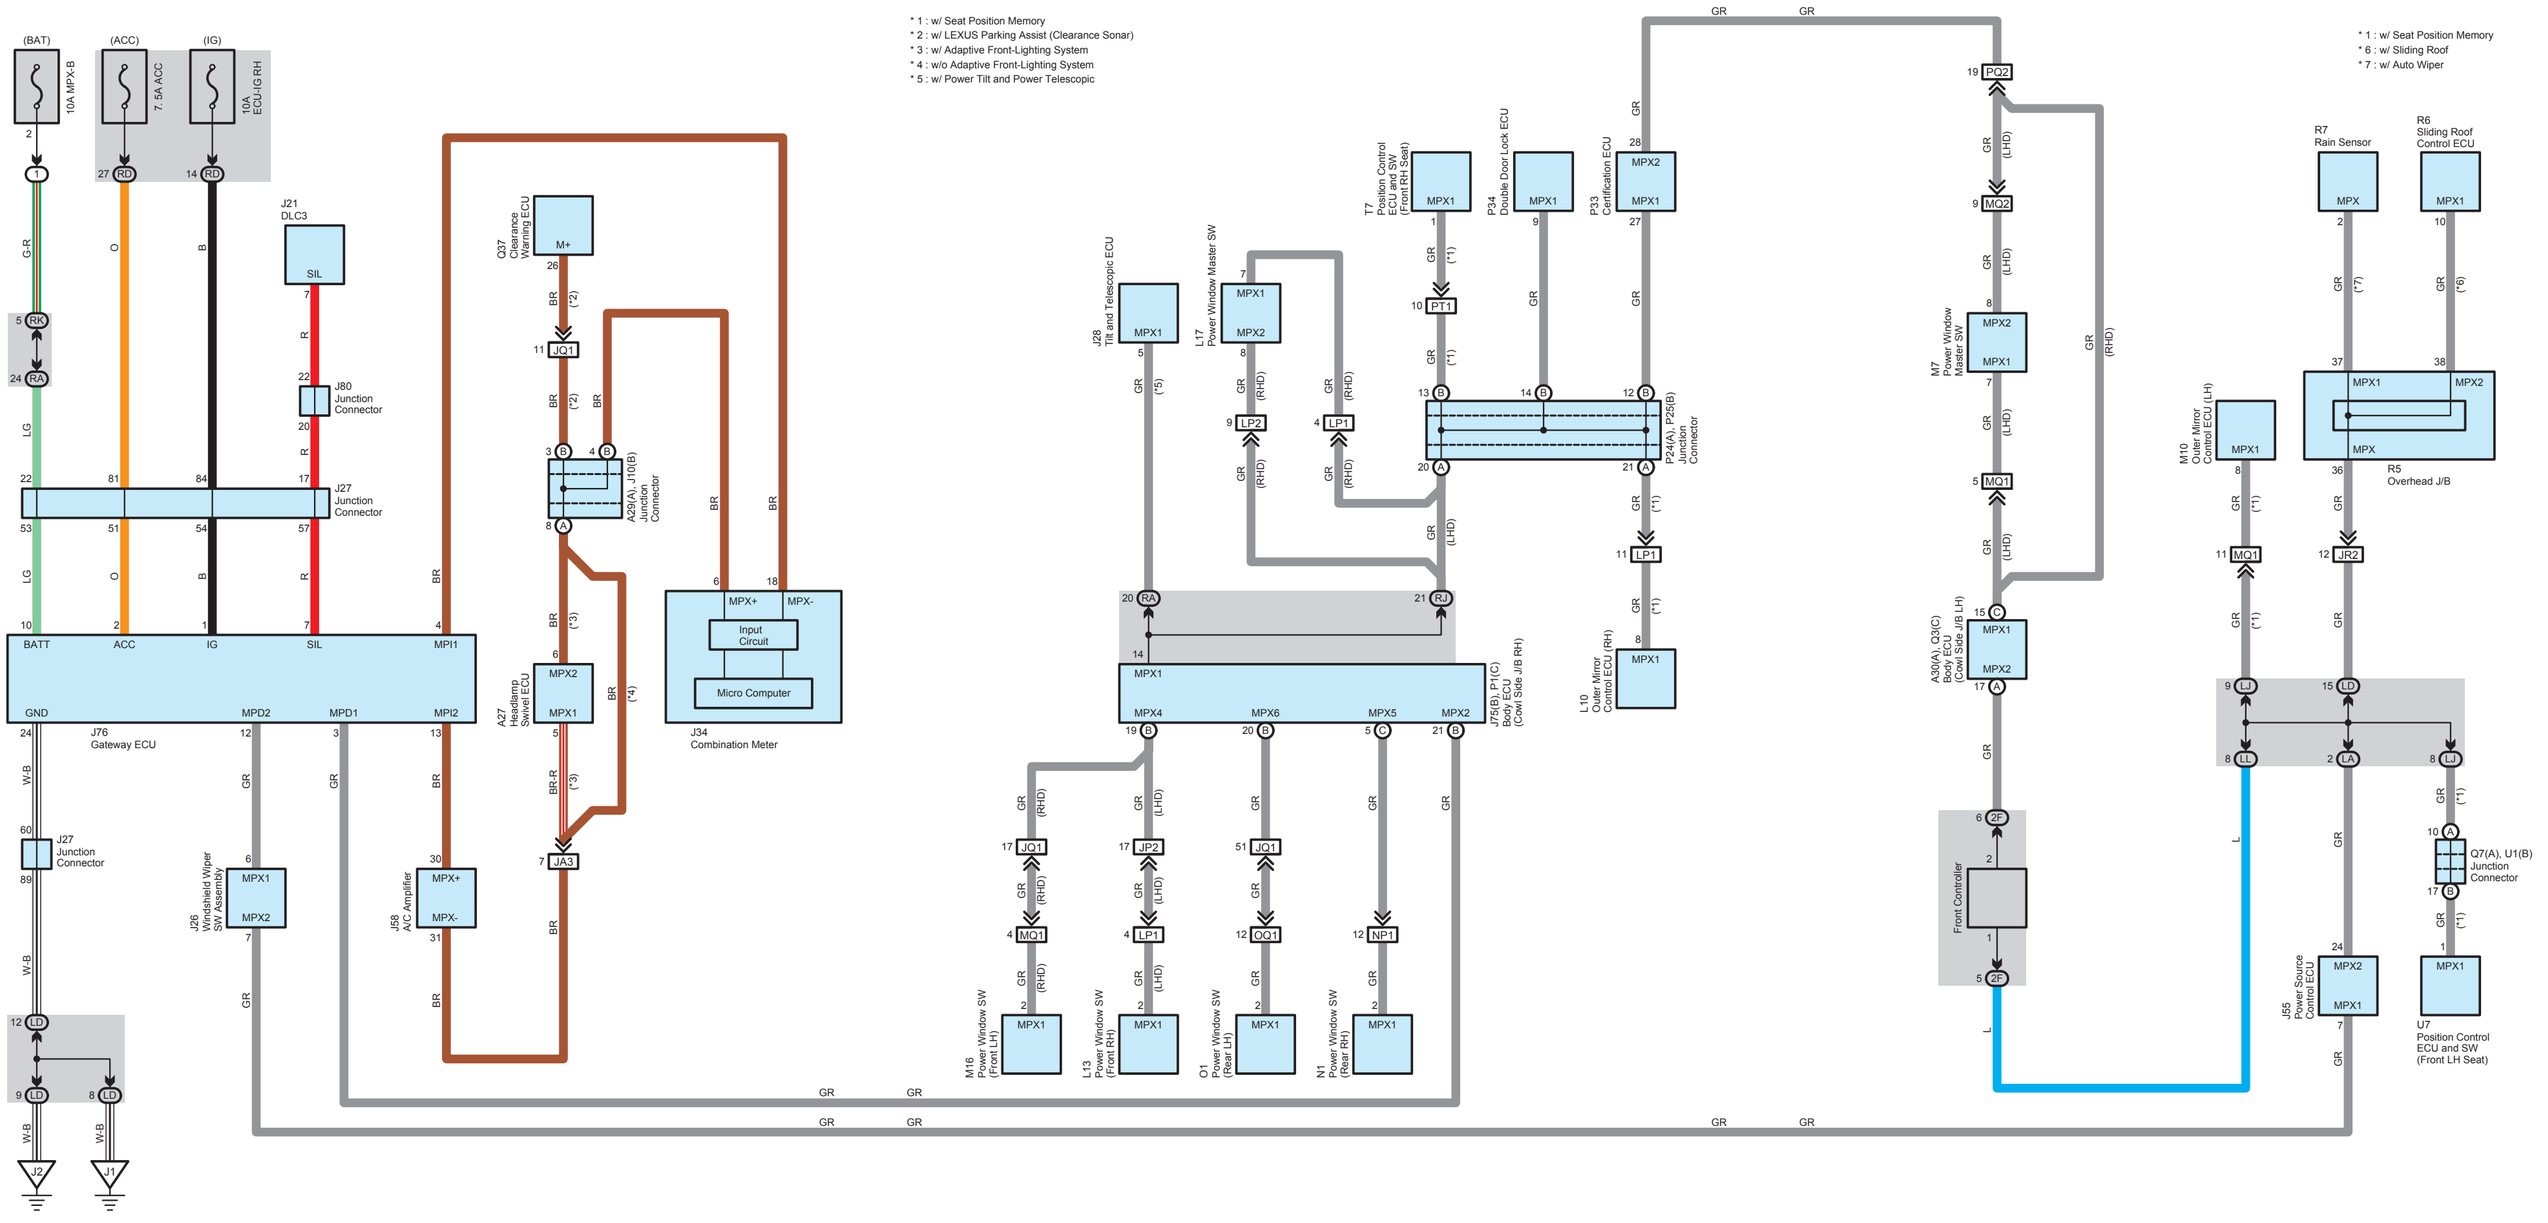
* 1 : w/ Seat Position Memory
* 2 : w/ LEXUS Parking Assist (Clearance Sonar)
* 3 : w/ Adaptive Front-Lighting System
* 4 : w/o Adaptive Front-Lighting System
* 5 : w/ Power Tilt and Power Telescopic
* 1 : w/ Seat Position Memory
* 6 : w/ Sliding Roof
* 7 : w/ Auto Wiper
(BAT)
(ACC)
(IG)
10A MPX-B
7. 5A ACC
10A ECU-IG RH
J21 DLC3
SIL
J80 Junction Connector
J27 Junction Connector
BATT
ACC
IG
SIL
MPI1
GND
MPD2
MPD1
MPI2
J76 Gateway ECU
J27 Junction Connector
J2
J1
Q37 Clearance Warning ECU
M+
A29(A), J10(B) Junction Connector
A27 Headlamp Swivel ECU
MPX2
MPX1
J26 Windshield Wiper SW Assembly
J58 A/C Amplifier
MPX+
MPX-
J34 Combination Meter
Input Circuit
Micro Computer
J28 Tilt and Telescopic ECU
L17 Power Window Master SW
T7 Position Control ECU and SW (Front RH Seat)
P34 Double Door Lock ECU
P33 Certification ECU
P24(A), P25(B) Junction Connector
L10 Outer Mirror Control ECU (RH)
J75(B), P1(C) Body ECU (Cowl Side J/B RH)
M16 Power Window SW (Front LH)
L13 Power Window SW (Front RH)
O1 Power Window SW (Rear LH)
N1 Power Window SW (Rear RH)
M7 Power Window Master SW
A30(A), Q3(C) Body ECU (Cowl Side J/B LH)
Front Controller
R7 Rain Sensor
R6 Sliding Roof Control ECU
R5 Overhead J/B
M10 Outer Mirror Control ECU (LH)
J55 Power Source Control ECU
Q7(A), U1(B) Junction Connector
U7 Position Control ECU and SW (Front LH Seat)