H POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.
The next page and following pages show the parts to which each electrical source outputs current.

Le schéma ci-après indique l'acheminement à travers lequel s'écoule le courant de la batteri à chaque source électrique (lames fusibles, disjoncteurs, fusibles, etc.) et autres pièces.
La page suivante ainsi que celles qui suivent indiquent les piéces auxquelles chaque source électrique produit du courant.

En el siguiente cuadro aparece la ruta que recorre la corriente desde la bateria hasta cada fuente de alimentación (eslabón fusible, fusible, ruptor, etc.) y otras piezas.
Las siguientes páginas indican las partes que reciben alimentación.

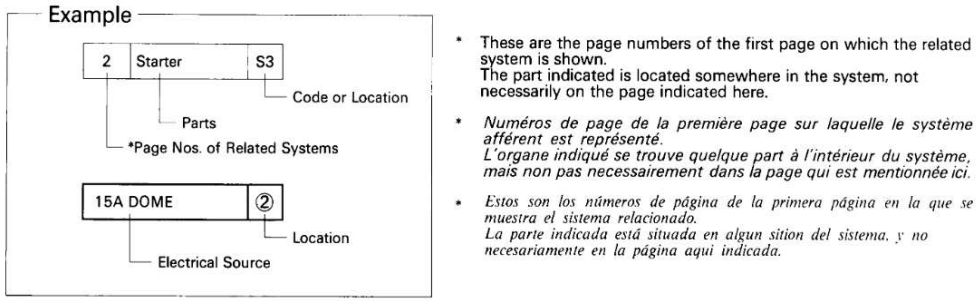

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

* *Numéros de page de la première page sur laquelle le système afférent est représenté.*
L'organe indiqué se trouve quelque part à l'intérieur du système, mais non pas necessairement dans la page qui est mentionnée ici.

* *Estos son los números de página de la primera página en la que se muestra el sistema relacionado.*
La parte indicada está situada en algun sition del sistema, y no necesariamente en la página aqui indicada.

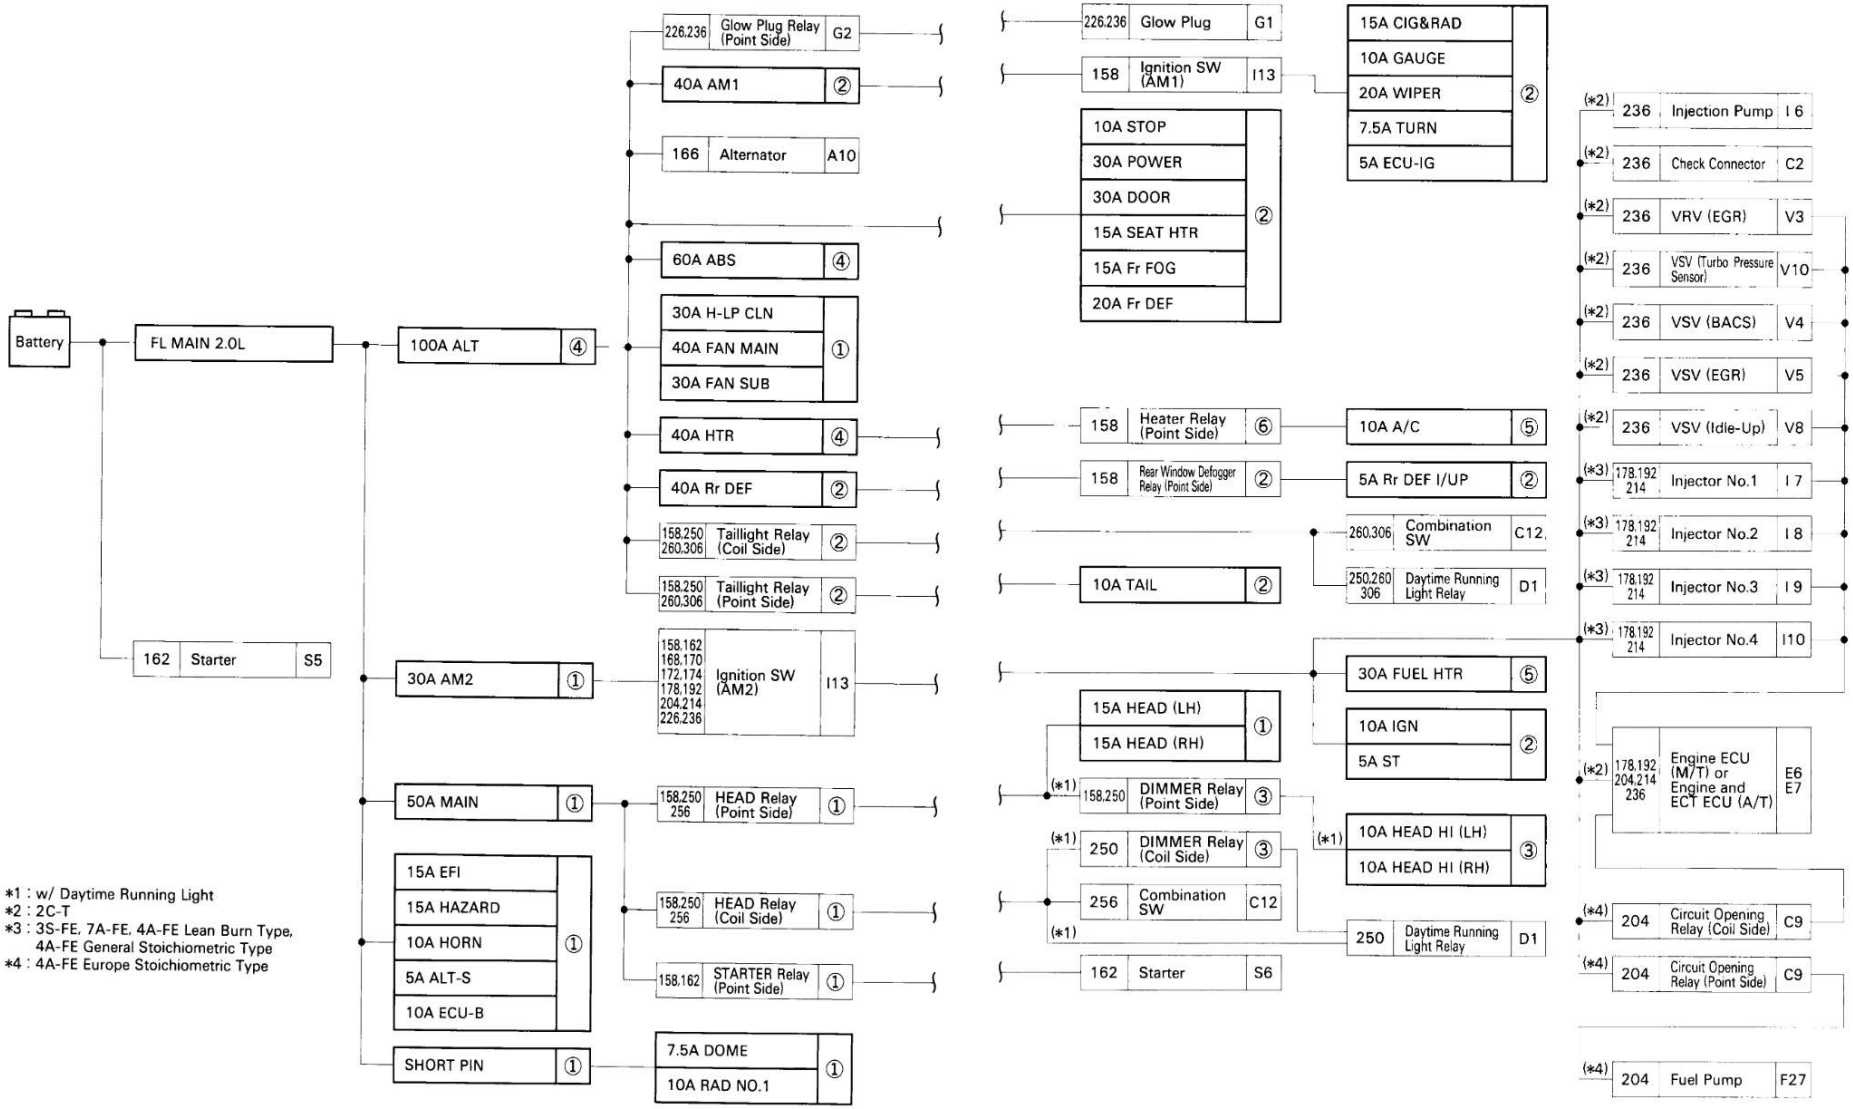

*1 : w/ Daytime Running Light
*2 : 2C-T
*3 : 3S-FE, 7A-FE, 4A-FE Lean Burn Type, 4A-FE General Stoichiometric Type
*4 : 4A-FE Europe Stoichiometric Type

[LOCATION] ① : Engine Room J/B (See page 56) ② : Instrument Panel J/B (See page 58)
⑤ : Fuse Box (See on page 78, 96) ⑥ : R/B No.4 (See page 53)
③ : R/B No.7 (See page 54) ④ : Fusible Link Block (See page 55)

cardiagn.com

H POWER SOURCE (Current Flow Chart)

English

Location	CB or Fuse		A/C Condenser Fan Motor	A/C Magnetic Clutch	A/C Magnetic Clutch and Lock Sensor	A/C Triple Pressure SW (A/C Dual and Single Pressure SW)	ABS ECU with Actuator	Alternator	A/C Amplifier	A/C Amplifier (Automatic)	A/C Amplifier (Automatic)	A/C SW	Ashtray Illumination	Back-Up Light SW	Brake Fluid Level Warning SW	Brake Vacuum Warning SW	Blower Controller	Blower Motor	Blower Resistor	Blower SW	Check Connector	Center Airbag Sensor Assembly	Cigarette Lighter	Cigarette Lighter Illumination
		*Page Nos. of Related Systems	422	434	428 434	422 428 434	354	166	422 434	428	422 428	306 428 434	306	290	414	414	428	428 434	434	306 434	214 236 359	359	372	306
			A2	A3	A4	A5	A6	A11	A13	A14	A15	A19	A25	B1	B2	B3	B4	B5	B6	B7	C2	C5	C7	C8
①	5A	ALT-S						●																
①	7.5A	DOME																						
①	10A	ECU-B																			●	●		
①	10A	HORN																						
①	10A	RAD NO.1																						
①	15A	EFI																			●			
①	15A	HAZARD																						
①	15A	HEAD (LH)																						
①	15A	HEAD (RH)																						
①	30A	FAN SUB	●																					
①	30A	H-LP CLN																						
①	40A	FAN MAIN																						
②	5A	ECU-IG				●	●		●		●													
②	5A	Rr DEF I/UP																						
②	5A	ST																						
②	7.5A	TURN																						
②	10A	IGN					●	●							●	●						●		
②	10A	STOP					●																	
②	10A	TAIL										●	●							●				●
②	15A	CIG&RAD																				●	●	
②	15A	Fr FOG																						
②	10A	GAUGE		●	●	●	●	●	●	●	●	●		●	●	●				●	●			
②	15A	SEAT HTR																						
②	20A	Fr DEF																						
②	20A	WIPER																						
②	30A	DOOR																						
②	30A	POWER																						
②	40A	Rr DEF																						
③	10A	HEAD HI (LH)																						
③	10A	HEAD HI (RH)																						
④	40A	HTR															●	●	●	●				
④	60A	ABS					●																	
⑤	10A	A/C							●			●												
⑤	30A	FUEL HTR																						

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

* *Numéros de page de la première page sur laquelle le système afférent est représenté.*
L'organe indiqué se trouve quelque part à l'intérieur du système, mais non pas nécessairement dans la page qui est mentionnée ici.

* *Estos son los números de página de la primera página en la que se muestra el sistema relacionado.*
La parte indicada está situada en algun sition del sistema, y no necesariamente en la página aquí indicada.

CB or Fuse		178 192 214	178,192 204,214 226,236 336,342 348,414	274 280	354	166	178,192,204 214,226,236 336,342,348 414	296	250 256	306	268	300	359	274 280	256 300	296	274 280	320 324	374	250 296 300 306	328 332	328 332	306 328	204	192 328	328	392 398
		Circuit Opening Relay	Combination Meter	Turn Signal Indicator Light [Comb. Meter]	ABS Warning Light [Comb. Meter]	Charge Warning Light [Comb. Meter]	Combination Meter	Front Fog Light Indicator Light [Comb. Meter]	High Beam Indicator Light [Comb. Meter]	Meter Illumination [Comb. Meter]	Open Door Warning Light [Comb. Meter]	Rear Fog Light Indicator Light [Comb. Meter]	SRS Warning Light [Comb. Meter]	Turn Signal Indicator Light [Comb. Meter]	Combination SW	Front Fog Light SW [Comb. SW]	Turn Signal SW [Comb. SW]	Front and Rear Wiper and Washer SW [Comb. SW]	Horn SW [Comb. SW]	Daytime Running Light Relay	Defogger Relay (Coil Side)	Defogger Relay (Point Side)	Deicer SW	Diode (EFI)	Diode (Idle-Up)	Diode (Idle-Up)	Diode (Power)
		C9	C10				C11								C12			C13		D1	D2			D3	D4	D5	D6	D7
5A	ALT-S																											
7.5A	DOME																											
10A	ECU-B						●				●																	
10A	HORN						●					●	●							●								
10A	RAD NO.1																		●									
15A	EFI																											
15A	HAZARD	●																										
15A	HEAD (LH)			●										●			●											
15A	HEAD (RH)														●													
30A	FAN SUB						●		●						●													
30A	H-LP CLN																											
40A	FAN MAIN																											
5A	ECU-IG																											
5A	Rr DEF I/UP																											
5A	ST																									●		
7.5A	TURN																											
10A	IGN			●										●			●											
10A	STOP				●	●	●																	●				
10A	TAIL																											
15A	CIG&RAD									●					●	●				●			●					
15A	Fr FOG																											
10A	GAUGE							●																				
15A	SEAT HTR		●		●		●													●	●		●					●
20A	Fr DEF																											
20A	WIPER																					●			●	●		
30A	DOOR																	●										
30A	POWER																											
40A	Rr DEF																											
10A	HEAD HI (LH)																											
10A	HEAD HI (RH)																											
40A	HTR						●		●																			
60A	ABS																											
10A	A/C																											
30A	FUEL HTR																											

English

cardiagn.com

[LOCATION] ① : Engine Room J/B (See page 56) ② : Instrument Panel J/B (See page 58)
⑤ : Fuse Box (See on page 78, 96) ⑥ : R/B No.4 (See page 53)

③ : R/B No.7 (See page 54) ④ : Fusible Link Block (See page 55)
⑦ : Engine Room R/B (See page 54) ⑧ : Driver Side R/B (See page 53)

H POWER SOURCE (Current Flow Chart)

English

Location	CB or Fuse		D8	D9	D10	D11	D12	D13	E5	E6	E7	E8	E9	F3	F4	F5	F6	F7	F8	F9	F10
		*Page Nos. of Related Systems	178 192 204 226 359	268	268	268	268	268	306 336 342 348	178,192 204,214 236,336 342,348 422	178,192 214,226 236,336 348,422	192,226 348,422	226	296	296	274 280	274 280	274 280	274 280	320	328
		Parts	DLC3	Diode (Luggage Room Light)	Door Courtesy SW Front LH	Door Courtesy SW Front RH	Door Courtesy SW Rear LH	Door Courtesy SW Rear RH	ECT Pattern Select SW	Engine ECU (M/T) or Engine and ECT ECU (A/T)	Engine ECU (M/T) or Engine and ECT ECU (A/T)	Engine ECU (M/T) or Engine and ECT ECU (A/T)	Engine ECU	Front Fog Light LH	Front Fog Light RH	Front Turn Signal Light LH	Front Turn Signal Light RH	Front Turn Signal Light LH	Front Turn Signal Light RH	Front Washer Motor	Front Window Deicer
①	5A	ALT-S																			
①	7.5A	DOME	●	●	●	●	●	●													
①	10A	ECU-B	●							●											
①	10A	HORN																			
①	10A	RAD NO.1																			
①	15A	EFI								●	●		●								
①	15A	HAZARD														●	●	●	●		
①	15A	HEAD (LH)																			
①	15A	HEAD (RH)																			
①	30A	FAN SUB																			
①	30A	H-LP CLN																			
①	40A	FAN MAIN																			
②	5A	ECU-IG									●	●									
②	5A	Rr DEF I/UP								●		●									
②	5A	ST								●	●		●								
②	7.5A	TURN														●	●	●	●		
②	10A	IGN								●			●								
②	10A	STOP								●											
②	10A	TAIL							●	●											
②	15A	CIG&RAD																			
②	15A	Fr FOG												●	●						
②	10A	GAUGE							●	●	●	●	●								
②	15A	SEAT HTR																			
②	20A	Fr DEF																			●
②	20A	WIPER																		●	
②	30A	DOOR																			
②	30A	POWER																			
②	40A	Rr DEF																			
③	10A	HEAD HI (LH)																			
③	10A	HEAD HI (RH)																			
④	40A	HTR																			
④	60A	ABS																			
⑤	10A	A/C																			
⑤	30A	FUEL HTR																			

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

* *Numéros de page de la première page sur laquelle le système afférent est représenté.*
L'organe indiqué se trouve quelque part à l'intérieur du système, mais non pas necessairement dans la page qui est mentionnée ici.

* *Estos son los números de página de la primera página en la que se muestra el sistema relacionado.*
La parte indicada está situada en algun sitio del sistema, y no necesariamente en la página aquí indicada.

English

Location	CB or Fuse		F11	F12	F13	F21	F27	G3	G4	G5	H1	H2	H3	H4	H5	H7	H8	H9	H10	H11	H12	H13	H14	H15	I1	I2	I3	I4	I7	I8	I9
		*Page Nos. of Related Systems	320	378	414	296	178 192 214	306	306	402	204	250 256 260	250 256 260	316	316	312	178	374	374	274 280 306	306 316	306	306	286	172	168 170	168 170	174	204	204	204
		Parts	Front Wiper Motor	Fuel Heater	Fuel Sedimentary SW	Front Fog Light Relay	Fuel Pump	Glove Box Light	Glove Box Light SW	Glass Breakage Sensor ECU	Hall Sensor	Headlight and Front Clearance Light LH	Headlight and Front Clearance Light RH	Headlight Beam Level Control Actuator LH	Headlight Beam Level Control Actuator RH	Headlight Cleaner Relay	Heated Oxygen Sensor	Horn LH	Horn RH	Hazard SW	Headlight Beam Level Control SW	Headlight Cleaner SW	Heater Control SW	High Mounted Stop Light	Ignition Coil	Ignition Coil and Igniter No.1	Ignition Coil and Igniter No.2	IIA	Injector No.1	Injector No.2	Injector No.3
①	5A	ALT-S																													
①	7.5A	DOME																													
①	10A	ECU-B																													
①	10A	HORN																													
①	10A	RAD NO.1																													
①	15A	EFI																●	●												
①	15A	HAZARD																													
①	15A	HEAD (LH)					●				●						●												●	●	●
①	15A	HEAD (RH)								●										●											
①	30A	FAN SUB										●																			
①	30A	H-LP CLN											●																		
①	40A	FAN MAIN																													
②	5A	ECU-IG														●															
②	5A	Rr DEF I/UP																													
②	5A	ST																													
②	7.5A	TURN																													
②	10A	IGN																													
②	10A	STOP																		●											
②	10A	TAIL			●																				●	●	●	●			
②	15A	CIG&RAD																						●							
②	15A	Fr FOG				●		●	●			●	●	●	●					●	●	●	●								
②	10A	GAUGE																													
②	15A	SEAT HTR				●																									
②	20A	Fr DEF			●																										
②	20A	WIPER																													
②	30A	DOOR	●													●															
②	30A	POWER																													
②	40A	Rr DEF																													
③	10A	HEAD HI (LH)										●																			
③	10A	HEAD HI (RH)											●																		
④	40A	HTR																													
④	60A	ABS																													
⑤	10A	A/C																													
⑤	30A	FUEL HTR		●																											

[LOCATION] ① : Engine Room J/B (See page 56) ② : Instrument Panel J/B (See page 58) ③ : R/B No.7 (See page 54) ④ : Fusible Link Block (See page 55)
⑤ : Fuse Box (See on page 78, 96) ⑥ : R/B No.4 (See page 53) ⑦ : Engine Room R/B (See page 54) ⑧ : Driver Side R/B (See page 53)

cardiagn.com

H POWER SOURCE (Current Flow Chart)

English

Location	CB or Fuse		Injector No.4	ISC Valve	Integration Relay	Interior Light	Lean Mixture Sensor	License Plate Light LH	License Plate Light RH	Luggage Room Light	Luggage Room Light SW	Moon Roof Control Relay and Motor	Moon Roof Control SW	Neutral Start SW	Noise Filter (Ignition System)	Oil Pressure SW	O/D Main SW	Parking Brake SW	Personal Light	Power Window SW (Front Passenger Side)	Power Window SW Rear LH	Power Window SW Rear RH	Power Window Master SW
		*Page Nos. of Related Systems	204	178 192 204 214	380 386 392	268 402	192	260	260	268	268	398	268 398	162.178 192.214 290.336 342.348	168 170 174	414	306 336 342 348 414	414	268	392	392	392	392
			I10	I12	I14	I15	L1	L2	L3	L5	L6	M1	M2	N1	N2	O1	O2	P2	P3	P4	P5	P6	P7
①	5A	ALT-S																					
	7.5A	DOME				●				●	●	●	●						●				
	10A	ECU-B																					
	10A	HORN																					
	10A	RAD NO.1																					
	15A	EFI	●	●			●																
	15A	HAZARD																					
	15A	HEAD (LH)																					
	15A	HEAD (RH)																					
	30A	FAN SUB																					
	30A	H-LP CLN																					
	40A	FAN MAIN																					
②	5A	ECU-IG																					
	5A	Rr DEF I/UP																					
	5A	ST												●									
	7.5A	TURN																					
	10A	IGN													●	●	●	●					
	10A	STOP																					
	10A	TAIL						●	●								●						
	15A	CIG&RAD																					
	15A	Fr FOG																					
	10A	GAUGE												●		●	●	●					
	15A	SEAT HTR																					
	20A	Fr DEF																					
	20A	WIPER																					
	30A	DOOR			●																		
	30A	POWER										●	●							●	●	●	●
	40A	Rr DEF																					
③	10A	HEAD HI (LH)																					
	10A	HEAD HI (RH)																					
④	40A	HTR																					
	60A	ABS																					
⑤	10A	A/C																					
	30A	FUEL HTR																					

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

* *Numéros de page de la première page sur laquelle le système afférent est représenté.*
L'organe indiqué se trouve quelque part à l'intérieur du système, mais non pas nécessairement dans la page qui est mentionnée ici.

* *Estos son los números de página de la primera página en la que se muestra el sistema relacionado.*
La parte indicada está situada en algun sition del sistema, y no necesariamente en la página aquí indicada.

Parts	Power Window Motor (Driver Side)	Power Window Motor (Front Passenger Side)	Power Window Motor Rear LH	Power Window Motor Rear RH	Radiator Fan Motor	Rear Washer Motor	Radio and Player	Rear Window Defogger SW	Remote Control Mirror SW	Back-Up Light LH [Rear Comb. Light LH]	Rear Fog Light LH [Rear Comb. Light LH]	Rear Turn Signal Light LH [Rear Comb. Light LH]	Stop Light LH [Rear Comb. Light LH]	Taillight LH [Rear Comb. Light LH]	Back-Up Light LH [Rear Comb. Light LH]	Rear Fog Light LH [Rear Comb. Light LH]	Back-Up Light RH [Rear Comb. Light RH]	Rear Fog Light RH [Rear Comb. Light RH]	Rear Turn Signal Light RH [Rear Comb. Light RH]	Stop Light RH [Rear Comb. Light RH]	Taillight RH [Rear Comb. Light RH]	Back-Up Light RH [Rear Comb. Light RH]	Rear Fog Light RH [Rear Comb. Light RH]	Rear Window Defogger	Rear Wiper Motor and Relay	Remote Control Mirror LH	Remote Control Mirror RH	Speed Sensor
Page Nos. of Related Systems	392	392	392	392	422	324	306 410	306 328 332	368	290	300	274 280	286	260	290	300	290	300	274 280	286	260	290	300	328 332	324	328 332 368	328 332 368	178.192 204.214 226.236 336.342 348.414
Code or Location	P8	P9	P10	P11	R1	R2	R4	R6	R7	R8					R9		R10					R11		R14	R16	R17	R18	S3
Power Window Motor (Driver Side)																												
Power Window Motor (Front Passenger Side)																												
Power Window Motor Rear LH																												
Power Window Motor Rear RH				●																								
Radiator Fan Motor					●																							
Rear Washer Motor					●																							
Radio and Player							●																					
Rear Window Defogger SW							●	●							●													
Remote Control Mirror SW									●																			
Back-Up Light LH [Rear Comb. Light LH]										●																		
Rear Fog Light LH [Rear Comb. Light LH]											●					●												
Rear Turn Signal Light LH [Rear Comb. Light LH]												●																
Stop Light LH [Rear Comb. Light LH]													●															
Taillight LH [Rear Comb. Light LH]														●														
Back-Up Light LH [Rear Comb. Light LH]															●													
Rear Fog Light LH [Rear Comb. Light LH]																●												
Back-Up Light RH [Rear Comb. Light RH]																	●											
Rear Fog Light RH [Rear Comb. Light RH]																		●										
Rear Turn Signal Light RH [Rear Comb. Light RH]																			●									
Stop Light RH [Rear Comb. Light RH]																				●								
Taillight RH [Rear Comb. Light RH]																					●							
Back-Up Light RH [Rear Comb. Light RH]																						●						
Rear Fog Light RH [Rear Comb. Light RH]																							●					
Rear Window Defogger																								●				
Rear Wiper Motor and Relay																									●			
Remote Control Mirror LH																										●		
Remote Control Mirror RH																										●		
Speed Sensor								●																				

English

cardiagn.com

[LOCATION] ①: Engine Room J/B (See page 56) ②: Instrument Panel J/B (See page 58) ③: R/B No.7 (See page 54) ④: Fusible Link Block (See page 55)
⑤: Fuse Box (See on page 78, 96) ⑥: R/B No.4 (See page 53) ⑦: Engine Room R/B (See page 54) ⑧: Driver Side R/B (See page 53)

Location	CB or Fuse		Seat Heater Relay (Coil Side)	Seat Heater Relay (Point Side)	Seat Heater SW (Driver's Seat)	Seat Heater SW (Front Passenger's Seat)	Stop Light SW	Seat Heater (Driver's Seat)	Seat Heater (Front Passenger's Seat)	Theft Deterrent Siren	Timing Control Valve	Theft Deterrent ECU	Transponder Key ECU	VRV (EGR)	VSV (EGR)	VSV (Fully Closed)	VSV (Idle Opening)	VSV (Swirl Control)	VSV (Turbo Pressure Sensor)	Water Temp. SW	Wireless Door Lock ECU	EFI Relay (Coil Side)
		*Page Nos. of Related Systems	376	376	306 376	306 376	286 336 342 348 354	376	376	402	226	402	244	226	178	226	226	192	226	422	380	178.192.204 214.336.342 348
		CB or Fuse	S7		S8	S9	S11	S12	S13	T1	T3	T5	T6	V3	V5	V6	V7	V9	V10	W3	W4	①
①	5A	ALT-S																				
	7.5A	DOME								●		●									●	
	10A	ECU-B											●									
	10A	HORN																				
	10A	RAD NO.1																				
	15A	EFI									●			●	●	●	●	●	●			
	15A	HAZARD										●										
	15A	HEAD (LH)																				
	15A	HEAD (RH)																				
	30A	FAN SUB																				
	30A	H-LP CLN																				
	40A	FAN MAIN																				
②	5A	ECU-IG								●										●		
	5A	Rr DEF I/UP																				
	5A	ST																				
	7.5A	TURN																				
	10A	IGN											●									●
	10A	STOP					●															
	10A	TAIL			●	●																
	15A	CIG&RAD																				
	15A	Fr FOG																				
	10A	GAUGE	●									●									●	
	15A	SEAT HTR		●	●	●		●	●													
	20A	Fr DEF																				
	20A	WIPER																				
	30A	DOOR																				
	30A	POWER																				
	40A	Rr DEF																				
③	10A	HEAD HI (LH)																				
	10A	HEAD HI (RH)																				
④	40A	HTR																				
	60A	ABS																				
⑤	10A	A/C																				
	30A	FUEL HTR																				

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

* *Numéros de page de la première page sur laquelle le système afférent est représenté.*
L'organe indiqué se trouve quelque part à l'intérieur du système, mais non pas necessairement dans la page qui est mentionnée ici.

* *Estos son los números de página de la primera página en la que se muestra el sistema relacionado.*
La parte indicada está situada en algun sitio del sistema, y no necesariamente en la página aqui indicada.

			EFI Relay (Point Side)	FAN NO.1 Relay (Coil Side)	FAN NO.1 Relay (Point Side)	HORN Relay (Coil Side)	HORN Relay (Point Side)	STARTER Relay (Coil Side)	Rear Window Defogger Relay (Coil Side)	Rear Window Defogger Relay (Point Side)	Diode	Integration Relay	Power Relay (Coil Side)	Power Relay (Point Side)	Heater Relay (Coil Side)	Heater Relay (Point Side)	FAN NO.2 Relay (Coil Side)	FAN NO.2 Relay (Point Side)	FAN NO.3 Relay (Coil Side)	FAN NO.3 Relay (Point Side)	MG CLT Relay (Coil Side)	MG CLT Relay (Point Side)	Rear Fog Light Relay (Coil Side)	Rear Fog Light Relay (Point Side)	Turn Signal Flasher
		*Page Nos. of Related Systems	178.192.204 214.226.336 342.348	422	422	374	374	162	328 332	158 328 332	178 328 332	268.366 380.386 392.398 402	392 398	392 398	192 226 236 428 434	158 428 434	422	422	422	422	428 434	428 434	300	300	274 280
		CB or Fuse	①						②						⑥		⑦						⑧		
①	5A	ALT-S																							
	7.5A	DOME										●													
	10A	ECU-B																						●	
	10A	HORN				●	●																		
	10A	RAD NO.1																							
	15A	EFI	●																						
	15A	HAZARD																							●
	15A	HEAD (LH)																							
	15A	HEAD (RH)																							
	30A	FAN SUB																●		●					
	30A	H-LP CLN			●																				
	40A	FAN MAIN																							
②	5A	ECU-IG		●													●		●						
	5A	Rr DEF I/UP									●														
	5A	ST						●																	
	7.5A	TURN																							●
	10A	IGN																							
	10A	STOP																							
	10A	TAIL									●	●											●		
	15A	CIG&RAD										●													
	15A	Fr FOG																							
	10A	GAUGE							●			●	●		●						●	●			
	15A	SEAT HTR																							
	20A	Fr DEF																							
	20A	WIPER																							
	30A	DOOR																							
	30A	POWER												●											
	40A	Rr DEF								●															
③	10A	HEAD HI (LH)																							
	10A	HEAD HI (RH)																							
④	40A	HTR														●									
	60A	ABS																							
⑤	10A	A/C																							
	30A	FUEL HTR																							

[LOCATION] ① : Engine Room J/B (See page 56) ② : Instrument Panel J/B (See page 58)
⑤ : Fuse Box (See on page 78, 96) ⑥ : R/B No.4 (See page 53)

③ : R/B No.7 (See page 54) ④ : Fusible Link Block (See page 55)
⑦ : Engine Room R/B (See page 54) ⑧ : Driver Side R/B (See page 53)

cardiagn.com