REMOVAL

1. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
2. **SEPARATE STEERING INTERMEDIATE SHAFT (See page SR-7)**
3. **REMOVE FRONT WHEELS**
4. **REMOVE ENGINE UNDER COVER LH**
5. **REMOVE ENGINE UNDER COVER RH**
6. **REMOVE EXHAUST PIPE ASSEMBLY**
   HINT:
   (See page EX-2)
7. **DRAIN TRANSAXLE OIL**
8. **REMOVE HOOD SUB-ASSEMBLY**
9. **REMOVE CYLINDER HEAD COVER NO. 2**
   (a) Remove the 2 nuts caps, clips and No. 2 cylinder head cover.
10. **REMOVE AIR CLEANER ASSEMBLY**
11. **REMOVE BATTERY CLAMP SUB-ASSEMBLY**
12. **REMOVE BATTERY**
13. **REMOVE BATTERY TRAY**
14. **REMOVE BATTERY CARRIER**
    (a) Remove the 4 bolts and battery carrier.

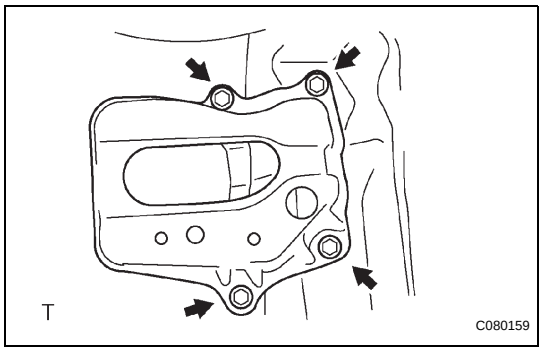

15. **DISCONNECT WIRE HARNESS**
    (a) Disconnect the wire harness clamp
    (b) Remove the 2 bolts and disconnect the 2 wire harness brackets.

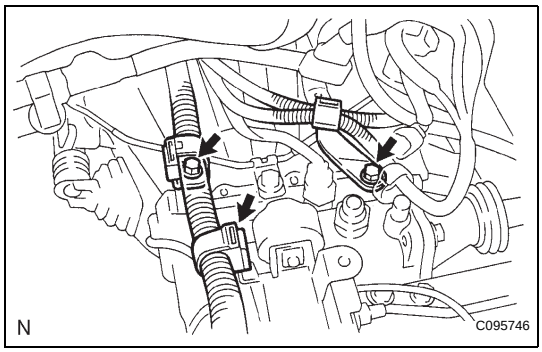

MX

cardiagn.com

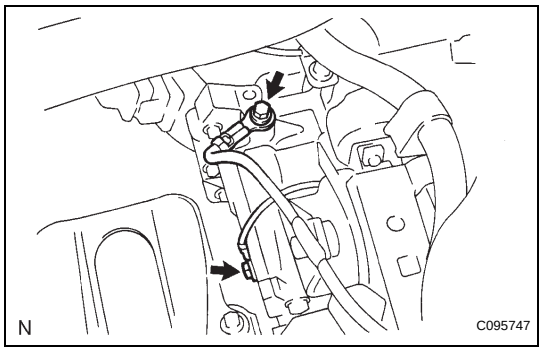

(c) Remove the 2 bolts and 2 ground cables.

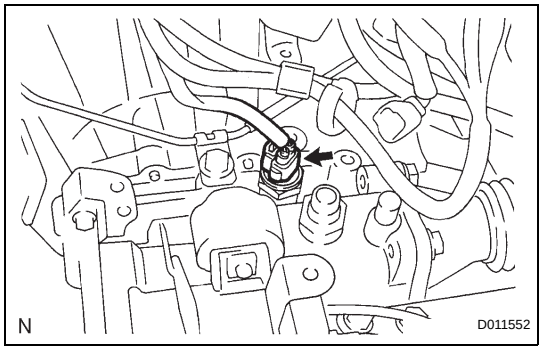

16. DISCONNECT CONNECTOR

(a) Disconnect the back-up light switch connector.

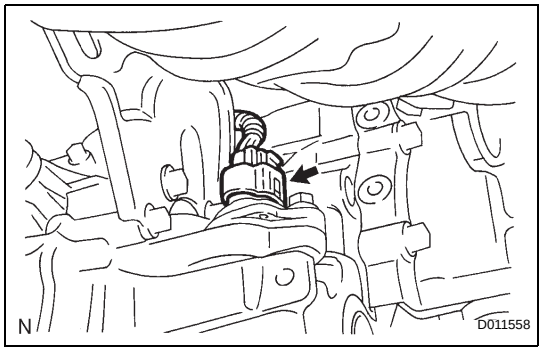

(b) w/o ABS:
Disconnect the speed sensor connector.

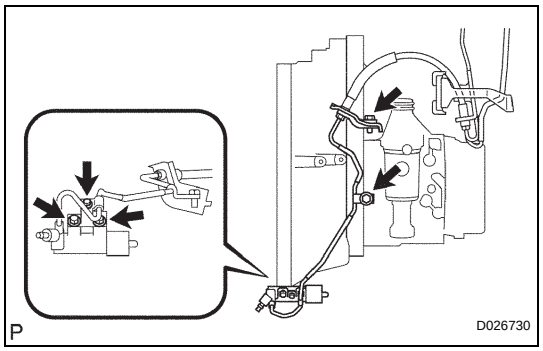

17. SEPARATE CLUTCH RELEASE CYLINDER ASSEMBLY

(a) Remove the 5 bolts, separate the release cylinder assembly with clutch piping from the transaxle.

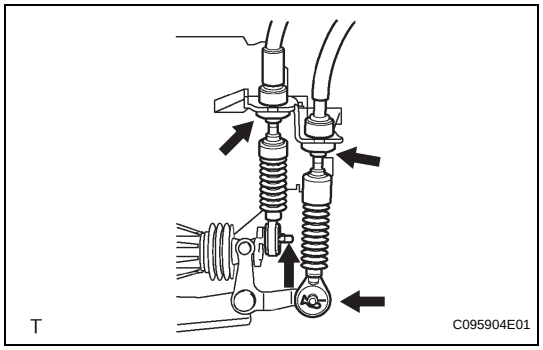

18. SEPARATE TRANSMISSION CONTROL CABLE ASSEMBLY

(a) Remove the 2 clip, 2 washer and disconnect the cable end of the control cable assembly from the transaxle.

(b) Remove the 2 clip and disconnect the control cable assembly from the bracket.

cardiagn.com

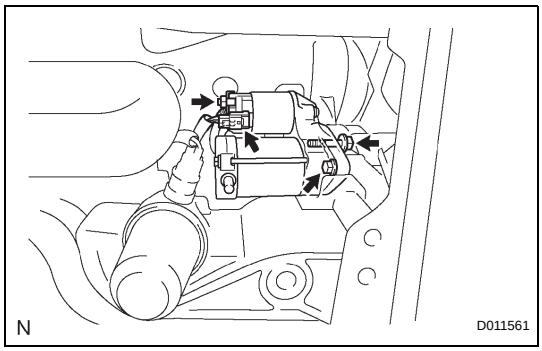

19. REMOVE STARTER ASSEMBLY
(a) Remove the nut and disconnect the starter wire.
(b) Disconnect the connector.
(c) Remove the 2 bolts and starter assembly.

20. DISCONNECT TIE ROD END SUB-ASSEMBLY LH (See page PS-17)

21. DISCONNECT TIE ROD END SUB-ASSEMBLY RH (See page PS-17)

22. DISCONNECT PRESSURE FEED TUBE ASSEMBLY (See page PS-17)

23. DISCONNECT RETURN TUBE SUB-ASSEMBLY (See page PS-17)

24. REMOVE FRONT DRIVE SHAFT ASSEMBLY LH (See page DS-6)

25. REMOVE FRONT DRIVE SHAFT ASSEMBLY RH (See page DS-6)

26. SUSPEND ENGINE ASSEMBLY
(a) Remove the 2 PCV hoses.

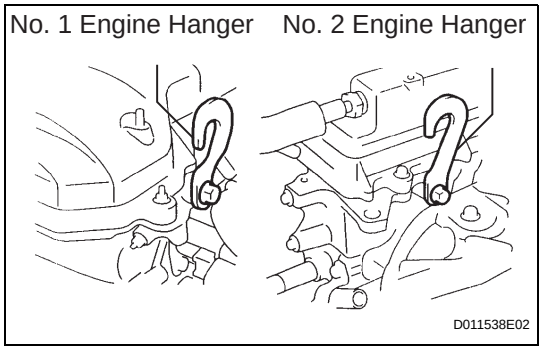

(b) Install the No. 1 and No. 2 engine hangers in the correct direction.
Parts No.:
No. 1 engine hanger:
12281-22021
No. 2 engine hanger:
12281-15040
Bolt:
91512-B1016
Torque: 38 N*m (387 kgf*cm, 28 ft.*lbf)
(c) Attach the engine chain hoist to the hangers.
CAUTION:
Do not attempt to hang the engine by hooking the chain to any other part.

27. REMOVE FRONT SUSPENSION CROSSMEMBER SUB-ASSEMBLY

28. SUPPORT MANUAL TRANSAXLE ASSEMBLY
(a) Support the transaxle with a transmission jack.

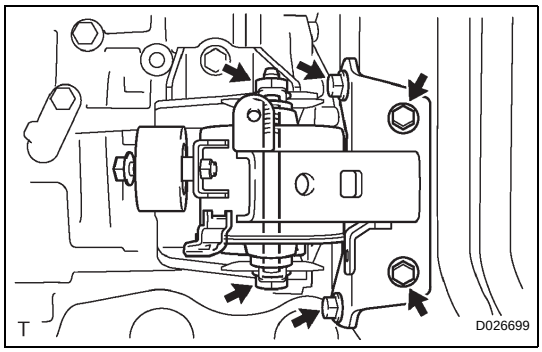

29. REMOVE TRANSVERSE ENGINE ENGINE MOUNTING INSULATOR
(a) Remove the 5 bolts, nut and engine mounting insulator LH from the body.

MX

cardiagn.com