REMOVAL

1. **REMOVE REAR DOOR SCUFF PLATE RH (See page IR-5)**
2. **REMOVE REAR DOOR SCUFF PLATE LH (See page IR-5)**
3. **REMOVE REAR DOOR OPENING TRIM RH**
4. **REMOVE REAR DOOR OPENING TRIM LH**
5. **REMOVE TONNEAU COVER ASSEMBLY**
6. **REMOVE DECK BOARD NO. 2**
7. **REMOVE DECK BOARD SUB-ASSEMBLY (See page IR-6)**
8. **REMOVE DECK FLOOR BOX REAR (See page IR-6)**
9. **REMOVE LUGGAGE COMPARTMENT TRAY (See page IR-6)**
10. **REMOVE BACK DOOR WEATHERSTRIP (See page IR-7)**
11. **REMOVE DECK TRIM COVER REAR**
12. **REMOVE REAR SEAT CUSHION ASSEMBLY AND REAR SEATBACK ASSEMBLY**
13. **REMOVE REAR SEAT INNER BELT ASSEMBLY**

INSTALLATION

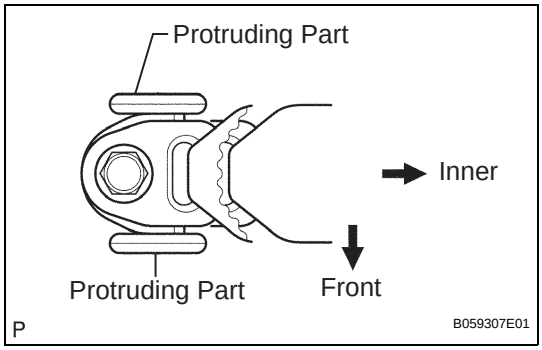

1. **INSTALL REAR SEAT INNER BELT ASSEMBLY**
   (a) Install the floor anchor and rear seat belt assembly inner with the bolt, as shown in the illustration.
   Torque: 41.2 N*m (420 kgf*cm, 30 ft.*lbf)
   NOTICE:
   Do not make the anchor part run onto the protruding part of the floor panel.
2. **INSTALL REAR SEAT CUSHION ASSEMBLY AND REAR SEATBACK ASSEMBLY**
3. **INSTALL DECK TRIM COVER REAR**
4. **INSTALL BACK DOOR WEATHERSTRIP**
5. **INSTALL LUGGAGE COMPARTMENT TRAY**
6. **INSTALL DECK FLOOR BOX REAR**
7. **INSTALL DECK BOARD SUB-ASSEMBLY**
8. **INSTALL DECK BOARD NO. 2**
9. **INSTALL TONNEAU COVER ASSEMBLY**
10. **INSTALL REAR DOOR OPENING TRIM LH**
11. **INSTALL REAR DOOR OPENING TRIM RH**
12. **INSTALL REAR DOOR SCUFF PLATE LH**
13. **INSTALL REAR DOOR SCUFF PLATE RH**

cardiagn.com