QUARTER WINDOW GLASS

COMPONENTS

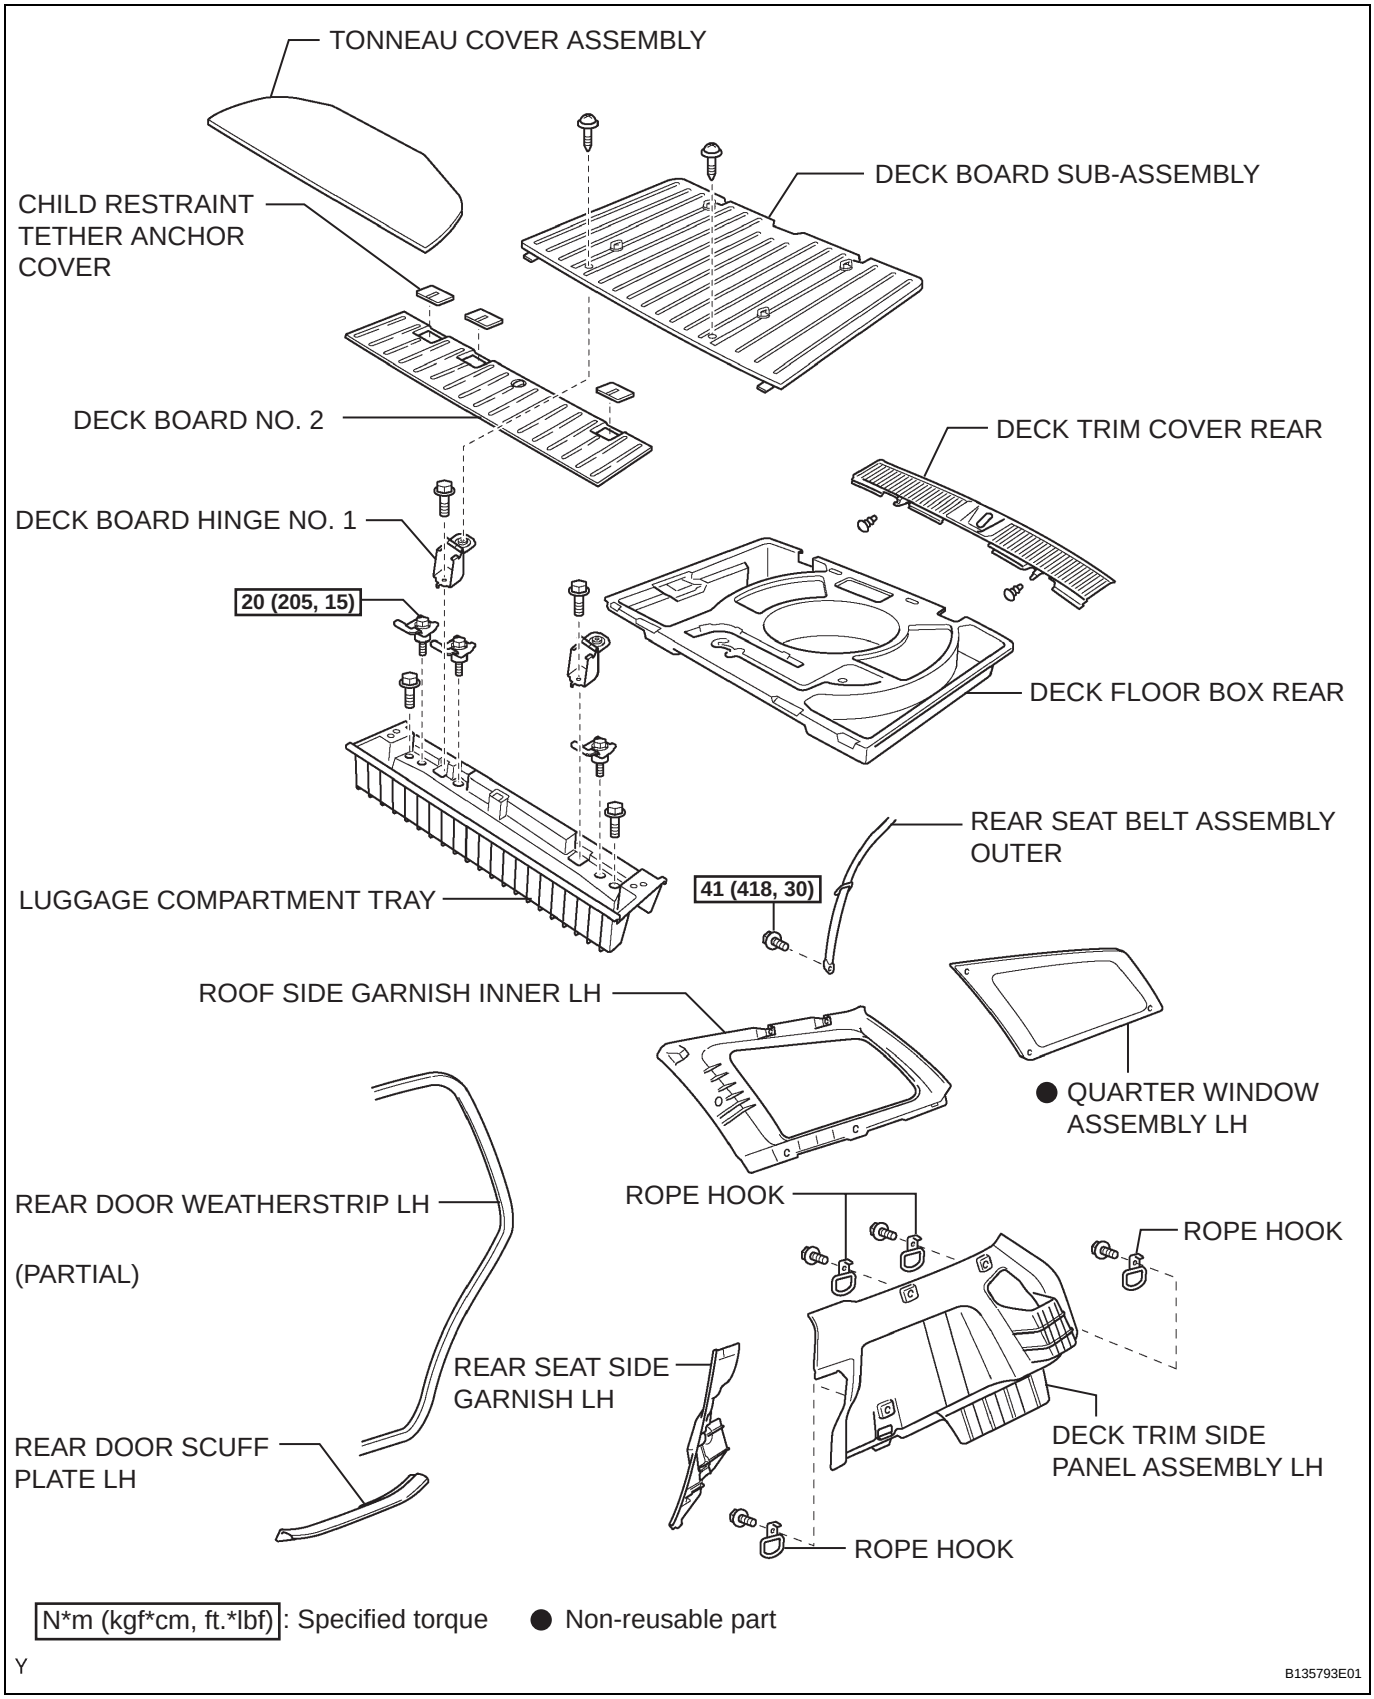

WS

cardiagn.com

REMOVAL

HINT:
- Use the same procedures for the RH side and LH side.
- A bolt without a torque specification is shown in the standard bolt chart.

1. **REMOVE REAR SEAT ASSEMBLY LH (See page SE-18)**
2. **REMOVE DECK BOARD SUB-ASSEMBLY (See page IR-6)**
3. **REMOVE DECK BOARD NO. 2**
4. **REMOVE LUGGAGE COMPARTMENT TRAY (See page IR-6)**
5. **REMOVE DECK FLOOR BOX REAR (See page IR-6)**
6. **REMOVE TONNEAU COVER ASSEMBLY**
7. **REMOVE DECK TRIM COVER REAR (See page IR-7)**
8. **REMOVE REAR DOOR SCUFF PLATE LH (See page IR-7)**
9. **REMOVE REAR DOOR WEATHERSTRIP LH**
10. **REMOVE REAR SEAT SIDE GARNISH LH (See page IR-7)**
11. **REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH (See page IR-7)**
12. **REMOVE ROOF SIDE GARNISH INNER LH (See page IR-7)**
13. **REMOVE QUARTER WINDOW ASSEMBLY LH**
    (a) Using a knife, cut off the moulding as shown in the illustration.
    NOTICE:
    Do not damage the vehicle body with the knife.

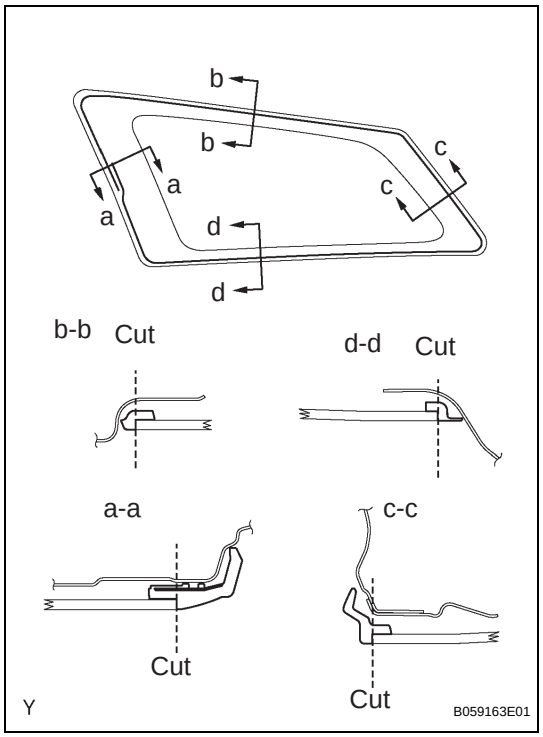

cardiagn.com

WS