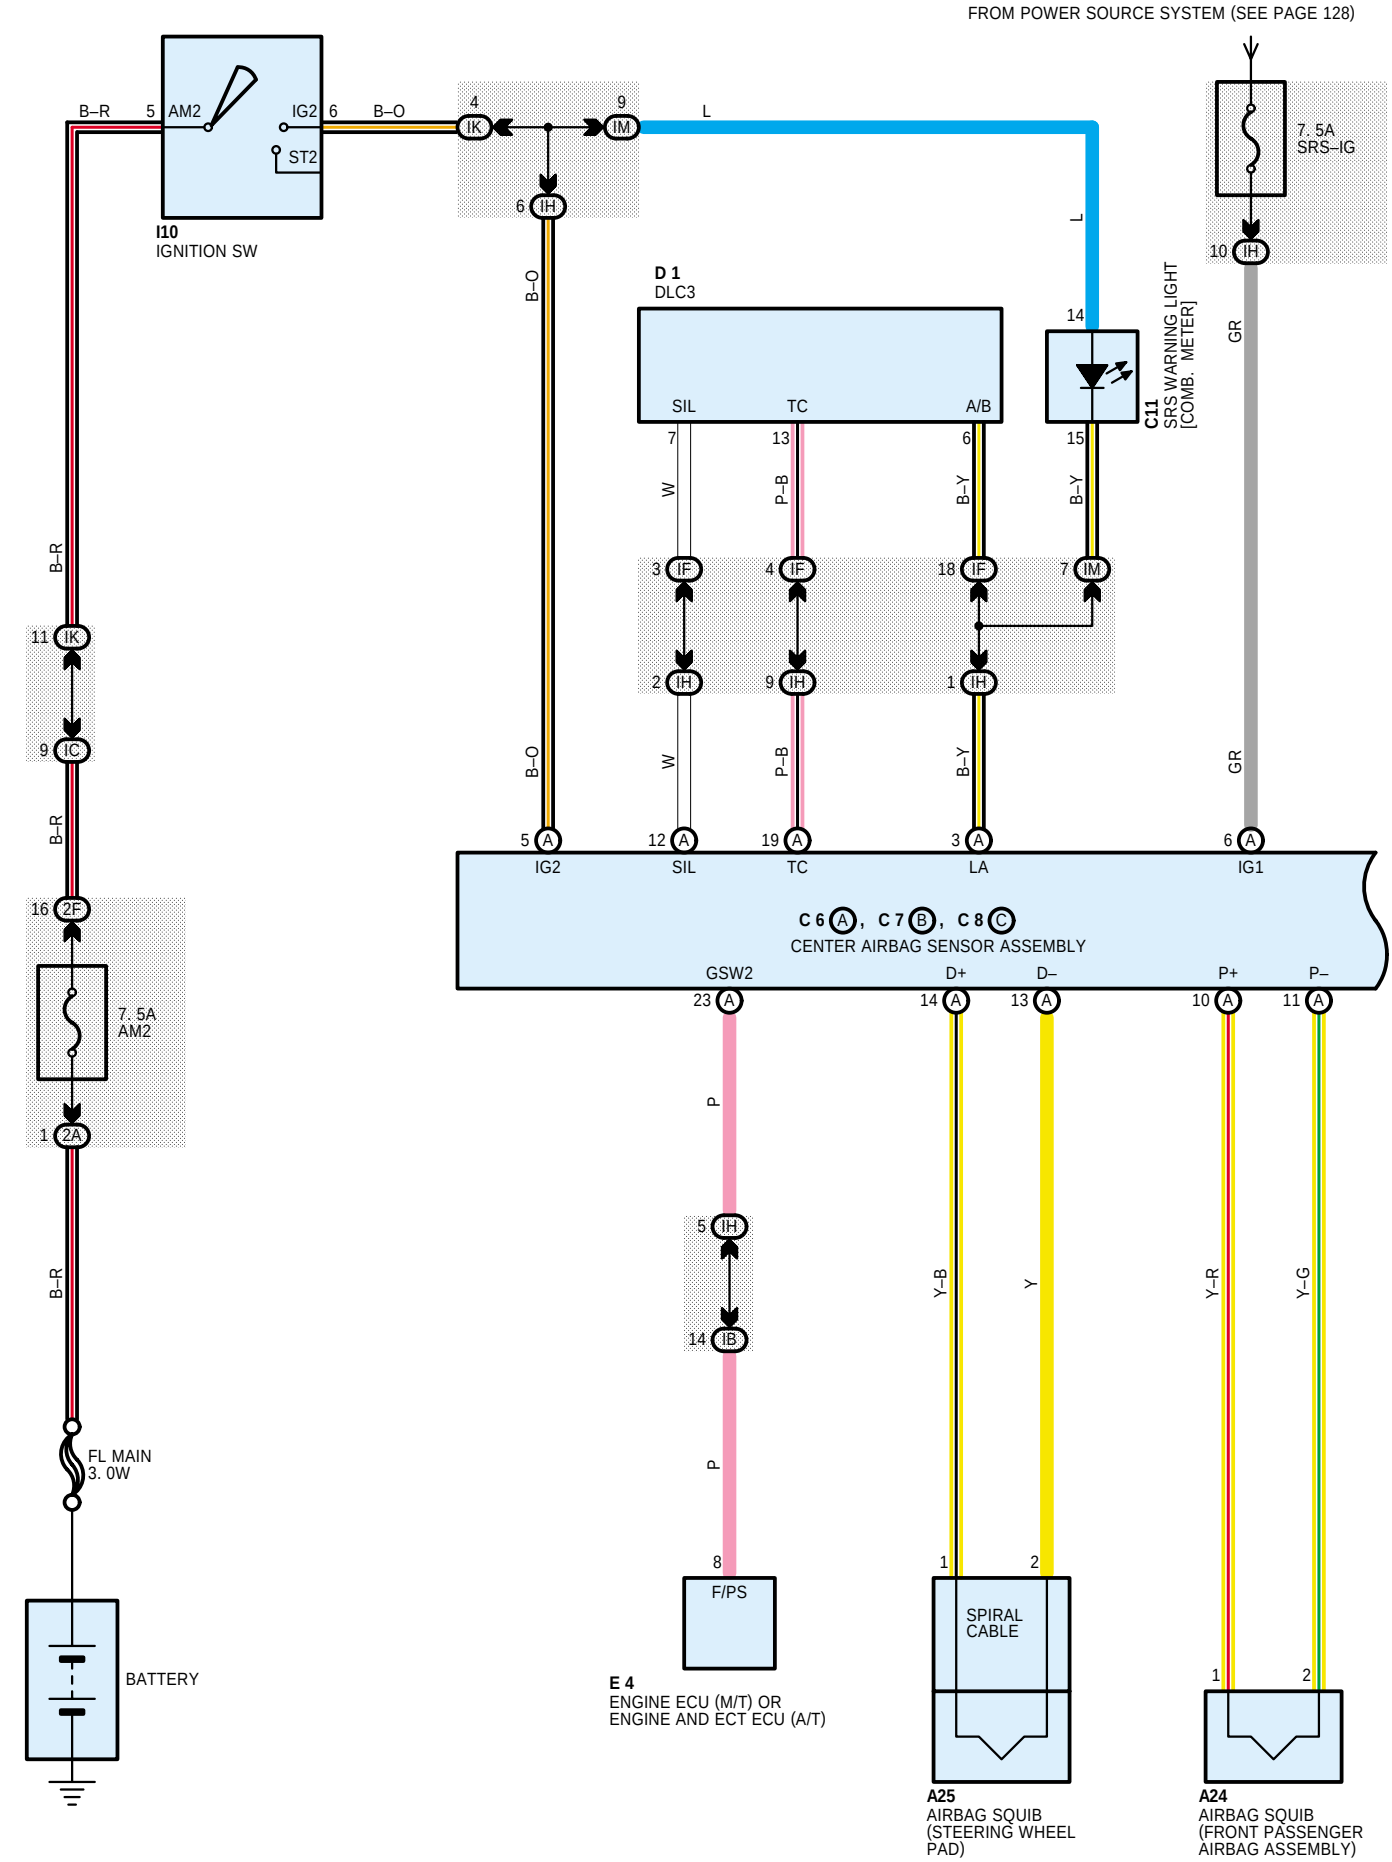
FROM POWER SOURCE SYSTEM (SEE PAGE 128)
I10
IGNITION SW
AM2
IG2
ST2
B–R
B–O
L
7. 5A
SRS–IG
D 1
DLC3
SIL
TC
A/B
C11
SRS WARNING LIGHT
[COMB. METER]
GR
W
P–B
B–Y
IG2
SIL
TC
LA
IG1
C 6 A, C 7 B, C 8 C
CENTER AIRBAG SENSOR ASSEMBLY
GSW2
D+
D–
P+
P–
P
Y–B
Y
Y–R
Y–G
7. 5A
AM2
FL MAIN
3. 0W
BATTERY
F/PS
E 4
ENGINE ECU (M/T) OR
ENGINE AND ECT ECU (A/T)
SPIRAL
CABLE
A25
AIRBAG SQUIB
(STEERING WHEEL
PAD)
A24
AIRBAG SQUIB
(FRONT PASSENGER
AIRBAG ASSEMBLY)

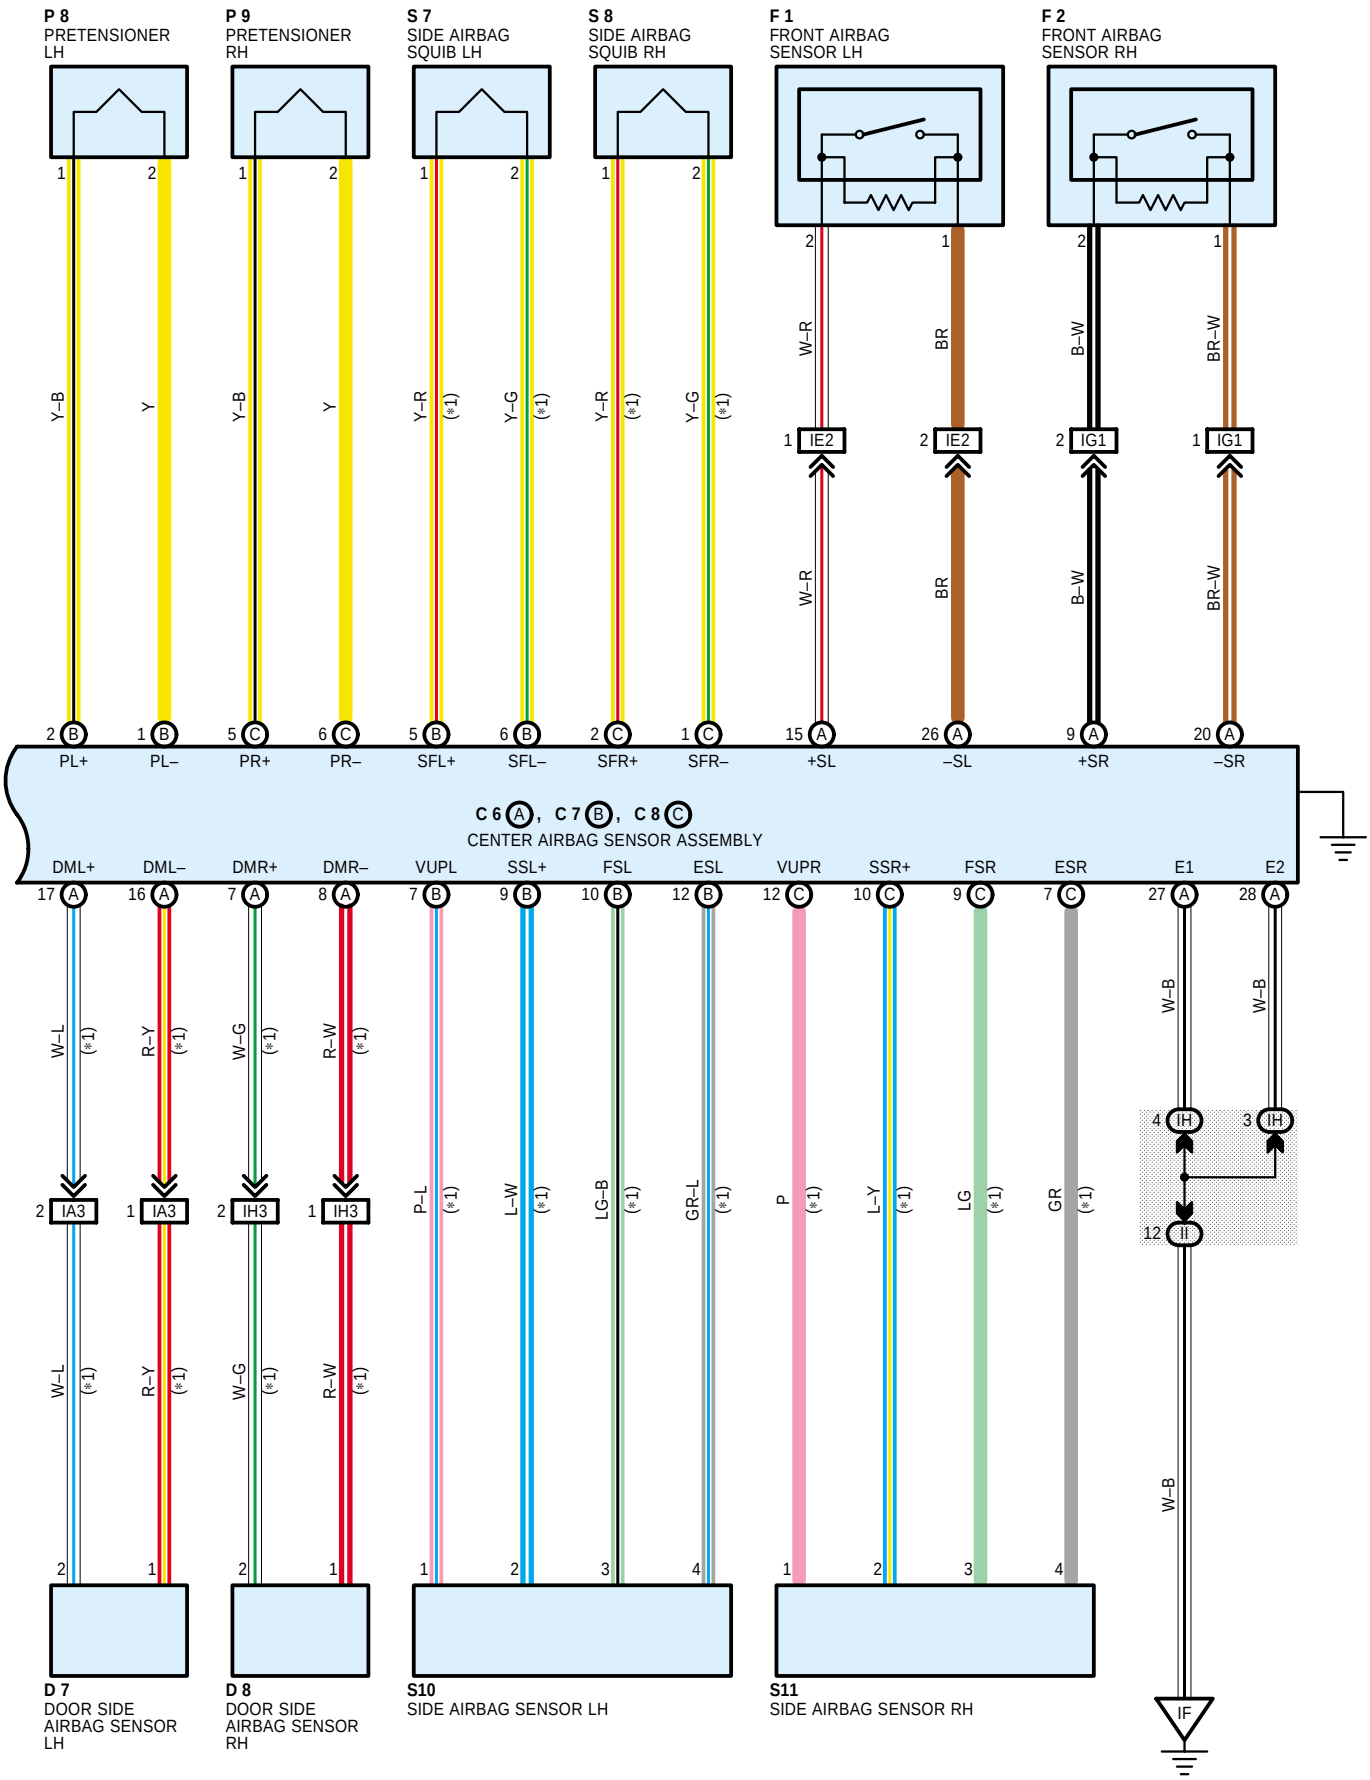
P 8
PRETENSIONER LH
P 9
PRETENSIONER RH
S 7
SIDE AIRBAG SQUIB LH
S 8
SIDE AIRBAG SQUIB RH
F 1
FRONT AIRBAG SENSOR LH
F 2
FRONT AIRBAG SENSOR RH
Y–B
Y
Y–R (*1)
Y–G (*1)
W–R
BR
B–W
BR–W
IE2
IG1
PL+
PL–
PR+
PR–
SFL+
SFL–
SFR+
SFR–
+SL
–SL
+SR
–SR
C 6 (A), C 7 (B), C 8 (C)
CENTER AIRBAG SENSOR ASSEMBLY
DML+
DML–
DMR+
DMR–
VUPL
SSL+
FSL
ESL
VUPR
SSR+
FSR
ESR
E1
E2
W–L (*1)
R–Y (*1)
W–G (*1)
R–W (*1)
IA3
IH3
P–L (*1)
L–W (*1)
LG–B (*1)
GR–L (*1)
P (*1)
L–Y (*1)
LG (*1)
GR (*1)
W–B
IH
IF
D 7
DOOR SIDE AIRBAG SENSOR LH
D 8
DOOR SIDE AIRBAG SENSOR RH
S10
SIDE AIRBAG SENSOR LH
S11
SIDE AIRBAG SENSOR RH