16 CELICA

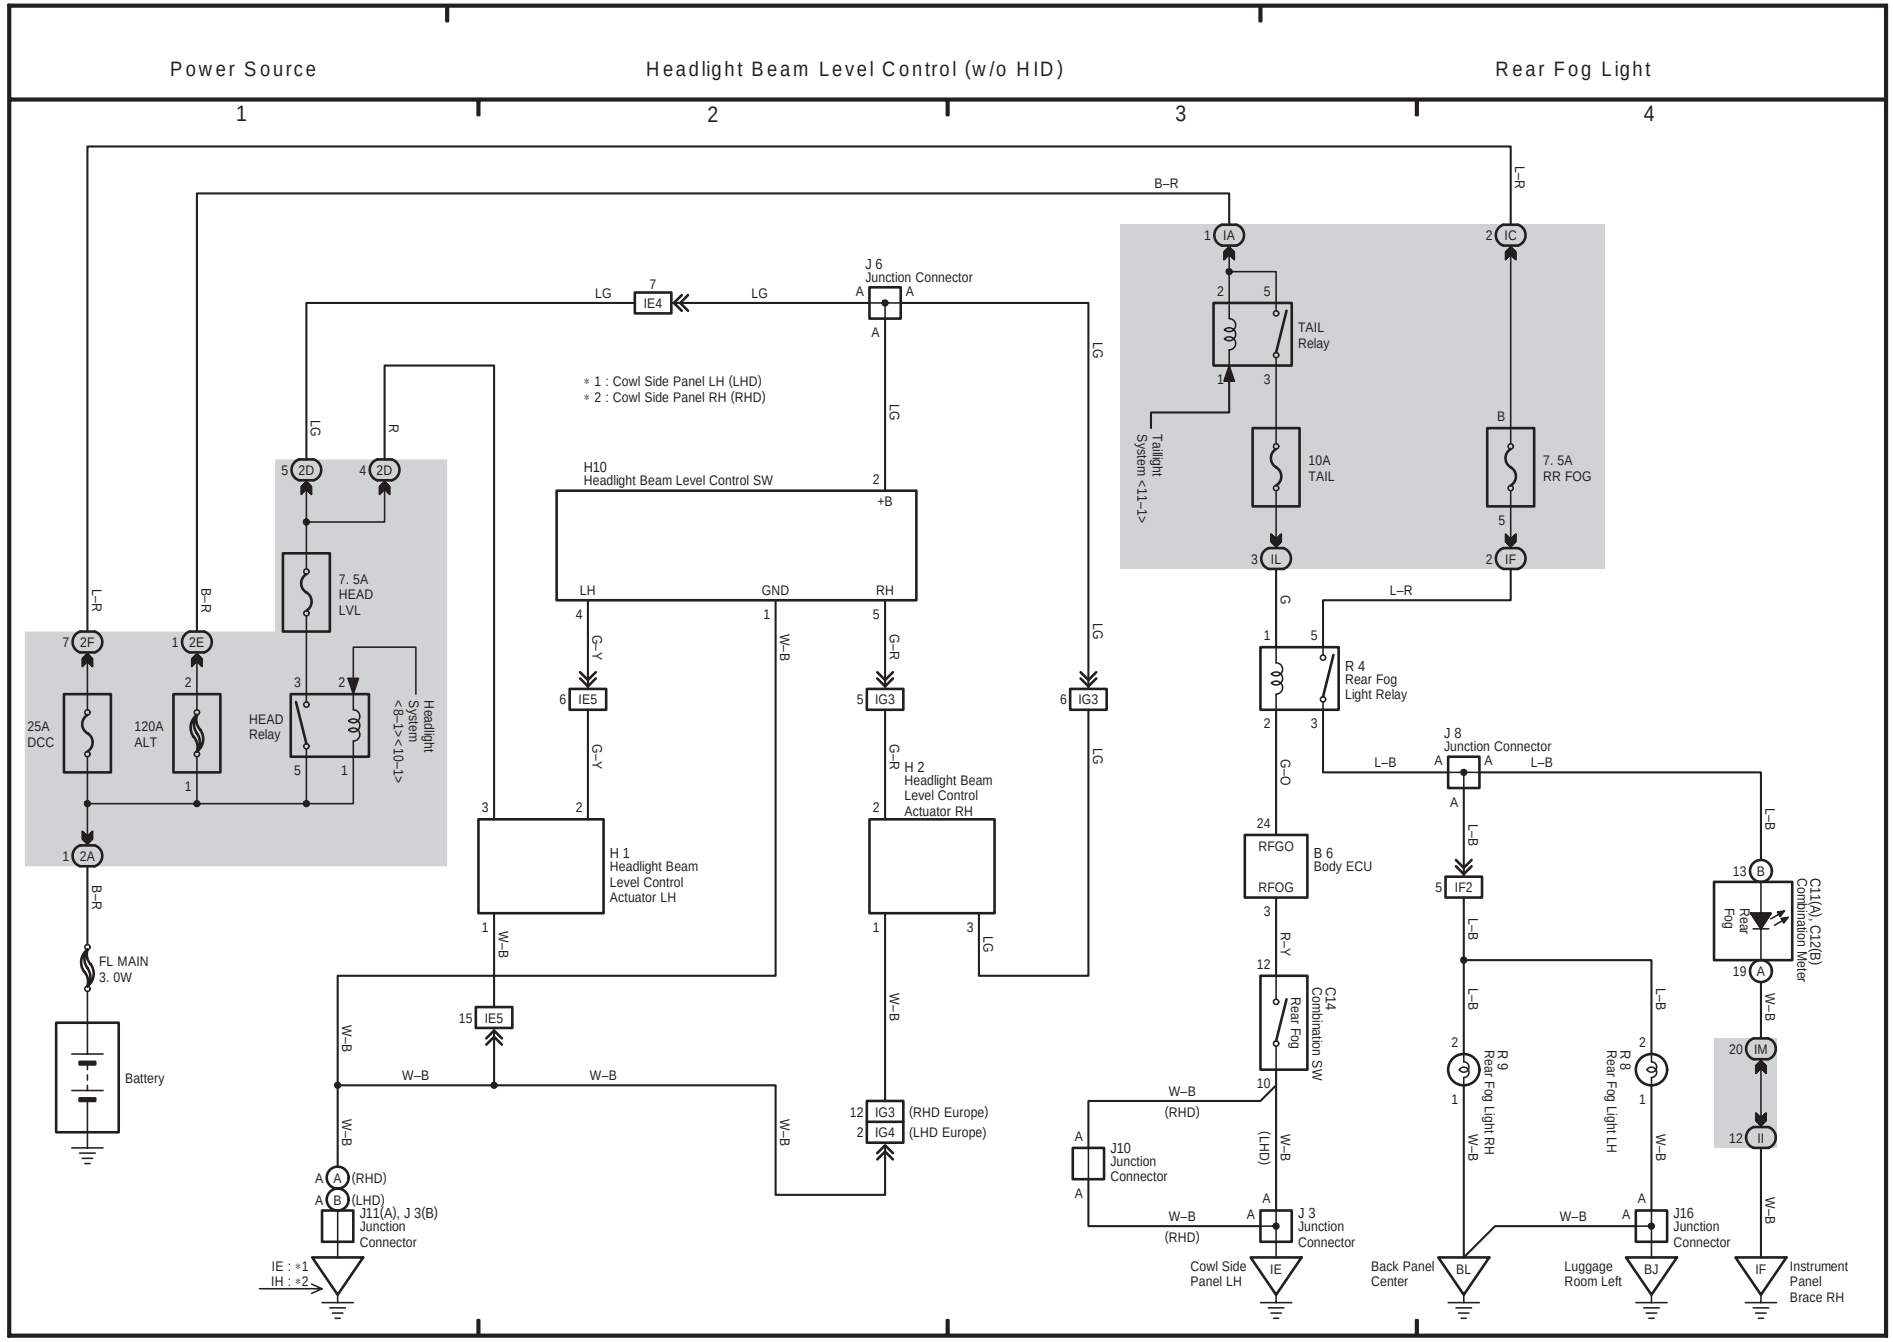
Power Source
Headlight Beam Level Control (w/o HID)
Rear Fog Light
1
2
3
4
B–R
L–R
J 6
Junction Connector
IE4
LG
∗ 1 : Cowl Side Panel LH (LHD)
∗ 2 : Cowl Side Panel RH (RHD)
H10
Headlight Beam Level Control SW
+B
LH
GND
RH
IE5
IG3
G–Y
G–R
H 1
Headlight Beam
Level Control
Actuator LH
H 2
Headlight Beam
Level Control
Actuator RH
W–B
IE5
IG3 (RHD Europe)
IG4 (LHD Europe)
IA
IC
TAIL
Relay
10A
TAIL
7. 5A
RR FOG
Taillight
System <11–1>
IL
IF
G
R 4
Rear Fog
Light Relay
G–O
J 8
Junction Connector
L–B
RFGO
RFOG
B 6
Body ECU
IF2
R–Y
C14
Combination SW
Rear Fog
W–B
(RHD)
(LHD)
J10
Junction
Connector
J 3
Junction
Connector
R 9
Rear Fog Light RH
R 8
Rear Fog Light LH
C11(A), C12(B)
Combination Meter
Rear
Fog
IM
II
J16
Junction
Connector
2D
7. 5A
HEAD
LVL
2F
2E
25A
DCC
120A
ALT
HEAD
Relay
Headlight
System
<8–1><10–1>
2A
FL MAIN
3. 0W
Battery
A (RHD)
B (LHD)
J11(A), J 3(B)
Junction
Connector
IE : ∗1
IH : ∗2
Cowl Side
Panel LH
IE
Back Panel
Center
BL
Luggage
Room Left
BJ
Instrument
Panel
Brace RH
IF