## 24 CELICA

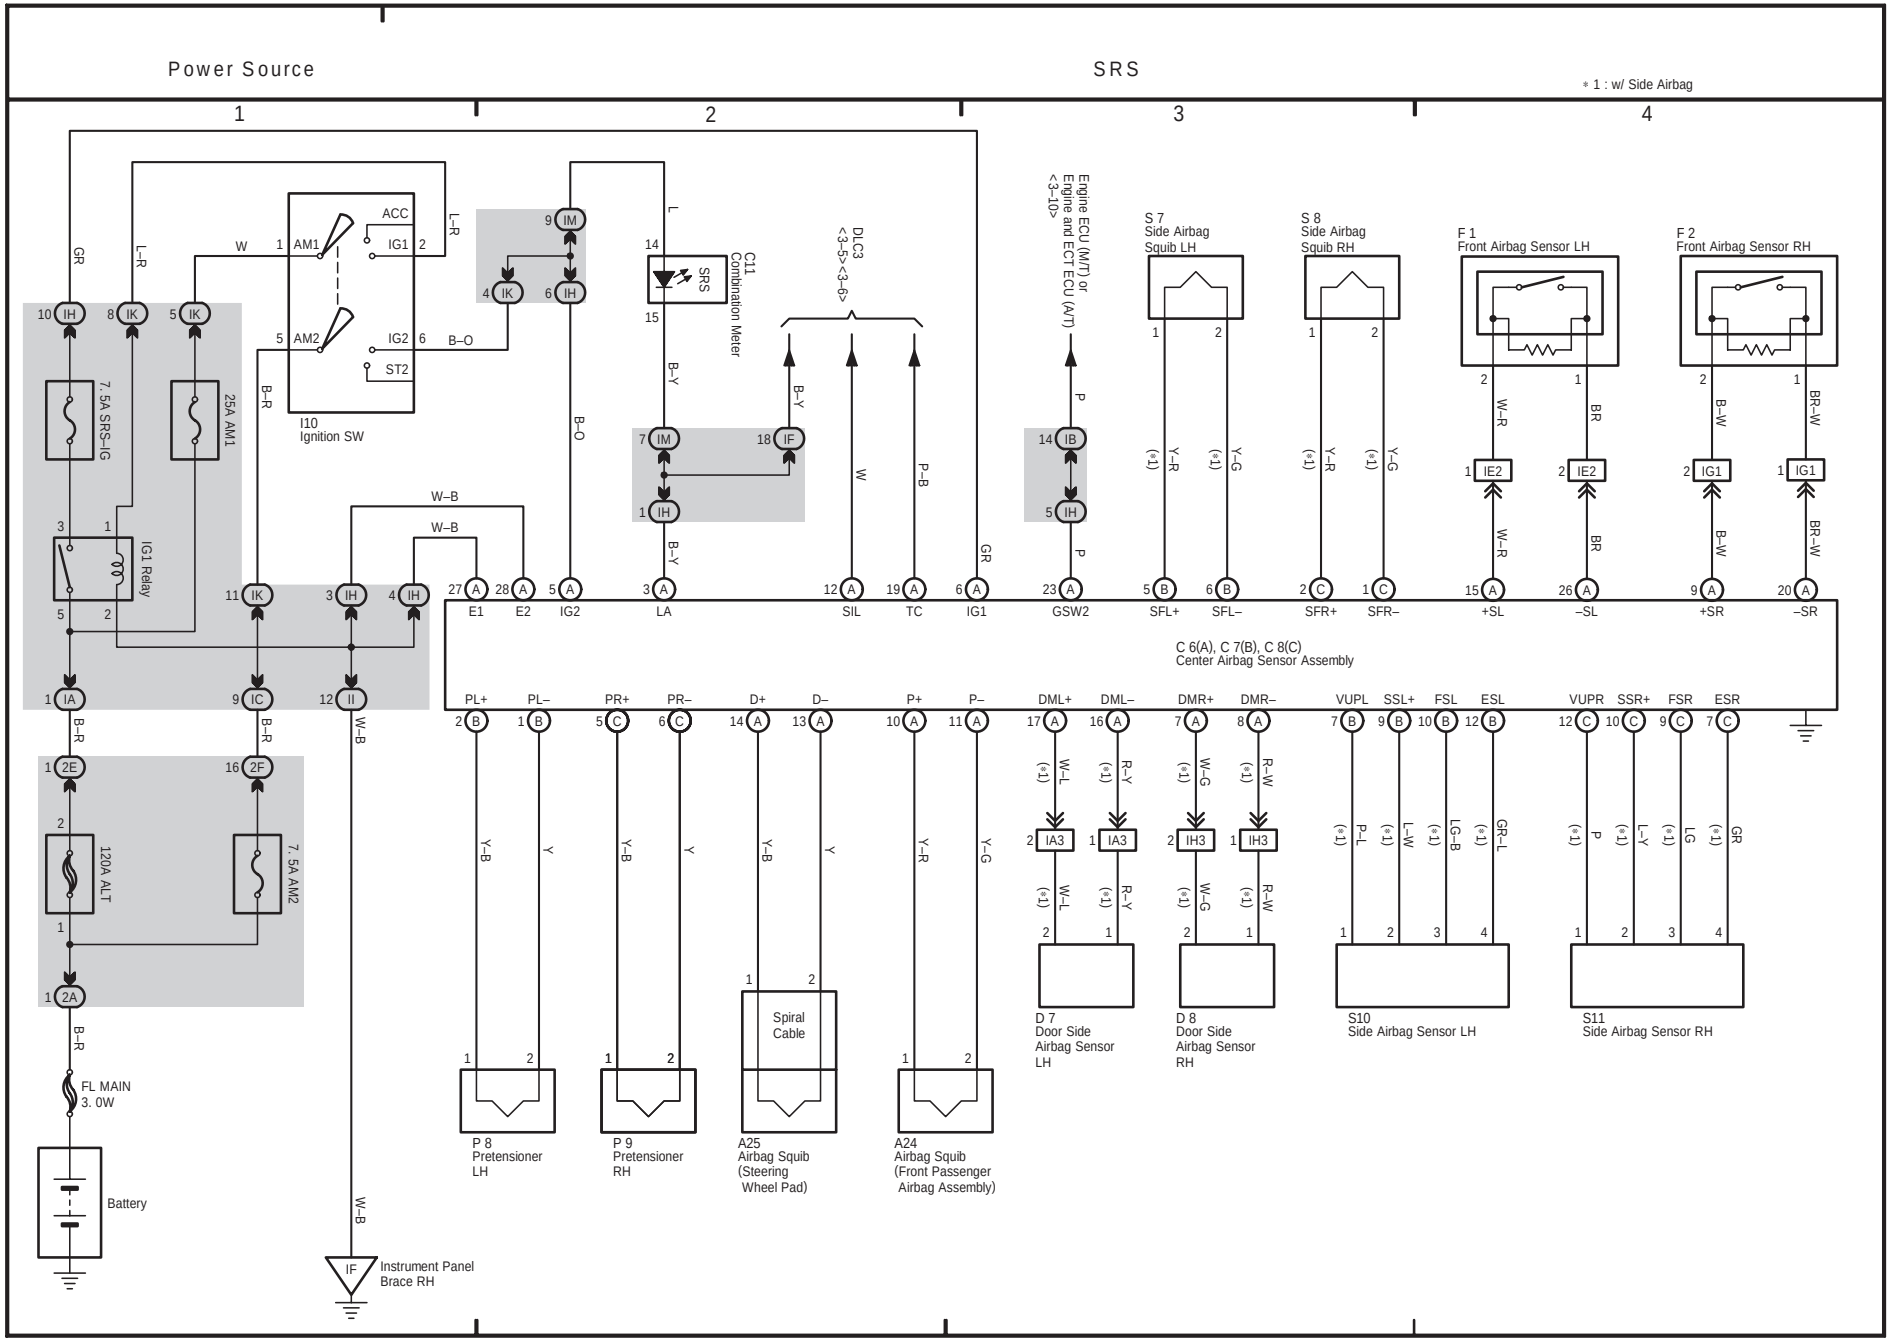
Power Source
SRS
* 1 : w/ Side Airbag
1
2
3
4
I10
Ignition SW
ACC
IG1
IG2
ST2
AM1
AM2
7.5A SRS–IG
25A AM1
IG1 Relay
120A ALT
7.5A AM2
FL MAIN
3. 0W
Battery
Instrument Panel
Brace RH
C11
Combination Meter
SRS
DLC3
<3–5> <3–6>
Engine ECU (M/T) or
Engine and ECT ECU (A/T)
<3–10>
S 7
Side Airbag
Squib LH
S 8
Side Airbag
Squib RH
F 1
Front Airbag Sensor LH
F 2
Front Airbag Sensor RH
E1
E2
IG2
LA
SIL
TC
IG1
GSW2
SFL+
SFL–
SFR+
SFR–
+SL
–SL
+SR
–SR
C 6(A), C 7(B), C 8(C)
Center Airbag Sensor Assembly
PL+
PL–
PR+
PR–
D+
D–
P+
P–
DML+
DML–
DMR+
DMR–
VUPL
SSL+
FSL
ESL
VUPR
SSR+
FSR
ESR
P 8
Pretensioner
LH
P 9
Pretensioner
RH
Spiral
Cable
A25
Airbag Squib
(Steering
Wheel Pad)
A24
Airbag Squib
(Front Passenger
Airbag Assembly)
D 7
Door Side
Airbag Sensor
LH
D 8
Door Side
Airbag Sensor
RH
S10
Side Airbag Sensor LH
S11
Side Airbag Sensor RH