WINDSHIELD WASHER JAR ASSEMBLY

COMPONENTS

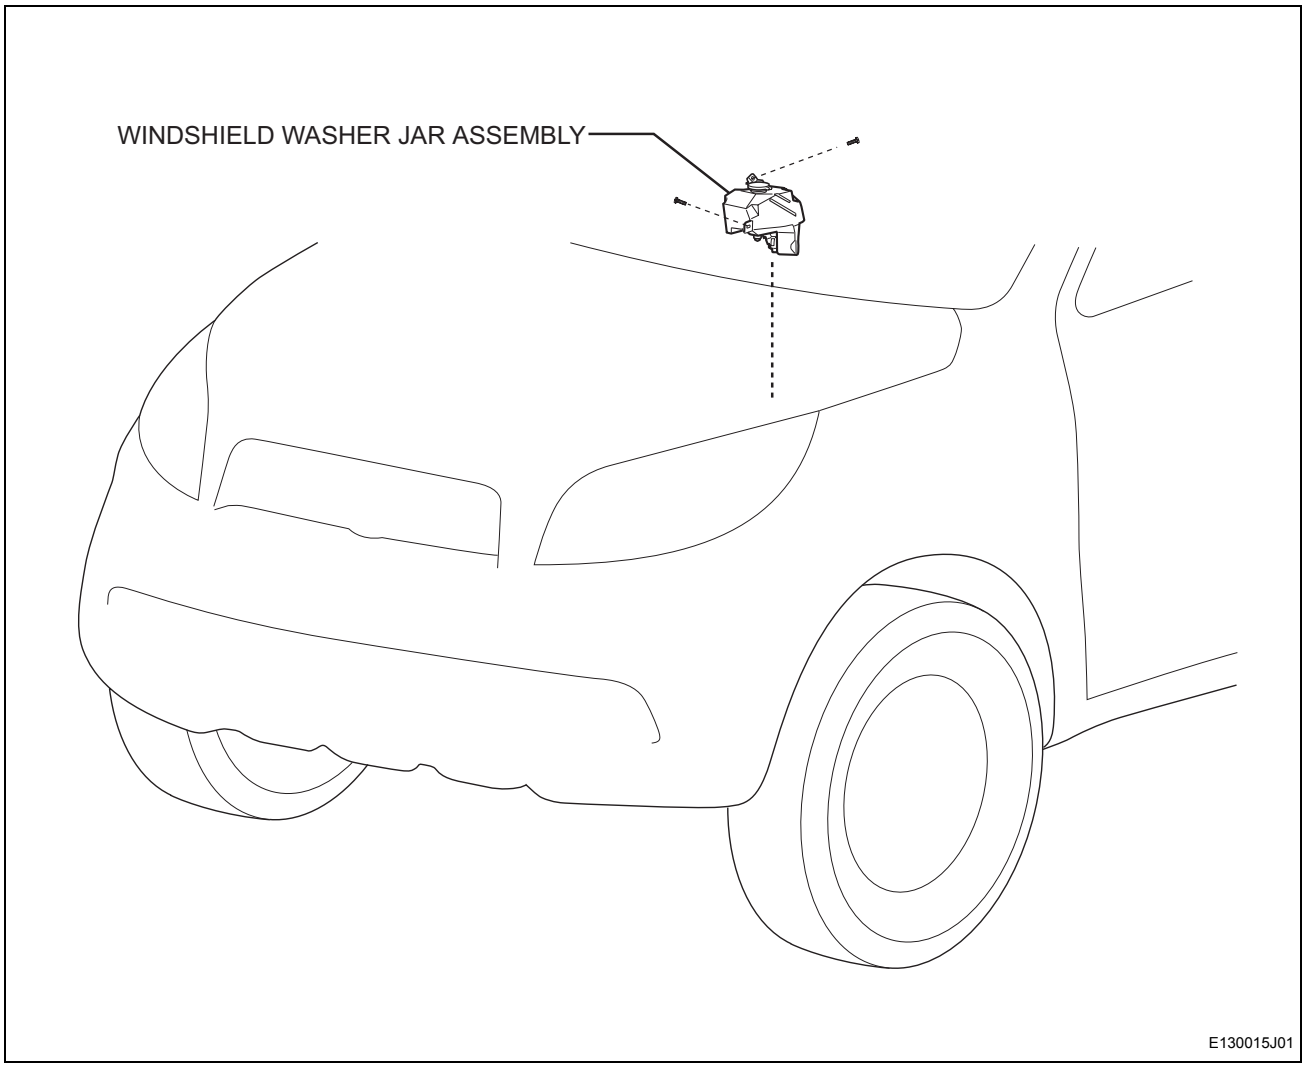

REMOVAL

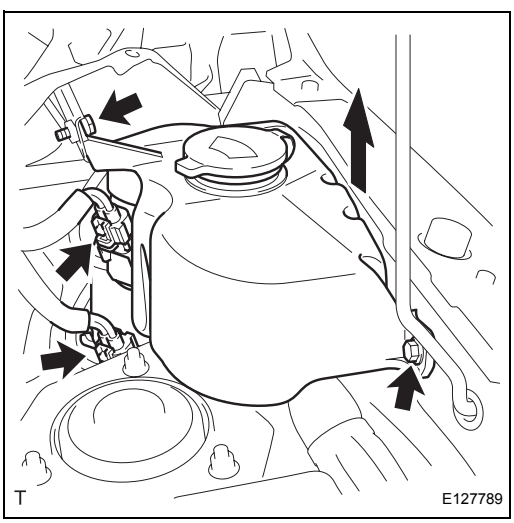

1. REMOVE WINDSHIELD WASHER JAR ASSEMBLY
   (1) Remove the 2 bolts and the connector. Then remove the windshield washer jar assembly.

INSTALLATION

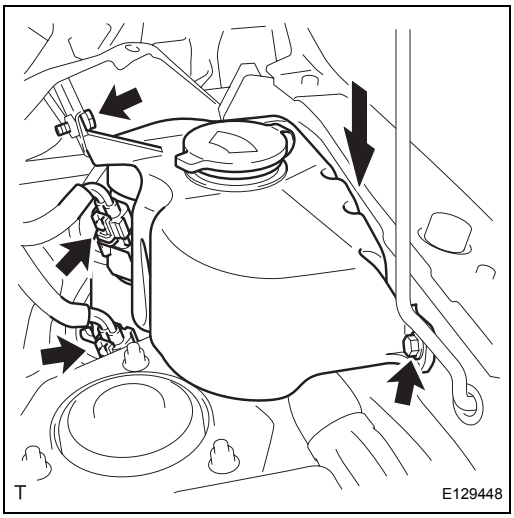

1. INSTALL WINDSHIELD WASHER JAR ASSEMBLY
   (1) Temporarily install the windshield washer jar assembly to the vehicle body and connect the connector.
   (2) Install the 2 bolts.