FRONT DOOR WITH MOTOR LOCK ASSEMBLY LH

INSPECTION

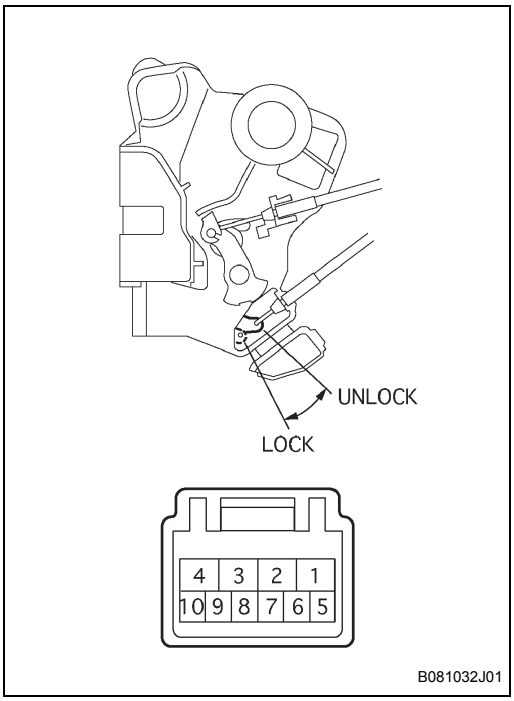

1. CHECK FRONT DOOR LOCK ASSEMBLY LH

(a) Check the continuity between the door lock function and the position switch.

(1) Using a tester, check the door lock function when battery voltage is applied between the connectors.

Standard:

Connection	Operates
Positive (+) battery terminal ←→ Terminal 4 **Negative (-) battery terminal ←→ Terminal 1**	**LOCK**
Positive (+) battery terminal ←→ Terminal 1 **Negative (-) battery terminal ←→ Terminal 4**	**UNLOCK**

DL