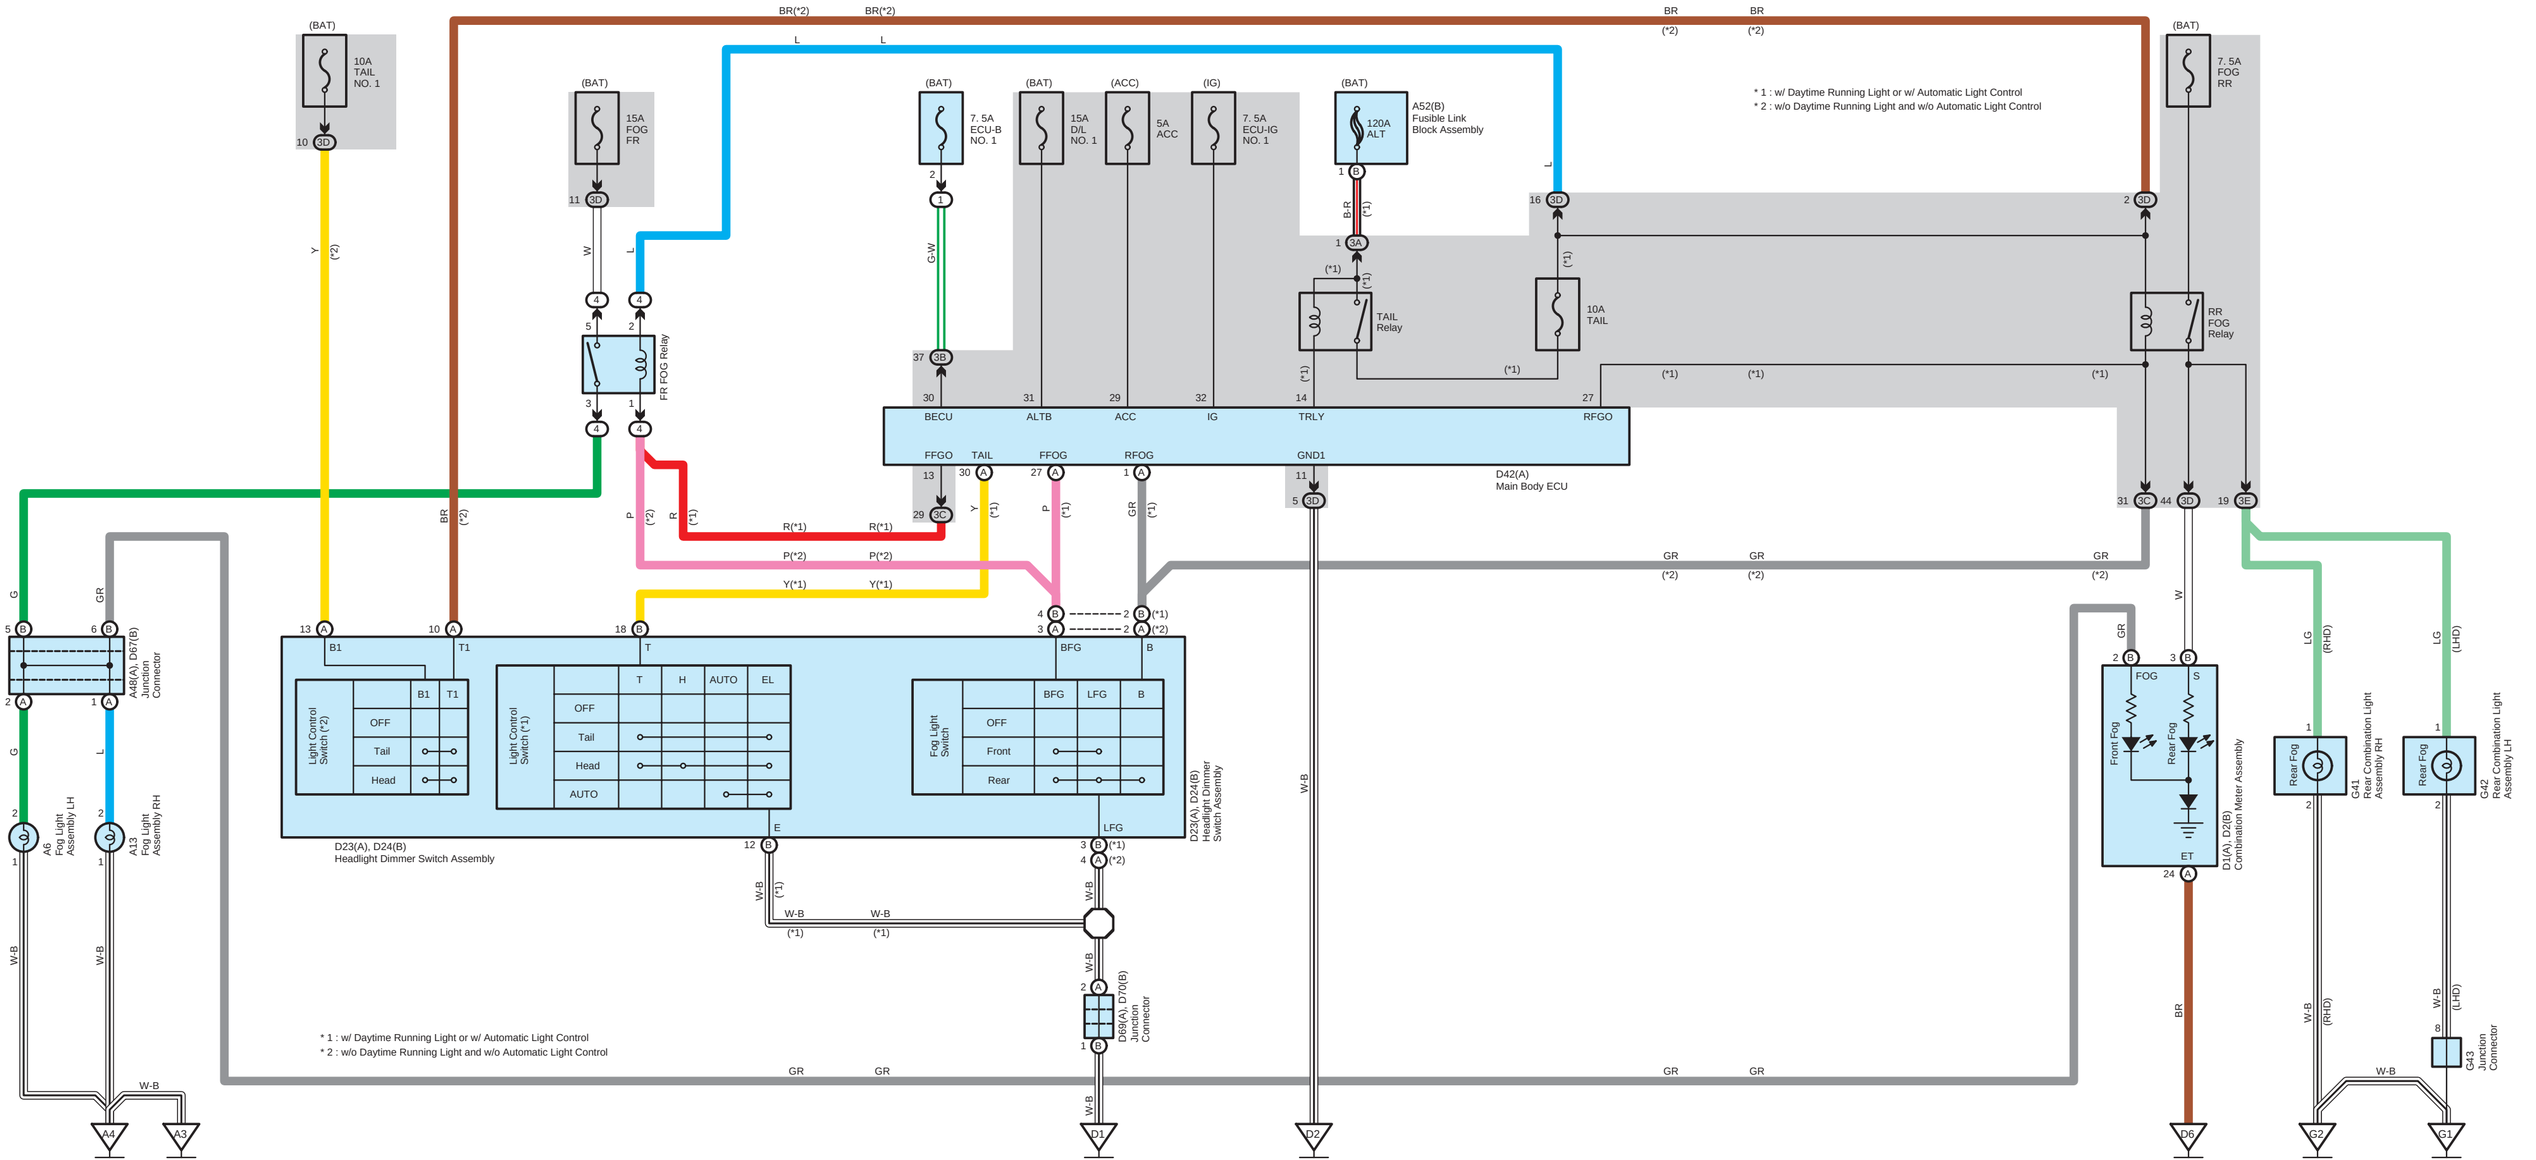
(BAT)
10A TAIL NO. 1
15A FOG FR
7. 5A ECU-B NO. 1
15A D/L NO. 1
(ACC)
5A ACC
(IG)
7. 5A ECU-IG NO. 1
120A ALT
A52(B) Fusible Link Block Assembly
7. 5A FOG RR
* 1 : w/ Daytime Running Light or w/ Automatic Light Control
* 2 : w/o Daytime Running Light and w/o Automatic Light Control
FR FOG Relay
TAIL Relay
10A TAIL
RR FOG Relay
BECU
ALTB
ACC
IG
TRLY
RFGO
FFGO
TAIL
FFOG
RFOG
GND1
D42(A) Main Body ECU
A48(A), D67(B) Junction Connector
A6 Fog Light Assembly LH
A13 Fog Light Assembly RH
Light Control Switch (*2)
Light Control Switch (*1)
Fog Light Switch
OFF
Tail
Head
AUTO
Front
Rear
D23(A), D24(B) Headlight Dimmer Switch Assembly
D69(A), D70(B) Junction Connector
D1(A), D2(B) Combination Meter Assembly
Front Fog
Rear Fog
G41 Rear Combination Light Assembly RH
G42 Rear Combination Light Assembly LH
G43 Junction Connector
(RHD)
(LHD)
A4
A3
D1
D2
D6
G2
G1