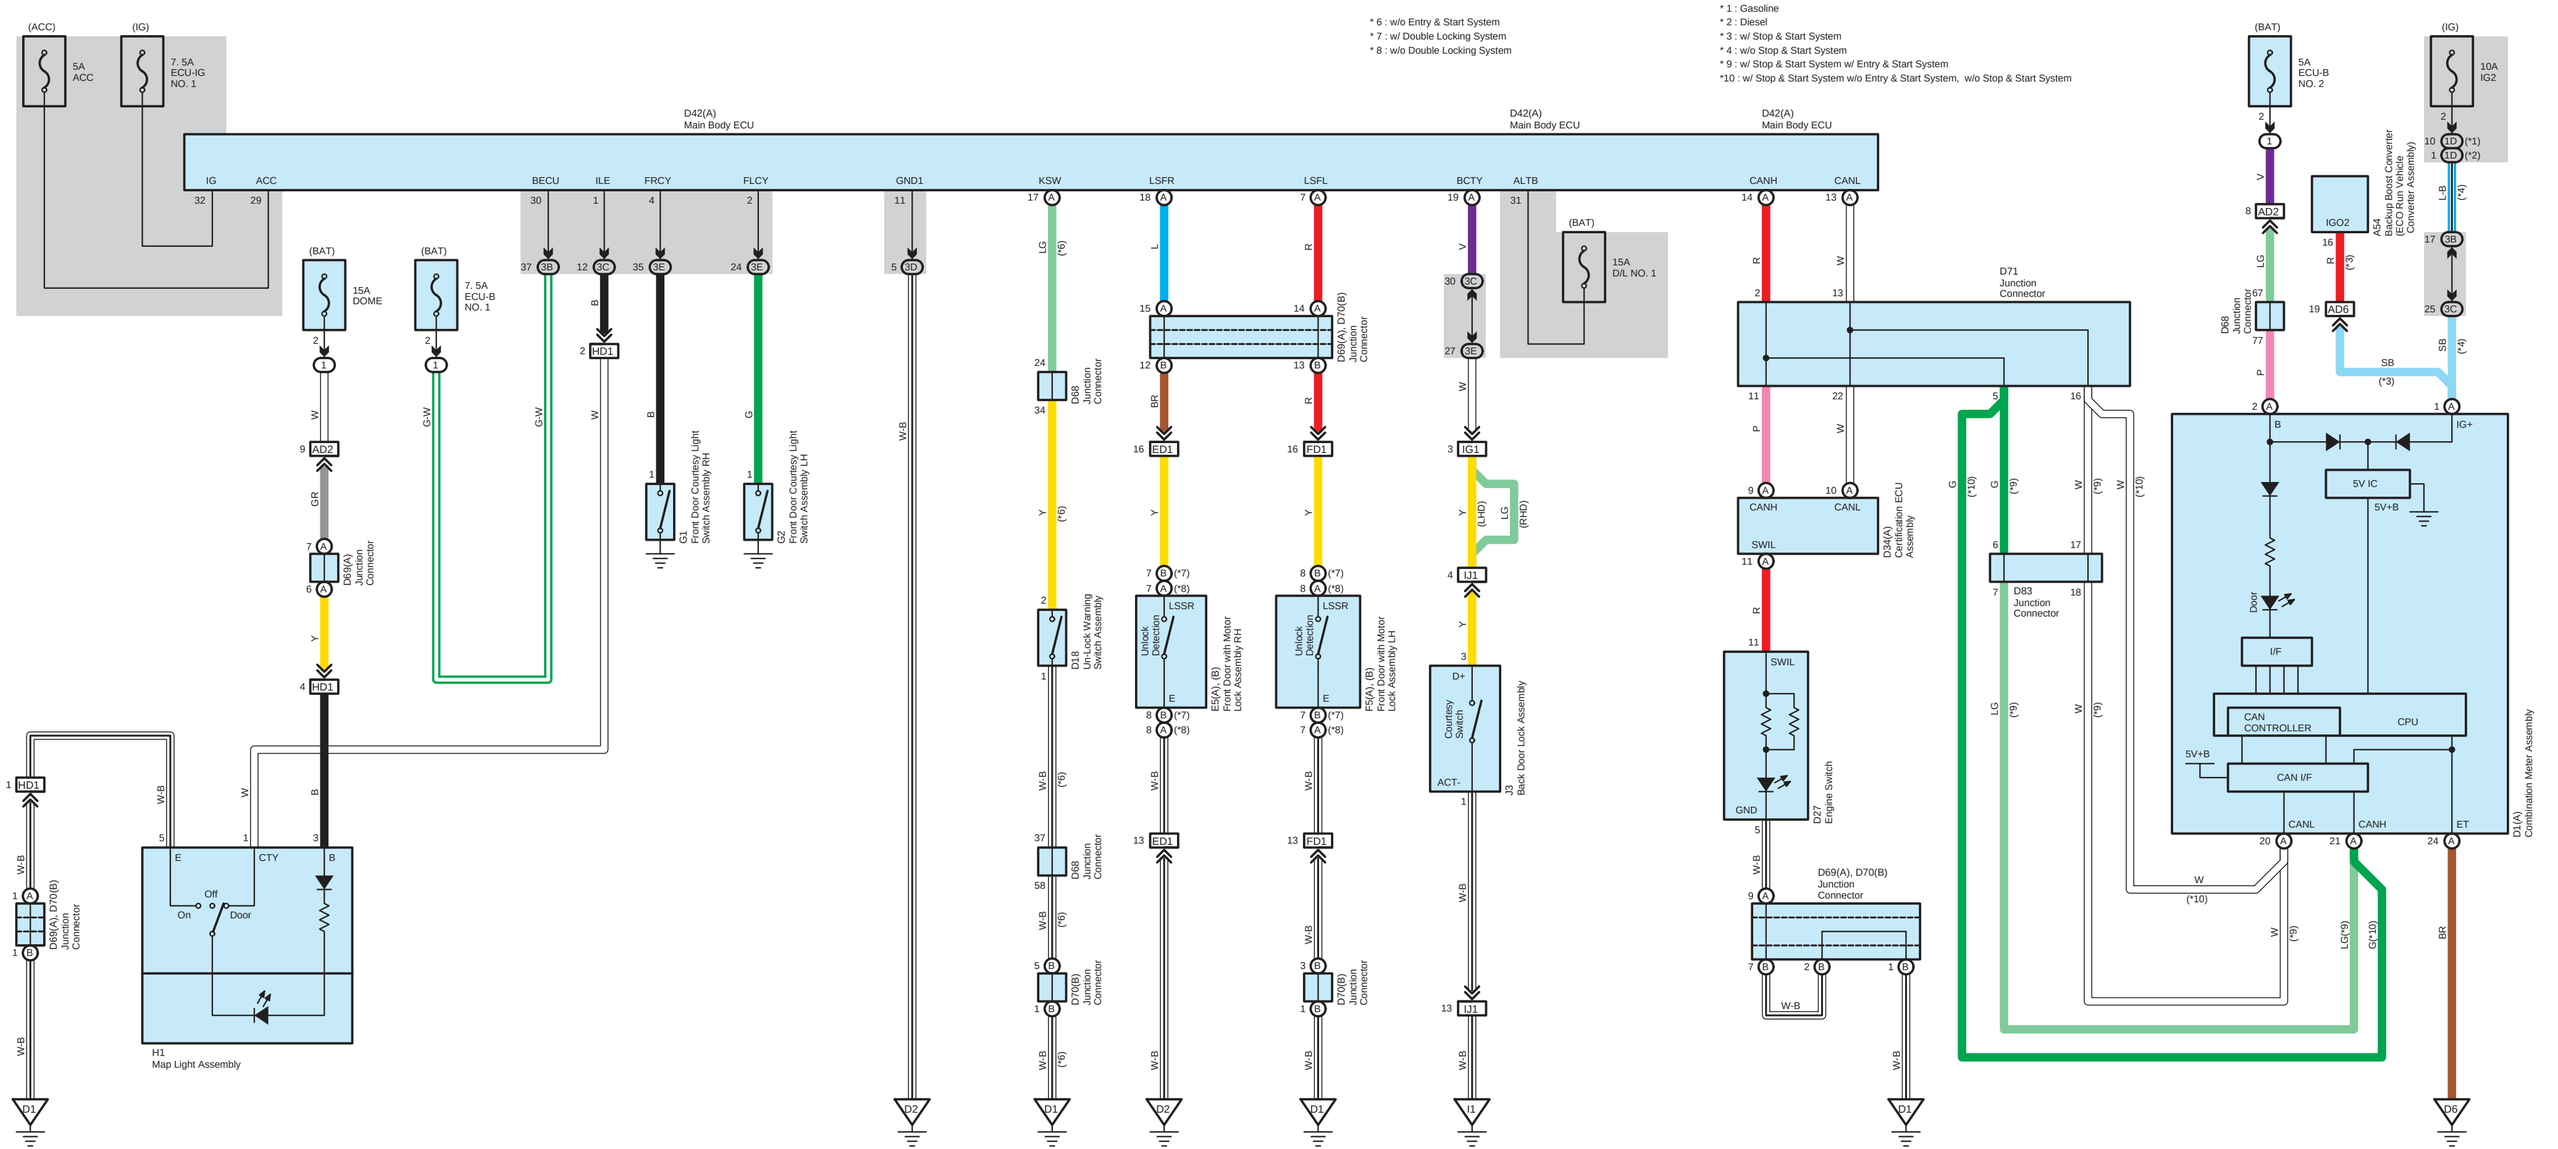
* 6 : w/o Entry & Start System
* 7 : w/ Double Locking System
* 8 : w/o Double Locking System
* 1 : Gasoline
* 2 : Diesel
* 3 : w/ Stop & Start System
* 4 : w/o Stop & Start System
* 9 : w/ Stop & Start System w/ Entry & Start System
*10 : w/ Stop & Start System w/o Entry & Start System, w/o Stop & Start System
(ACC)
(IG)
5A ACC
7. 5A ECU-IG NO. 1
D42(A) Main Body ECU
IG
ACC
BECU
ILE
FRCY
FLCY
GND1
KSW
LSFR
LSFL
BCTY
ALTB
CANH
CANL
(BAT)
15A DOME
7. 5A ECU-B NO. 1
15A D/L NO. 1
5A ECU-B NO. 2
10A IG2
D69(A) Junction Connector
G1 Front Door Courtesy Light Switch Assembly RH
G2 Front Door Courtesy Light Switch Assembly LH
D68 Junction Connector
D18 Un-Lock Warning Switch Assembly
D69(A), D70(B) Junction Connector
E5(A), (B) Front Door with Motor Lock Assembly RH
F5(A), (B) Front Door with Motor Lock Assembly LH
Unlock Detection
Courtesy Switch
J3 Back Door Lock Assembly
D70(B) Junction Connector
D71 Junction Connector
D34(A) Certification ECU Assembly
D83 Junction Connector
D27 Engine Switch
A54 Backup Boost Converter (ECO Run Vehicle Converter Assembly)
IGO2
5V IC
5V+B
Door
I/F
CAN CONTROLLER
CPU
CAN I/F
D1(A) Combination Meter Assembly
H1 Map Light Assembly
Off
On
Door
E
CTY
B