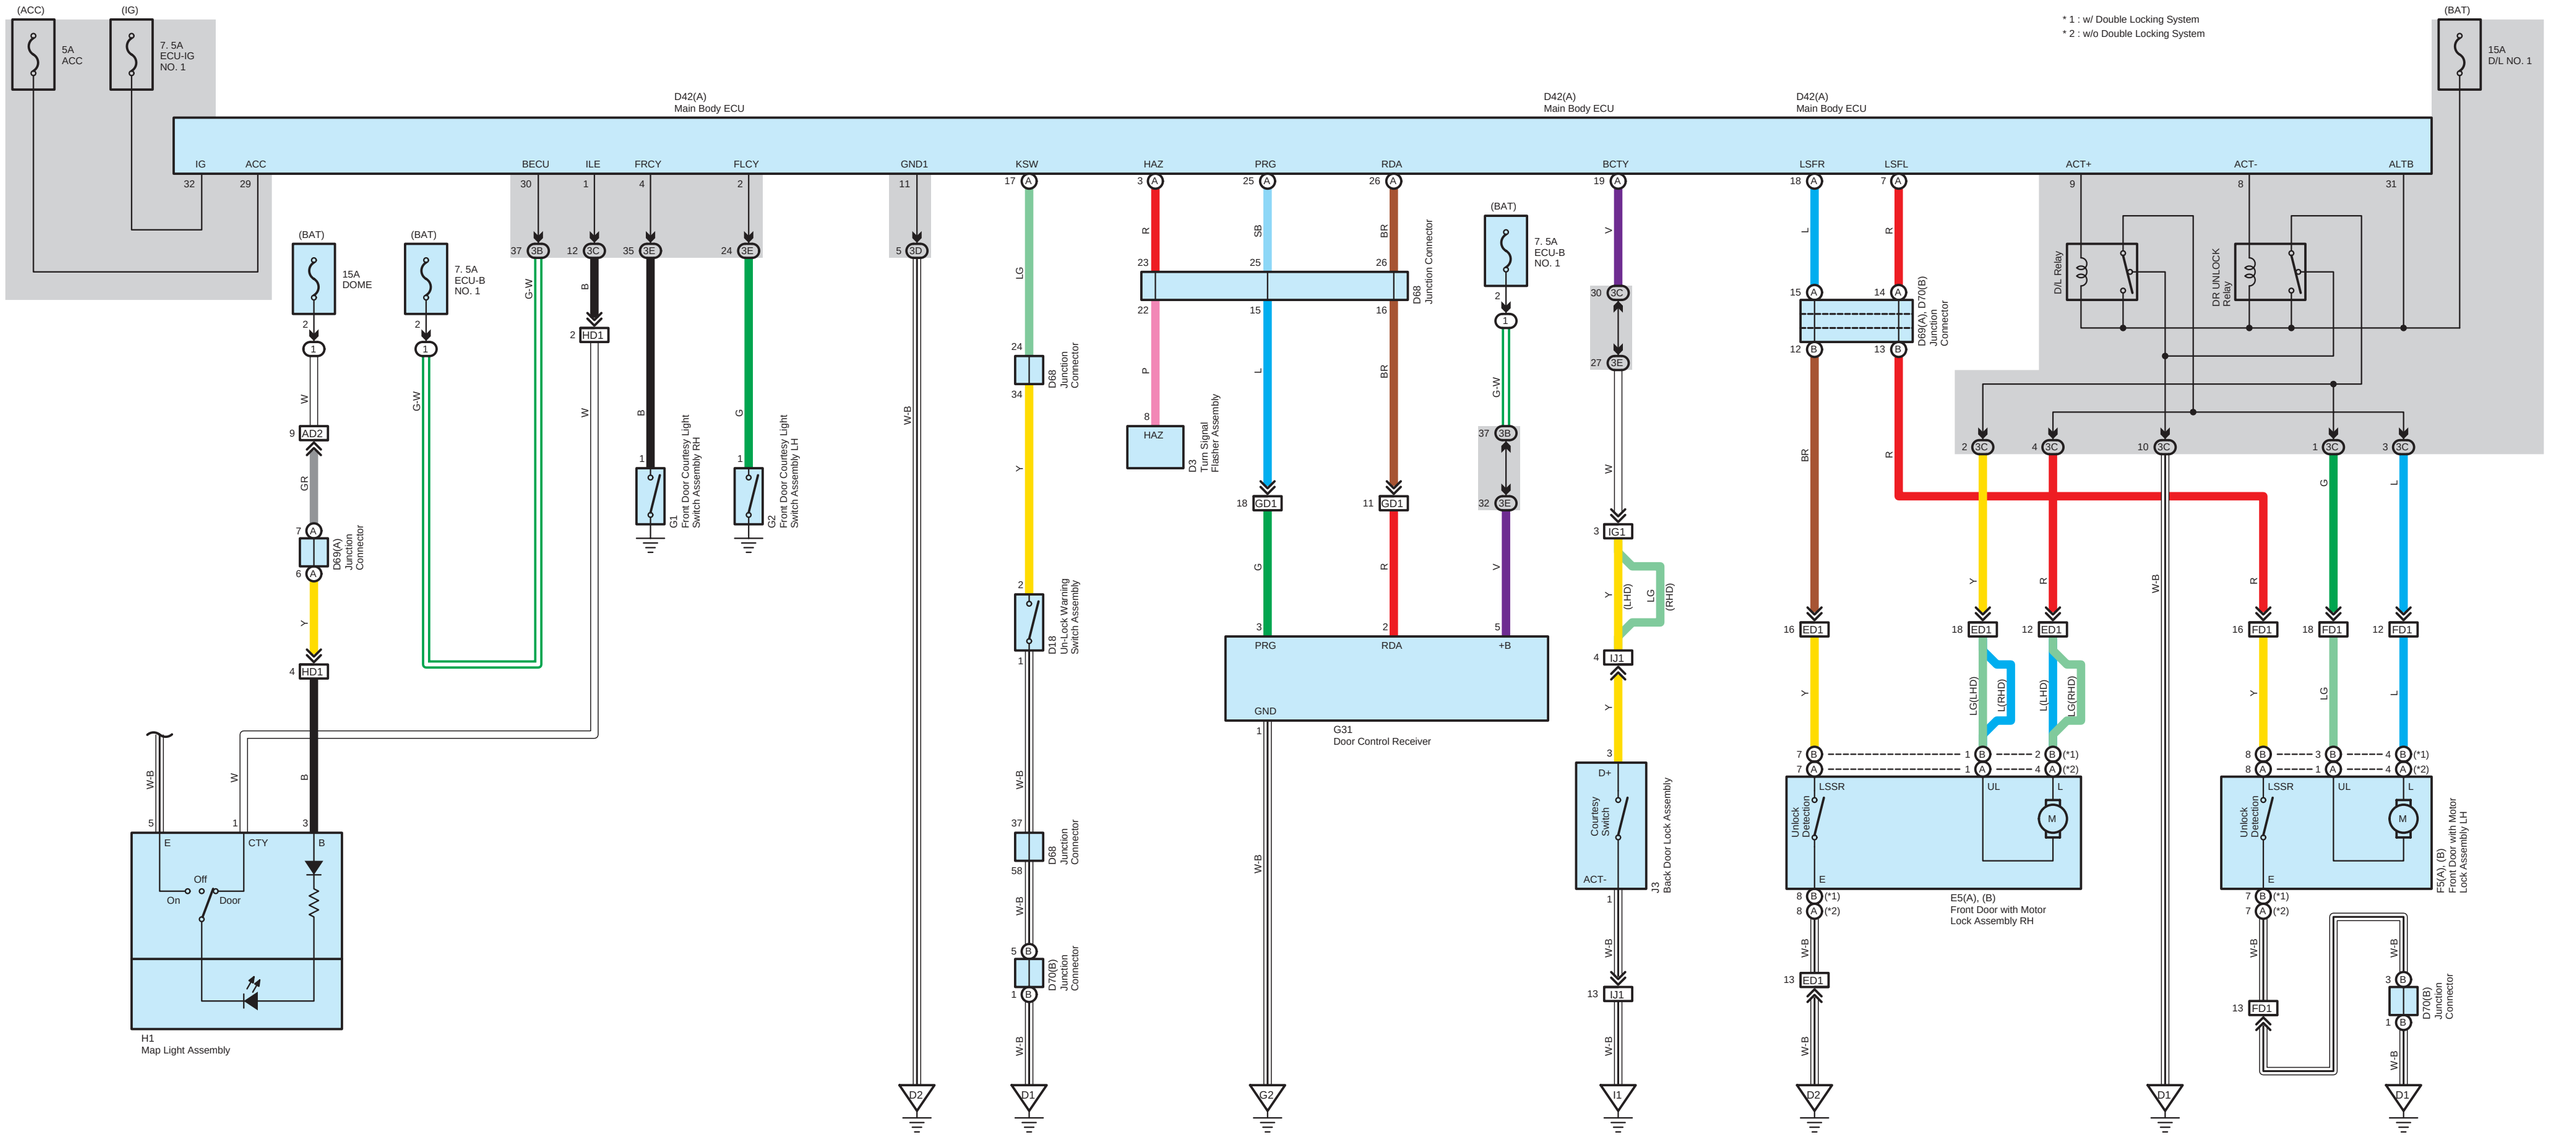
* 1 : w/ Double Locking System
* 2 : w/o Double Locking System
(ACC)
5A ACC
(IG)
7. 5A ECU-IG NO. 1
(BAT)
15A D/L NO. 1
D42(A) Main Body ECU
IG
ACC
BECU
ILE
FRCY
FLCY
GND1
KSW
HAZ
PRG
RDA
BCTY
LSFR
LSFL
ACT+
ACT-
ALTB
15A DOME
7. 5A ECU-B NO. 1
AD2
D69(A) Junction Connector
HD1
G1 Front Door Courtesy Light Switch Assembly RH
G2 Front Door Courtesy Light Switch Assembly LH
D68 Junction Connector
D18 Un-Lock Warning Switch Assembly
D70(B) Junction Connector
D3 Turn Signal Flasher Assembly
HAZ
GD1
G31 Door Control Receiver
GND
+B
IG1
IJ1
J3 Back Door Lock Assembly
Courtesy Switch
D+
ACT-
D69(A), D70(B) Junction Connector
ED1
FD1
D/L Relay
DR UNLOCK Relay
E5(A), (B) Front Door with Motor Lock Assembly RH
F5(A), (B) Front Door with Motor Lock Assembly LH
Unlock Detection
LSSR
UL
L
M
H1 Map Light Assembly
E
CTY
B
Off
On
Door
D2
D1
I1
G2