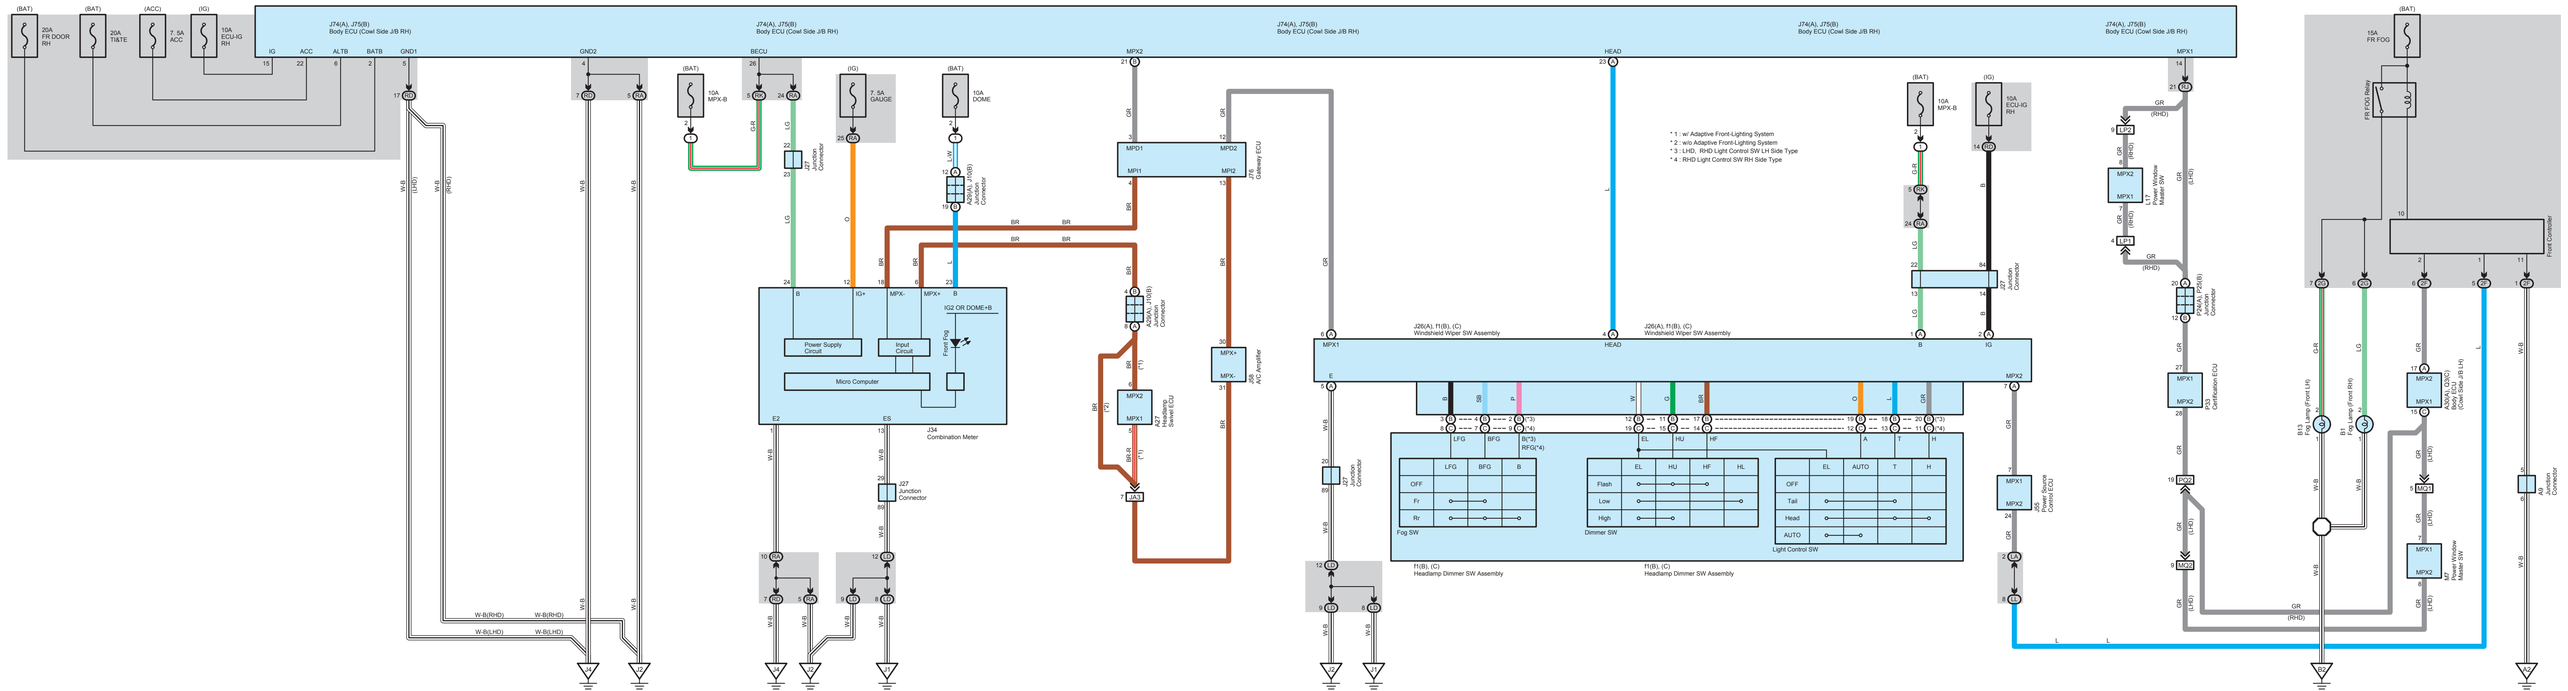

J74(A), J75(B)
Body ECU (Cowl Side J/B RH)
20A FR DOOR RH
20A TI&TE
7.5A ACC
10A ECU-IG RH
10A MPX-B
7.5A GAUGE
10A DOME
J27 Junction Connector
J26(A), J10(B) Junction Connector
J76 Gateway ECU
J34 Combination Meter
Power Supply Circuit
Input Circuit
Micro Computer
IG2 OR DOME+B
Front Fog
J27 Junction Connector
A27 Headlamp Swivel ECU
J28 A/C Amplifier
J26(A), f1(B), (C) Windshield Wiper SW Assembly
J27 Junction Connector
Fog SW
Dimmer SW
Light Control SW
f1(B), (C) Headlamp Dimmer SW Assembly
J27 Junction Connector
J26 Power Source Control ECU
* 1 : w/ Adaptive Front-Lighting System
* 2 : w/o Adaptive Front-Lighting System
* 3 : LHD, RHD Light Control SW LH Side Type
* 4 : RHD Light Control SW RH Side Type
J27 Junction Connector
P33 Certification ECU
P24(A), P25(B) Junction Connector
15A FR FOG
FR FOG Relay
Front Controller
B13 Fog Lamp (Front LH)
B1 Fog Lamp (Front RH)
A30(A), D3(C) Body ECU (Cowl Side J/B LH)
A9 Junction Connector
M7 Power Window Master SW