QUICK REFERENCE GUIDE

2009 QUEST

NISSAN

SHIFT_convention

01	HEADLIGHT AND TURN SIGNAL CONTROL	05	CRUISE CONTROL	09	TILT AND TELESCOPIC STEERING COLUMN*	13	HAZARD WARNING SWITCH*
02	LOW TIRE PRESSURE WARNING LIGHT	06	LIGHTS ON DEMAND	10	CONTROL PANEL DISPLAY	14	AUDIO SYSTEM
03	WINDSHIELD WIPER/WASHER SWITCH	07	VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH	11	AUTOMATIC CLIMATE CONTROL	15	AUXILIARY INPUT JACK*
04	STEERING WHEEL SWITCHES FOR AUDIO CONTROL/BLUETOOTH®	08	REAR SONAR SYSTEM OFF SWITCH	12	FRONT PASSENGER AIR BAG STATUS LIGHT		

*See your Owner's Manual for more information.

TABLE OF CONTENTS

Remote Keyless Entry System. 2
Automatic Door Locks 2
Windshield Wiper/Washer Switch 3
Headlight and Turn Signal Control 4
Lights on Demand. 5
Steering Wheel Switches for Audio Control/Bluetooth®
(if so equipped) 5
Cruise Control. 6
Automatic Climate Control (if so equipped). 6
Rear Climate Control Dials 8
FM/AM/XM®* Radio with CD Changer (if so equipped). 8
Control Panel Display with Navigation System (if so equipped) 10
RearView Monitor (if so equipped) 11
Clock Set/Adjustment 11
Rear Sonar System Off Switch (if so equipped) 12
Vehicle Dynamic Control (VDC) Off Switch (if so equipped) 12
Automatic Driver Positioner (if so equipped) 12
Outside Mirror Control Switch. 13
Pedal Position Adjustment Switch 14
Front Passenger Air Bag Status Light 14
Tire Pressure Monitoring System (TPMS) 14
Seat Belt Warning Light and Chime 14
Child Safety Rear Door Lock 15
Fuel-Filler Door Release 15
Fuel-Filler Cap 15
Power Vent Windows (if so equipped): 15
Moonroof Controls (if so equipped) 16
Power Sliding Doors and Power Lift Gate (if so equipped) 16
Front Seat Adjustments 17
Adjusting and Folding the 2nd Row Seat 18
Folding the 3rd Row Seat 19
HomeLink® Universal Transceiver (if so equipped) 19
DVD Entertainment System (if so equipped) 21
Bluetooth® Hands-Free Phone System (if so equipped). 25
Navigation System (if so equipped). 28

This easy-to-use Quick Reference Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner's Manual. The Owner's Manual contains more detailed information to help you better understand the important safety warnings, features, operation and maintenance of your vehicle. All information, specifications, photographs and illustrations in this publication are those in effect at the time of printing. NISSAN reserves the right to change specifications or design without notice and without obligation.

REMOTE KEYLESS ENTRY SYSTEM

LOCK DOORS

Press the button to lock all doors.

UNLOCK DOORS

Press the button once to unlock the driver's door only. Press the button again within 5 seconds to unlock all doors.

POWER SLIDING DOORS (if so equipped)

Press and hold the button for longer than 0.5 seconds to open or close the power sliding door. The door will reverse direction immediately during power open or power close if the keyfob button is pressed. A chime will sound to indicate the reversal.

POWER LIFTGATE (if so equipped)

Press and hold the button for longer than 0.5 seconds to open or close the power lift gate. The hazard lights will flash and a chime will sound to indicate that the power open or power close sequence has started. If you press the button again, the lift gate will reverse direction immediately; a chime will sound to indicate the reversal.

SILENCING THE HORN BEEP FEATURE

For vehicles without Navigation system:

- To deactivate: Press and hold the and buttons for at least 2 seconds.
- To activate: Press and hold the and buttons for at least 2 seconds.

For vehicles with Navigation system:

If you change the horn beep feature with the keyfob, the display screen will not show the current mode. Use the keyfob to return to the previous mode and re-enable the display screen control.

- Press the SETTING button on control panel.
- Select Vehicle Electronic Systems.
- Press ENTER.
- Select Keyless Remote Response – Horn.
- Set operating conditions to turn horn beep on or off when locking or unlocking the vehicle with the keyfob.

AUTOMATIC DOOR LOCKS

- All doors will be locked automatically when the vehicle speed reaches 15 MPH (24 km/h).
- All the doors will unlock automatically when the ignition switch is placed in the OFF position.

The automatic lock and unlock functions can be deactivated or activated independently of each other. To deactivate or activate the automatic door lock or unlock system, perform the following procedure:

1. Close all doors.
2. Place the ignition switch in the ON position.
3. Do one of the following within 20 seconds of performing Step #2:
   - To change AUTO UNLOCK settings: push and hold the power door lock switch to the 🔓 position (UNLOCK) for more than 5 seconds.
   - To change AUTO LOCK settings: push and hold the power door lock switch to the 🔒 position (LOCK) for more than 5 seconds.
4. When activated, the hazard indicator will flash twice. When deactivated, the hazard indicator will flash once.
5. The ignition switch must be placed in the OFF and ON position again between each setting change.

WINDSHIELD WIPER/WASHER SWITCH

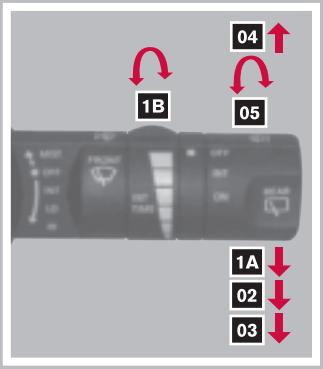

- The ignition switch must be in the ON position to activate the windshield wipers.
- Move the lever to the following positions to operate the windshield wipers:

  1A Intermittent **(INT)** – Front wipers operate intermittently and can be further adjusted by twisting the time control ring **1B** .

  02 Low Speed **(LO)** – Continuous low-speed operation of front wipers.

  03 High Speed **(HI)** – Continuous high-speed operation of front wipers.

  04 Mist **(MIST)** – Lift the lever up for one sweep of the front wipers.

  05 Rear Wipers **(REAR)** – Twist the end section to operate the first **(INT)** or second **(ON)** speed settings for the rear wipers.

- The washer function activates the washer fluid and several sweeps of the wipers:
  - For FRONT WASHER, pull lever toward you.
  - For REAR WIPER, push lever away from you.

HEADLIGHT AND TURN SIGNAL CONTROL

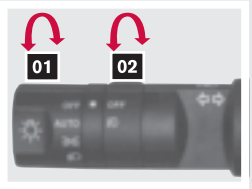

TO ACTIVATE THE AUTOLIGHT SYSTEM:

Turn the headlight control switch **01** to the **AUTO** position to activate the autolight system. The autolight system can:

- Turn the headlights on automatically when it is dark.
- Turn the headlights off automatically when it is light.
- Keep the headlights on for 45 seconds after you place the ignition switch in the OFF position and all doors are closed.

TO DEACTIVATE THE AUTOLIGHT SYSTEM:

- Turn the headlight control switch **01** to the **OFF** , or position.

HEADLIGHT CONTROL SWITCH

- Turn the headlight control switch **01** to the position to turn on the front parking, tail, license plate and instrument panel lights.
- Turn the headlight control switch **01** to the position to turn on the headlights. All other lights remain on.

FOG LIGHT OPERATION

NOTE: The headlights must be on and the low beams selected for the fog lights to operate.

- Turn the switch (inside collar) **02** to the position to turn on the fog lights.
- Turn the switch (inside collar) **02** to the **OFF** position to turn off the fog lights.

HIGH BEAM

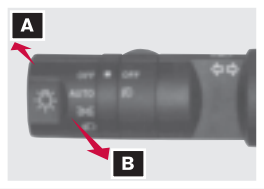

- Push the headlight control switch forward **A** to select the high beam function. The blue indicator light illuminates. Pull the headlight switch back to the original position to select the low beam. The blue indicator light goes off.
- Pull and release the headlight control switch **B** to flash the headlight high beams on and off.

LIGHTS ON DEMAND

The lights on demand switch allows the driver to select one of three lighting modes for the interior lights and puddle lights:

Push the top portion of the switch and the interior lights and puddle lights will illuminate. The lights will turn off automatically after 30 minutes to prevent the battery from becoming discharged.

Push the switch to the neutral position and the lights will stay on for approximately 30 seconds when:

- The doors are unlocked by the keyfob, a key, or the power door lock switch while all doors are closed and the ignition switch is in the OFF position.
- The driver's door is opened and then closed while the key is removed from the ignition switch.
- The key is removed from the ignition switch while all doors are closed.

The interior lights and puddle lights will turn off while the 30-second timer is activated when:

- The driver's door is locked by the keyfob, a key, or the power door lock switch.
- The ignition switch is turned on.

The lights will turn off automatically after 30 minutes while the doors are open to prevent the battery from becoming discharged.

Push the **OFF** portion of the switch and the interior lights and puddle lights will not illuminate.

- The lights can be turned off so sleeping passengers are not disturbed when the doors are opened.
- The lights on the front doors will turn on when the front doors are opened.

STEERING WHEEL SWITCHES FOR AUDIO CONTROL/ BLUETOOTH® (if so equipped)

- Press the **MODE** button to turn the radio system on.
- To choose Preset A, B, C, CD, AUX or XM® (if so equipped) press **MODE** repeatedly.
- The tuning up or down ^ v switch can be used to perform the following:
  - Push the ^ v switch for less than 1.5 seconds to change to a preset station.
  - Push and hold the ^ v switch for more than 1.5 seconds to seek the next or previous broadcasting radio station.
  - Push the ^ v switch while playing a CD (if so equipped) for less than 1.5 seconds to change tracks on the CD.

- If the vehicle is equipped with a CD changer, push and hold the ^ v switch for more than 1.5 seconds to change between CDs.

- Push the **VOL** control switch up or down to increase or decrease the volume.

CRUISE CONTROL

- To activate the cruise control, push the **ON·OFF** switch. The indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch and release it. The SET indicator light in the instrument panel will illuminate.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch. When the vehicle attains the speed you desire, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch. Release the switch when the vehicle slows to the desired speed.
- To cancel cruise control, push the **CANCEL** switch or tap the brake pedal. The SET indicator light in the instrument panel will go out.
- To resume a preset speed, push and release the **ACCEL/RES** switch. The vehicle returns to the last set cruising speed when the vehicle speed is over 24 MPH (38 km/h).
- To turn off cruise control, push the **ON·OFF** switch. Both the CRUISE indicator light and the SET indicator light in the instrument panel will go out.

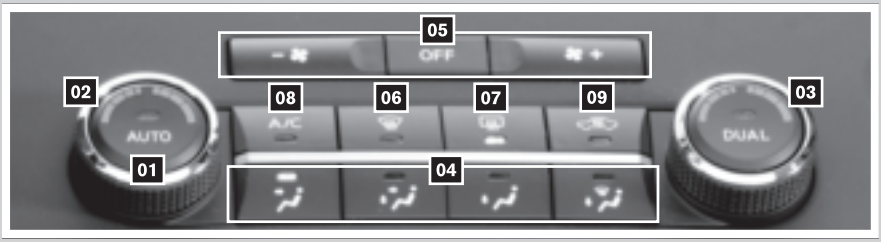

AUTOMATIC CLIMATE CONTROL (if so equipped)

01 AUTO BUTTON

- Press the **AUTO** button 01 . Turn the driver's side temperature control dial 02 to the desired temperature. This will allow the fan speed, air flow distribution and temperature to be automatically maintained.
- To disable auto mode, press the air flow mode control button 04 , press the fan speed control button 05 or press the front defroster control button 06 .

- Press the **DUAL** 03 button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side control.
- When **AUTO** is pressed, **AUTO** will be displayed. When **DUAL** is pressed, **DUAL** will be displayed.

02 DRIVER'S SIDE TEMPERATURE CONTROL DIAL

Turn the driver's temperature control dial left for cold air or right for hot air.

03 PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

Turn the passenger's temperature control dial left for cold air or right for hot air. Doing so will activate dual mode.

04 AIR FLOW/MODE BUTTONS

Press to select the following air flow outlets:

Air flows from the center and side vents.

Air flows from the center, side, and foot vents.

Air flows mainly from the foot vent.

Air flows from the defroster and foot vents.

Air flows from the defroster vents.

05 FAN SPEED CONTROL BUTTONS

Press − (slower) or + (faster) button to control fan speed. Press **AUTO** to automatically control fan speed. Press **OFF** to turn climate control off.

06 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the defroster control button to turn the system on. The A/C automatically turns on when the defroster mode is selected.
- Turn the driver's side temperature control dial left or right to set the desired temperature.
- To set the defroster on high, press and hold + until fan speed increases.

07 DEFROSTING/DEFOGGING REAR WINDOW AND (if so equipped) OUTSIDE HEATED MIRROR

Push the rear window defroster switch on. Push the switch again to manually turn the defroster off. This function automatically turns off in approximately 15 minutes.

08 A/C ON/OFF BUTTON

Press the A/C button to manually turn the A/C on or off.

09 AIR RECIRCULATION BUTTON

- Press the air recirculation button to recirculate air inside the vehicle.
- Press the air recirculation button again to turn air recirculation off.
- The air recirculation mode can only be selected if the air flow control mode is in the following positions: or .

REAR CLIMATE CONTROL DIALS

Press the **REAR CTRL** button to transfer rear climate functions to the rear passengers.

To adjust the climate control system for rear seat passengers, use the dials on the overhead console.

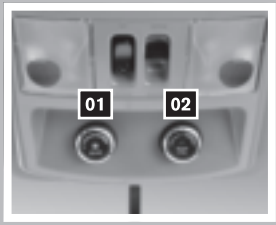

01 REAR FAN SPEED CONTROL DIAL

02 REAR TEMPERATURE CONTROL DIAL/REAR CTRL BUTTON

***Rear A/C is only available when the front climate control A/C is on.**

FM/AM/XM®* RADIO WITH CD CHANGER (if so equipped)

01 SEEK/TRACK BUTTON

- To scan quickly through each broadcasting station, press the **SEEK/TRACK** button.
- To skip from one track to another on a CD, press the **SEEK/TRACK** button. Press and hold the **SEEK/TRACK** button for longer than 1.5 seconds to fast forward or rewind a track. The disc will play at an altered speed until the button is released.

02 PRESET A·B·C BUTTON

Press the **PRESET A·B·C** button until you reach the desired setting. The radio is equipped with three separate banks, each with six station presets. You may store any combination of FM, AM or XM® radio presets on each bank.

03 STATION AND CD SELECT BUTTONS

- To store a station in a preset you must first select A, B, or C memory bank by pressing the **PRESET A·B·C** button and tune to the desired FM, AM or XM® station. Then press and hold the desired station select button for at least 2 seconds. When the preset indicator illuminates, a beep will sound, indicating memorization is complete. To retrieve a previously set station, select the memory bank where the preset was set, then press the corresponding station select button.
- While playing a CD, to select a different CD loaded into the CD changer; press one of the CD select buttons (**1** - **6**).

04 REAR CTRL BUTTON

Press the **REAR CTRL** button to turn the rear audio controls on. Press again to turn the rear controller off.

05 TUNE/FLDR·CAT BUTTON

- Press the **TUNE/FLDR·CAT** button to manually tune the radio.
- Press the **TUNE/FLDR·CAT** button if playing a CD that is formatted with MP3 folders to skip to the next folder.

06 AUDIO BUTTON (Bass, Treble, etc.)

Press the **AUDIO** button to change the audio settings. Adjust the Bass, Mid, Treble, Fade, Balance and Speed Sensitive Volume (SSV) by pressing the **AUDIO** button until the desired mode appears in the display. Press the **TUNE/FLDR·CAT** button up or down to adjust to the desired level.

07 SPEAKER CONTROL BUTTON

Press the speaker control button to activate the rear headphones and turn off the rear speakers. Press the button again to deactivate the rear headphones and turn on the rear speakers.

08 SCAN BUTTON

Press the **SCAN** button to stop at each broadcasting station (FM, AM or XM®) for 5 seconds. Pressing the button again during this 5-second period will stop scan tuning and the radio will remain tuned to that station.

09 FM·AM/SAT BUTTON

Pressing the **FM·AM/SAT** radio select button will change the band to either FM, AM or XM® radio stations.

10 CD/DVD BUTTON

- Press the **CD/DVD** button to begin CD play.
- Press the **CD/DVD** button again to begin DVD play.

11 LOAD BUTTON

- **LOAD A SINGLE DISC** - Press the button for less than 1.5 seconds. Select the loading slot by pressing one of the CD insert select button (**1** - **6**), then insert the CD.
- **LOAD UP TO 6 DISCS** - Press and hold the button for more than 1.5 seconds. The slot numbers (1-6) will illuminate on the display when CDs are loaded into the changer.

12 AUX JACK

Press the **AUX** button on the radio to play a compatible device such as an MP3 player when it is plugged into the **AUX** jack (cable not included).

NOTE: You may need to adjust the volume on any compatible device plugged into the auxiliary jack to find the most desired sound level of the audio system.

13 EJECT BUTTON

- **EJECT A SINGLE DISC** - Press the button for less than 1.5 seconds. Select the eject slot by pressing the CD insert select button (**1** - **6**). The CD will then eject.
- **EJECT ALL DISCS** - Press and hold the button for more than 1.5 seconds. The CDs will be ejected one after another.

*XM® Satellite Radio is only available on vehicles equipped with optional XM® satellite subscription service.

CONTROL PANEL DISPLAY WITH NAVIGATION SYSTEM (if so equipped)

TRIP BUTTON

When the **TRIP** button is pressed, the following modes will display on the screen:

- Warning messages (if there are any)
- TRIP 1 (Elapsed Time, Driving Distance, Average Speed)
- TRIP 2 (Elapsed Time, Driving Distance, Average Speed)
- FUEL ECONOMY (Average Fuel Economy, Distance to Empty)
- MAINTENANCE (Engine Oil, Tire Rotation and Tire Pressure)
- OFF

MAINTENANCE ITEMS

You can set the engine oil and the tire rotation interval. To display the setting of the maintenance interval, select the **ENGINE OIL** or **TIRE ROTATION** key using the joystick and press the **ENTER** button. To set the maintenance interval, select the **MAINTENANCE SCHEDULE** key using the joystick and push the joystick to the right or left. To reset the maintenance interval, select the **RESET** key using the joystick and press the **ENTER** button. To view the vehicle's tire pressure (if so equipped), select the **TIRE PRESSURE** key using the joystick and press the **ENTER** button.

DISPLAY SCREEN SETTINGS

The setting screen will appear when the **SETTING** button is pressed. Select the **DISPLAY** key with the joystick and press the **ENTER** button to choose from various display screen options. The **DISPLAY** key will allow you to adjust the information shown on the screen, such as brightness or contrast.

REARVIEW MONITOR (if so equipped)

When the shift selector is moved to the R (Reverse) position, the monitor display will automatically change to show the area directly behind the vehicle.

The colored lines on the display screen indicate approximate distances to objects.

- Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).

CLOCK SET/ADJUSTMENT

Press the **SETTING** button, then select **SYSTEM SETTINGS** with the joystick and press the **ENTER** button. Next select **CLOCK** and press the **ENTER** button to access the following clock settings:

- Hours – Adjust the time by increasing or decreasing by hour.
- Minutes – Adjust the time by increasing or decreasing by minute.
- Auto Adjust – The time will be reset to the GPS time.
- Daylight Saving Time – Turn this item on for daylight savings time application.
- Select Time Zone – Choose the time zone.

REAR SONAR SYSTEM OFF SWITCH (if so equipped)

When backing up, this system will beep to alert you to obstacles within 6 ft (1.8 m) of the rear bumper. The system beeps faster as the vehicle gets closer to the obstacle. A continuous tone sounds when an obstacle is less than 10 in (25 cm) away from the bumper. Turn the system off by pushing the rear sonar system **OFF** switch. Push the switch again to enable the system. The system will automatically reset the next time the ignition switch is turned on.

VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH (if so equipped)

The Vehicle Dynamic Control (VDC) system uses various sensors to monitor driver inputs and vehicle motion. Under certain driving situations, the system will control braking and engine output to help keep the vehicle on its steered path.

- Push the Vehicle Dynamic Control (VDC) OFF switch to deactivate the VDC system. The VDC OFF light will illuminate in the instrument panel gauge area.
- Push the Vehicle Dynamic Control (VDC) OFF switch again to activate the VDC system. The VDC OFF light in the instrument panel gauge area will turn off.
- The VDC system is active while the vehicle is running until the switch is pressed to turn it off.

AUTOMATIC DRIVER POSITIONER (if so equipped)

The automatic driver positioner system has two features:

- Memory storage function.
- Entry/exit function.

MEMORY STORAGE FUNCTION

Two positions for the driver's seat, accelerator and brake pedals, and outside mirrors can be stored in the automatic driver positioner memory. Follow these procedures to set driver preferences.

SET THE DESIRED POSITIONING

- Set the automatic transmission lever to the P (Park) position.
- Turn the ignition on and adjust the driver's seat, accelerator and brake pedals, and outside mirrors to the desired positions.
- Press the **SET** (memory) button and within 5 seconds press the position button (**1** or **2**) until the indicator light illuminates. The position is now stored in memory.

LINK TO KEYFOB

- Within 5 seconds of setting the memory position (indicator light is on and ignition is on), press the button on the remote.
- A keyfob can be linked to each memory button.
- If memory positioning is re-set to a new location, the keyfob automatically re-links.

RECALLING A MEMORY SETTING FROM THE MEMORY PAD

- With the automatic transmission lever in the P (Park) position, press the position button (**1** or **2**).

FROM THE KEYFOB

- If properly linked, operation of the button will automatically return the driver's seat, accelerator and brake pedals, and outside mirrors to the memorized position.

ENTRY/EXIT FUNCTION

The driver's seat automatically moves to allow the driver to get into and out of the driver's seat more easily. The driver's seat slides backward when:

- The key is removed from the ignition switch.
- The driver's door is opened with the key turned to LOCK.
- The key is turned from ACC to LOCK with the driver's door open and the automatic transmission lever is in the P (Park) position.

The driver's seat returns to the previous position when:

- The key is inserted into the ignition switch.
- The driver's door is closed with the key turned to LOCK.
- The key is turned from ACC to ON while the automatic transmission lever is in the P (Park) position.

OUTSIDE MIRROR CONTROL SWITCH

- Rotate the control switch to select the right or left mirror.
- Adjust the mirror to the desired position by moving the control switch.
- The selected mirror will automatically tilt down (if so equipped) when the automatic transmission lever is moved to the R (Reverse) position.

The selected mirror will return to its original position when the automatic transmission lever is moved to any position other than R (Reverse) or if the outside mirror switch is moved to the neutral position.

PEDAL POSITION ADJUSTMENT SWITCH

The accelerator and brake pedals can be adjusted for your driving comfort.

- Adjust the pedals when the shift selector is in P (Park).
- Push ⬆ 01 to move the position of the pedals forward.
- Push ⬇ 02 to move the position of the pedals backward.

FRONT PASSENGER AIR BAG STATUS LIGHT

This vehicle is equipped with the Nissan Advanced Air Bag System. Under some conditions, depending on the type of occupant or object detected in the front passenger seat by the occupant classification sensor, the front passenger air bag is designed to automatically turn **OFF.** When the front passenger air bag is **OFF,** the front passenger air bag status light will illuminate*. For example:

- When the system detects that the front passenger's seat is occupied by a small adult, child or child restraint as outlined in the Owner's Manual, the **will illuminate** to indicate that the front passenger **air bag is OFF and will not inflate in a crash.**
- When the front passenger's seat is occupied and the passenger meets the conditions outlined in the Owner's Manual, the **will not illuminate** to indicate that the front passenger **air bag is operational.**

***When the system detects that the front passenger's seat is unoccupied, the passenger air bag status light will not illuminate even though the front passenger air bag is OFF.**

TIRE PRESSURE MONITORING SYSTEM (TPMS)

This system monitors tire pressure. If the low tire pressure warning light illuminates, check the tire pressure in all four tires.

Adjust the low tire pressure to the recommended COLD tire pressure shown on the Tire and Loading Information label located in the driver's door opening. After tire pressures are adjusted, the vehicle will need to be driven at speeds above 16 MPH (25 km/h) to activate the TPMS and turn off the low tire pressure warning light.

SEAT BELT WARNING LIGHT AND CHIME

- The light and chime remind you to fasten your seat belts. The light illuminates whenever the ignition switch is placed in the ON or START position and remains illuminated until the driver's seat belt is fastened. At the same time, the chime sounds for approximately 6 seconds unless the driver's seat belt is securely fastened.
- With the ignition ON, the seat belt warning light may also illuminate if the front passenger's seat is occupied with the front passenger's seat belt not fastened.

CHILD SAFETY REAR DOOR LOCK

- The child safety lock levers are located on the edge of the rear doors.
- Child safety locks help prevent the rear doors from being opened accidentally, especially when small children are in the vehicle.
- When the lever is in the LOCK position, the door can only be opened from the outside.

FUEL-FILLER DOOR RELEASE

- Press the switch located on the driver's door to open the fuel-filler door.
- Close the fuel-filler door securely to lock it.
- The driver's side power sliding door is disabled when the fuel-filler door is open. The sliding door can be partially opened manually.

FUEL-FILLER CAP

- To tighten, turn the fuel-filler cap clockwise until ratcheting clicks are heard. If the cap is not fully tightened, the service engine soon light may illuminate.
- If SERVICE ENGINE SOON light illuminates because the fuel cap is loose or missing, tighten or re-install the cap. The SERVICE ENGINE SOON should turn off after a few driving trips.

POWER VENT WINDOWS (if so equipped):

Use the vent window switches on the driver's side window controls to open and close the power vent windows.

- Press the switch down to open a power vent window.
- Lift the switch up to close the window.
- The power vent windows operate when the ignition switch is placed in the ON position, or for 45 seconds after the ignition switch is placed in the OFF position.
- If the driver's or passenger's door is opened during this 45–second period, power to the vent windows is cancelled.

MOONROOF CONTROLS (if so equipped)

The ignition switch must be in the ON position to operate the moonroof controls.

TILTING THE MOONROOF

- To tilt the moonroof up, push the tilt switch to the **UP** 01 position. If the roof is open, it will automatically close and then tilt up.
- To tilt the moonroof down, push the tilt switch to the **DOWN** 02 position.

SLIDING THE MOONROOF

- Push the switch toward the **OPEN** position 03 to fully open the moonroof.
- Push the switch toward the **CLOSE** position 04 to fully close the moonroof.
- Push the switch in any direction while the moonroof is sliding open or closed to stop the moonroof in the desired position.

POWER SLIDING DOORS AND POWER LIFT GATE (if so equipped)

POWER SLIDING DOORS

The power sliding doors can be activated by the buttons on the keyfob, the overhead console, and the door pillars.

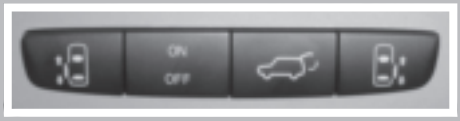

- To open, close or reverse a sliding door, the ignition switch must be off or the automatic transmission selector lever must be in P (Park).
- To open, close or reverse a sliding door with the keyfob, press and hold the keyfob button for longer than 0.5 seconds.
- To activate a sliding door with the button on the door pillar, the main **ON/OFF** switch must be on, the door must be unlocked, and the child safety door lock must be in the unlock position.
- To activate the power assist feature, manually move a sliding door toward the open or close position using the inside or outside handle. The power assist feature will automatically complete the motion.

POWER LIFT GATE

The power lift gate can be activated by the buttons on the keyfob, the overhead console, and the rear door pillar.

- To open, close or reverse the lift gate, the automatic transmission lever must be in P (Park).
- To open, close or reverse the lift gate with the keyfob, press and hold the keyfob button for longer than 0.5 seconds.

- To close the lift gate with the rear door pillar button, the main **ON/OFF** switch must be on.

The power sliding doors and the power lift gate have an anti-pinch safety feature. Please refer to your Owner's Manual for more information regarding this feature.

FRONT SEAT ADJUSTMENTS

With manual seats (if so equipped):

- Pull up on the lever 01 under the front of the seat and slide backward or forward; release.
- Lift the lever 02 on the side of the seat to adjust your seatback backward or forward; release when you have found a comfortable angle and the seat belt fits properly.
- Use the dials 03 at the side of the driver's seat to adjust the angle and height of the seat cushion.

With power seats (if so equipped)

- Move the control 04 forward or backward to adjust the seat cushion forward or backward.
- Pull up to raise the driver's seat cushion; press down to lower the cushion. 04
- Push the switch 05 forward to move the seatback forward; press it back to move the seatback backward.

Your driver's seat has a lumbar support; adjust it by moving the lever 06 forward or backward.

ADJUSTING AND FOLDING THE 2ND ROW SEAT

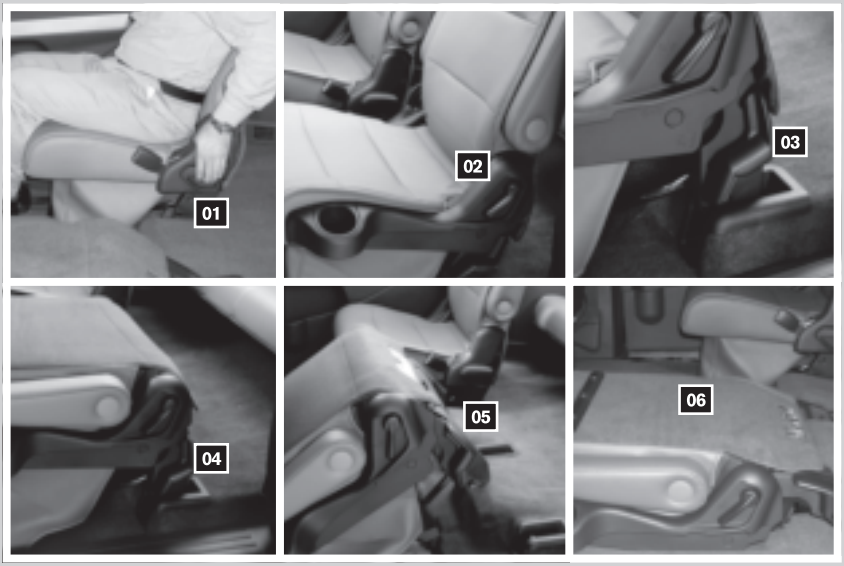

To move the 2nd row seats forward or backward:

- Pull the lever 01 up and hold it while you slide the seat forward or backward to the desired position.
- Release the lever to lock the seat in position.

To recline the 2nd row seatbacks:

- Pull the lever 02 up and lean forward or back.

The 2nd row seats can be tipped forward for easy entry or exit from the 3rd row seat:

- To enter the 3rd row seats, lift up on the lever 03 located on the lower base of the seat; this tips the seat forward.
- To exit the 3rd row seats, pull back on the lever on the lower base of the seat and push the seat forward.

To fold the 2nd row seats flat to the floor for maximum cargo hauling:

- Lift up on the recline lever 04 to fold the seatback down on the seat base.
- Press down on the small lever 05 on the back of the seat to release the base of the seat.
- Then fold the entire seat forward into the stowed position on the floor 06 .
- Reverse this process to return the 2nd row seats to a seating position. Make sure to press the seats down to the floor until they latch into place.

FOLDING THE 3RD ROW SEAT

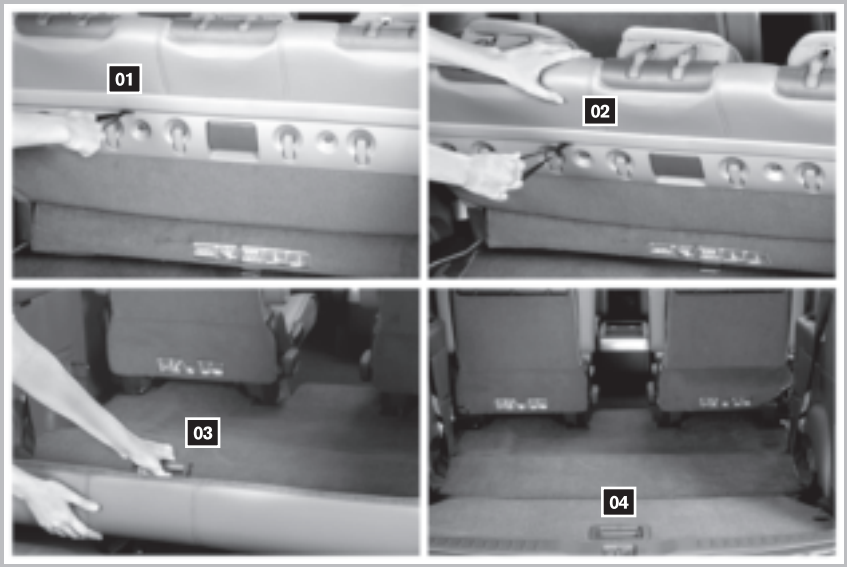

To fold the 3rd row bench seat flat into the floor for maximum cargo hauling:

- Disconnect and secure the center seat belt and tongue into the retractor base.
- Pull the strap 01 on the seatback to allow all three head restraints to fold forward.
- Pull back on the pull strap 02 to release the back of the seat and rotate the seatback toward the back of the vehicle.
- Pull up on the lever 03 located on the back of the seat base. This will fold the seat base toward the back of the vehicle.
- The entire seat will rotate toward you and stow flat in the floor 04 .
- Reverse this process to return the bench seat to a seating position. Make sure to press the bench seat down into the floor and pull back on the seatback until it latches into place.
- Return all three head restraints to the upright latched position.

HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

SYSTEM OPERATING TIPS

- Garage doors, electrical gates, entry doors, etc. will be activated during programming. To avoid injury, make sure that people and objects are clear of all doors or gates during programming. Your vehicle's engine should be turned off while programming the HomeLink® Transceiver.
- To program your HomeLink® Transceiver to operate a garage door, gate, or entry door opener, home or office lighting, you need to be at the same location as the device.

NOTE: Garage door openers (manufactured after 1996) have "rolling code protection". To program a garage door opener equipped with "rolling code protection", you will need to use a ladder to get up to the garage door opener motor to be able to access the "smart or learn" program button.

PROGRAMMING YOUR HOMELINK® UNIVERSAL TRANSCEIVER (Mirror, Sun Visor or Overhead Console)

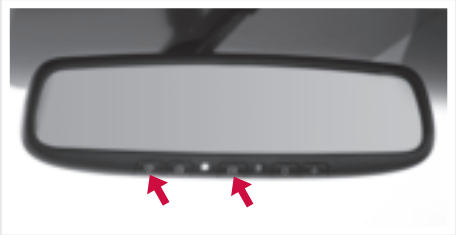

1. To begin, press and hold the two outer HomeLink® buttons (to clear the memory) until the indicator light blinks slowly (after 20 seconds). Release both buttons.
2. Position the end of the hand-held transmitter 1-3 in (26-76 mm) away from the HomeLink® surface.
3. Using both hands, simultaneously press and hold both the HomeLink® button you want to program and the hand-held transmitter button. **DO NOT release the buttons until step 4 has been completed.**
4. Hold down both buttons until the indicator light on the HomeLink® flashes, changing from a "slow blink" to a "rapidly flashing blink". This could take up to 90 seconds. When the indicator light flashes rapidly, both buttons may be released. The rapidly flashing light indicates successful programming. To activate the garage door or other programmed device, press and hold the programmed HomeLink® button - releasing when the device begins to activate.
5. If the indicator light on the HomeLink® blinks rapidly for two seconds and then turns solid, HomeLink® has picked up a "rolling code" garage door opener signal. You will need to proceed with the next steps to train the HomeLink® to complete the programming, which may require a ladder and another person for convenience.
6. Press and release the "smart" or "learn" program button located on the garage door opener's motor to activate the "training mode". This button is usually located near the antenna wire that hangs down from the motor. If the wire originates from under a light lens, you will need to remove the lens to access the program button.

NOTE: Once you have pressed and released the program button on the garage door opener's motor and the "training light" is lit, you have 30 seconds in which to perform step 7. Use the help of a second person for convenience to assist when performing this step.

7. Quickly within 30 seconds of pressing and releasing the garage door opener program button, firmly press and release the HomeLink® button you've just programmed. Press and release the HomeLink® button up to three times to complete the training.
8. Your HomeLink® button should now be programmed. (To program the remaining HomeLink® buttons for additional door or gate openers, follow steps 2-8 only.)

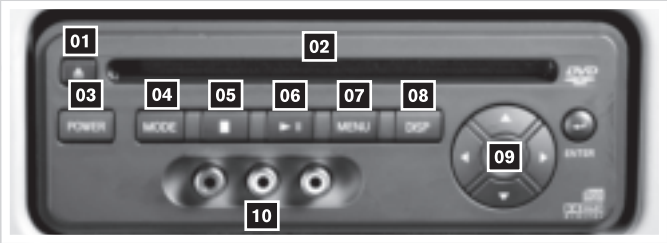

DVD ENTERTAINMENT SYSTEM (if so equipped)

DVD PLAYER CONTROLS

01 **EJECT BUTTON** – Press once to eject a DVD from the player.

02 **DVD SLOT** – Insert the DVD here.

03 **POWER ON/OFF BUTTON** – With the ignition in the ACC or ON position, press this button to turn the DVD player on or off.

04 **MODE BUTTON** – Press this button to select the Audio/Video source between DVD and AUX input.

05 **STOP BUTTON** – Press the button once to stop the disc in play.

06 **PLAY/PAUSE BUTTON** – Press this button once to begin play; press again to pause play.

07 **MENU BUTTON** – Press this button when the DVD is in PLAY mode and the DVD menu will appear in the display. Press the button again to resume play.

08 **DISPLAY BUTTON** – Press this button for less than 2 seconds and the display menu will appear on screen; press the button for longer than 2 seconds to remove the display information screen.

09 **NAVIGATION KEYS** – These buttons perform a number of functions, depending on which mode the player is in.

10 **INPUT JACKS** – These are used to plug additional compatible devices into the DVD system. They are color-coded (yellow – video input; white – left channel audio input; red – right channel audio input).

PLAYING A DIGITAL VIDEO DISC

The DVD player plays DVD videos, video CDs and audio CDs. To play a DVD, begin by placing the ignition switch in the ACC or ON position and pressing the **POWER** button. Insert the disc into the slot. The disc is automatically drawn in. The player can be operated by using the control panel buttons or the remote control. The DVD player can be operated by pressing the **CD/DVD** button or by pressing the **REAR CTRL** button on the instrument panel for 2 seconds. If you press the **REAR CTRL** button quickly, you will toggle between rear audio control on and off. Press the **CD/DVD** button to toggle between the CD and DVD operation.

PLAYING A COMPACT DISC

The DVD player plays DVD videos, video CDs and audio CDs. To play a CD, begin by placing the ignition switch in the ACC or ON position and pressing the **POWER** button. Insert the disc into the slot. The disc is automatically drawn in. The player can be operated by using the control panel buttons or the remote control.

USING THE AUXILIARY INPUT JACKS

Auxiliary input jacks are used to plug in compatible devices, such as video games and portable video players. The jacks are located on the control panel and are color-coded for identification.

FLIP DOWN SCREEN

The flip down screen has a wireless remote control receiver. The screen rotates down for viewing and back up into the housing when not in use.

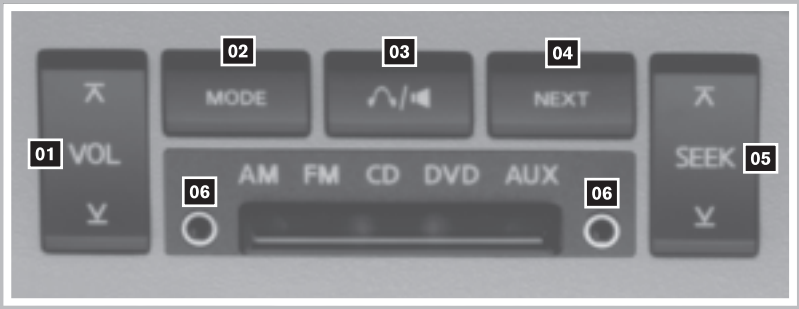

REAR AUDIO CONTROLS (if so equipped)

To lock or unlock audio controls, press the **REAR CTRL** button on the front radio control panel.

01 **VOLUME CONTROL BUTTON** – This button allows the rear passengers to adjust the headphone volume.

02 **MODE BUTTON** – This button allows the rear passengers to change between FM, AM, CD, and DVD.

03 **SPEAKER CONTROL BUTTON** – Press this button to turn the rear speakers off and the headphones on; press again to turn the rear speakers on and the headphones off.

04 **NEXT BUTTON** – When this button is pressed while in FM or AM mode, the radio will change to the next preset. The **NEXT** button does not function when playing a DVD or CD.

05 **SEEK BUTTON** – In FM or AM mode this button allows rear seat passengers to find the next radio station up or down the band frequency. In CD mode, this button allows the rear passengers to chose the next or previous selection on the disc.

06 **HEADPHONE JACKS** – These allow two rear-seat passengers to listen privately to the audio system.

WIRELESS HEADPHONES

The wireless headphones include separate buttons for power and volume control. Headphones automatically turn off after 30 seconds if no sound is present.

For optimum wireless headphone performance, increase the volume on the rear-seat controller to the maximum level and adjust the wireless headphone volume using the volume control on the wireless headphone. Using a lower volume setting on the rear-seat controller can cause static noise in the wireless headphone.

The wireless headphone audio signal originates from the rear audio controls. This signal needs an unobstructed path to the headphones to maintain performance.

REMOTE CONTROL

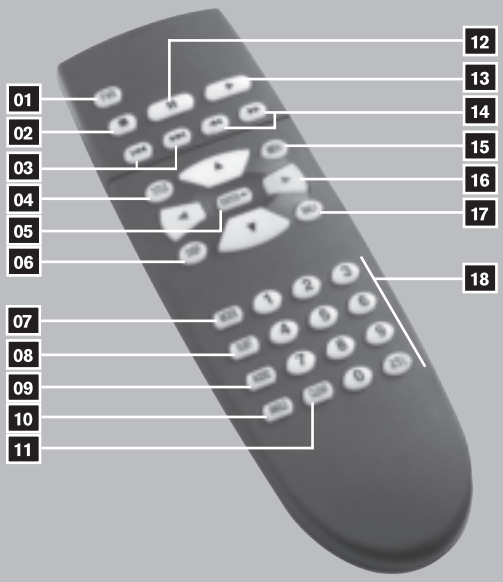

01 Power Button

02 Stop Button

03 Next Track/Chapter and Previous Track/Chapter Button

04 Title Button

05 Enter Button

06 Display Button

07 Mode Button

08 Subtitle Button

09 Audio Button

10 Angle Button

11 Clear Button

12 Pause Button

13 Play Button

14 Fast Forward/Fast Reverse Button

15 Menu Button

16 Navigation Keys

17 Back Button

18 Numeric Keypad

BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

With an overhead microphone and sound transmitted through the audio system speaker, the Bluetooth® Hands-Free Phone System utilizes Bluetooth® wireless technology and voice recognition to provide hands-free cellular phone communication.

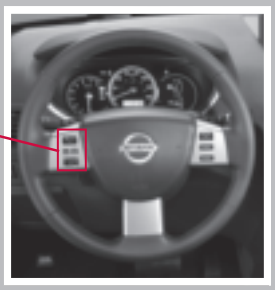

SYSTEM OPERATING TIPS

- Close all windows. Surrounding noises may interfere with system operation and performance.
- Press the button on the steering wheel to activate voice recognition.
- Wait for the tone before speaking.
- Begin speaking a command within 5 seconds of the tone.
- To go back to the previous command, say “Go back” or “Correction.”
- To cancel a voice recognition session, simply wait 5 seconds, say “Cancel” or “Quit,” or press the MODE button.
- To increase or decrease the volume of the voice prompts, push the VOL (volume) control switch up or down on the steering wheel or turn the volume knob on the audio system while the system is responding.
- Speak in a clear and natural voice without pausing between words.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. Refer to your Owner’s Manual for a list of commands and further instructions.
- Some commands are not available while the vehicle is in motion.
- The “Help” command can be used in any menu to hear a list of available commands.
- Please refer to the cellular phone manufacturer Owner’s Manual for detailed information regarding your Bluetooth® phone.
- **For recommended phones and detailed instructions, please visit www.nissanusa.com/bluetooth** .

PAIRING YOUR PHONE

To use the hands-free feature, you need to set-up, or pair, the system to recognize your compatible cellular phone(s). Five Bluetooth®-enabled phones can be paired. After set-up, the system automatically connects with a paired phone when the ignition is in the ACC or ON position, as long as the phone is on and in the vehicle.

PAIRING PROCEDURE

NOTE: The vehicle must be stationary when pairing the phone.

1. Press the button on the steering wheel and wait for the tone.
2. Say “Setup”.
3. Wait for the tone, then say “Pair phone”.
4. Wait for the tone, then say “New phone”.
5. Initiate pairing from the phone.
   - The pairing procedure varies according to each cellular phone model. For detailed pairing instructions and a list of compatible phones, please visit **www.nissanusa.com/bluetooth** .
   - When prompted for a PASSKEY code, enter “1234” from the handset. (The PASS-KEY code is assigned by NISSAN and cannot be changed.)
6. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.
7. Say a number between 1 and 5 when the system asks you for a priority level. The priority level determines which phone interacts with the system when two or more paired phones are active in the vehicle at the same time. Choose 1 if this is the only phone or the primary phone.
8. Say “Yes” or “No” when the system asks if you would like to select a custom ring tone. Follow the instructions provided by the system to choose a ring tone.

SETTING UP YOUR PHONEBOOK – ADDING NEW ENTRIES

Each paired phone has its own dedicated phonebook. Each phonebook can store up to 40 names. Each name can have up to 4 locations/numbers: Home, Office, Mobile, and Other.

NOTE: The vehicle must be stationary when adding new entries.

1. Press the button and wait for the tone.
2. Say “Phonebook”.
3. Wait for the tone, then say “New entry”.
4. When prompted, say the name for the new entry. For example, say “Michelle”. If the name is too short or too long, or if it sounds too much like a name that is already stored in the phonebook, the system tells you and prompts you to say a name again. Choose a new name.
5. Say “Yes” or “No” when the system asks you to confirm the name is correct.
6. Say a location (“Home,” “Office,” “Mobile” or “Other”) when the system asks you to provide one. The system acknowledges the location.
   - By Voice command - When prompted, say a phone number for the location. For example, say “five five five one two one two”. The system repeats the number and prompts you for the next command.

- By Bluetooth® transfer - Say “Transfer entry”. The system acknowledges the command and asks you to initiate the transfer from the phone handset. The new contact phone number will be transferred from the cellular phone via the Bluetooth® communication link. The transfer procedure varies according to each cellular phone. See the cellular phone owner’s manual for details.

7. Say “Store” when you are finished entering numbers. The system confirms the name, location, and number.
8. Say “Yes” or “No” when the system asks if you would like to store another location for the same name. If you do not respond to the system prompt, the system ends the New Entry session.

MAKING A PHONE CALL

1. Press the button.
2. After the tone, do one of the following:
   - Say “Call [name] [location]”. For example, say “Call Michelle Home”.
   - Say “Call [number]”. For example, say “Call 123-456-7891”.
   - Say “Redial” to redial the previous phone number called by the system.
   - Say “Call International” to dial more than 10 digits or any special characters.

RECEIVING/ENDING A PHONE CALL

When you receive a phone call, a ring tone sounds through the audio system.

- To accept the call, press the button. To reject the call, press the MODE button.
- To hang up the phone at the end of a call or to disconnect during call placement, press the MODE button.

HOW TO SAY NUMBERS

NISSAN voice recognition permits numbers to be spoken in a variety of ways.

- Say “zero” or “oh” for “0”. Example: 1-800-662-6200 – Say “one eight zero zero six six two six two oh oh”.
- Say “pound” for “#”. Say “star” for “*” (available when using the “Call International” command, and the “Send” command during a call).
- Say “plus” for “+” (available only when using the “Call International” command).
- Say “pause” for a 2-second pause (available only when storing a phonebook number).

NAVIGATION SYSTEM (if so equipped)

GETTING STARTED

The Navigation System begins when the ignition switch is placed in the ACC or ON position. To help ensure safe driving, some functions are grayed out, or muted, while driving. Park the vehicle in a safe location and then operate the Navigation System.

BASIC FUNCTIONS
START-UP SCREEN

- Read the precautions carefully, highlight the "OK" key using the joystick and press the **ENTER** button.

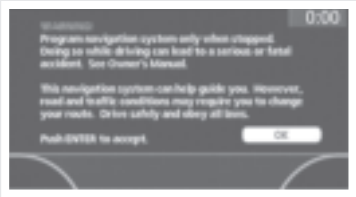

NAVIGATION DISPLAY SCREEN

- Displays navigation features and map.

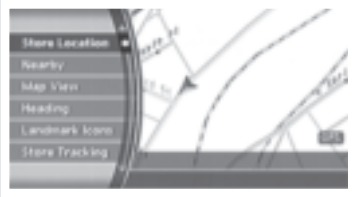

DISABLED WHILE DRIVING

- Not all features can be manually operated while the vehicle is in motion. The text for these restricted features turns from white to gray and cannot be selected.

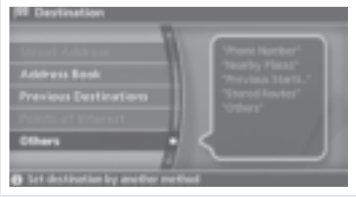

DAY/NIGHT BUTTON

- Press the ☼/☽ button **01** to switch between the day screen (bright) and the night screen (dark). Within 10 seconds of pressing the ☼/☽ button **01**, you can adjust the brightness of the map display screen by moving the joystick right or left.

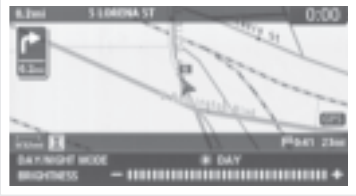

MOVING AROUND WITHIN A MAP

- To maneuver around the navigation display screen, tilt the joystick corresponding to the direction that you want to move across the map. Keep tilting the joystick to continuously move across the map in that direction. Once you start moving on the map, the cross pointer appears.

SETTING BUTTON

- Press the **SETTING** button **02** to change or set navigation preferences.

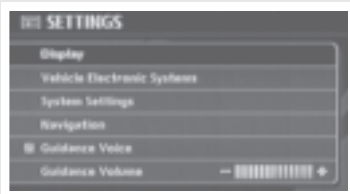

DEST (DESTINATION) BUTTON

- Press the **DEST** button **03** to display the address book and alternative ways of programming a destination.

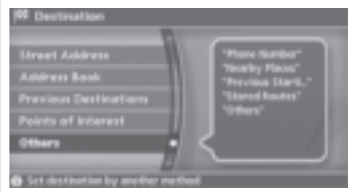

MAP BUTTON

- Press the **MAP** button **04** to display the current location map screen.

ROUTE BUTTON

- Press the **ROUTE** button **07** to display various ways to modify the route to a destination.

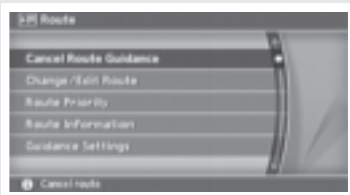

ZOOM OUT/IN BUTTONS

- Press the button **05** or the button **05** to increase or decrease the scale of the map display.

BACK BUTTON

- Press the **BACK** button **08** to return to the previous function shown on the navigation display.

VOICE BUTTON

- Press the **VOICE** button **06** to hear the current navigation situation.

SWITCHING THE MAP VIEW

- Press the **MAP** button **04** . The current location map screen is displayed.
- Press the **ENTER** button.

- Highlight the “Map View” key and press the **ENTER** button.

- Highlight either one of the “Plan View” keys or one of the “Birdview” keys and press the **ENTER** button to select the map view. Press the **MAP** button **04** or the “Back” key to accept the changes.

PLAN VIEW

- Displays the map in a 2-dimensional environment similar to a road map.

BIRDVIEW™

- Displays the map in an elevated perspective.

SELECTING A MENU SCREEN

1. To select a preferred menu key, use the joystick to highlight the corresponding key on the screen and press the **ENTER** button.
2. Depending on the key you selected, a detailed menu screen, a character input screen or a setting screen, etc. is displayed. On the screen displayed, make adjustments, input information, etc. accordingly.
3. Press the **BACK** button **08** to return to the previous screen without applying any changes; in some cases pressing the **BACK** button **08** will accept the changes you made.
4. Press the **MAP** button **04** to return to the current location map screen without applying any changes.

NOTE: Depending on the menu selected, pressing the **MAP** button **04** may not return you to the current location map screen.

STORING YOUR HOME IN YOUR ADDRESS BOOK

- Press the **DEST** button **03** .
- Highlight the “Address Book” key and press the **ENTER** button.

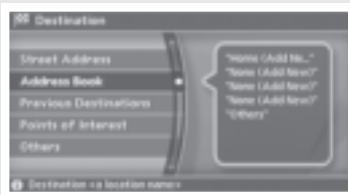

- Highlight the “Home (Add New)” key and press the **ENTER** button, a confirmation message is displayed. Highlight the “YES” key and press the **ENTER** button.

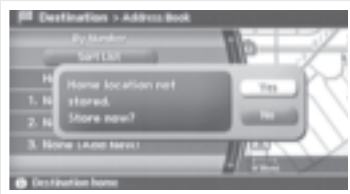

- Highlight the “Street Address” key and press the **ENTER** button. A character input screen is displayed.

- Enter the address of your home, highlight the “OK” key and press the **ENTER** button. The map screen is displayed.

- Moving the joystick right or left, adjust your home location if necessary. After adjusting the location, press the **ENTER** button.

- Your home is displayed at the center of the map. A confirmation message is displayed, and the system sets your home as the destination.
- Press the **MAP** button 04 to return to the current location map screen. The home icon is displayed on the screen.

SETTING A STREET ADDRESS AS A DESTINATION

- Press the **DEST** button 03 .
- Highlight the “Street Address” key and press the **ENTER** button. A character input screen is displayed.

- Make sure that the correct region is selected before inputting the name of the location.
- Enter the house number; when finished highlight the “OK” key and press the **ENTER** button. If you do not know the house number, highlight the “Skip” key and press the **ENTER** button.

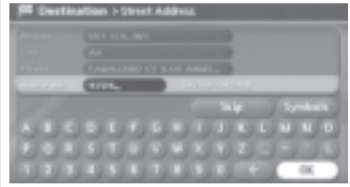

- Enter the name of the street. After finishing the entry, highlight the “OK” key and press the **ENTER** button. A list of cities is displayed.

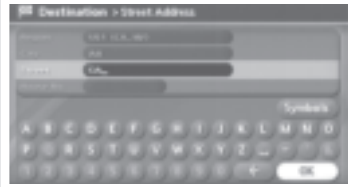

- Highlight the correct city of the destination from the list and press the **ENTER** button.

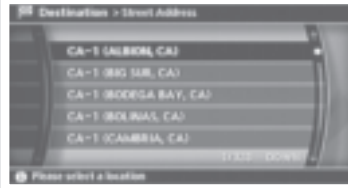

- The selected destination is displayed at the center of the map. Highlight the “OK” key and press the **ENTER** button after confirming the location of the displayed destination. The system sets the destination to the selected location and starts calculating a route.

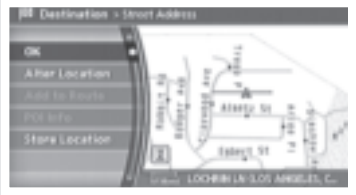

SETTING A PLACE AS A DESTINATION

- Press the **DEST** button 03 .
- A nearby airport is set as a destination in this example.
- Highlight the “Points of Interest” key and press the **ENTER** button.

- Highlight the “Travel” key and press the **ENTER** button.

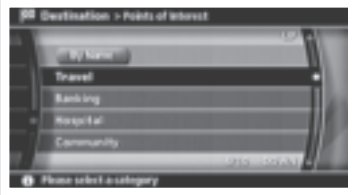

- From the category list, highlight the “AIRPORT” key and press the **ENTER** button. A character input screen appears.
- Make sure that the correct region is selected before inputting the name of the location.

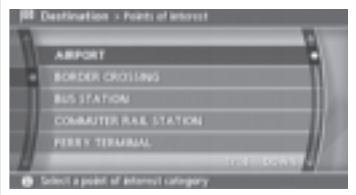

- After inputting the name of the location, highlight the “OK” key and press the **ENTER** button. A list screen appears.

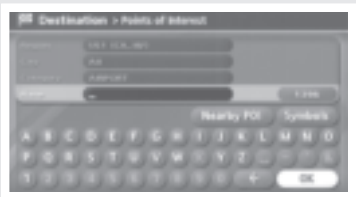

- Highlight the preferred airport key from the list and press the **ENTER** button.

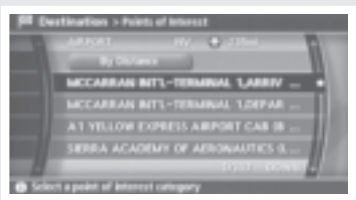

- The selected destination is displayed at the center of the map. Highlight the “OK” key after confirming the location of the displayed destination, and press the **ENTER** button. The system sets the destination to the selected location and starts calculating a route.

BEGINNING ROUTE GUIDANCE

After setting a destination and performing route calculation, the suggested route is displayed.

- Highlight the “OK” key and press the **ENTER** button. The system will navigate you through the guide points using visual and voice guidance.

- When approaching a guide point, the system automatically changes to the split screen and shows an enlarged view of the intersection in the left screen.
- When arriving at the destination, the route guidance automatically ends.

MEMO

MEMO

MEMO

Nissan, the Nissan Brand Symbol, "SHIFT_" tagline, Z and Nissan model names are Nissan trademarks.
© 2008 Nissan North America, Inc.
QR9E-0V42U0
Printing: August 2008 (12)