Ignition

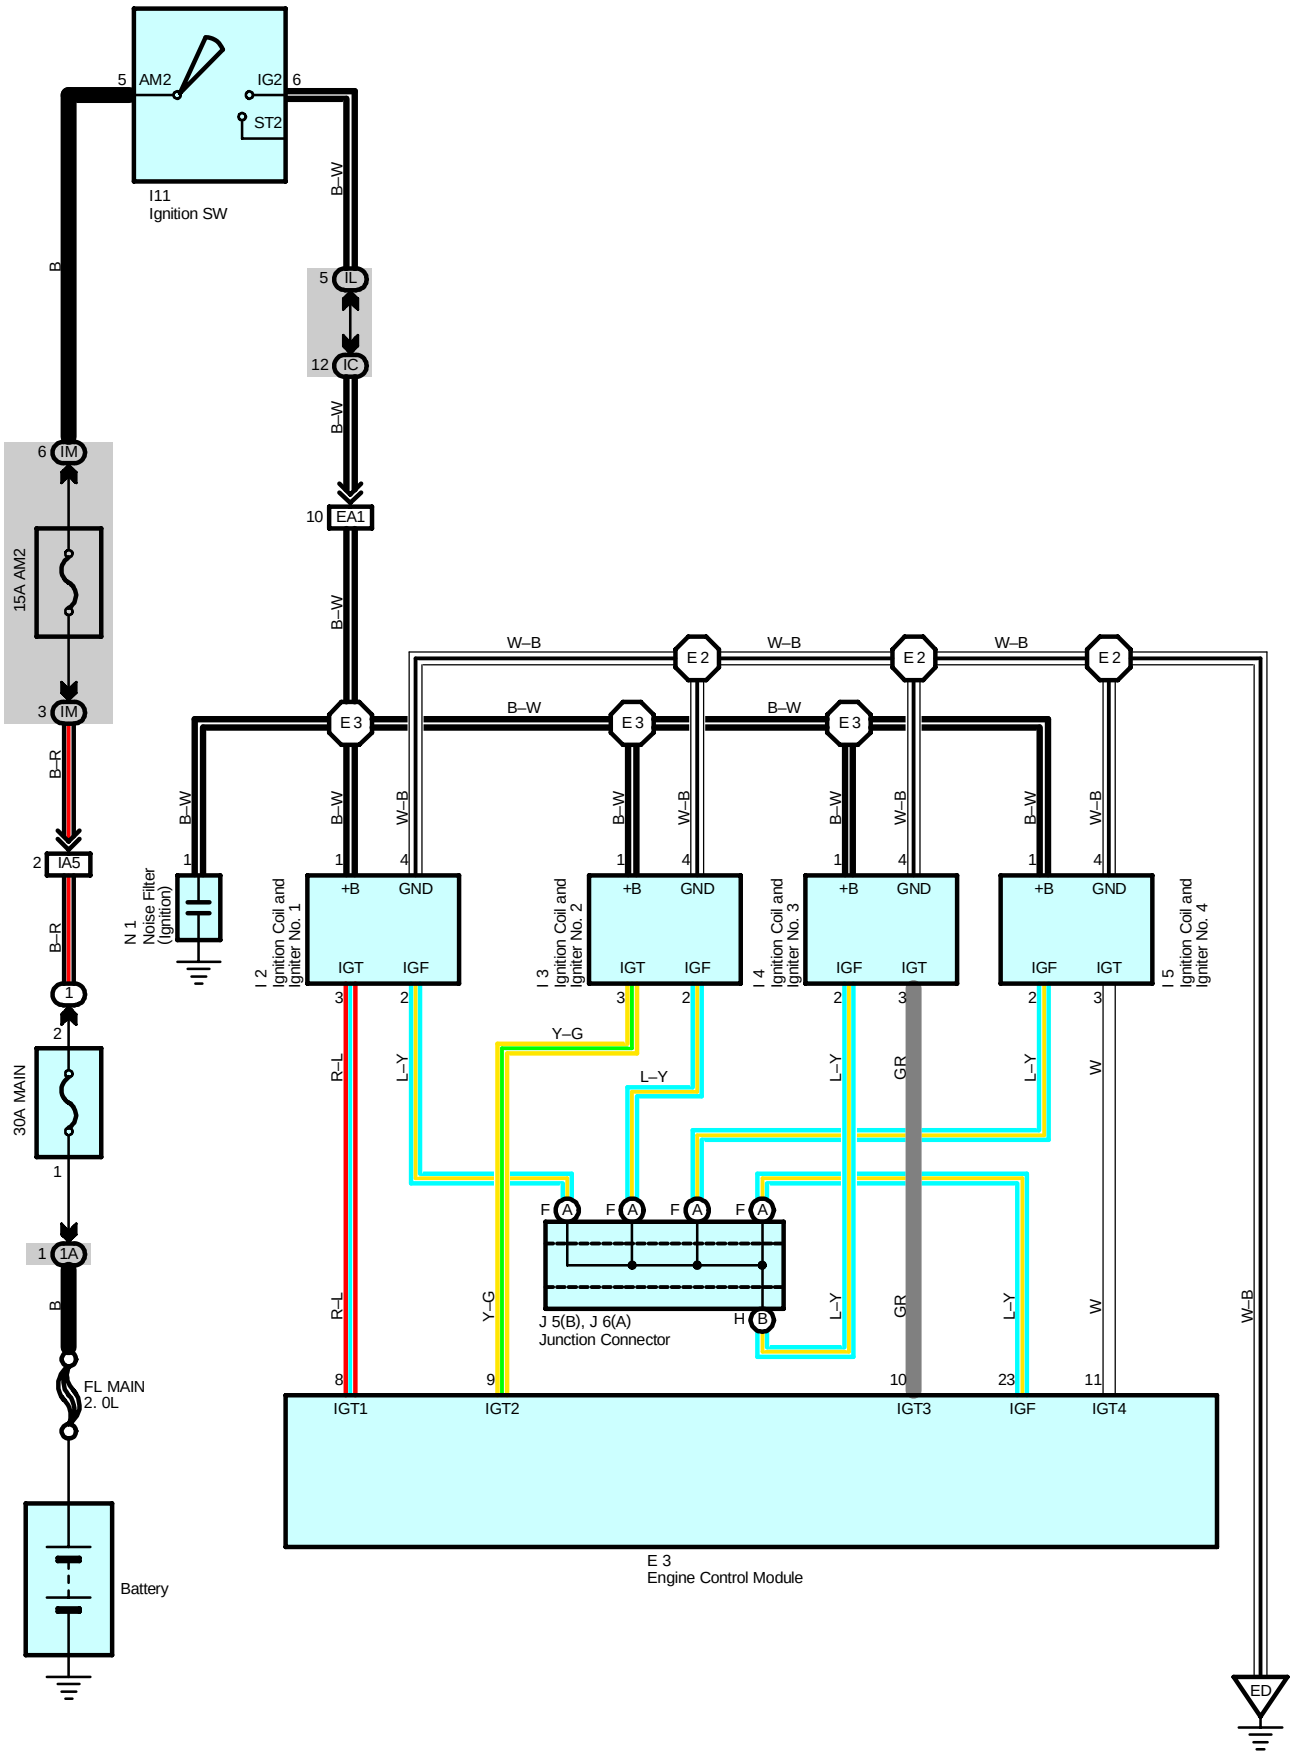

cardiagn.com

Service Hints

I11 Ignition SW

5–6 : Closed with the ignition SW at ON or ST position

: Parts Location

Code	See Page	Code	See Page	Code		See Page
E3	38	I4	35 (2ZZ–GE)	J5	B	39
I2	35 (2ZZ–GE)		37 (1ZZ–FE)	J6	A	39
	37 (1ZZ–FE)	I5	35 (2ZZ–GE)	N1		35 (2ZZ–GE)
I3	35 (2ZZ–GE)		37 (1ZZ–FE)			37 (1ZZ–FE)
	37 (1ZZ–FE)	I11	39			

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
IL	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IM		
1A	23	Engine Wire and Engine Room J/B (Engine Compartment Left)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	42 (2ZZ–GE)	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
	44 (1ZZ–FE)	
IA5	46	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)

: Ground Points

Code	See Page	Ground Points Location
ED	42 (2ZZ–GE)	Left Side of the Cylinder Head
	44 (1ZZ–FE)	

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E2	42 (2ZZ–GE)	Engine Wire	E3	42 (2ZZ–GE)	Engine Wire
	44 (1ZZ–FE)			44 (1ZZ–FE)	

cardiagn.com