SECTION PCS
POWER CONTROL SYSTEM

CONTENTS

IPDM E/R

FUNCTION DIAGNOSIS 4

RELAY CONTROL SYSTEM 4
System Diagram 4
System Description 4
Component Parts Location 6

POWER CONTROL SYSTEM 7
System Diagram 7
System Description 7
Component Parts Location 7

SIGNAL BUFFER SYSTEM 8
System Diagram 8
System Description 8
Component Parts Location 8

POWER CONSUMPTION CONTROL SYSTEM 9
System Diagram 9
System Description 9
Component Parts Location 10

DIAGNOSIS SYSTEM (IPDM E/R) 11
Diagnosis Description 11
CONSULT-III Function (IPDM E/R) 13

COMPONENT DIAGNOSIS 16

U1000 CAN COMM CIRCUIT 16
Description 16
DTC Logic 16
Diagnosis Procedure 16

B2098 IGNITION RELAY ON STUCK 17
Description 17
DTC Logic 17
Diagnosis Procedure 17

B2099 IGNITION RELAY OFF STUCK 18
Description 18
DTC Logic 18
Diagnosis Procedure 18

POWER SUPPLY AND GROUND CIRCUIT 19
Diagnosis Procedure 19

ECU DIAGNOSIS 20

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) 20
Reference Value 20
Wiring Diagram - IPDM E/R - 28
Fail-safe 31
DTC Index 33

ON-VEHICLE REPAIR 34

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) 34
Exploded View 34
Removal and Installation 34

POWER DISTRIBUTION SYSTEM

BASIC INSPECTION 35

DIAGNOSIS AND REPAIR WORKFLOW 35
Work Flow 35

FUNCTION DIAGNOSIS 38

POWER DISTRIBUTION SYSTEM 38
System Description 38
Component Parts Location 40
Component Description 40

DIAGNOSIS SYSTEM (BCM) 41

COMMON ITEM 41
COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM) 41

INTELLIGENT KEY 42

INTELLIGENT KEY : CONSULT-III Function (BCM - INTELLIGENT KEY) 42

COMPONENT DIAGNOSIS 46

U1000 CAN COMM CIRCUIT 46

BCM 46
BCM : Description 46
BCM : DTC Logic 46
BCM : Diagnosis Procedure 46

IPDM E/R 46
IPDM E/R : Description 46
IPDM E/R : DTC Logic 46
IPDM E/R : Diagnosis Procedure 46

U1010 CONTROL UNIT (CAN) 48

BCM 48
BCM : DTC Logic 48
BCM : Diagnosis Procedure 48
BCM : Special Repair Requirement 48

B2553 IGNITION RELAY 49
Description 49
DTC Logic 49
Diagnosis Procedure 49

B260A IGNITION RELAY 51
Description 51
DTC Logic 51
Diagnosis Procedure 51

B2614 ACC RELAY 53
Description 53
DTC Logic 53
Diagnosis Procedure 53
Component Inspection 54

B2615 BLOWER RELAY CIRCUIT 55
Description 55
DTC Logic 55
Diagnosis Procedure 55
Component Inspection 56

B2616 IGNITION RELAY CIRCUIT 57
Description 57
DTC Logic 57
Diagnosis Procedure 57
Component Inspection 58

B2618 BCM 59
Description 59
DTC Logic 59
Diagnosis Procedure 59

B261A PUSH-BUTTON IGNITION SWITCH 60
Description 60
DTC Logic 60
Diagnosis Procedure 60

POWER SUPPLY AND GROUND CIRCUIT 62

BCM 62
BCM : Diagnosis Procedure 62

PUSH-BUTTON IGNITION SWITCH 63
Description 63
Component Function Check 63
Diagnosis Procedure 63
Component Inspection 64

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR 66
Description 66
Component Function Check 66
Diagnosis Procedure 66
Component Inspection 67

POWER DISTRIBUTION SYSTEM 68
Wiring Diagram - PDS (POWER DISTRIBUTION SYSTEM) - 68

ECU DIAGNOSIS 73

BCM (BODY CONTROL MODULE) 73
Reference Value 73
Wiring Diagram - BCM - 96
Fail-safe 102
DTC Inspection Priority Chart 104
DTC Index 105

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) 107
Reference Value 107
Wiring Diagram - IPDM E/R - 115
Fail-safe 118
DTC Index 120

PRECAUTION 121

PRECAUTIONS 121
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" 121
Precaution Necessary for Steering Wheel Rotation after Battery Disconnect 121

SYMPTOM DIAGNOSIS 122

POWER DISTRIBUTION SYSTEM 122
Symptom Table 122

PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE 124
Description 124
Diagnosis Procedure 124

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR DOES NOT ILLUMINATE ..125
Description 125
Diagnosis Procedure 125

ON-VEHICLE REPAIR **126**

BCM (BODY CONTROL MODULE) **126**
Exploded View 126
Removal and Installation 126

PUSH BUTTON IGNITION SWITCH **127**
Removal and Installation 127

FUNCTION DIAGNOSIS

RELAY CONTROL SYSTEM

System Diagram

INFOID:0000000003773255

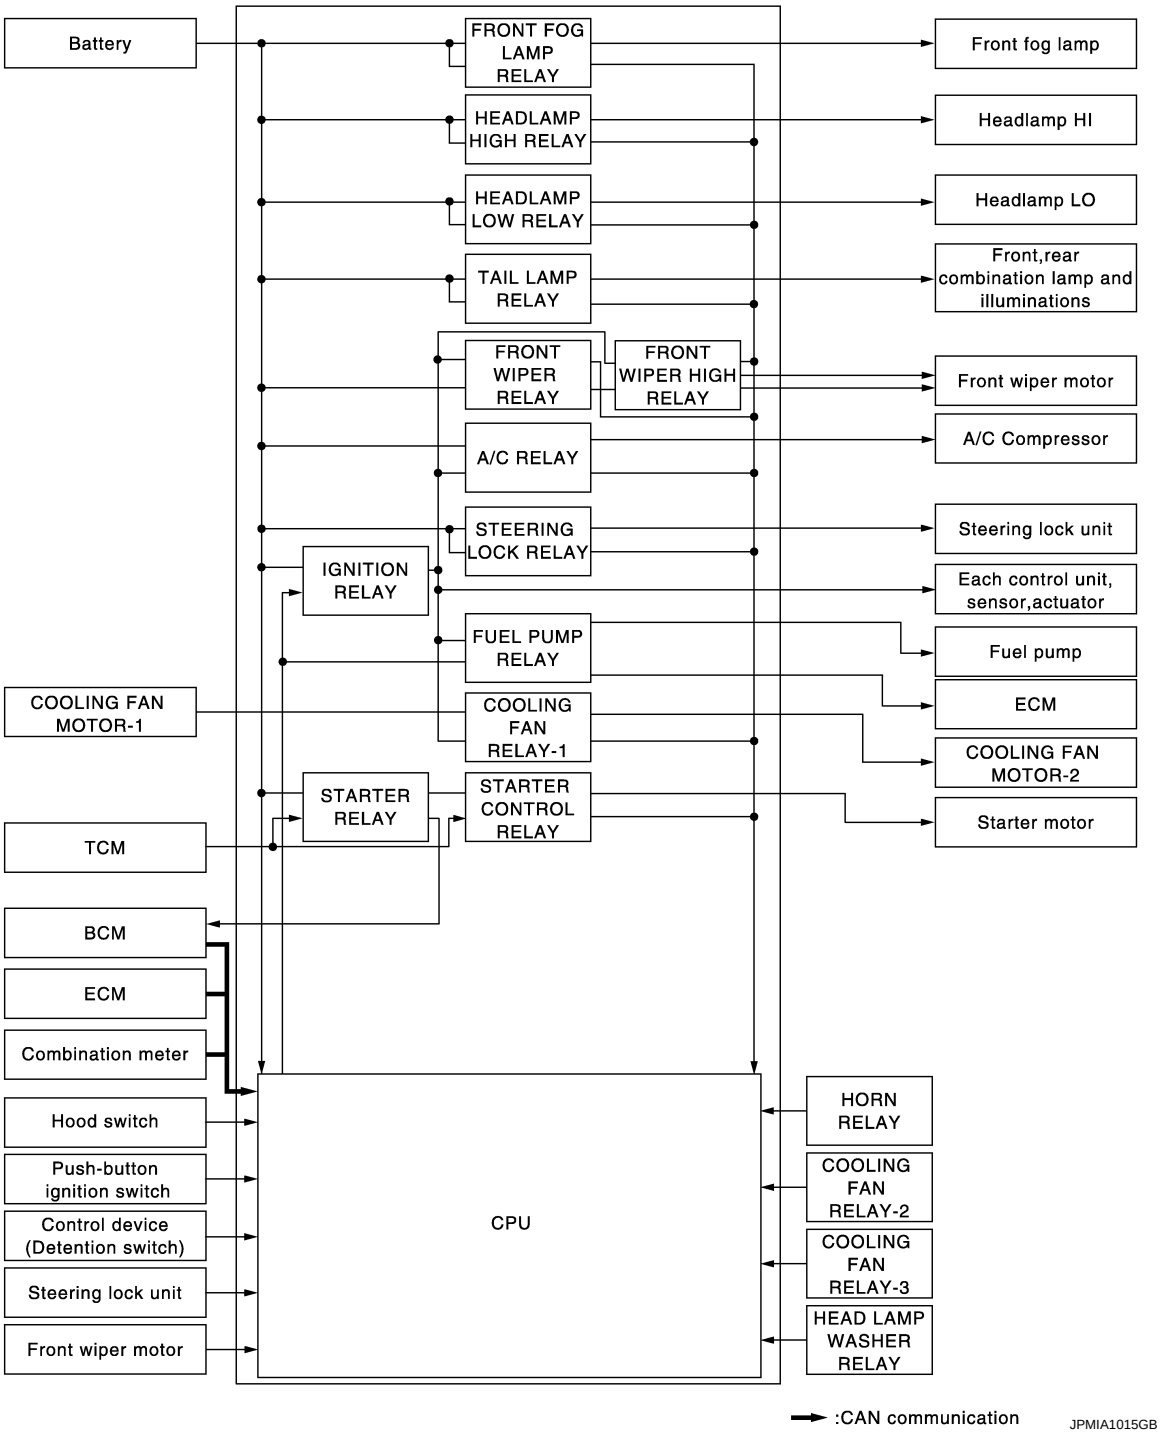

System Description

INFOID:0000000003773256

IPDM E/R activates the internal control circuit to perform the relay ON-OFF control according to the input signals from various sensors and the request signals received from control units via CAN communication.

CAUTION:

IPDM E/R integrated relays cannot be removed.

Control relay	Input/output	Transmit unit	Control part	Reference page
• Headlamp low relay • Headlamp high relay	• Low beam request signal • High beam request signal	BCM (CAN)	• Headlamp low • Headlamp high	• EXL-11 (Xenon headlamp) • EXL-200 (Halogen headlamp)
Front fog lamp relay	Front fog light request signal	BCM (CAN)	Front fog lamp	• EXL-17 (Xenon headlamp) • EXL-204 (Halogen headlamp)
Tail lamp relay	Position light request signal	BCM (CAN)	• Parking lamp • Side marker lamp • License plate lamp • Tail lamp	• EXL-21 (Xenon headlamp) • EXL-208 (Halogen headlamp)
			Illuminations	INL-12
• Front wiper relay • Front wiper high relay	Front wiper request signal	BCM (CAN)	Front wiper	WW-5
	Front wiper auto stop signal	Front wiper motor		
Horn relay	• Theft warning horn request signal • Horn reminder signal	BCM (CAN)	• Horn (low) • Horn (high)	SEC-17
• Starter relay[NOTE] • Starter control relay	Starter control relay signal	BCM (CAN)	Starter motor	• SEC-104 • SEC-102
	Steering lock unit condition signal	Steering lock unit		
	Starter relay control signal	TCM		
Steering lock relay	Steering lock relay signal	BCM (CAN)	Steering lock unit	SEC-69
	Steering lock unit condition signal	Steering lock unit		
	Control device (Detention switch) signal	Control device (Detention switch)		
A/C relay	A/C compressor request signal	ECM (CAN)	A/C compressor (magnet clutch)	• HAC-36 (Without 7-inch display) • HAC-154 (With 7-inch display)
• Cooling fan relay-1 • Cooling fan relay-2 • Cooling fan relay-3	Cooling fan speed request signal	ECM (CAN)	• Cooling fan motor-1 • Cooling fan motor-2	EC-60
Headlamp washer relay	Headlamp washer request signal	BCM (CAN)	Headlamp washer	WW-10
Ignition relay	Ignition switch ON signal	BCM (CAN)	Ignition relay	PCS-17
	Vehicle speed signal	Combination meter (CAN)		
	Push-button ignition switch signal	Push-button ignition switch		

NOTE:
BCM controls the starter relay.

Component Parts Location

INFOID:0000000003773257

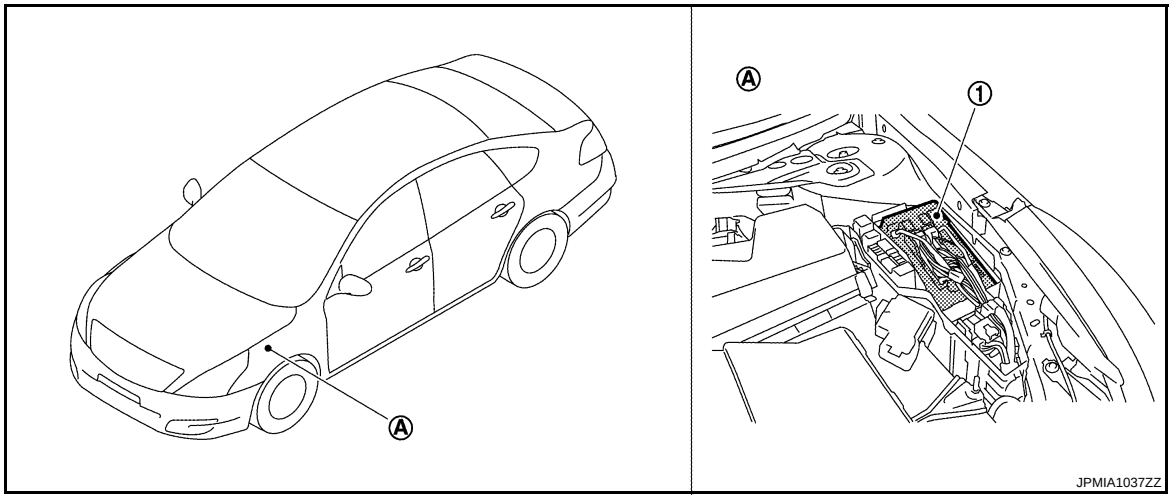

1. IPDM E/R

A. Engine room (LH)

POWER CONTROL SYSTEM

System Diagram

INFOID:0000000003773258

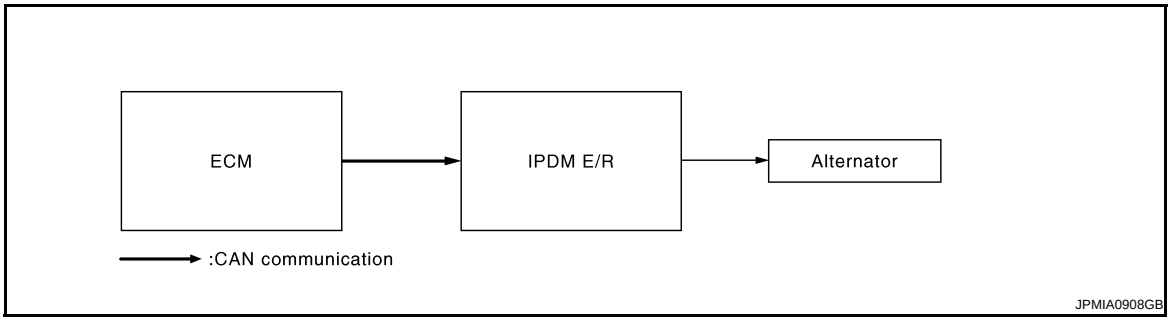

System Description

INFOID:0000000003773259

ALTERNATOR CONTROL

IPDM E/R outputs power generation command signal (PWM signal) to the alternator according to the status of the power generation command value signal received from ECM via CAN communication. Refer to CHG-7, "System Diagram".

Component Parts Location

INFOID:0000000003773260

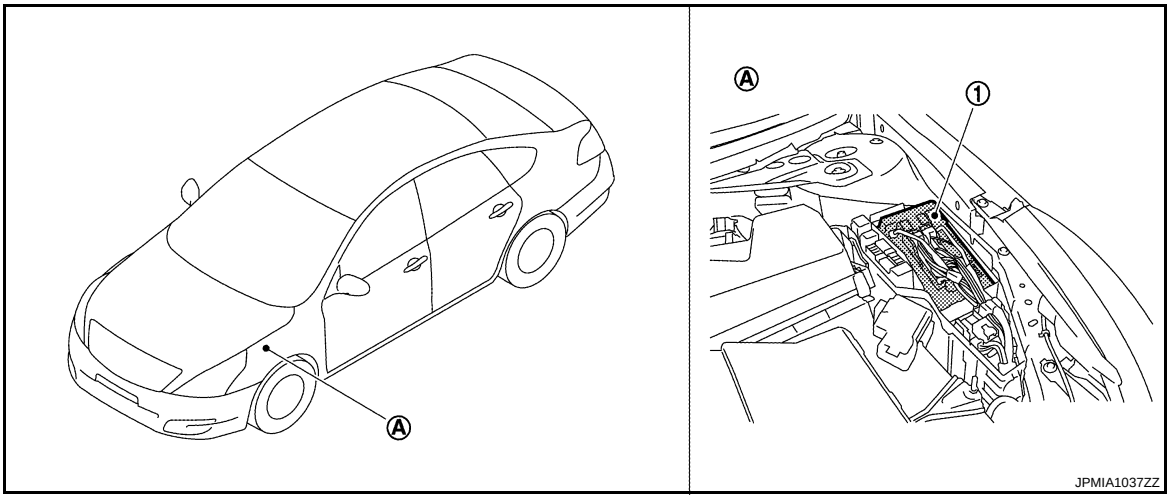

1. IPDM E/R

A. Engine room (LH)

SIGNAL BUFFER SYSTEM

System Diagram

INFOID:0000000003773261

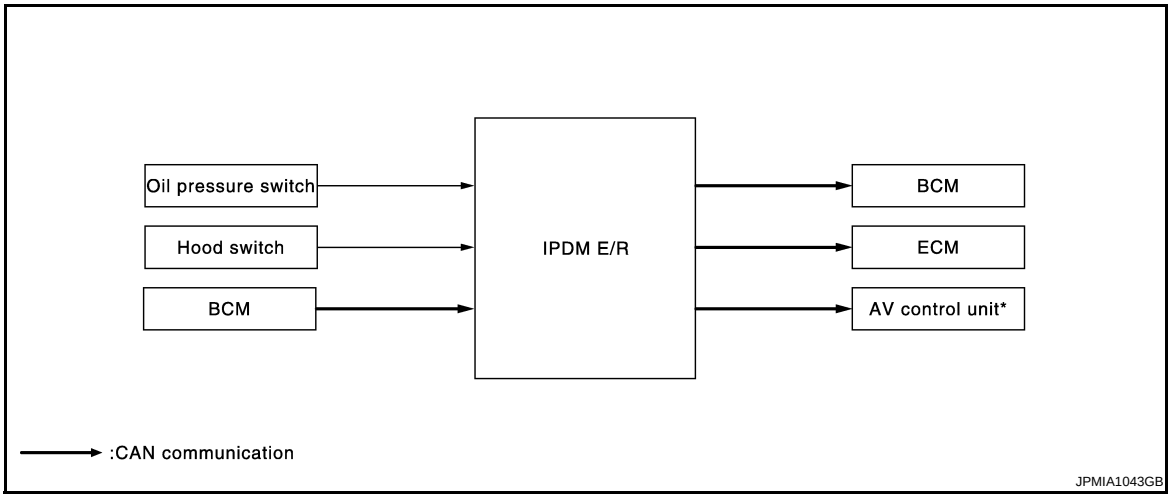

NOTE:
*: With BOSE audio system

System Description

INFOID:0000000003773262

- IPDM E/R reads the status of the oil pressure switch and transmits the oil pressure switch signal to BCM via CAN communication. Refer to MWI-22, "WARNING LAMPS/INDICATOR LAMPS : System Diagram".
- IPDM E/R reads the status of the hood switch and transmits the hood switch signal to BCM via CAN communication. Refer to SEC-17, "System Diagram".
- IPDM E/R receives the rear window defogger control signal from BCM via CAN communication and transmits it to ECM and AV control unit* via CAN communication. Refer to DEF-4, "WITH AV CONTROL UNIT : System Diagram" or DEF-6, "WITHOUT AV CONTROL UNIT : System Diagram".
  NOTE:
  *: With BOSE audio system

Component Parts Location

INFOID:0000000003773263

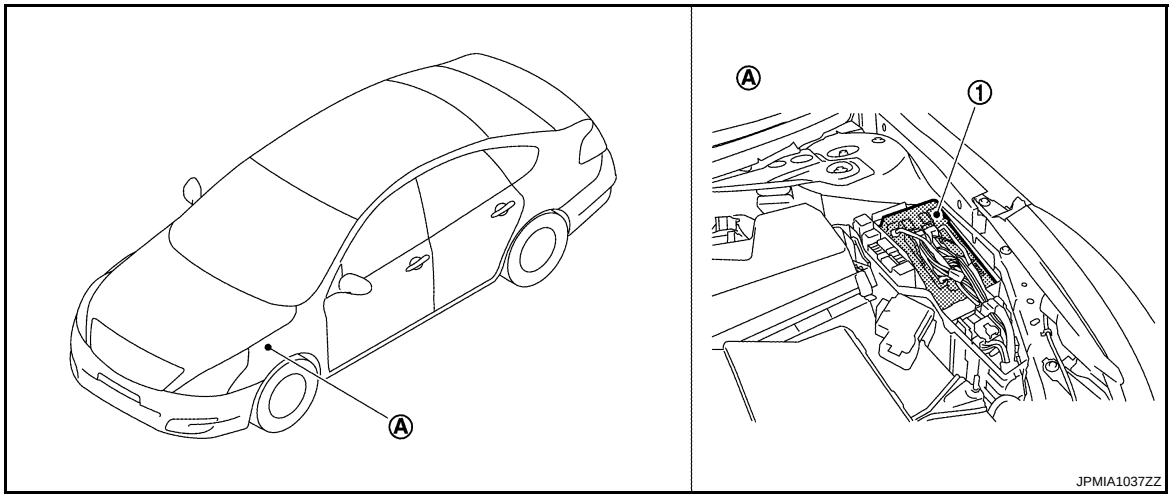

1. IPDM E/R

A. Engine room (LH)

POWER CONSUMPTION CONTROL SYSTEM

System Diagram

INFOID:0000000003857763

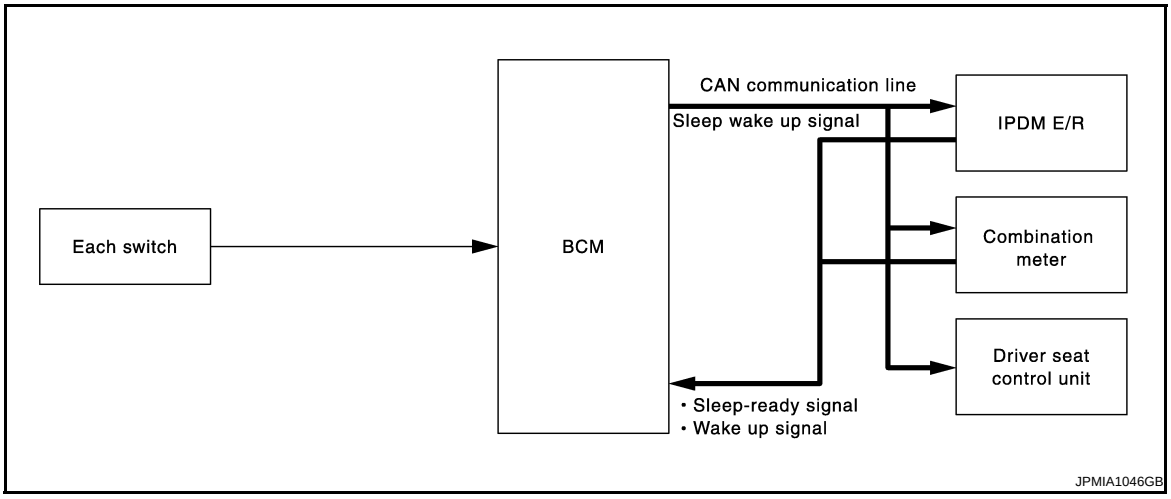

System Description

INFOID:0000000003773265

OUTLINE

- IPDM E/R incorporates a power consumption control function that reduces the power consumption according to the vehicle status.
- IPDM E/R changes its status (control mode) with the sleep wake up signal received from BCM via CAN communication.

Normal mode (wake-up)
- CAN communication is normally performed with other control units.
- Individual unit control by IPDM E/R is normally performed.

Low power consumption mode (sleep)
- Low power consumption control is active.
- CAN transmission is stopped.

SLEEP MODE ACTIVATION

- IPDM E/R judges that the sleep-ready conditions are fulfilled when the ignition switch is OFF and none of the conditions below are present. Then it transmits a sleep-ready signal (ready) to BCM via CAN communication.
  - Outputting signals to actuators
  - Switches or relays operating
  - Output requests are being received from control units via CAN communication.
- IPDM E/R stops CAN communication and enters the low power consumption mode when it receives a sleep wake up signal (sleep) from BCM and the sleep-ready conditions are fulfilled.

WAKE-UP OPERATION

- IPDM E/R changes from the low power consumption mode to the normal mode when it receives a sleep wake-up signal (wake up) from BCM or any of the following conditions is fulfilled. In addition, it transmits a sleep-ready signal (not-ready) to BCM via CAN communication to report the CAN communication start.
  - Ignition switch ON
  - An output request is received from a control unit via CAN communication.

Component Parts Location

INFOID:0000000003857764

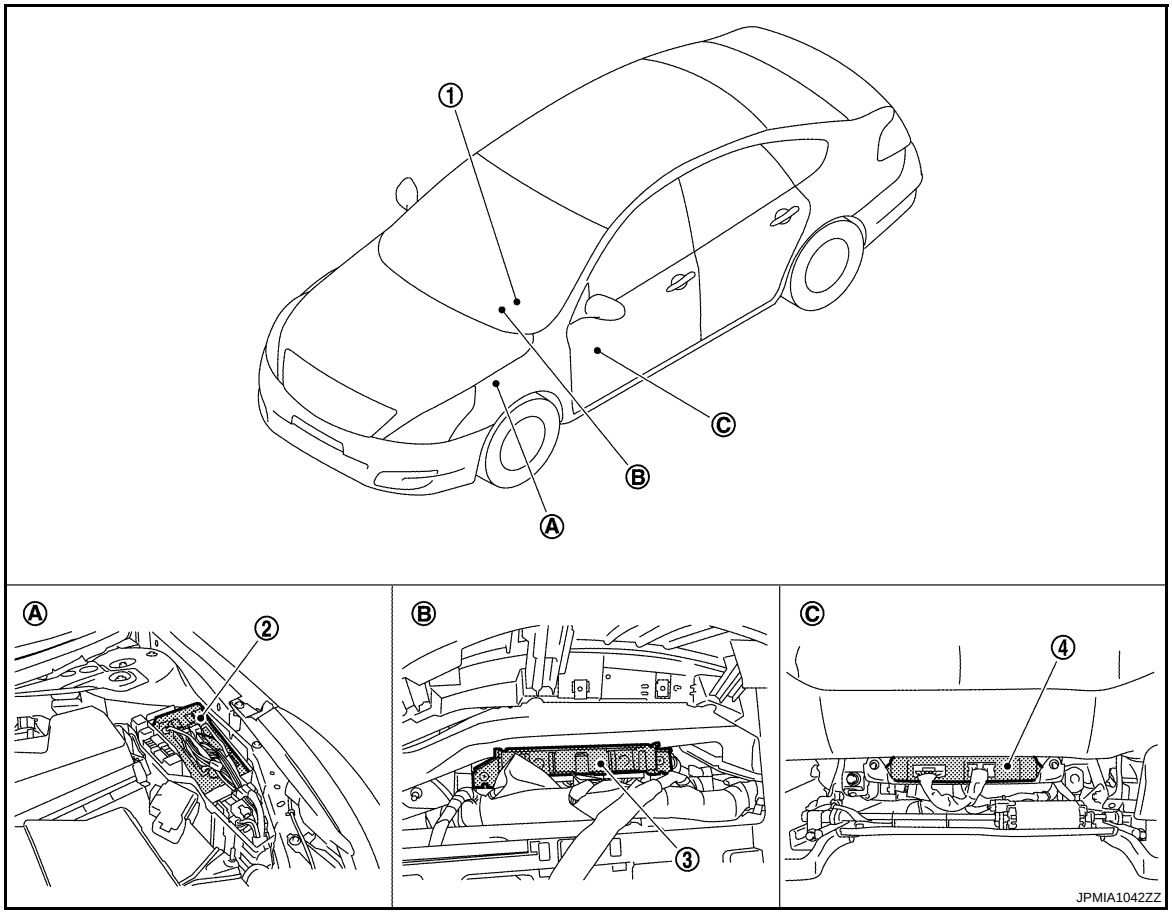

1. Combination meter	2. IPDM E/R	3. BCM
4. Driver seat control unit		
A. Engine room (LH)	B. Behind of combination meter	C. Backside of the seat cushion (driver seat)

DIAGNOSIS SYSTEM (IPDM E/R)

Diagnosis Description

INFOID:0000000003773267

AUTO ACTIVE TEST

Description

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Oil pressure warning lamp
- Front wiper (LO, HI)
- Parking lamps
- License plate lamps
- Tail lamps
- Front fog lamps
- Headlamps (LO, HI)
- A/C compressor (magnet clutch)
- Cooling fan

Operation Procedure

1. Close the hood and lift the wiper arms from the windshield. (Prevent windshield damage due to wiper operation)
   NOTE:
   When auto active test is performed with hood opened, sprinkle water on windshield beforehand.
2. Turn ignition switch OFF.
3. Turn the ignition switch ON, and within 20 seconds, press the driver door switch 10 times. Then turn the ignition switch OFF.
   CAUTION:
   Close passenger door.
4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.
5. The oil pressure warning lamp starts blinking when the auto active test starts.
6. After a series of the following operations is repeated 3 times, auto active test is completed.

NOTE:
When auto active test mode has to be cancelled halfway through test, turn ignition switch OFF.

CAUTION:

- **If auto active test mode cannot be actuated, check door switch system. Refer to DLK-57, "Component Function Check".**
- **Do not start the engine.**

Inspection in Auto Active Test Mode

When auto active test mode is actuated, the following 5 steps are repeated 3 times.

Operation sequence	Inspection location	Operation
A	Oil pressure warning lamp	Blinks continuously during operation of auto active test
1	Front wiper	LO for 5 seconds → HI for 5 seconds
2	• Parking lamps • License plate lamps • Tail lamps • Front fog lamps	10 seconds
3	Headlamps	LO ⇔ HI 5 times
4	A/C compressor (magnet clutch)	ON ⇔ OFF 5 times
5	Cooling fan	LO for 5 seconds → MID for 3 seconds → HI for 2 seconds

Concept of auto active test

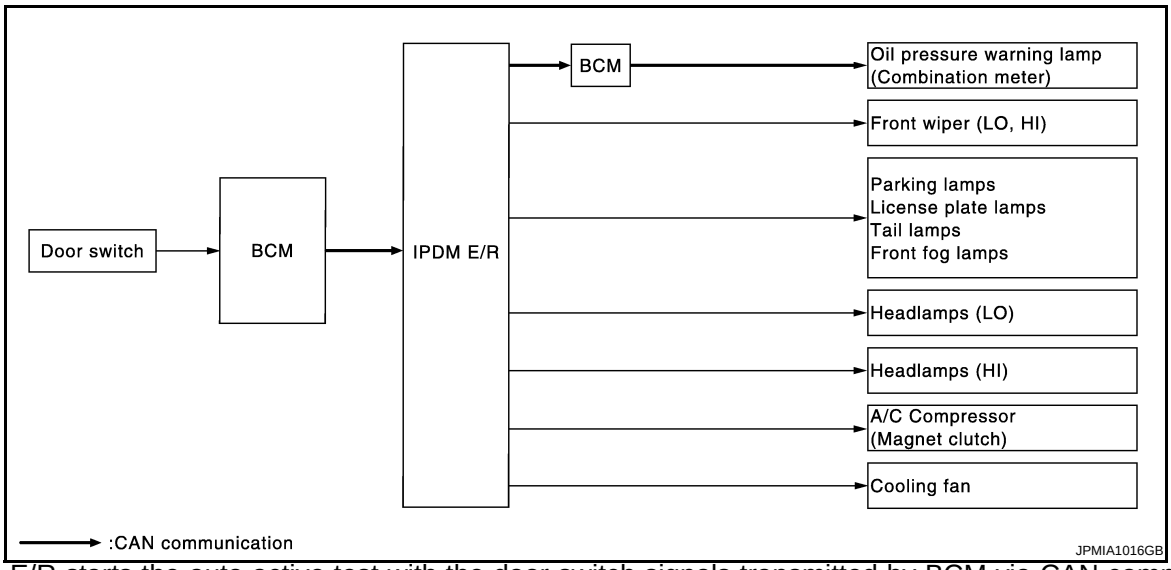

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

Diagnosis chart in auto active test mode

Symptom	Inspection contents		Possible cause
Any of the following components do not operate • Parking lamps • License plate lamps • Tail lamps • Front fog lamps • Headlamp (HI, LO) • Front wiper	Perform auto active test. Does the applicable system operate?	YES	BCM signal input circuit
		NO	• Lamp or motor • Lamp or motor ground circuit • Harness or connector between IPDM E/R and applicable system • IPDM E/R
A/C compressor does not operate	Perform auto active test. Does the magnet clutch operate?	YES	• A/C amp. signal input circuit • CAN communication signal between A/C amp. and ECM • CAN communication signal between ECM and IPDM E/R
		NO	• Magnet clutch • Harness or connector between IPDM E/R and magnet clutch • IPDM E/R
Oil pressure warning lamp does not operate	Perform auto active test. Does the oil pressure warning lamp blink?	YES	• Harness or connector between IPDM E/R and oil pressure switch • Oil pressure switch • IPDM E/R
		NO	• CAN communication signal between IPDM E/R and BCM • CAN communication signal between BCM and combination meter • Combination meter

Symptom	Inspection contents		Possible cause
Cooling fan does not operate	Perform auto active test. Does the cooling fan operate?	YES	• ECM signal input circuit • CAN communication signal between ECM and IPDM E/R
		NO	• Harness or connector between IPDM E/R and cooling fan motor • Harness or connector between IPDM E/R and cooling fan relay • Cooling fan motor • Cooling fan relay • IPDM E/R

CONSULT-III Function (IPDM E/R)

INFOID:0000000003773268

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with IPDM E/R.

Diagnosis mode	Description
Ecu Identification	Allows confirmation of IPDM E/R part number.
Self Diagnostic Result	Displays the diagnosis results judged by IPDM E/R.
Data Monitor	Displays the real-time input/output data from IPDM E/R input/output data.
Active Test	IPDM E/R can provide a drive signal to electronic components to check their operations.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

SELF DIAGNOSTIC RESULT

Refer to PCS-33, "DTC Index".

DATA MONITOR

Monitor item

Monitor Item [Unit]	MAIN SIGNALS	Description
MOTOR FAN REQ [1/2/3/4]	×	Displays the value of the cooling fan speed request signal received from ECM via CAN communication.
AC COMP REQ [Off/On]	×	Displays the status of the A/C compressor request signal received from ECM via CAN communication.
TAIL&CLR REQ [Off/On]	×	Displays the status of the position light request signal received from BCM via CAN communication.
HL LO REQ [Off/On]	×	Displays the status of the low beam request signal received from BCM via CAN communication.
HL HI REQ [Off/On]	×	Displays the status of the high beam request signal received from BCM via CAN communication.
FR FOG REQ [Off/On]	×	Displays the status of the front fog light request signal received from BCM via CAN communication.
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Displays the status of the front wiper request signal received from BCM via CAN communication.
WIP AUTO STOP [STOP P/ACT P]	×	Displays the status of the front wiper auto stop signal judged by IPDM E/R.
WIP PROT [Off/BLOCK]	×	Displays the status of the front wiper fail-safe operation judged by IPDM E/R.
IGN RLY1 -REQ [Off/On]		Displays the status of the ignition switch ON signal received from BCM via CAN communication.

Monitor Item [Unit]	MAIN SIGNALS	Description
IGN RLY [Off/On]	×	Displays the status of the ignition relay judged by IPDM E/R.
PUSH SW [Off/On]		Displays the status of the push-button ignition switch judged by IPDM E/R.
INTER/NP SW [Off/On]		Displays the status of the shift position judged by IPDM E/R.
ST RLY CONT [Off/On]		Displays the status of the starter relay status signal received from BCM via CAN communication.
IHBT RLY -REQ [Off/On]		Displays the status of the starter control relay signal received from BCM via CAN communication.
ST/INHI RLY [Off/ ST /INHI/UNKWN]		Displays the status of the starter relay and starter control relay judged by IPDM E/R.
DETENT SW [Off/On]		Displays the status of the control device (detention switch) judged by IPDM E/R.
S/L RLY -REQ [Off/On]		Displays the status of the steering lock relay signal received from BCM via CAN communication.
S/L STATE [LOCK/UNLOCK/UNKWN]		Displays the status of the steering lock judged by IPDM E/R.
DTRL REQ [Off]		**NOTE:** The item is indicated, but not monitored.
OIL P SW [Open/Close]		Displays the status of the oil pressure switch judged by IPDM E/R.
HOOD SW [Off/On]		Displays the status of the hood switch judged by IPDM E/R.
HL WASHER REQ [Off]		Display the status of the headlamp washer request signal received from BCM via CAN communication.
THFT HRN REQ [Off/On]		Displays the status of the theft warning horn request signal received from BCM via CAN communication.
HORN CHIRP [Off/On]		Displays the status of the horn reminder signal received from BCM via CAN communication.
CRNRNG LMP REQ [Off]		**NOTE:** The item is indicated, but not monitored.

ACTIVE TEST

Test item

Test item	Operation	Description
CORNERING LAMP	Off	**NOTE:** The item is indicated, but cannot be tested.
	LH	
	RH	
HORN	On	Operates horn relay for 20 ms.
FRONT WIPER	Off	OFF
	Lo	Operates the front wiper relay.
	Hi	Operates the front wiper relay and front wiper high relay.
MOTOR FAN	1	OFF
	2	Operates the cooling fan relay-1.
	3	Operates the cooling fan relay-2.
	4	Operates the cooling fan relay-2 and cooling fan relay-3.
HEAD LAMP WASHER	On	Operates the headlamp washer relay for 1 s.

Test item	Operation	Description
EXTERNAL LAMPS	Off	OFF
	TAIL	Operates the tail lamp relay.
	Lo	Operates the headlamp low relay.
	Hi	Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals.
	Fog	Operates the front fog lamp relay.

COMPONENT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:0000000003773269

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.
CAN Communication Signal Chart. Refer to LAN-22, "CAN Communication Signal Chart".

DTC Logic

INFOID:0000000003773270

DTC DETECTION LOGIC

DTC	CONSULT-III display description	DTC Detection Condition	Possible cause
U1000	CAN COMM CIRCUIT	When IPDM E/R cannot communicate CAN communication signal continuously for 2 seconds or more	CAN communication system

Diagnosis Procedure

INFOID:0000000003773271

1. PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check “Self Diagnostic Result” of IPDM E/R.

Is “CAN COMM CIRCUIT” displayed?

YES >> Refer to LAN-14, "Trouble Diagnosis Flow Chart".
NO >> Refer to GI-35, "Intermittent Incident".

B2098 IGNITION RELAY ON STUCK

Description

INFOID:0000000003773272

- IPDM E/R operates the ignition relay when it receives an ignition switch ON signal from BCM via CAN communication.
- Turn the ignition relay OFF by pressing the push-button ignition switch once when the vehicle speed is 4 km/h (2.5 MPH) or less.
- Turn the ignition relay OFF with the following operation when the vehicle speed is more than 4 km/h (2.5 MPH) or when an abnormal condition occurs in CAN communication from the combination meter (Emergency OFF)

- Press and hold the push-button ignition switch for 2 seconds or more.
- Press the push-button ignition switch 3 times within 1.5 seconds.

NOTE:
The ignition relay does not turn ON for 3 seconds after emergency OFF even if the push-button ignition switch is pressed.

DTC Logic

INFOID:0000000003773273

DTC DETECTION LOGIC

DTC	CONSULT-III display description	DTC Detection Condition	Possible causes
B2098	IGN RELAY ON	The ignition relay ON is detected for 1 second at ignition switch OFF (CPU monitors the status at the contact and excitation coil circuits of the ignition relay inside it)	Ignition relay malfunction

Diagnosis Procedure

INFOID:0000000003773274

1. PERFORM SELF DIAGNOSIS

1. Turn ignition switch ON.
2. Erase “Self Diagnostic Result” of IPDM E/R.
3. Turn ignition switch OFF, and wait for 1 second or more.
4. Turn ignition switch ON. Check “Self Diagnostic Result” again.

Is “IGN RELAY ON” displayed?

YES >> Replace IPDM E/R.
NO >> Refer to GI-35, "Intermittent Incident".

B2099 IGNITION RELAY OFF STUCK

Description

INFOID:0000000003773275

- IPDM E/R operates the ignition relay when it receives an ignition switch ON signal from BCM via CAN communication.
- Turn the ignition relay OFF by pressing the push-button ignition switch once when the vehicle speed is 4 km/h (2.5 MPH) or less.
- Turn the ignition relay OFF with the following operation when the vehicle speed is more than 4 km/h (2.5 MPH) or when an abnormal condition occurs in CAN communication from the combination meter (Emergency OFF)

- Press and hold the push-button ignition switch for 2 seconds or more.
- Press the push-button ignition switch 3 times within 1.5 seconds.

NOTE:
The ignition relay does not turn ON for 3 seconds after emergency OFF even if the push-button ignition switch is pressed.

DTC Logic

INFOID:0000000003773276

DTC DETECTION LOGIC

DTC	CONSULT-III display description	DTC Detection Condition	Possible causes
B2099	IGN RELAY OFF	The ignition relay OFF is detected for 1 second at ignition switch ON (CPU monitors the status at the contact and excitation coil circuits of the ignition relay inside it)	Ignition relay malfunction

NOTE:
When IPDM E/R power supply voltage is low (Approx. 7 - 8 V for about 1 second), the “DTC: B2099” may be detected.

Diagnosis Procedure

INFOID:0000000003773277

1. PERFORM SELF DIAGNOSIS

1. Turn ignition switch ON.
2. Erase “Self Diagnostic Result”.
3. Turn ignition switch OFF.
4. Turn ignition switch ON. Check “Self Diagnostic Result” again.

Is “IGN RELAY OFF” displayed?

YES >> Replace IPDM E/R.
NO >> Refer to GI-35, "Intermittent Incident".

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:0000000003773278

1. CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible links are not blown.

Signal name	Fuses and fusible link No.
Battery power supply	E
	50
	51

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.
NO >> GO TO 2.

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check voltage between IPDM E/R harness connector and ground.

Terminals			Voltage (Approx.)
(+)		(–)	
IPDM E/R			
Connector	Terminal	Ground	
E9	1		Battery voltage

Is the measurement value normal?

YES >> GO TO 3.
NO >> Repair harness or connector.

3. CHECK GROUND CIRCUIT

Check continuity between IPDM E/R harness connectors and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E10	12		Existed
E11	41		

Does continuity exist?

YES >> INSPECTION END
NO >> Repair harness or connector.

ECU DIAGNOSIS

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:0000000003773279

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition		Value/Status
MOTOR FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	1/2/3/4
AC COMP REQ	Engine running	A/C switch OFF	Off
		A/C switch ON (Compressor is operating)	On
TAIL&CLR REQ	Lighting switch OFF		Off
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)		On
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND HI or AUTO (Light is illuminated)		On
HL HI REQ	Lighting switch OFF		Off
	Lighting switch HI		On
FR FOG REQ	Lighting switch 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF	Off
		Front fog lamp switch ON	On
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	Stop
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	Hi
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	Off
		Front wiper stops at fail-safe operation	BLOCK
IGN RLY1 -REQ	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
PUSH SW	Release the push-button ignition switch		Off
	Press the push-button ignition switch		On
INTER/NP SW	Ignition switch ON	Selector lever in any position other than P or N	Off
		Selector lever in P or N position	On
ST RLY CONT	Ignition switch ON		Off
	At engine cranking		On
IHBT RLY -REQ	Ignition switch ON		Off
	At engine cranking		On

Monitor Item	Condition		Value/Status
ST/INHI RLY	Ignition switch ON		Off
	At engine cranking		INHI → ST
	The status of starter relay or starter control relay cannot be recognized by the battery voltage malfunction, etc. when the starter relay is ON and the starter control relay is OFF		UNKWN
DETENT SW	Ignition switch ON	• Press the selector button with selector lever in P position • Selector lever in any position other than P	Off
	Release the selector button with selector lever in P position		On
S/L RLY -REQ	None of the conditions below are present		Off
	• Open the driver door after the ignition switch is turned OFF (for a few seconds) • Press the push-button ignition switch when the steering lock is activated		On
S/L STATE	Steering lock is activated		LOCK
	Steering lock is deactivated		UNLOCK
	[DTC: B210A] is detected		UNKWN
DTRL REQ	**NOTE:** The item is indicated, but not monitored.		Off
OIL P SW	Ignition switch OFF, ACC or engine running		Open
	Ignition switch ON		Close
HOOD SW	Close the hood		Off
	Open the hood		On
HL WASHER REQ	Not operating		Off
	Headlamp washer operating		On
THFT HRN REQ	Not operating		Off
	Horn is activated with vehicle security (theft warning) system		On
HORN CHIRP	Not operating		Off
	• Door locking with Intelligent Key (horn chirp mode) • Door locking with key fob (horn chirp mode)		On
CRNRNG LMP REQ	**NOTE:** The item is indicated, but not monitored.		Off

TERMINAL LAYOUT

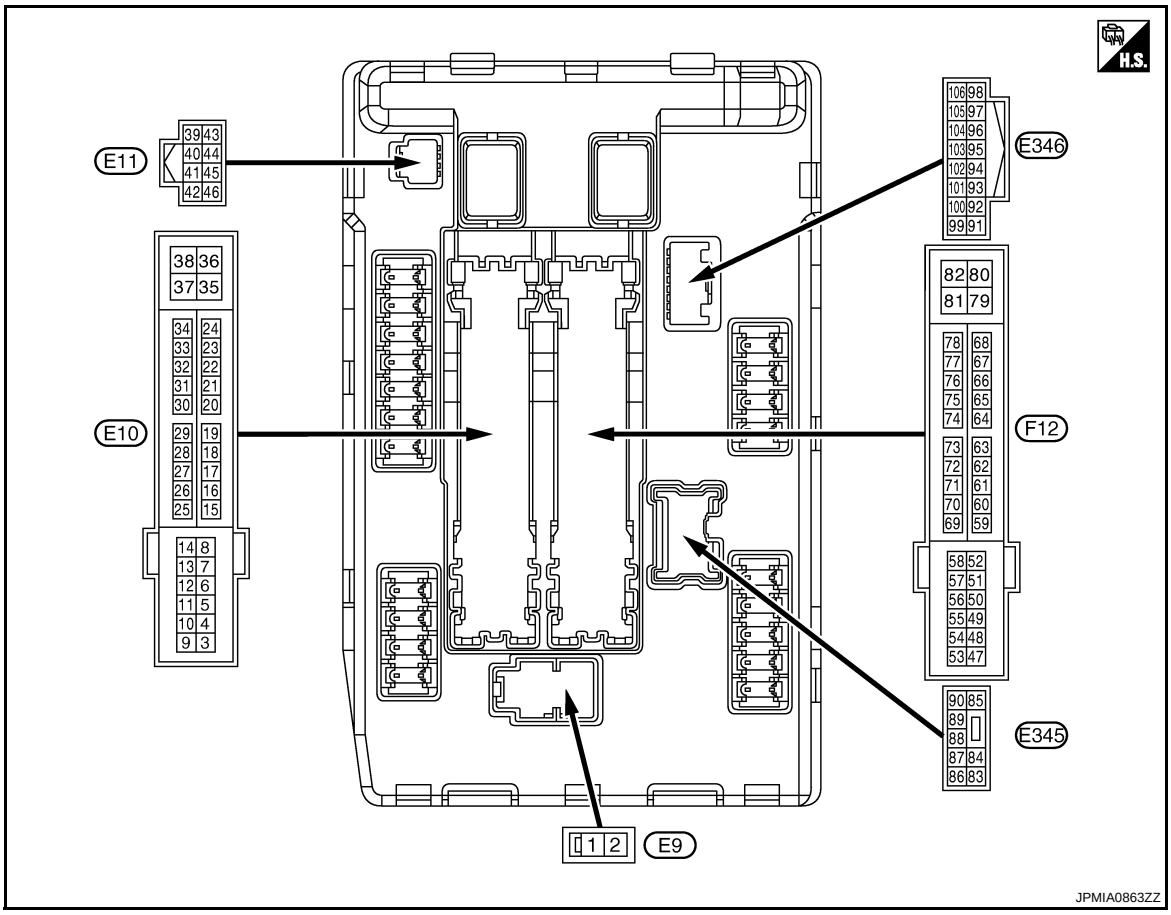

PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
1 (R)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (L)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
4 (LG)	Ground	Front wiper LO	Output	Ignition switch ON	Front wiper switch OFF	0 V
					Front wiper switch LO	Battery voltage
5 (Y)	Ground	Front wiper HI	Output	Ignition switch ON	Front wiper switch OFF	0 V
					Front wiper switch HI	Battery voltage
7 (GR)	Ground	Tail, license plate lamps & illuminations	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 1ST	Battery voltage
10 (BR)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		0 V
				• Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF)		Battery voltage

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
11 (P)	Ground	Steering lock unit power supply	Output	Ignition switch OFF	A few seconds after opening the driver door	Battery voltage
				Ignition switch LOCK	Press the push-button ignition switch	Battery voltage
				Ignition switch ACC or ON		0 V
12 (B/W)	Ground	Ground	—	Ignition switch ON		0 V
13 (SB)	Ground	Fuel pump power supply	Output	Approximately 1 second or more after turning the ignition switch ON		0 V
				• Approximately 1 second after turning the ignition switch ON • Engine running		Battery voltage
15 (W)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
16 (R)	Ground	Front wiper auto stop	Input	Ignition switch ON	Front wiper stop position	0 V
					Any position other than front wiper stop position	Battery voltage
17 (V)	Ground	Headlamp washer relay control	Input	Ignition switch ON	Headlamp washer deactivated	Battery voltage
					Headlamp washer activated	0 V
19 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
20 (B)	Ground	Ambient sensor ground	Output	Ignition switch ON		0 V
21 (O)	Ground	Ambient sensor	Input	Ignition switch ON **NOTE:** Changes depending to ambient temperature		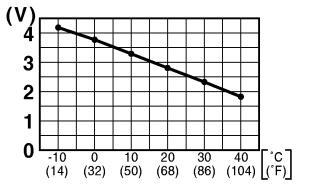 JSNIA0014GB
22 (SB)	Ground	Refrigerant pressure sensor ground	Output	Engine running	• Warm-up condition • Idle speed	0 V
23 (GR)	Ground	Refrigerant pressure sensor	Output	Engine running	• Warm-up condition • Both A/C switch and blower fan motor switch ON (Compressor operates)	1.0 - 4.0 V
24 (G)	Ground	Refrigerant pressure sensor power supply	Input	Ignition switch OFF		0 V
				Ignition switch ON		5.0 V
25 (GR)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
27 (W)	Ground	Ignition relay monitor	Input	Ignition switch OFF or ACC		Battery voltage
				Ignition switch ON		0 V

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
28 (SB)	Ground	Push-button ignition switch	Input	Press the push-button ignition switch		0 V
				Release the push-button ignition switch		Battery voltage
30 (BR)	Ground	Starter relay control	Input	Ignition switch ON	Selector lever in any position other than P or N	0 V
					Selector lever P or N	Battery voltage
32 (V)	Ground	Steering lock unit condition-1	Input	Steering lock is activated		0 V
				Steering lock is deactivated		Battery voltage
33 (G)	Ground	Steering lock unit condition-2	Input	Steering lock is activated		Battery voltage
				Steering lock is deactivated		0 V
34 (O)	Ground	Cooling fan relay-3 control	Input	Cooling fan stopped		Battery voltage
				Cooling fan at HI operation		0 V
35 (P)	Ground	Cooling fan relay-1 power supply	Input	Cooling fan stopped		Battery voltage
				Cooling fan at LO operation		6.0 V
36 (G)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
38 (GR)	Ground	Cooling fan relay-1 power supply	Output	Cooling fan not operating		0 V
				Cooling fan at LO operation		6.0 V
39 (P)	—	CAN-L	Input/ Output	—		—
40 (L)	—	CAN-H	Input/ Output	—		—
41 (B)	Ground	Ground	—	Ignition switch ON		0 V
42 (SB)	Ground	Cooling fan relay-2 control	Input	Cooling fan stopped		Battery voltage
				• Cooling fan MID operating • Cooling fan HI operating		0 V
43 (Y)	Ground	Control device (Detention switch)	Input	Ignition switch ON	Press the selector button (selector lever P)	Battery voltage
					• Selector lever in any position other than P • Release the selector button (selector lever P)	0 V
44 (G)	Ground	Horn relay control	Input	The horn is deactivated		Battery voltage
				The horn is activated		0 V
45 (O)	Ground	Horn switch	Input	The horn is deactivated		Battery voltage
				The horn is activated		0 V
46 (BR)	Ground	Starter relay control	Input	Ignition switch ON	Selector lever in any position other than P or N	0 V
					Selector lever P or N	Battery voltage
48 (Y/R)	Ground	A/C relay power supply	Output	Engine running	A/C switch OFF	0 V
					A/C switch ON (A/C compressor is operating)	Battery voltage

Terminal No. (Wire color) +	Terminal No. (Wire color) –	Description: Signal name	Description: Input/ Output	Condition	Value (Approx.)
49 (R/B)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
				• Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF)	Battery voltage
51 (LG)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
52 (Y/G)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
53 (R/W)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
				• Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF)	Battery voltage
54 (G/W)	Ground	Throttle control motor relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
				• Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF)	Battery voltage
55 (W/L)	Ground	ECM power supply	Output	Ignition switch OFF	Battery voltage
56 (R/Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
57 (O)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
58 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
69 (W/B)	Ground	ECM relay control	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	Battery voltage
				• Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF)	0 - 1.5 V
70 (O)	Ground	Throttle control motor relay control	Output	Ignition switch ON → OFF	0 -1.0 V ↓ Battery voltage ↓ 0 V
				Ignition switch ON	0 - 1.0 V
72 (R/B)	Ground	Starter relay control	Input	Ignition switch ON: Selector lever in any position other than P or N	0 V
				Ignition switch ON: Selector lever P or N	Battery voltage
74 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
75 (P/L)	Ground	Oil pressure switch	Input	Ignition switch ON	Engine stopped	0 V
					Engine running	Battery voltage
76 (SB)	Ground	Power generation command signal	Output	Ignition switch ON		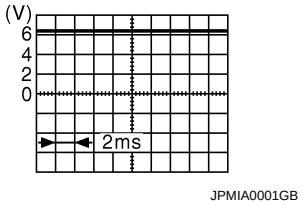 6.3 V
				40% is set on “ACTIVE TEST”, “ALTERNATOR DUTY” of “ENGINE”		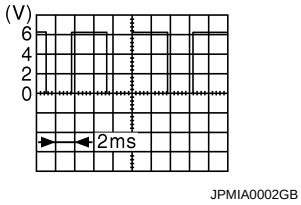 3.8 V
				80% is set on “ACTIVE TEST”, “ALTERNATOR DUTY” of “ENGINE”		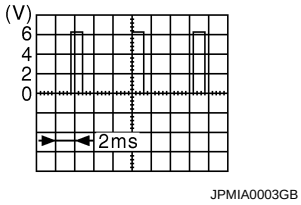 1.4 V
77 (GR)	Ground	Fuel pump relay control	Output	• Approximately 1 second after turning the ignition switch ON • Engine running		0 - 1.5 V
				Approximately 1 second or more after turning the ignition switch ON		Battery voltage
80 (B/W)	Ground	Starter motor	Output	At engine cranking		Battery voltage
83 (Y)	Ground	Headlamp LO (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 2ND	Battery voltage
84 (SB)	Ground	Headlamp LO (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 2ND	Battery voltage
86 (L)	Ground	Front fog lamp (RH)	Output	Lighting switch 2ND	• Front fog lamp switch ON • Daytime running light activated (Only for Canada)	Battery voltage
					Front fog lamp switch OFF	0 V
87 (R)	Ground	Front fog lamp (LH)	Output	Lighting switch 2ND	• Front fog lamp switch ON • Daytime running light activated (Only for Canada)	Battery voltage
					Front fog lamp switch OFF	0 V

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
88 (P)	Ground	Washer pump power supply	Output	Ignition switch ON		Battery voltage
89 (W)	Ground	Headlamp HI (RH)	Output	Ignition switch ON	• Lighting switch HI • Lighting switch PASS	Battery voltage
					Lighting switch OFF	0 V
90 (O)	Ground	Headlamp HI (LH)	Output	Ignition switch ON	• Lighting switch HI • Lighting switch PASS	Battery voltage
					Lighting switch OFF	0 V
91 (O)	Ground	Parking lamp (RH)	Output	Ignition switch ON	Lighting switch 1ST	Battery voltage
					Lighting switch OFF	0 V
92 (L)	Ground	Parking lamp (LH)	Output	Ignition switch ON	Lighting switch 1ST	Battery voltage
					Lighting switch OFF	0 V
93 (BR)	Ground	Headlamp aiming motor (RH)	Output	Ignition switch ON	Lighting switch 1ST	Battery voltage
					Lighting switch OFF	0 V
94 (Y)	Ground	Headlamp aiming motor (LH)	Output	Ignition switch ON	Lighting switch 1ST	Battery voltage
					Lighting switch OFF	0 V
99 (W)	Ground	Ambient sensor ground	Input	Ignition switch ON		0 V
100 (SB)	Ground	Ambient sensor	Output	Ignition switch ON **NOTE:** Changes depending to ambient temperature		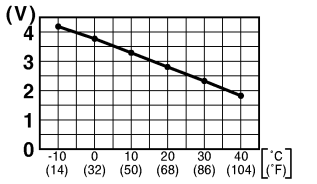 JSNIA0014GB
101 (GR)	Ground	Refrigerant pressure sensor ground	Input	Engine running	• Warm-up condition • Idle speed	0 V
102 (R)	Ground	Refrigerant pressure sensor	Input	Engine running	• Warm-up condition • Both A/C switch and blower fan motor switch ON (Compressor operates)	1.0 - 4.0 V
103 (P)	Ground	Refrigerant pressure sensor power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		5.0 V
104 (LG)	Ground	Hood switch	Output	Close the hood		Battery voltage
				Open the hood		0 V

Wiring Diagram - IPDM E/R -

INFOID:0000000003773293

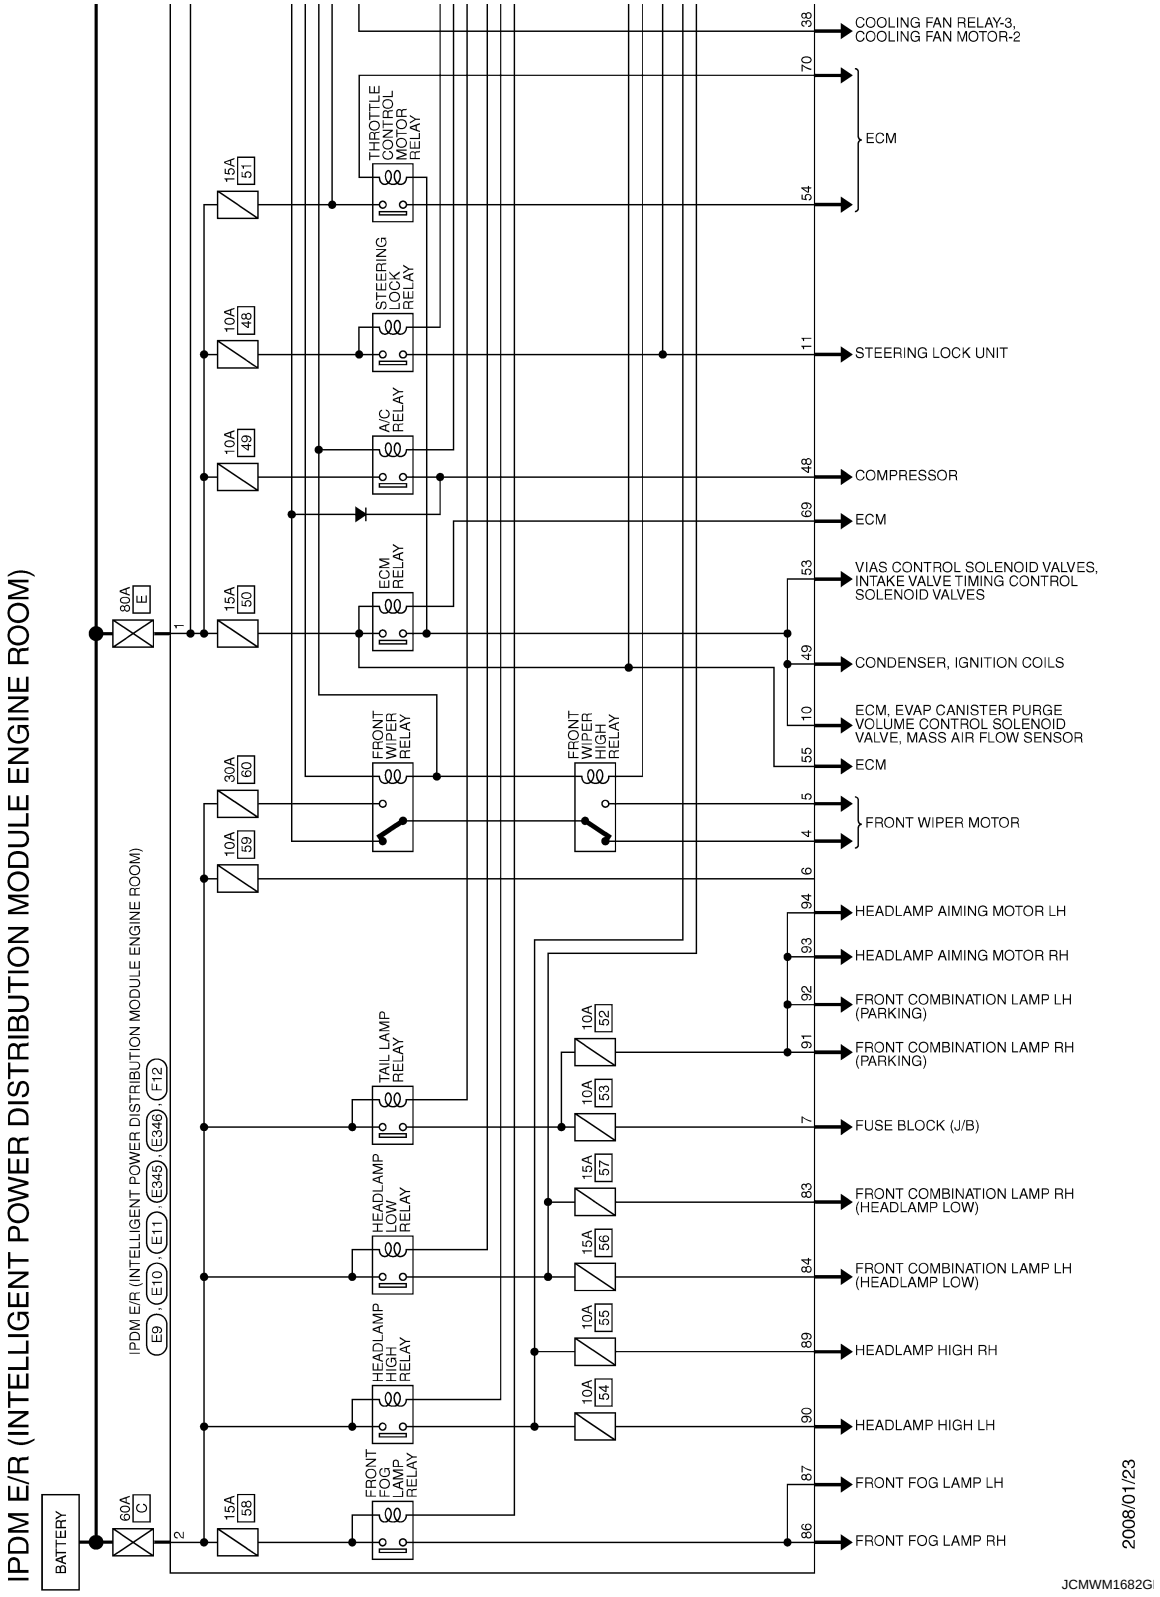

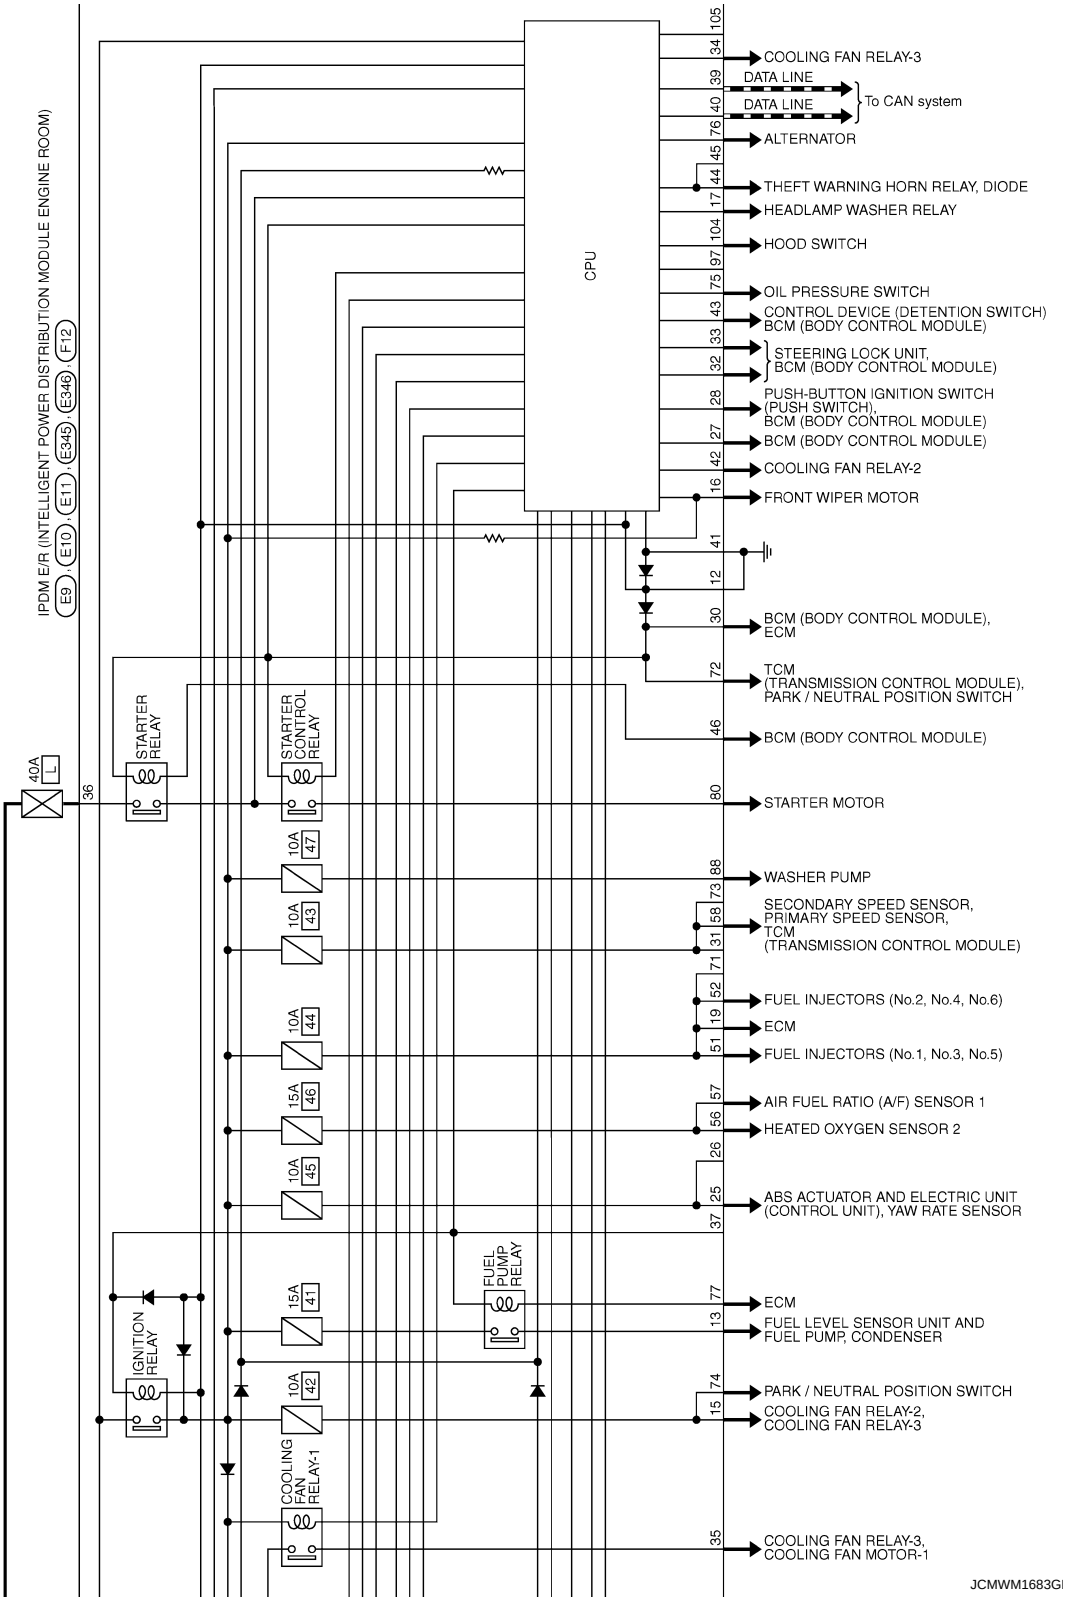
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
E9, E10, E11, E345, E346, F12
CPU
105
34
COOLING FAN RELAY-3
39
DATA LINE
40
DATA LINE
To CAN system
76
ALTERNATOR
45
44
THEFT WARNING HORN RELAY, DIODE
17
HEADLAMP WASHER RELAY
104
HOOD SWITCH
97
75
OIL PRESSURE SWITCH
43
CONTROL DEVICE (DETENTION SWITCH)
BCM (BODY CONTROL MODULE)
33
32
STEERING LOCK UNIT,
BCM (BODY CONTROL MODULE)
28
PUSH-BUTTON IGNITION SWITCH
(PUSH SWITCH),
BCM (BODY CONTROL MODULE)
27
BCM (BODY CONTROL MODULE)
42
COOLING FAN RELAY-2
16
FRONT WIPER MOTOR
41
12
30
BCM (BODY CONTROL MODULE),
ECM
72
TCM
(TRANSMISSION CONTROL MODULE),
PARK / NEUTRAL POSITION SWITCH
46
BCM (BODY CONTROL MODULE)
80
STARTER MOTOR
88
WASHER PUMP
73
58
31
71
SECONDARY SPEED SENSOR,
PRIMARY SPEED SENSOR,
TCM
(TRANSMISSION CONTROL MODULE)
52
FUEL INJECTORS (No.2, No.4, No.6)
19
ECM
51
FUEL INJECTORS (No.1, No.3, No.5)
57
AIR FUEL RATIO (A/F) SENSOR 1
56
HEATED OXYGEN SENSOR 2
26
25
ABS ACTUATOR AND ELECTRIC UNIT
(CONTROL UNIT), YAW RATE SENSOR
37
77
ECM
13
FUEL LEVEL SENSOR UNIT AND
FUEL PUMP, CONDENSER
74
PARK / NEUTRAL POSITION SWITCH
15
COOLING FAN RELAY-2,
COOLING FAN RELAY-3
35
COOLING FAN RELAY-3,
COOLING FAN MOTOR-1
36
40A
L
STARTER RELAY
STARTER CONTROL RELAY
10A
47
10A
43
10A
44
15A
46
10A
45
15A
41
10A
42
IGNITION RELAY
FUEL PUMP RELAY
COOLING FAN RELAY-1
JCMWM1683GI

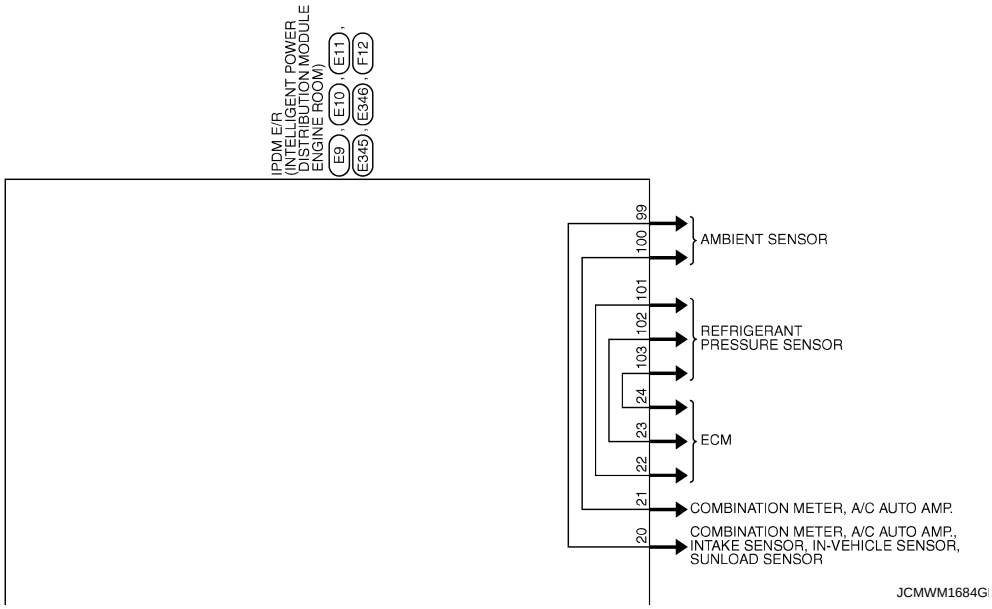
IPDM E/R
(INTELLIGENT POWER
DISTRIBUTION MODULE
ENGINE ROOM)
E9, E10, E11,
E345, E346, F12
99
100
101
102
103
24
23
22
21
20
AMBIENT SENSOR
REFRIGERANT
PRESSURE SENSOR
ECM
COMBINATION METER, A/C AUTO AMP.
COMBINATION METER, A/C AUTO AMP.,
INTAKE SENSOR, IN-VEHICLE SENSOR,
SUNLOAD SENSOR
JCMWM1684G

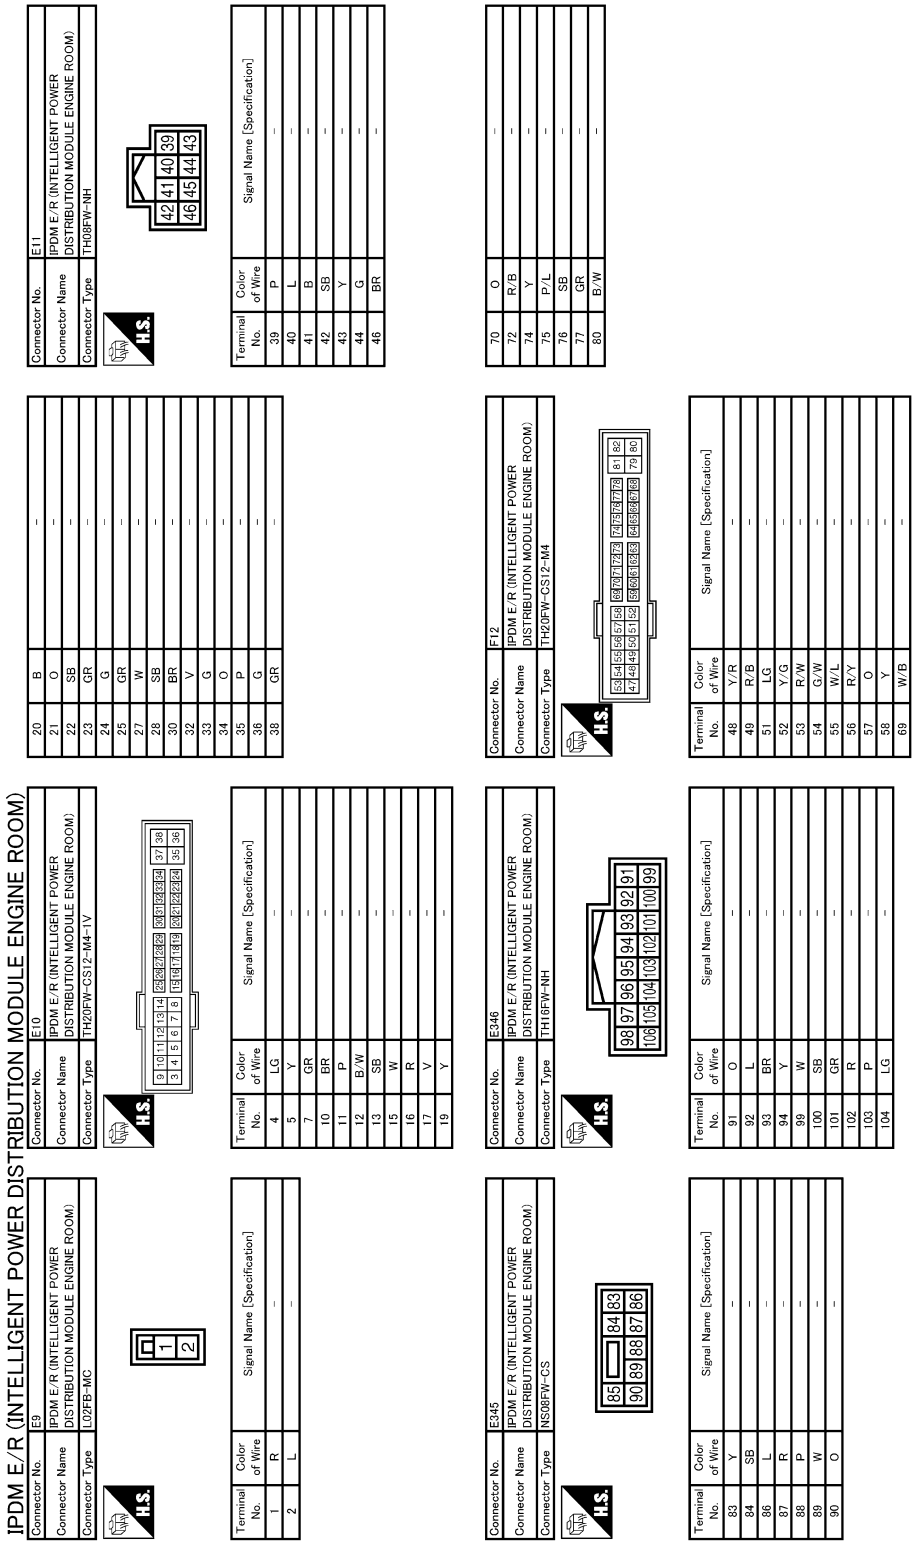

JCMWM1685G

Fail-safe

INFOID:0000000003773281

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

Control part	Fail-safe operation
Cooling fan	• Turns ON the cooling fan relay-2 and the cooling fan relay-3 when ignition switch is turned ON (Cooling fan operates at HI) • Turns OFF the cooling fan relay-1, the cooling fan relay-2 and the cooling fan relay-3 when the ignition switch is turned OFF (Cooling fan does not operate)
A/C compressor	A/C relay OFF
Alternator	Outputs the power generation command signal (PWM signal) 0%

If No CAN Communication Is Available With BCM

Control part	Fail-safe operation
Headlamp	• Turns ON the headlamp low relay when the ignition switch is turned ON • Turns OFF the headlamp low relay when the ignition switch is turned OFF • Headlamp high relay OFF
• Parking lamps • License plate lamps • Illuminations • Tail lamps	• Turns ON the tail lamp relay when the ignition switch is turned ON • Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper	• The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. • The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.
Front fog lamps	Front fog lamp relay OFF
Horn	Horn OFF
Ignition relay	The status just before activation of fail-safe is maintained.
Starter motor	Starter control relay OFF
Steering lock unit	Steering lock relay OFF
Headlamp washer relay	Headlamp washer relay OFF

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Voltage judgment		IPDM E/R judgment	Operation
Ignition relay contact side	Ignition relay excitation coil side		
ON	ON	Ignition relay ON normal	—
OFF	OFF	Ignition relay OFF normal	—
ON	OFF	Ignition relay ON stuck	• Detects DTC “B2098: IGN RELAY ON” • Turns ON the tail lamp relay for 10 minutes
OFF	ON	Ignition relay OFF stuck	Detects DTC “B2099: IGN RELAY OFF”

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper auto stop signal.
When a front wiper auto stop signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

Ignition switch	Front wiper switch	Front wiper auto stop signal
ON	OFF	The front wiper auto stop signal (stop position) cannot be input for 10 seconds.
	ON	The front wiper auto stop signal does not change for 10 seconds.

NOTE:
This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

DTC Index

INFOID:0000000003773282

NOTE:
- The details of time display are as follows.
- CRNT: A malfunction is detected now
- PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
- The number is 0 when is detected now
- The number increases like 1 → 2 ··· 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
- The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

×: Applicable

CONSULT display	Fail-safe	Refer to
No DTC is detected. further testing may be required.	—	—
U1000: CAN COMM CIRCUIT	×	PCS-16
B2098: IGN RELAY ON	×	PCS-17
B2099: IGN RELAY OFF	—	PCS-18
B2108: STRG LCK RELAY ON	—	SEC-96
B2109: STRG LCK RELAY OFF	—	SEC-97
B210A: STRG LCK STATE SW	—	SEC-98
B210B: START CONT RLY ON	—	SEC-102
B210C: START CONT RLY OFF	—	SEC-103
B210D: STARTER RELAY ON	—	SEC-104
B210E: STARTER RELAY OFF	—	SEC-105
B210F: INTRLCK/PNP SW ON	—	SEC-107
B2110: INTRLCK/PNP SW OFF	—	SEC-109

ON-VEHICLE REPAIR

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Exploded View

INFOID:0000000003773283

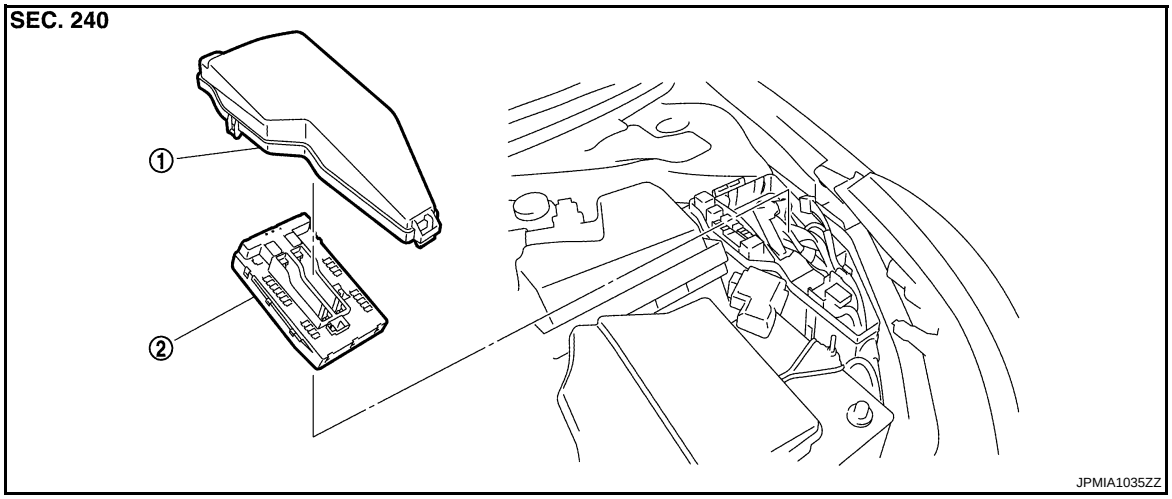

1. Relay box cover
2. IPDM E/R

Removal and Installation

INFOID:0000000003773284

CAUTION:
IPDM E/R integrated relays are not serviceable parts, and must not be removed from the unit.

REMOVAL

1. Disconnect the battery cable from the negative terminal.
2. Remove the relay box cover.
3. Disconnect the harness connector form IPDM E/R (1).
4. Press the pawls (A) and remove the IPDM E/R from relay box.

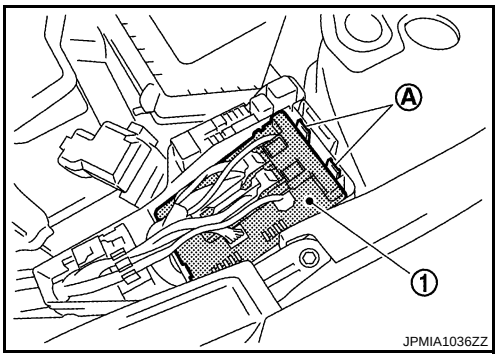

INSTALLATION
Install in the reverse order of removal.

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:0000000003805719

OVERALL SEQUENCE

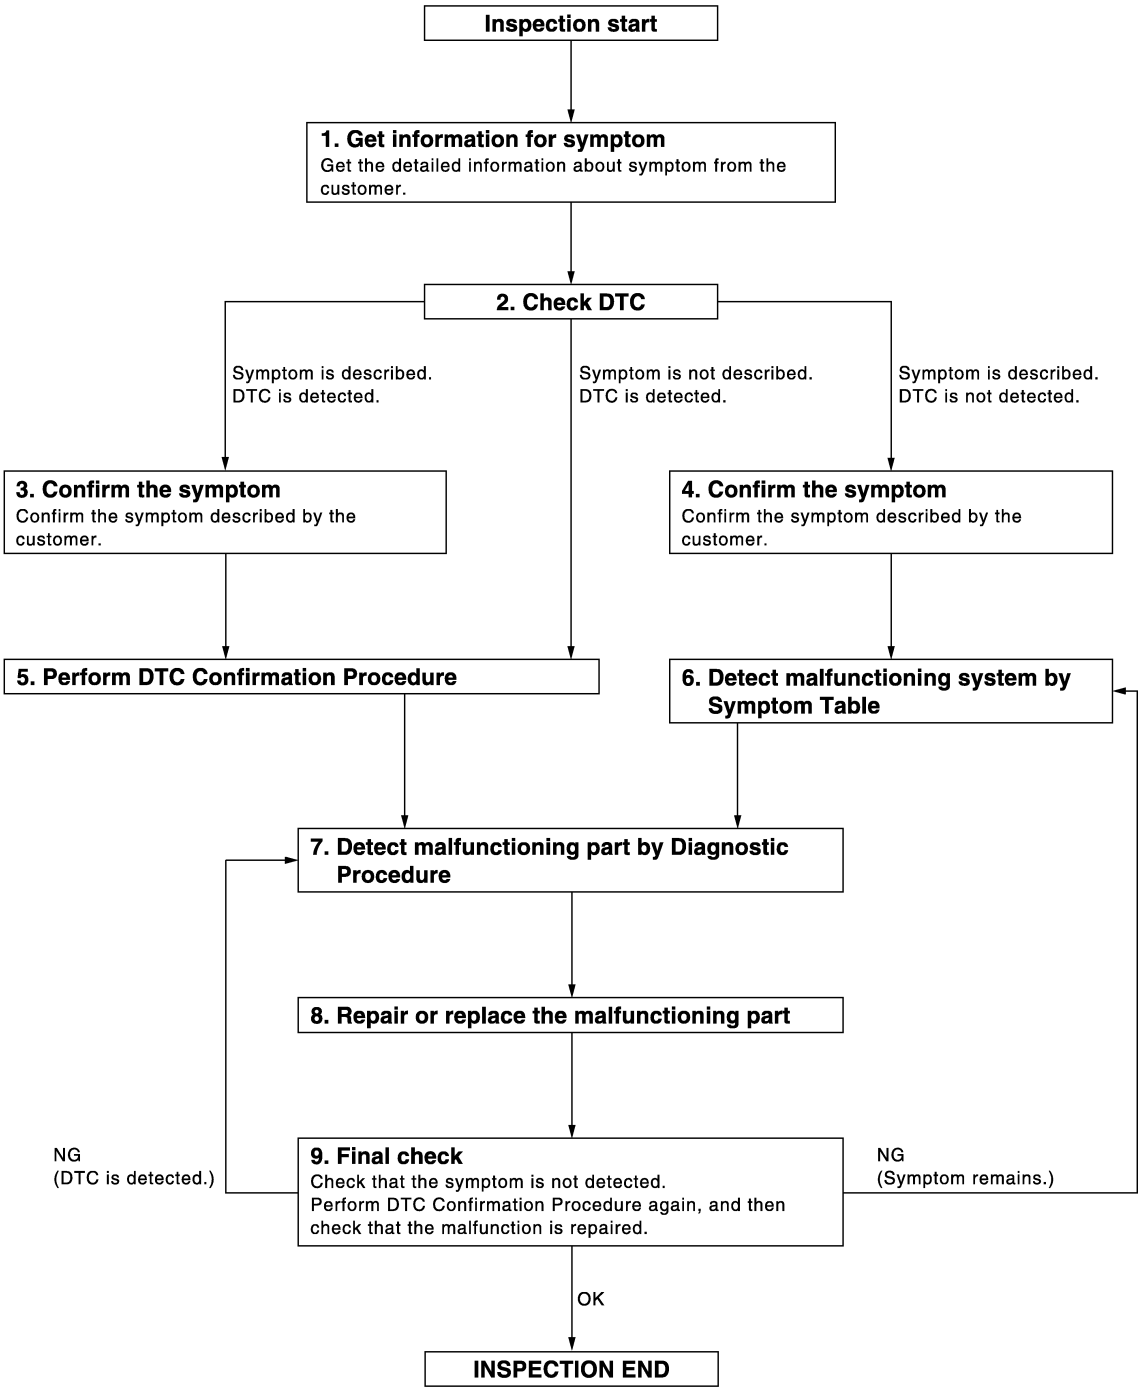

JMMIA0021GB

DETAILED FLOW

1. GET INFORMATION FOR SYMPTOM

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred).

>> GO TO 2.

2. CHECK DTC

1. Check DTC for BCM and IPDM E/R.
2. Perform the following procedure if DTC is detected.
- Record DTC and freeze frame data (Print them out with CONSULT-III.)
- Erase DTC.
- Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Are any symptoms described and any DTC detected?

Symptom is described, DTC is detected>>GO TO 3.
Symptom is described, DTC is not detected>>GO TO 4.
Symptom is not described, DTC is detected>>GO TO 5.

3. CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.
Connect CONSULT-III to the vehicle in “DATA MONITOR” mode and check real time diagnosis results.
Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

4. CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.
Connect CONSULT-III to the vehicle in “DATA MONITOR ” mode and check real time diagnosis results.
Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

5. PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC Confirmation Procedure for the detected DTC, and then check that DTC is detected again.
At this time, always connect CONSULT-III to the vehicle, and check diagnostic results in real time.
If two or more DTCs are detected, refer to PCS-104, "DTC Inspection Priority Chart", and determine trouble diagnosis order.

NOTE:
Perform Component Function Check if DTC Confirmation Procedure is not included in Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.
If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC Confirmation Procedure.

Is DTC detected?

YES >> GO TO 7.
NO >> Refer to GI-35, "Intermittent Incident".

6. DETECT MALFUNCTIONING SYSTEM BY SYMPTOM TABLE

Detect malfunctioning system according to PCS-122, "Symptom Table" based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

>> GO TO 7.

7. DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

Inspect according to Diagnostic Procedure of the system.

NOTE:
The Diagnostic Procedure described is based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnostic Procedure.

Is malfunctioning part detected?

YES >> GO TO 8.
NO >> Check voltage of related BCM terminals using CONSULT-III.

8. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnostic Procedure again after repair and replacement.
3. Check DTC. If DTC is detected, erase it.

>> GO TO 9.

9. FINAL CHECK

When DTC was detected in step 2, perform DTC Confirmation Procedure or Component Function Check again, and then check that the malfunction has been repaired securely.
When symptom was described from the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Does the symptom reappear?

YES (DTC is detected)>>GO TO 7.
YES (Symptom remains)>>GO TO 6.
NO >> **INSPECTION END**

FUNCTION DIAGNOSIS

POWER DISTRIBUTION SYSTEM

System Description

INFOID:0000000003805720

- PDS (POWER DISTRIBUTION SYSTEM) is the system that BCM controls with the operation of the push-button ignition switch and performs the power distribution to each power circuit. This system is used instead of the mechanical power supply changing mechanism with the operation of the conventional key cylinder.
- The push-button ignition switch can be operated when Intelligent Key is in the following condition. Refer to Engine Start Function for details.
- Intelligent Key is in the detection area of the inside key antenna
- Insert Intelligent Key into the key slot
- Insert key fob into the key slot
- The push-button ignition switch operation is input to BCM as a signal. BCM changes the power supply position according to the status and operates the following relays to supply power to each power circuit.
- Ignition relay (built into IPDM E/R)
- Ignition relay (inserted into fuse block)
- ACC relay
- Blower fan relay

NOTE:
The engine switch operation changes due to the conditions of brake pedal, selector lever and vehicle speed.

- The power supply position can be confirmed with the illuminating of the indicators around the push-button ignition switch.

BATTERY SAVER SYSTEM

When all of the following conditions are met for 60 minutes, the battery saver system will cut off the power supply to prevent battery discharge.

- The ignition switch is in the ACC position
- All doors are closed
- Selector lever is in the P position

Reset Condition of Battery Saver System

In order to prevent the battery from discharging, the battery saver system will cut off the power supply when all doors are closed, the selector lever is in the P position and the ignition switch is left in the ACC position for 60 minutes. If any of the following conditions are met the battery saver system is released and the steering will change automatically to the LOCK position from the OFF position.

- Opening any door
- Operating with door key cylinder on door lock
- Operating with request switch on door lock
- Operating with Intelligent Key on door lock

Press push-button ignition switch and ignition switch will change to the ACC position from the OFF position.

STEERING LOCK OPERATION

Steering is locked by steering lock unit when ignition switch is in the OFF position, selector lever is in the P position and any of the following conditions are met.

- Opening door
- Closing door
- Door is locked with request switch
- Door is locked with Intelligent Key

PUSH-BUTTON IGNITION SWITCH OPERATION PROCEDURE

The power supply position changing operation can be performed with the following operations.

Operation Enable Condition

- When an Intelligent Key is within the detection area of inside key antenna and when it is inserted into the key slot, the operation is as per the following.
- When starting the engine, the BCM monitors the following engine start conditions,
- Brake pedal operating condition
- Selector lever position
- Vehicle speed
- Unless each start condition is fulfilled, the engine will not respond regardless of how many times the engine switch is pressed. At that time, illumination repeats the position in the order of LOCK→ACC→ON→OFF.

Operation Condition

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Brake pedal	Selector lever position	
LOCK → ACC	Not depressed	Any position	1
LOCK → ACC → ON	Not depressed	Any position	2
LOCK → ACC → ON → OFF	Not depressed	Any position	3
LOCK → START ACC → START ON → START (Engine start)	Depressed	P or N position (*1)	1 [If the switch is pressed once, the engine starts from any power supply position (LOCK, ACC and ON)]
Engine is running → OFF (Engine stop)	—	P position	1
Engine is running → ACC (Engine stop)	—	Any position other than P (*2)	1
Engine stall return operation while driving	—	N position	1

*1: When the selector lever position is in the N position, the engine start condition is different according to the vehicle speed.

- At a vehicle speed of less than 4 km/h (2.5MPH), the engine can start only when the brake pedal is depressed.
- At a vehicle speed of 4 km/h (2.5MPH) or more, the engine can start even if the brake pedal is not depressed. (It is the same as “Engine stall return operation while driving”.)

*2: When the selector lever position is in any position other than the P position and when the vehicle speed is 5 km/h (3.1MPH) or more, the engine stop condition is different.

- Press and hold the push-button ignition switch for 2 seconds or more. (When the push-button ignition switch is pressed for too short a time, the operation may be invalid, so properly press and hold to prevent an incorrect operation.)
- Press the push-button ignition switch 3 times or more within 1.5 seconds. (Emergency stop operation)

Component Parts Location

INFOID:0000000003805721

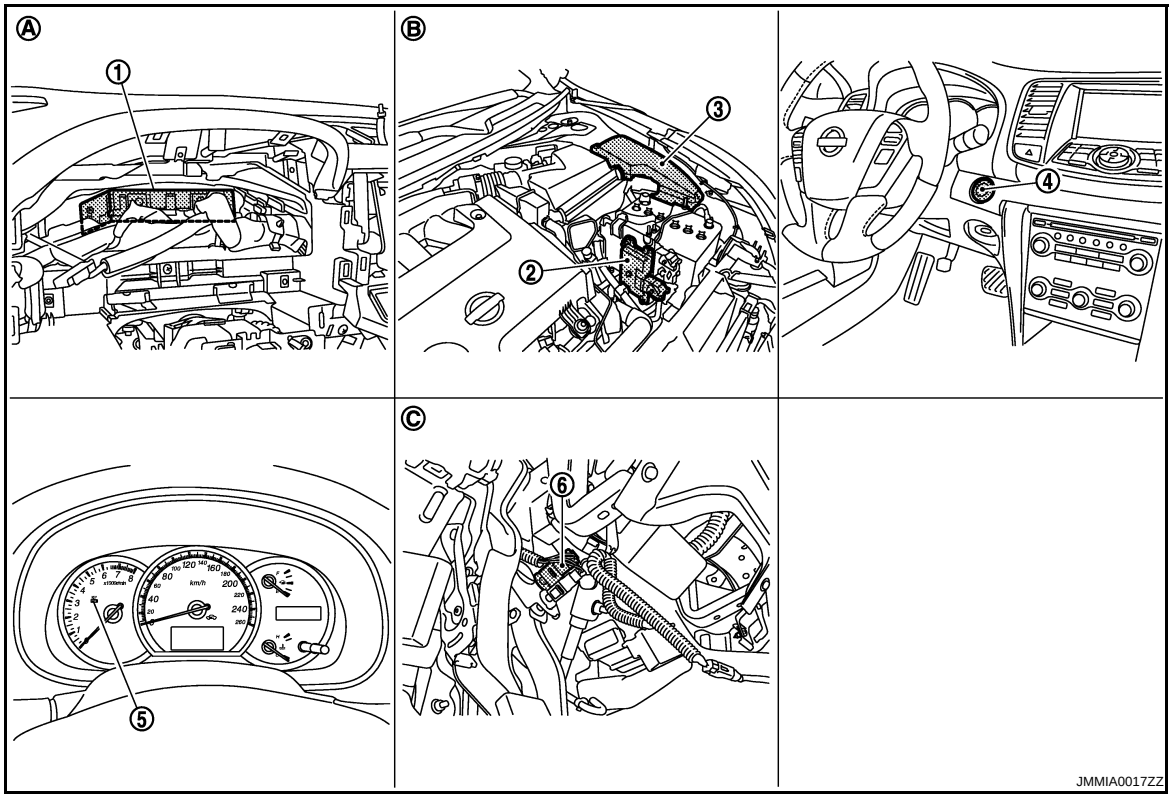

1. BCM M118, M119, M121, M122, M123
2. TCM F23
3. IPDM E/R E10, E11, F12
4. Push button ignition switch M101
5. Combination meter (Key warning lamp) M34
6. Stop lamp switch E115

A. Behind the combination meter
B. Engine room dash panel (LH)
C. Behind the instrument lower panel LH

Component Description

INFOID:0000000003805722

Component	Reference
IPDM E/R	PCS-7
Ignition relay (built into IPDM E/R)	PCS-18
Ignition relay (inserted into fuse block)	PCS-49
Accessory relay	PCS-53
Blower relay	PCS-55
Stop lamp switch	SEC-50
Park/neutral position switch	SEC-56
Push-button ignition switch	PCS-63

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:0000000003839090

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM. Refer to CONSULT-III operation manual.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	• Read and save the vehicle specification. • Write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
—	AIR CONDITONER*			
• Intelligent Key system • Engine start system	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
NVIS - NATS	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Trunk lid opener system	TRUNK		×	×
Vehicle security system	THEFT ALM	×	×	×
—	RETAINED PWR*		×	
Signal buffer system	SIGNAL BUFFER		×	×
—	TPMS (AIR PRESSURE MONITOR)*	×	×	×

NOTE:

*: This item is displayed, but is not used.

FREEZE FRAME DATA (FFD) AND IGN COUNTER

Freeze Frame Data

The BCM records the following condition at the moment a particular DTC is detected.
- Vehicle Speed
- Odo/Trip Meter
- Vehicle Condition (BCM detected condition)

CONSULT screen terms	Description
SLEEP>LOCK	While turning BCM status from low power consumption mode to normal mode (Power supply position is “LOCK”.)
SLEEP>OFF	While turning BCM status from low power consumption mode to normal mode (Power supply position is “OFF”.)
LOCK>ACC	While turning power supply position from “LOCK” to “ACC”
ACC>ON	While turning power supply position from “ACC” to “IGN”
RUN>ACC	While turning power supply position from “RUN” to “ACC” (Vehicle is stopping and selector lever is except P position.)
CRANK>RUN	While turning power supply position from “CRANKING” to “RUN” (From cranking up the engine to run it)
RUN>URGENT	While turning power supply position from “RUN“ to “ACC” (Emergency stop operation)
ACC>OFF	While turning power supply position from “ACC” to “OFF”
OFF>LOCK	While turning power supply position from “OFF” to “LOCK”
OFF>ACC	While turning power supply position from “OFF” to “ACC”
ON>CRANK	While turning power supply position from “IGN” to “CRANKING”
OFF>SLEEP	While turning BCM status from normal mode (Power supply position is “OFF”.) to low power consumption mode
LOCK>SLEEP	While turning BCM status from normal mode (Power supply position is “LOCK”.) to low power consumption mode
LOCK	Power supply position is “LOCK” (Ignition switch OFF with steering is locked.)
OFF	Power supply position is “OFF” (Ignition switch OFF with steering is unlocked.)
ACC	Power supply position is “ACC” (Ignition switch ACC)
ON	Power supply position is “IGN” (Ignition switch ON with engine stopped)
ENGINE RUN	Power supply position is “RUN” (Ignition switch ON with engine running)
CRANKING	Power supply position is “CRANKING” (At engine cranking)

IGN Counter
IGN counter indicates the number of times that ignition switch is turned ON after DTC is detected.
- The number is 0 when a malfunction is detected now.
- The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON.
- The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

INTELLIGENT KEY

INTELLIGENT KEY : CONSULT-III Function (BCM - INTELLIGENT KEY)

INFOID:0000000003839091

BCM CONSULT-III FUNCTION

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
WORK SUPPORT	Changes the setting for each system function.
SELF-DIAG RESULTS	Displays the diagnosis results judged by BCM.
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.

WORK SUPPORT

Monitor item	Description
REMO CONT ID CONFIR	It can be checked whether Intelligent Key ID code is registered or not in this mode.
AUTO LOCK SET	Auto door lock time can be changed in this mode. • MODE 1: 1 minute • MODE 2: 5 minutes • MODE 3: 30 seconds • MODE 4: 2 minutes
LOCK/UNLOCK BY I-KEY	Door lock/unlock function by door request switch (driver side and passenger side) mode can be changed to operate (WITH) or not operate (WITHOUT) in this mode.
ENGINE START BY I-KEY	Engine start function mode can be changed to operate (WITH) or not operate (WITHOUT) in this mode.
TRUNK/GLASS HATCH OPEN	Buzzer reminder function mode by trunk lid opener request switch can be changed to operate (WITH) or not operate (WITHOUT) in this mode.
PANIC ALARM SET	**NOTE:** This item is displayed, but cannot be used.
PW DOWN SET	**NOTE:** This item is displayed, but cannot be used.
TRUNK OPEN DELAY	Trunk button pressing on Intelligent Key button can be selected as per the following in this mode. • MODE 1: Press and hold • MODE 2: Press twice • MODE 3: Press and hold, or press twice
LO-BATT OF KEY FOB WARN	Intelligent Key low battery warning mode can be changed to operate (WITH) or not operate (WITHOUT) in this mode.
ANTI KEY LOCK IN FUNCTI	Key reminder function mode can be changed to operate (WITH) or not operate (WITHOUT) in this mode.
HAZARD ANSWER BACK	Hazard reminder function mode can be selected from the following in this mode. • LOCK ONLY: Door lock operation only • UNLOCK ONLY: Door unlock operation only • LOCK/UNLOCK: Lock/unlock operation • OFF: Non-operational
ANS BACK I-KEY LOCK	Buzzer reminder function (lock operation) mode by door request switch (driver side and passenger side) can be selected from the following is this mode. • Horn chirp: Sound horn • Buzzer: Sound Intelligent Key warning buzzer • OFF: Non-operational
ANS BACK I-KEY UNLOCK	Buzzer reminder function (unlock operation) mode by door request switch can be changed to operate (ON) or not operate (OFF) in this mode.
SHORT CRANKING OUTPUT	Starter motor can operate during the times below. • 70 msec • 100 msec • 200 msec
INSIDE ANT DIAGNOSIS	This function allows inside key antenna self-diagnosis.
HORN WITH KEYLESS LOCK	Horn reminder function mode by Intelligent Key button can be changed to operate (ON) or not operate (OFF) in this mode.

SELF-DIAG RESULT

Refer to PCS-105, "DTC Index".

DATA MONITOR

Monitor Item	Condition
REQ SW -DR	Indicates [ON/OFF] condition of door request switch (driver side).
REQ SW -AS	Indicates [ON/OFF] condition of door request switch (passenger side).
REQ SW -BD/TR	Indicates [ON/OFF] condition of trunk lid opener request switch.
PUSH SW	Indicates [ON/OFF] condition of push-button ignition switch.
IGN RLY2 -F/B	Indicates [ON/OFF] condition of ignition relay 2.

Monitor Item	Condition
CLUCH SW	**NOTE:** This item is displayed, but cannot be monitored.
BRAKE SW 1	Indicates [ON/OFF] condition of brake switch.
DETE/CANCL SW	Indicates [ON/OFF] condition of the P position.
SFT PN/N SW	Indicates [ON/OFF] condition of the P or N position.
S/L -LOCK	Indicates [ON/OFF] condition of steering lock unit (LOCK).
S/L -UNLOCK	Indicates [ON/OFF] condition of steering lock unit (UNLOCK).
S/L RELAY -F/B	Indicates [ON/OFF] condition of steering lock relay.
UNLK SEN -DR	Indicates [ON/OFF] condition of driver door UNLOCK status.
PUSH SW -IPDM	Indicates [ON/OFF] condition of push-button ignition switch.
IGN RLY1 -F/B	Indicates [ON/OFF] condition of ignition relay 1.
DETE SW -IPDM	Indicates [ON/OFF] condition of the P position.
SFT PN -IPDM	Indicates [ON/OFF] condition of the P or N position.
SFT P -MET	Indicates [ON/OFF] condition of the P position.
SFT N -MET	Indicates [ON/OFF] condition of the N position.
ENGINE STATE	Indicates [STOP/STALL/CRANK/RUN] condition of engine states.
S/L LOCK-IPDM	Indicates [ON/OFF] condition of steering lock unit (LOCK).
S/L UNLK-IPDM	Indicates [ON/OFF] condition of steering lock unit (UNLOCK).
S/L RELAY-REQ	Indicates [ON/OFF] condition of steering lock relay.
VEH SPEED 1	Displays the vehicle speed signal received from combination meter by numerical value [Km/h].
VEH SPEED 2	Displays the vehicle speed signal received from ABS, VDC or CVT by numerical value [Km/h].
DOOR STAT-DR	Indicates [LOCK/READY/UNLK] condition of driver side door status.
DOOR STAT-AS	Indicates [LOCK/READY/UNLK] condition of passenger side door status.
ID OK FLAG	Indicates [SET/RESET] condition of key ID.
PRMT ENG STRT	Indicates [SET/RESET] condition of engine start possibility.
PRMT RKE STRT	**NOTE:** This item is displayed, but cannot be monitored.
KEY SW -SLOT	Indicates [ON/OFF] condition of key slot.
TRNK/HAT MNTR	Indicates [ON/OFF] condition of trunk lid.
RKE-LOCK	Indicates [ON/OFF] condition of LOCK signal from Intelligent Key.
RKE-UNLOCK	Indicates [ON/OFF] condition of UNLOCK signal from Intelligent Key.
RKE-TR/BD	Indicates [ON/OFF] condition of TRUNK OPEN signal from Intelligent Key.
RKE-PANIC	**NOTE:** This item is displayed, but cannot be monitored.
RKE-P/W OPEN	**NOTE:** This item is displayed, but cannot be monitored.
RKE-MODE CHG	Indicates [ON/OFF] condition of MODE CHANGE signal from Intelligent Key.
RKE OPE COUN1	When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical values start changing.
RKE OPE COUN2	**NOTE:** This item is displayed, but cannot be monitored.

ACTIVE TEST

Test item	Description
BATTERY SAVER	This test is able to check interior room lamp operation. The interior room lamp will be activated when “ON” on CONSULT-III screen is touched.
PW REMOTO DOWN SET	**NOTE:** This item is displayed, but cannot be used.
OUTSIDE BUZZER	This test is able to check Intelligent Key warning buzzer operation. The Intelligent Key warning buzzer will be activated when “ON” on CONSULT-III screen is touched.
INSIDE BUZZER	This test is able to check warning chime in combination meter operation. • Take away warning chime sounds when “TAKE OUT” on CONSULT-III screen is touched. • Key warning chime sounds when “KEY” on CONSULT-III screen is touched. • P position warning chime sounds when “KNOB” on CONSULT-III screen is touched.
INDICATOR	This test is able to check warning lamp operation. • “KEY” Warning lamp illuminates when “RED ON” on CONSULT-III screen is touched. • “KEY” Warning lamp blinks when “RED IND” on CONSULT-III screen is touched.
INT LAMP	This test is able to check interior room lamp operation. The interior room lamp will be activated when “ON” on CONSULT-III screen is touched.
LCD	This test is able to check meter display information • Engine start information displays when “BP N” on CONSULT-III screen is touched. • Engine start information displays when “BP I” on CONSULT-III screen is touched. • Key ID warning displays when “ID NG” on CONSULT-III screen is touched. • Steering lock information displays when “ROTAT” on CONSULT-III screen is touched. • P position warning displays when “SFT P” on CONSULT-III screen is touched. • Intelligent Key insert information displays when “INSRT” on CONSULT-III screen is touched. • Intelligent Key low battery warning displays when “BATT” on CONSULT-III screen is touched. • Take away warning displays when “OUTKEY” on CONSULT-III screen is touched. • OFF position warning displays when “LK WN” on CONSULT-III screen is touched.
TRUNK/GLASS HATCH	This test is able to check trunk lid opener actuator open operation. This actuator opens when “OPEN” on CONSULT-III screen is touched.
FLASHER	This test is able to check security hazard lamp operation. The hazard lamps will be activated when “RH” or “LH”on CONSULT-III screen is touched.
HORN	This test is able to check horn operation. The horn will be activated when “ON” on CONSULT-III screen is touched.
P RANGE	This test is able to check control device power supply Control device power is supplied when “ON” on CONSULT-III screen is touched.
ENGINE SW ILLUMI	This test is able to check push-ignition switch illumination operation. Push-ignition switch illumination illuminates when “ON” on CONSULT-III screen is touched.
LOCK INDICATOR	This test is able to check LOCK indicator in push-ignition switch operation. LOCK indicator in push-ignition switch illuminates when “ON” on CONSULT-III screen is touched.
ACC INDICATOR	This test is able to check ACC indicator in push-ignition switch operation. ACC indicator in push-ignition switch illuminates when “ON” on CONSULT-III screen is touched.
IGNITION ON IND	This test is able to check ON indicator in push-ignition switch operation. ON indicator in push-ignition switch illuminates when “ON” on CONSULT-III screen is touched.
KEY SLOT ILLUMI	This test is able to check key slot illumination operation. Key slot illumination illuminates when “ON” on CONSULT-III screen is touched.
TRUNK/BACK DOOR	This test is able to check trunk lid opener actuator open operation. This actuator opens when “OPEN” on CONSULT-III screen is touched.

COMPONENT DIAGNOSIS

U1000 CAN COMM CIRCUIT

BCM

BCM : Description

INFOID:0000000003805725

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H-line, CAN L-line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.
CAN Communication Signal Chart. Refer to LAN-22, "CAN Communication Signal Chart".

BCM : DTC Logic

INFOID:0000000003805726

DTC DETECTION LOGIC

DTC	CONSULT-III display description	DTC Detection Condition	Possible cause
U1000	CAN COMM CIRCUIT	When BCM cannot communicate CAN communication signal continuously for 2 seconds or more.	CAN communication system

BCM : Diagnosis Procedure

INFOID:0000000003805727

1. PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check “Self Diagnostic Result”.

Is “U1000: CAN COMM CIRCUIT” displayed?

YES >> Refer to LAN-14, "Trouble Diagnosis Flow Chart".
NO >> Refer to GI-35, "Intermittent Incident".

IPDM E/R

IPDM E/R : Description

INFOID:0000000003805728

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.
CAN Communication Signal Chart. Refer to LAN-22, "CAN Communication Signal Chart".

IPDM E/R : DTC Logic

INFOID:0000000003805729

DTC DETECTION LOGIC

DTC	CONSULT-III display description	DTC Detection Condition	Possible cause
U1000	CAN COMM CIRCUIT	When IPDM E/R cannot communicate CAN communication signal continuously for 2 seconds or more	CAN communication system

IPDM E/R : Diagnosis Procedure

INFOID:0000000003805730

1. PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check “Self Diagnostic Result” of IPDM E/R.

Is “CAN COMM CIRCUIT” displayed?

YES >> Refer to LAN-14, "Trouble Diagnosis Flow Chart".
NO >> Refer to GI-35, "Intermittent Incident".

U1010 CONTROL UNIT (CAN)

BCM

BCM : DTC Logic

INFOID:0000000003805731

DTC DETECTION LOGIC

DTC	CONSULT-III display description	DTC Detection Condition	Possible cause
U1010	CONTROL UNIT (CAN)	BCM detected internal CAN communication circuit malfunction.	BCM

BCM : Diagnosis Procedure

INFOID:0000000003805732

1.REPLACE BCM

When DTC “U1010: CONTROL UNIT (CAN)” is detected, replace BCM.

>> Replace BCM. Refer to BCS-78, "Exploded View".

BCM : Special Repair Requirement

INFOID:0000000003805733

1.REQUIRED WORK WHEN REPLACING BCM

Initialize control unit. Refer to CONSULT-III operation manual NATS-IVIS/NVIS.

>> Work end.

B2553 IGNITION RELAY

Description

INFOID:0000000003805734

BCM turns ON the following relays to ignition power supply to each ECU when the ignition switch is turned ON.
- Ignition relay (inserted into fuse box)
- Ignition relay (built into IPDM E/R)
- Blower relay

BCM checks any ignition relay ON request for consistency with the actual ignition relay operation status.

DTC Logic

INFOID:0000000003805735

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2553	IGNITION RELAY	BCM detects a difference of signal for 2 seconds or more between the following information. • Ignition relay (fuse block) ON/OFF operation • Ignition relay (fuse block) feedback.	• Harness or connectors (ignition relay feedback circuit is open or short) • Fuse • Ignition relay • IPDM E/R

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions (start the engine), and wait for at least 2 seconds.
- Selector lever is in the P or N position.
- Do not depress brake pedal.
2. Check “Self diagnostic result” with CONSULT-III.

Is DTC detected?

YES >> Go to PCS-49, "Diagnosis Procedure".
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000003805736

1. CHECK DTC WITH IPDM E/R

Check “Self diagnostic result” with CONSULT-III. Refer to PCS-120, "DTC Index".

Is the inspection result normal?

YES >> GO TO 2.
NO >> Repair or replace malfunctioning parts.

2. CHECK FUSE

Check that the following fuse is not fusing.

Signal name	Connection position	Fuse No.	Capacity
Ignition power supply	FUSE BLOCK (J/B)	3	10A

Is the fuse fusing?

YES >> Repair the applicable circuit. And then replace the fuse.
NO >> GO TO 3.

3. CHECK IGNITION RELAY FEEDBACK INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

(+)		(–)	Condition		Voltage (V) (Approx.)
BCM					
Connector	Terminal				
M123	123	Ground	Ignition switch	OFF	0
				ON	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.
NO >> GO TO 4.

4. CHECK IGNITION RELAY FEEDBACK CIRCUIT

1. Disconnect fuse block (J/B) connector.
2. Check continuity between BCM harness connector and fuse block (J/B) harness connector.

BCM		FUSE BLOCK (J/B)		Continuity
Connector	Terminal	Connector	Terminal	
M123	123	M1	2A	Existed

3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M123	123		Not existed

Is the inspection result normal?

YES >> GO TO 5.
NO >> Repair or replace harness.

5. CHECK INTERMITTENT INCIDENT

Refer to GI-35, "Intermittent Incident".

>> INSPECTION END

B260A IGNITION RELAY

Description

INFOID:0000000003805737

When the ignition switch is turned ON, the BCM activates the following relays to provide power supply to each ECU.
- Ignition relay (inserted into fuse block)
- Ignition relay (built into IPDM E/R)
- Blower fan motor relay

BCM checks any ignition relay ON request for consistency with the actual ignition relay operation status.

DTC Logic

INFOID:0000000003805738

DTC DETECTION LOGIC

NOTE:
- If DTC B260A is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to PCS-46, "BCM : DTC Logic".
- If DTC B260A is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to PCS-48, "BCM : DTC Logic".
- If DTC B260A is displayed with DTC B261A, first perform the trouble diagnosis for DTC B261A. Refer to PCS-60, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B260A	IGNITION RELAY	BCM detects a difference of signal for 2 seconds or more between the following information. • Ignition relay (IPDM E/R) operation request • Ignition relay feedback from IPDM E/R (CAN).	• Harness or connectors (Ignition relay operation circuit is open or shorted.) • IPDM E/R

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions, and wait for at least 2 seconds.
- Selector lever is in the P or N position.
- Do not depress brake pedal.
2. Check “Self diagnostic result” with CONSULT-III.

Is DTC detected?

YES >> Go to PCS-51, "Diagnosis Procedure".
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000003805739

1. CHECK DTC WITH IPDM E/R

Check “Self diagnostic result” with CONSULT-III. Refer to PCS-120, "DTC Index".

Is DTC detected?

YES >> Repair or replace the malfunctioning parts.
NO >> GO TO 2.

2. CHECK IGNITION RELAY INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

(+)		(–)	Voltage (V) (Approx.)
BCM			
Connector	Terminal		
M121	47	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 4.
NO >> GO TO 3.

3. CHECK IGNITION RELAY (IPDM E/R) CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and BCM harness connector.

IPDM E/R		BCM		Continuity
Connector	Terminal	Connector	Terminal	
E10	27	M121	47	Existed

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E10	27		Not existed

Is the inspection result normal?

YES >> GO TO 4.
NO >> Repair or replace harness.

4. CHECK INTERMITTENT INCIDENT

Refer to GI-35, "Intermittent Incident".

>> INSPECTION END

B2614 ACC RELAY

Description

INFOID:0000000003805740

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.
BCM checks the power supply position internally.

DTC Logic

INFOID:0000000003805741

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2614	ACC relay	An immediate operation of ACC relay is requested by BCM, but there is no response for more than 1 second.	• Harness or connectors (ACC relay circuit is open or short-ed) • ACC relay

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn the power supply position to ACC under the following conditions, and wait for at least 1 second.
- Selector lever is in the P or N position.
- Do not depress brake pedal.
2. Check “Self diagnostic result” with CONSULT-III.

Is DTC detected?

YES >> Go to PCS-53, "Diagnosis Procedure".
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000003805742

1. CHECK ACCESSORY RELAY POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect accessory relay.
3. Check voltage between accessory relay harness connector and ground.

(+) Accessory relay Terminal	(–)	Condition		Voltage (V) (Approx.)
1	Ground	Ignition switch	OFF	0
			ACC	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK ACCESSORY RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between accessory relay harness connector and BCM harness connector.

Accessory relay	BCM		Continuity
Terminal	Connector	Terminal	
1	M122	95	Existed

4. Check continuity between accessory relay harness connector and ground.

Accessory relay	Ground	Continuity
Terminal		
1		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to PCS-126, "Removal and Installation".
NO >> Repair or replace harness.

3. CHECK ACCESSORY RELAY GROUND CIRCUIT

Check continuity between accessory relay harness connector and ground.

Accessory relay	Ground	Continuity
Terminal		
2		Existed

Is the inspection result normal?

YES >> GO TO 4.
NO >> Repair accessory relay ground circuit.

4. CHECK ACCESSORY RELAY

Refer to PCS-54, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 5.
NO >> Replace accessory relay.

5. CHECK INTERMITTENT INCIDENT

Refer to GI-35, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000003805743

1. CHECK ACCESSORY RELAY

1. Turn ignition switch OFF.
2. Remove accessory relay.
3. Check the continuity between accessory relay terminals.

Terminals	Condition	Continuity
3 and 5	12 V direct current supply between terminals 1 and 2	Existed
	No current supply	Not existed

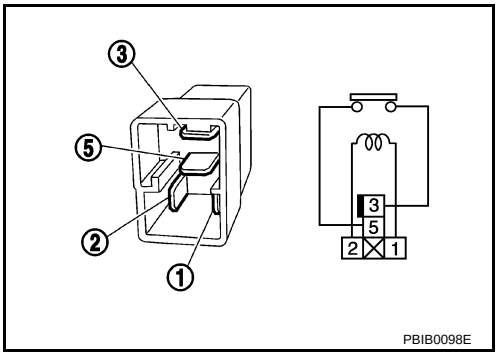

Is the inspection result normal?

YES >> INSPECTION END
NO >> Replace accessory relay.

B2615 BLOWER RELAY CIRCUIT

Description

INFOID:0000000003805744

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.
BCM checks the power supply position internally.

DTC Logic

INFOID:0000000003805745

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2615	Blower relay circuit	BCM detects a difference of signal for 1 second or more between the following information. • Blower relay ON/OFF request • Blower relay feedback	• Harness or connectors (Blower relay circuit is open or shorted) • Blower relay

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions, and wait for at least 1 second.
- Selector lever is in the P or N position
- Do not depress brake pedal
2. Check “Self diagnostic result” with CONSULT-III.

Is DTC detected?

YES >> Go to PCS-55, "Diagnosis Procedure".
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000003805746

1. CHECK BLOWER RELAY POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect blower relay.
3. Check voltage between blower relay harness connector and ground.

(+) Blower relay Terminal	(–)	Condition		Voltage (V) (Approx.)
1	Ground	Ignition switch	OFF or ACC	0
			ON	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK BLOWER RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between blower relay harness connector and BCM harness connector.

Blower relay	BCM		Continuity
Terminal	Connector	Terminal	
1	M122	102	Existed

4. Check continuity between blower relay harness connector and ground.

Blower relay	Ground	Continuity
Terminal		
1		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to BCS-78, "Removal and Installation".
NO >> Repair or replace harness.

3. CHECK BLOWER RELAY GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between blower relay harness connector and ground.

Blower relay	Ground	Continuity
Terminal		
2		Existed

Is the inspection result normal?

YES >> GO TO 4.
NO >> Repair blower relay ground circuit.

4. CHECK BLOWER RELAY

Refer to PCS-56, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 5.
NO >> Replace blower relay.

5. CHECK INTERMITTENT INCIDENT

Refer to GI-35, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000003805747

1. CHECK BLOWER RELAY

1. Turn ignition switch OFF.
2. Remove blower relay.
3. Check the continuity between blower relay terminals.

Terminals	Condition	Continuity
3 and 5	12 V direct current supply between terminals 1 and 2	Existed
	No current supply	Not existed

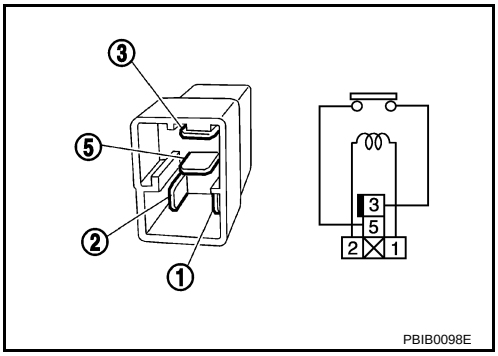

Is the inspection result normal?

YES >> INSPECTION END
NO >> Replace blower relay

B2616 IGNITION RELAY CIRCUIT

Description

INFOID:0000000003805748

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.
BCM checks the power supply position internally.

DTC Logic

INFOID:0000000003805749

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2616	Ignition relay circuit	An immediate operation of ignition relay (fuse block) is requested by BCM, but there is no response for more than 1 second	• Harness or connectors (Ignition relay circuit is open or shorted) • Ignition relay (Fuse block)

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions, and wait for at least 1 second.
- Selector lever is in the P or N position.
- Do not depress brake pedal.
2. Check “Self diagnostic result” with CONSULT-III.

Is DTC detected?

YES >> Go to PCS-57, "Diagnosis Procedure".
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000003805750

1. CHECK IGNITION RELAY POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect ignition relay.
3. Check voltage between ignition relay harness connector and ground.

(+) Ignition relay Terminal	(–)	Condition		Voltage (V) (Approx.)
1	Ground	Ignition switch	OFF or ACC	0
			ON	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK IGNITION RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between ignition relay harness connector and BCM harness connector.

Ignition relay	BCM		Continuity
Terminal	Connector	Terminal	
1	M122	82	Existed

4. Check continuity between ignition relay harness connector and ground.

Ignition relay	Ground	Continuity
Terminal		
1		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to BCS-78, "Removal and Installation".
NO >> Repair or replace harness.

3. CHECK IGNITION RELAY GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between ignition relay harness connector and ground.

Ignition relay	Ground	Continuity
Terminal		
2		Existed

Is the inspection result normal?

YES >> GO TO 4.
NO >> Repair ignition relay ground circuit.

4. CHECK IGNITION RELAY

Refer to PCS-58, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 5.
NO >> Replace ignition relay.

5. CHECK INTERMITTENT INCIDENT

Refer to GI-35, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000003805751

1. CHECK IGNITION RELAY

1. Turn ignition switch OFF.
2. Remove ignition relay.
3. Check the continuity between ignition relay terminals.

Terminals	Condition	Continuity
3 and 5	12 V direct current supply between terminals 1 and 2	Existed
	No current supply	Not existed

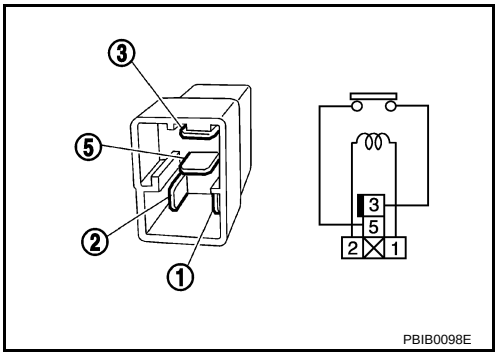

Is the inspection result normal?

YES >> INSPECTION END
NO >> Replace Ignition relay

B2618 BCM

Description

INFOID:0000000003805752

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.
BCM checks the power supply position internally.

DTC Logic

INFOID:0000000003805753

DTC DETECTION LOGIC

NOTE:
- If DTC B2618 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to PCS-46, "BCM : DTC Logic".
- If DTC B2618 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to PCS-48, "BCM : DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2618	BCM	An immediate operation of ignition relay (IPDM E/R) is requested by BCM, but there is no response for more than 1 second	BCM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions, and wait for at least 1 second.
- Selector lever is in the P or N position.
- Do not depress brake pedal.
2. Check “Self diagnostic result” with CONSULT-III.

Is DTC detected?

YES >> Go to PCS-59, "Diagnosis Procedure".
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000003805754

1. INSPECTION START

1. Turn ignition switch ON.
2. Select “Self diagnostic result” mode with CONSULT-III.
3. Touch “ERASE”.
4. **Perform DTC Confirmation Procedure.**
   See PCS-59, "DTC Logic".

Is the 1st trip DTC B2618 displayed again?

YES >> Replace BCM. Refer to BCS-78, "Removal and Installation"
NO >> INSPECTION END

B261A PUSH-BUTTON IGNITION SWITCH

Description

INFOID:0000000003805755

BCM transmits the change in the power supply position with the push-button ignition switch to IPDM E/R via the CAN communication line. IPDM E/R transmits the power supply position status via CAN communication line to BCM.

DTC Logic

INFOID:0000000003805756

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B261A	PUSH-BUTTON IGNITION SWITCH	BCM detects a difference of signal for 1 second or more between the following information. • Power supply position by push-button ignition switch • Power supply position from IPDM E/R (CAN)	• Harness or connectors (Push-button ignition switch circuit is open or shorted.)

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Press the push-button ignition switch under the following conditions, and wait for at least 1 second.
- Selector lever is in the P or N position.
- Do not depress brake pedal.
2. Check “Self diagnostic result” with CONSULT-III.

Is DTC detected?

YES >> Go to PCS-60, "Diagnosis Procedure".
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000003805757

1. CHECK PUSH-BUTTON IGNITION SWITCH OPERATION

Press push-button ignition switch and check if it turns ON.

Does ignition switch turn ON?

YES >> GO TO 2.
NO >> GO TO 4.

2. CHECK IGNITION SWITCH OUTPUT SIGNAL (IPDM E/R)

1. Disconnect push-button ignition switch connector and BCM connector.
2. Check voltage between IPDM E/R harness connector and ground.

(+)		(–)	Voltage (V) (Approx.)
IPDM E/R			
Connector	Terminal		
E10	28	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.
NO >> Replace IPDM E/R. Refer to PCS-34, "Removal and Installation".

3. CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT (IPDM E/R)

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and push-button ignition switch harness connector.

IPDM E/R		Push-button ignition switch		Continuity
Connector	Terminal	Connector	Terminal	
E10	28	M101	4	Existed

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E10	28		Not existed

Is the inspection result normal?

YES >> GO TO 6.
NO >> Repair or replace harness.

4. CHECK IGNITION SWITCH OUTPUT SIGNAL (BCM)

1. Connect BCM connector.
2. Check voltage between BCM harness connector and ground.

(+)		(–)	Voltage (V) (Approx.)
BCM			
Connector	Terminal		
M122	89	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.
NO >> Replace BCM. Refer to BCS-78, "Removal and Installation".

5. CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT (BCM)

1. Disconnect BCM connector and IPDM E/R connector.
2. Check continuity between BCM harness connector and push-button ignition switch harness connector.

BCM		Push-button ignition switch		Continuity
Connector	Terminal	Connector	Terminal	
M122	89	M101	4	Existed

3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M122	89		Not existed

Is the inspection result normal?

YES >> GO TO 6.
NO >> Repair or replace harness.

6. CHECK INTERMITTENT INCIDENT

Refer to GI-35, "Intermittent Incident".

>> INSPECTION END

POWER SUPPLY AND GROUND CIRCUIT

BCM

BCM : Diagnosis Procedure

INFOID:0000000003805758

1. CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

Signal name	Fuse and fusible link No.
Battery power supply	I
	10

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.
NO >> GO TO 2.

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

(+)		(–)	Voltage (V) (Approx.)
BCM			
Connector	Terminal		
M118	1	Ground	Battery voltage
M119	11		
M123	116		

Is the measurement value normal?

YES >> GO TO 3.
NO >> Repair or replace harness.

3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M119	13		Existed

Does continuity exist?

YES >> INSPECTION END
NO >> Repair or replace harness.

PUSH-BUTTON IGNITION SWITCH

Description

INFOID:0000000003805759

BCM transmits the change in the power supply position with the push-button ignition switch to IPDM E/R via the CAN communication line. IPDM E/R transmits the power supply position status via CAN communication line to BCM.

Component Function Check

INFOID:0000000003805760

1. CHECK FUNCTION

1. Select “PUSH SW” in “Data Monitor” mode with CONSULT-III.
2. Check the push-button ignition switch signal under the following condition.

Test item	Condition	Status
PUSH SW	Push-button ignition switch is pressed	ON
	Push-button ignition switch is not pressed	OFF

Is the indication normal?

YES >> INSPECTION END
NO >> Go to PCS-63, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000003805761

1. CHECK PUSH-BUTTON IGNITION SWITCH OPERATION

Press push-button ignition switch and check if it turns ON.

Does ignition switch turn ON?

YES >> GO TO 2.
NO >> GO TO 4.

2. CHECK IGNITION SWITCH OUTPUT SIGNAL (IPDM E/R)

1. Turn ignition switch ON.
2. Disconnect push-button ignition switch connector and BCM connector.
3. Check voltage between IPDM E/R harness connector and ground.

(+)		(–)	Voltage (V) (Approx.)
IPDM E/R			
Connector	Terminal		
E10	28	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.
NO >> Replace IPDM E/R. Refer to PCS-34, "Removal and Installation".

3. CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT (IPDM E/R)

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and push-button ignition switch harness connector.

IPDM E/R		Push-button ignition switch		Continuity
Connector	Terminal	Connector	Terminal	
E10	28	M101	4	Existed

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E10	28		Not existed

Is the inspection result normal?

YES >> GO TO 6.
NO >> Repair or replace harness.

4. CHECK IGNITION SWITCH OUTPUT SIGNAL (BCM)

1. Disconnect push-button ignition switch connector and IPDM E/R connector.
2. Check voltage between BCM harness connector and ground.

(+)		(–)	Voltage (V) (Approx.)
BCM			
Connector	Terminal		
M122	89	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.
NO >> Replace BCM. Refer to BCS-78, "Removal and Installation".

5. CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT (BCM)

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector and push-button ignition switch harness connector.

BCM		Push-button ignition switch		Continuity
Connector	Terminal	Connector	Terminal	
M122	89	M101	4	Existed

3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M122	89		Not existed

Is the inspection result normal?

YES >> GO TO 6.
NO >> Repair or replace harness.

6. CHECK INTERMITTENT INCIDENT

Refer to GI-35, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000003805762

1. CHECK PUSH-BUTTON IGNITION SWITCH

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector.
3. Check continuity between push-button ignition switch terminals.

Push-button ignition switch		Condition		Continuity
Terminal				
1	4	Push-button ignition switch	Pressed	Existed
			Not pressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END
NO >> Replace push-button ignition switch. Refer to PCS-127, "Removal and Installation".

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

Description

INFOID:0000000003805763

The switch that changes the power supply position.
BCM maintains the power supply position status.
BCM changes the power supply position with the operation of the push-button ignition switch.

Component Function Check

INFOID:0000000003805764

1. CHECK FUNCTION

Check push-button ignition switch (“LOCK INDICATOR”, “ACC INDICATOR” and “IGNITION ON IND”) in Active Test Mode with CONSULT-III.

Test item		Description	
LOCK INDICATOR ACC INDICATOR IGNITION ON IND	ON	Position indicator	Illuminates
	OFF		Does not illuminate

Is the inspection result normal?

YES >> INSPECTION END
NO >> Refer to PCS-66, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000003805765

1. CHECK PUSH-BUTTON IGNITION SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector.
3. Check voltage between push-button ignition switch harness connector and ground.

(+)		(–)	Voltage (V) (Approx.)
Push-button ignition switch			
Connector	Terminal		
M101	8	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 2.
NO >> Check the following.
- 10A fuse [No.9, located in fuse block (J/B)]
- Harness for open or short between push-button ignition switch and fuse

2. CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector and push-button ignition switch harness connector.

Indicator	BCM		Push-button ignition switch		Continuity
	Connector	Terminal	Connector	Terminal	
LOCK	M123	134	M101	5	Existed
ACC	M119	15		6	
ON	M122	93		7	

3. Check continuity between BCM harness connector and ground.

Indicator	BCM		Ground	Continuity
	Connector	Terminal		
LOCK	M123	134		Not existed
ACC	M119	15		
ON	M122	93		

Is the inspection result normal?

YES >> GO TO 3.
NO >> Repair or replace harness.

3. CHECK PUSH-BUTTON IGNITION SWITCH

Refer to PCS-67, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 4.
NO >> Replace push-button ignition switch. Refer to PCS-127, "Removal and Installation".

4. CHECK INTERMITTENT INCIDENT

Refer to GI-35, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000003805766

1. CHECK PUSH-BUTTON IGNITION SWITCH

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector.
3. Check continuity between push-button ignition switch terminals.

Terminal		Continuity
Push-button ignition switch		
(+)	(-)	
5	8	Not existed
8	5	Existed
6	8	Not existed
8	6	Existed
7	8	Not existed
8	7	Existed

Is the inspection result normal?

YES >> INSPECTION END
NO >> Replace push-button ignition switch. Refer to PCS-127, "Removal and Installation".

POWER DISTRIBUTION SYSTEM

Wiring Diagram - PDS (POWER DISTRIBUTION SYSTEM) -

INFOID:0000000003845532

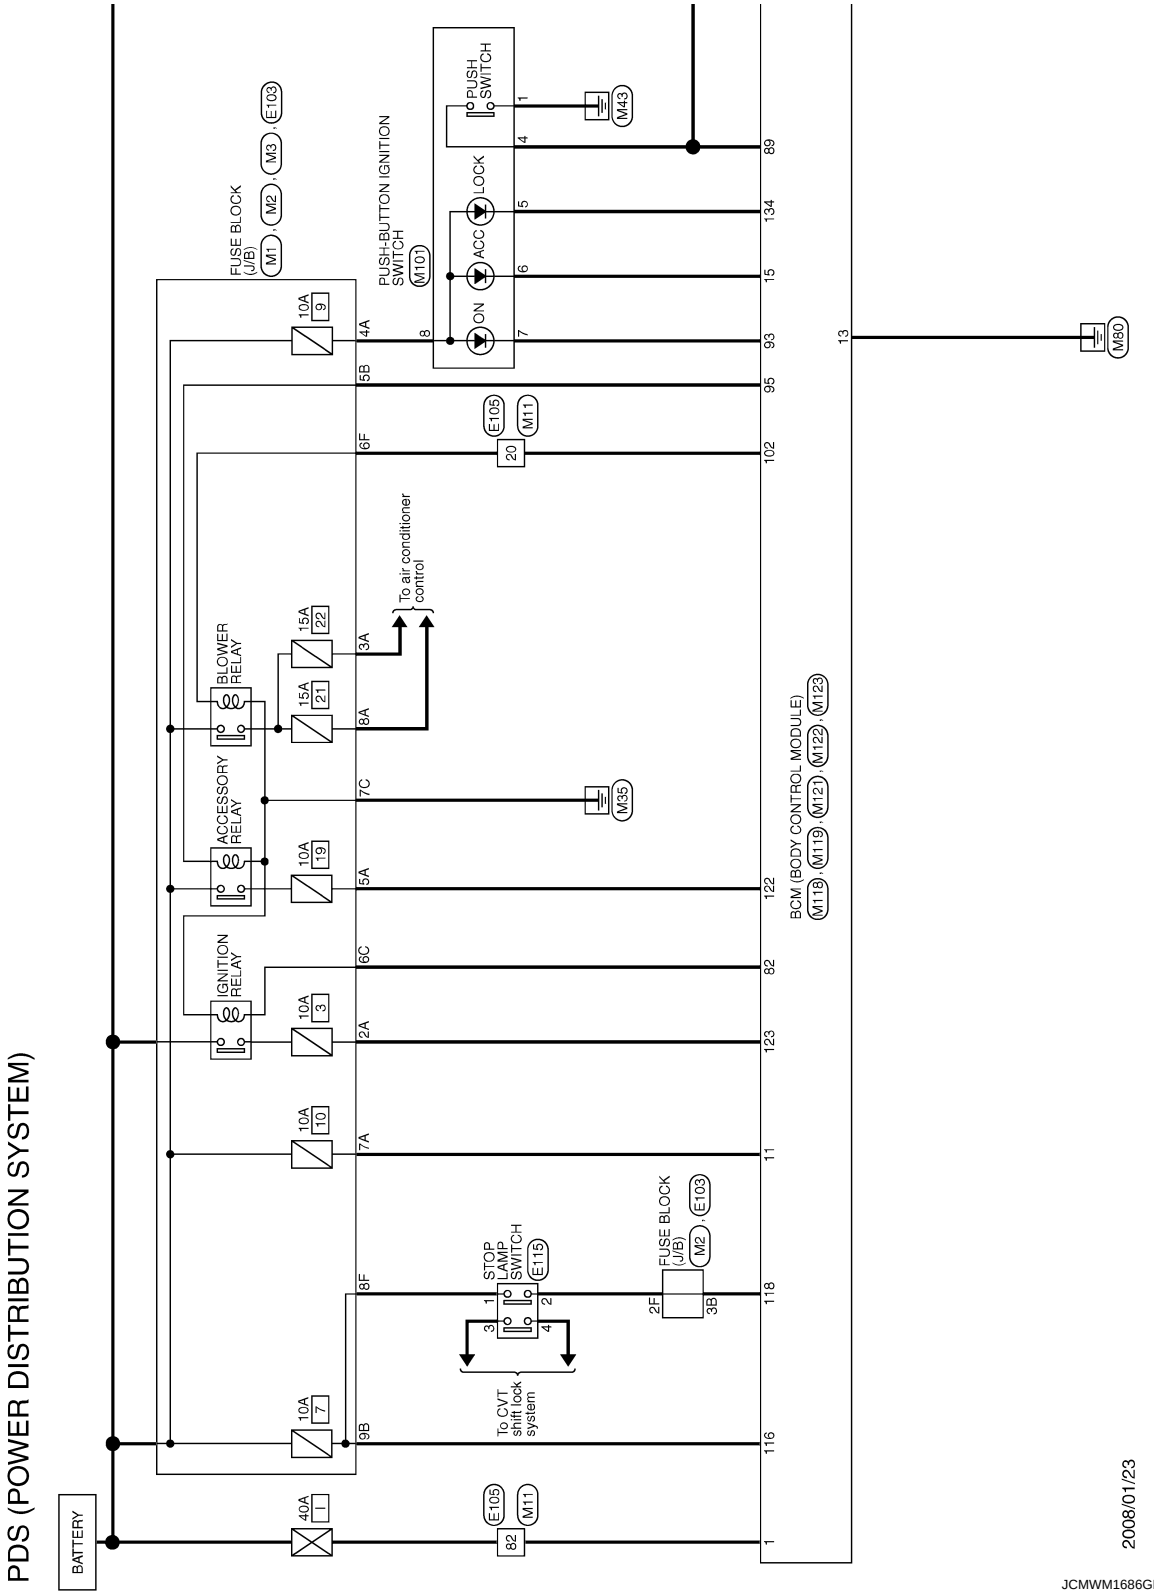

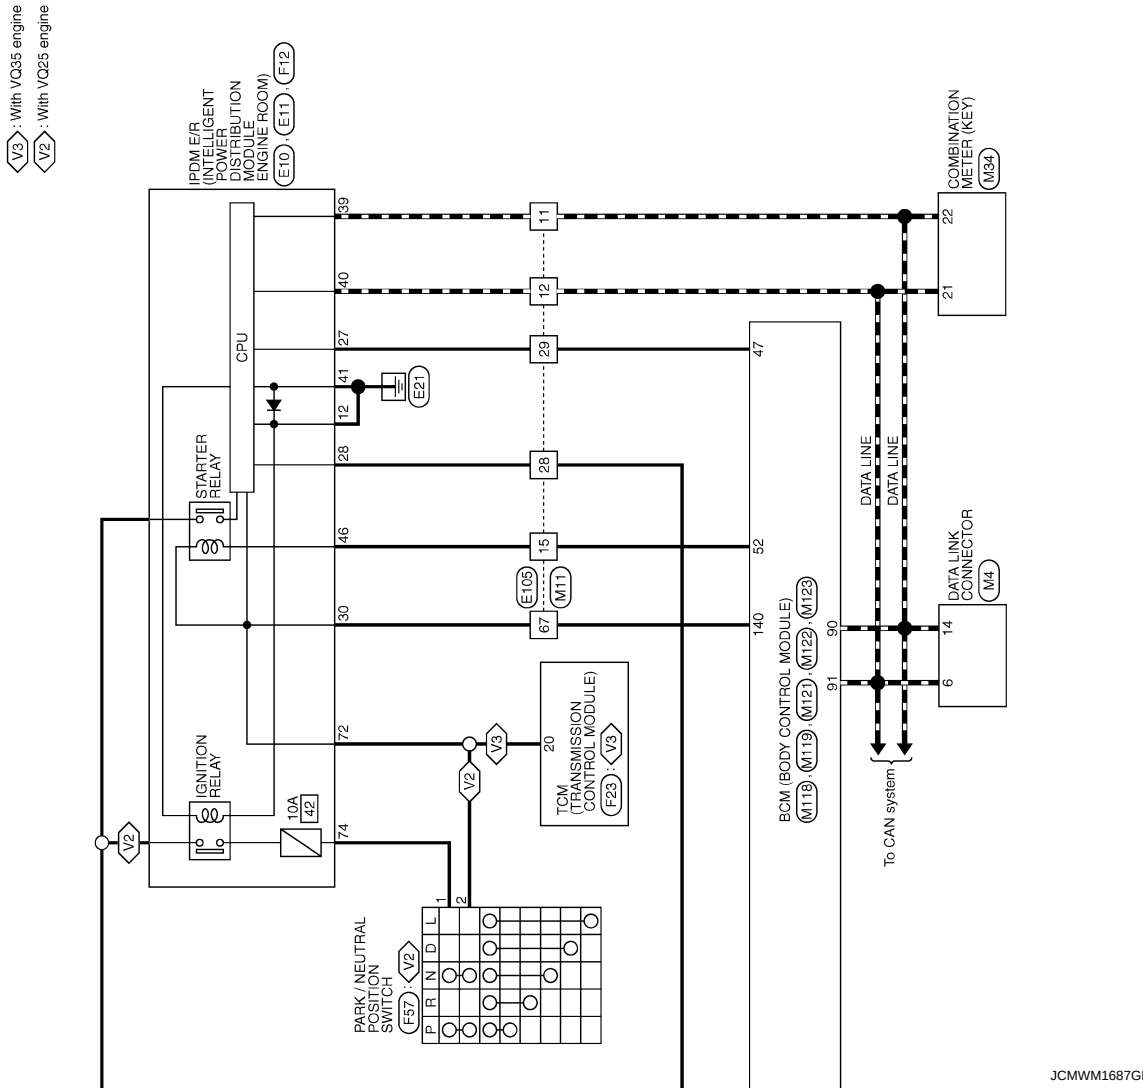
V3 : With VQ35 engine
V2 : With VQ25 engine
IPDM E/R
(INTELLIGENT
POWER
DISTRIBUTION
MODULE
ENGINE ROOM)
E10 , E11 , F12
CPU
STARTER
RELAY
IGNITION
RELAY
10A
42
E21
39
40
27
41
12
28
46
30
72
74
11
12
29
28
15
67
E105
M11
V2
V3
TCM
(TRANSMISSION
CONTROL MODULE)
F23 : V3
20
PARK / NEUTRAL
POSITION
SWITCH
F57 : V2
P R N D L
1
2
47
52
140
BCM (BODY CONTROL MODULE)
M118 , M119 , M121 , M122 , M123
90
91
DATA LINE
DATA LINE
To CAN system
COMBINATION
METER (KEY)
M34
22
21
DATA LINK
CONNECTOR
M4
14
6
JCMWM1687GI

PDS (POWER DISTRIBUTION SYSTEM)

Connector No.	E10
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH20FW-CS12-M4-1V



Terminal No.	Color of Wire	Signal Name [Specification]
12	B/W	–
27	W	–
28	SB	–
30	BR	–

Connector No.	E11
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH08FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
39	P	–
40	L	–
41	B	–
46	BR	–

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS16FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
6F	Y	–
8F	R	–

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH70MW-CS10-M3

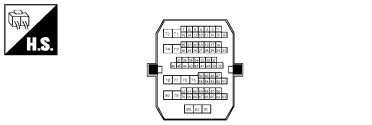

Terminal No.	Color of Wire	Signal Name [Specification]
11	P	–
12	L	–
15	BR	–
20	Y	–
28	SB	–
29	W	–
67	BR	–
82	LG	–

Connector No.	E115
Connector Name	STOP LAMP SWITCH
Connector Type	M04FW-LC

Terminal No.	Color of Wire	Signal Name [Specification]
1	R	–
2	LG	–
3	G	–
4	Y	–

Connector No.	F12
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH20FW-CS12-M4



Terminal No.	Color of Wire	Signal Name [Specification]
72	R/B	–
74	Y	–

Connector No.	F23
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Type	RH40FB-RZ8-L-RH

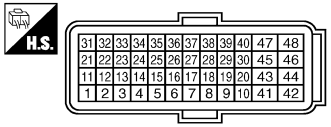

Terminal No.	Color of Wire	Signal Name [Specification]
20	R/B	STARTER RELAY

Connector No.	F57
Connector Name	PARK / NEUTRAL POSITION SWITCH
Connector Type	YDX06FB-HS4



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	–
2	R/B	–

JCMWM1688G

PDS (POWER DISTRIBUTION SYSTEM)

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS06FW-M2



Terminal No.	Color of Wire	Signal Name [Specification]
2A	G/O	–
3A	W/L	–
4A	G/Y	–
5A	V/O	–
7A	Y/R	–
8A	W/L	–

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
5B	L	–
9B	R/W	–

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
6C	R/B	–
7C	B/P	–

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW



Terminal No.	Color of Wire	Signal Name [Specification]
6	L	–
14	P	–

Connector No.	M11
Connector Name	WIRE TO WIRE
Connector Type	TH70FW-CS10-M3

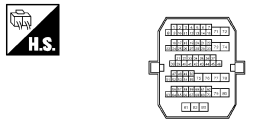

Terminal No.	Color of Wire	Signal Name [Specification]
11	P	–
12	L	–
15	R	–
20	Y	–
28	BR	–
29	BR/W	–
67	R/G	–
82	W/B	–

Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	TH40FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
21	L	CAN-H
22	P	CAN-L

Connector No.	M101
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Type	TK08FBR



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	–
4	BR	–
5	R	–
6	Y	–
7	LG	–
8	G/Y	–

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	W/B	BAT (F/L)

JCMWM1689GI

PDS (POWER DISTRIBUTION SYSTEM)

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
11	Y/R	BAT (FUSE)
13	B	GND
15	Y	ACC IND

Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FGY-NH



Terminal No.	Color of Wire	Signal Name [Specification]
47	BR/W	IGN RELAY IPDM E/R CONT
52	R	IGN RELAY IPDM E/R CONT

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Color of Wire	Signal Name [Specification]
82	R/B	IGN RELAY (F/B) CONT
89	BR	PUSH SW
90	P	CAN-L
91	L	CAN-H
93	Y	ON IND
95	L	ACC RELAY CONT
102	Y	BLOWER FAN MOTOR RELAY CONT

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH

Terminal No.	Color of Wire	Signal Name [Specification]
116	R/W	STOP L LOW SW
118	O/L	STOP L HIGH SW
122	V/R	ACC F/B
123	G/W	IGN F/B
134	R	LOCK LED
140	R/G	SHIFT N/P

JCMWM1690G

ECU DIAGNOSIS

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:0000000003880874

VALUES ON THE DIAGNOSIS TOOL

CONSULT-III MONITOR ITEM

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	Off
	Front wiper switch HI	On
FR WIPER LOW	Other than front wiper switch LO	Off
	Front wiper switch LO	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER INT	Other than front wiper switch INT	Off
	Front wiper switch INT	On
FR WIPER STOP	Front wiper is not in STOP position	Off
	Front wiper is in STOP position	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	Wiper intermittent dial position
TURN SIGNAL R	Other than turn signal switch RH	Off
	Turn signal switch RH	On
TURN SIGNAL L	Other than turn signal switch LH	Off
	Turn signal switch LH	On
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off
	Lighting switch 1ST or 2ND	On
HI BEAM SW	Other than lighting switch HI	Off
	Lighting switch HI	On
HEAD LAMP SW 1	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
HEAD LAMP SW 2	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
AUTO LIGHT SW	Other than lighting switch AUTO	Off
	Lighting switch AUTO	On
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On
RR FOG SW	Rear fog lamp switch OFF	Off
	Rear fog lamp switch ON	On
DOOR SW-DR	Driver door closed	Off
	Driver door opened	On
DOOR SW-AS	Passenger door closed	Off
	Passenger door opened	On
DOOR SW-RR	Rear RH door closed	Off
	Rear RH door opened	On

Monitor Item	Condition	Value/Status
DOOR SW-RL	Rear LH door closed	Off
	Rear LH door opened	On
DOOR SW-BK	**NOTE:** The item is indicated, but not monitored.	Off
CDL LOCK SW	Other than power door lock switch LOCK	Off
	Power door lock switch LOCK	On
CDL UNLOCK SW	Other than power door lock switch UNLOCK	Off
	Power door lock switch UNLOCK	On
KEY CYL LK-SW	**NOTE:** The item is indicated, but not monitored.	Off
KEY CYL UN-SW	**NOTE:** The item is indicated, but not monitored.	Off
KEY CYL SW-TR	**NOTE:** The item is indicated, but not monitored.	Off
HAZARD SW	Hazard switch is OFF	Off
	Hazard switch is ON	On
REAR DEF SW **NOTE:** At model with BOSE audio system this item is indicated, but is not monitored.	Rear window defogger switch is OFF	Off
	Rear window defogger switch is ON	On
TR CANCEL SW	**NOTE:** The item is indicated, but not monitored.	Off
TR/BD OPEN SW	Trunk lid opener switch OFF	Off
	While the trunk lid opener switch is turned ON	On
TRNK/HAT MNTR	Trunk lid closed	Off
	Trunk lid opened	On
RKE-LOCK	LOCK button of the key is not pressed	Off
	LOCK button of the key is pressed	On
RKE-UNLOCK	UNLOCK button of the key is not pressed	Off
	UNLOCK button of the key is pressed	On
RKE-TR/BD	TRUNK OPEN button of the key is not pressed	Off
	TRUNK OPEN button of the key is pressed	On
RKE-PANIC	**NOTE:** The item is indicated, but not monitored.	Off
RKE-P/W OPEN	**NOTE:** The item is indicated, but not monitored.	Off
RKE-MODE CHG	LOCK/UNLOCK button of the key is not pressed and held simultaneously	Off
	LOCK/UNLOCK button of the key is pressed and held simultaneously	On
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5 V
	Dark outside of the vehicle	Close to 0 V
REQ SW -DR	Driver door request switch is not pressed	Off
	Driver door request switch is pressed	On
REQ SW -AS	Passenger door request switch is not pressed	Off
	Passenger door request switch is pressed	On

Monitor Item	Condition	Value/Status
REQ SW -RR	**NOTE:** The item is indicated, but not monitored.	Off
REQ SW -RR	**NOTE:** The item is indicated, but not monitored.	Off
REQ SW -BD/TR	Trunk lid opener request switch is not pressed	Off
	Trunk lid opener request switch is pressed	On
PUSH SW	Push-button ignition switch (push switch) is not pressed	Off
	Push-button ignition switch (push switch) is pressed	On
IGN RLY2 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
CLUCH SW	**NOTE:** The item is indicated, but not monitored.	Off
BRAKE SW 1	The brake pedal is not depressed	On
	The brake pedal is depressed	Off
DETE/CANCL SW	Selector lever in P position	Off
	Selector lever in any position other than P	On
SFT PN/N SW	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On
S/L -LOCK	Steering is locked	Off
	Steering is unlocked	On
S/L -UNLOCK	Steering is unlocked	Off
	Steering is locked	On
S/L RELAY-F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
UNLK SEN -DR	Driver door is unlocked	Off
	Driver door is locked	On
PUSH SW -IPDM	Push-button ignition switch (push-switch) is not pressed	Off
	Push-button ignition switch (push-switch) is pressed	On
IGN RLY1 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
DETE SW -IPDM	Selector lever in P position	Off
	Selector lever in any position other than P	On
SFT PN -IPDM	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On
SFT P -MET	Selector lever in any position other than P	Off
	Selector lever in P position	On
SFT N -MET	Selector lever in any position other than N	Off
	Selector lever in N position	On
ENGINE STATE	Engine stopped	Stop
	While the engine stalls	Stall
	At engine cranking	Crank
	Engine running	Run
S/L LOCK-IPDM	Steering is locked	Off
	Steering is unlocked	On

Monitor Item	Condition	Value/Status
S/L UNLK-IPDM	Steering is unlocked	Off
	Steering is locked	On
S/L RELAY-REQ	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
VEH SPEED 1	While driving	Equivalent to speedometer reading
VEH SPEED 2	While driving	Equivalent to speedometer reading
DOOR STAT-DR	Driver door is locked	LOCK
	Wait with selective UNLOCK operation (5 seconds)	READY
	Driver door is unlocked	UNLOCK
DOOR STAT-AS	Passenger door is locked	LOCK
	Wait with selective UNLOCK operation (5 seconds)	READY
	Passenger door is unlocked	UNLOCK
ID OK FLAG	Ignition switch in ACC or ON position	Reset
	Ignition switch in OFF position	Set
PRMT ENG STRT	The engine start is prohibited	Reset
	The engine start is permitted	Set
PRMT RKE STRT	**NOTE:** The item is indicated, but not monitored.	Reset
KEY SW -SLOT	The key is not inserted into key slot	Off
	The key is inserted into key slot	On
RKE OPE COUN1	During the operation of the key	Operation frequency of the key
RKE OPE COUN2	**NOTE:** The item is indicated, but not monitored.	—
CONFRM ID ALL	The key ID that the key slot receives does not accord with any key ID registered to BCM.	Yet
	The key ID that the key slot receives accords with any key ID registered to BCM.	Done
CONFIRM ID4	The key ID that the key slot receives does not accord with the fourth key ID registered to BCM.	Yet
	The key ID that the key slot receives accords with the fourth key ID registered to BCM.	Done
CONFIRM ID3	The key ID that the key slot receives does not accord with the third key ID registered to BCM.	Yet
	The key ID that the key slot receives accords with the third key ID registered to BCM.	Done
CONFIRM ID2	The key ID that the key slot receives does not accord with the second key ID registered to BCM.	Yet
	The key ID that the key slot receives accords with the second key ID registered to BCM.	Done
CONFIRM ID1	The key ID that the key slot receives does not accord with the first key ID registered to BCM.	Yet
	The key ID that the key slot receives accords with the first key ID registered to BCM.	Done
TP 4	The ID of fourth key is not registered to BCM	Yet
	The ID of fourth key is registered to BCM	Done
TP 3	The ID of third key is not registered to BCM	Yet
	The ID of third key is registered to BCM	Done

Monitor Item	Condition	Value/Status
TP 2	The ID of second key is not registered to BCM	Yet
	The ID of second key is registered to BCM	Done
TP 1	The ID of first key is not registered to BCM	Yet
	The ID of first key is registered to BCM	Done

TERMINAL LAYOUT

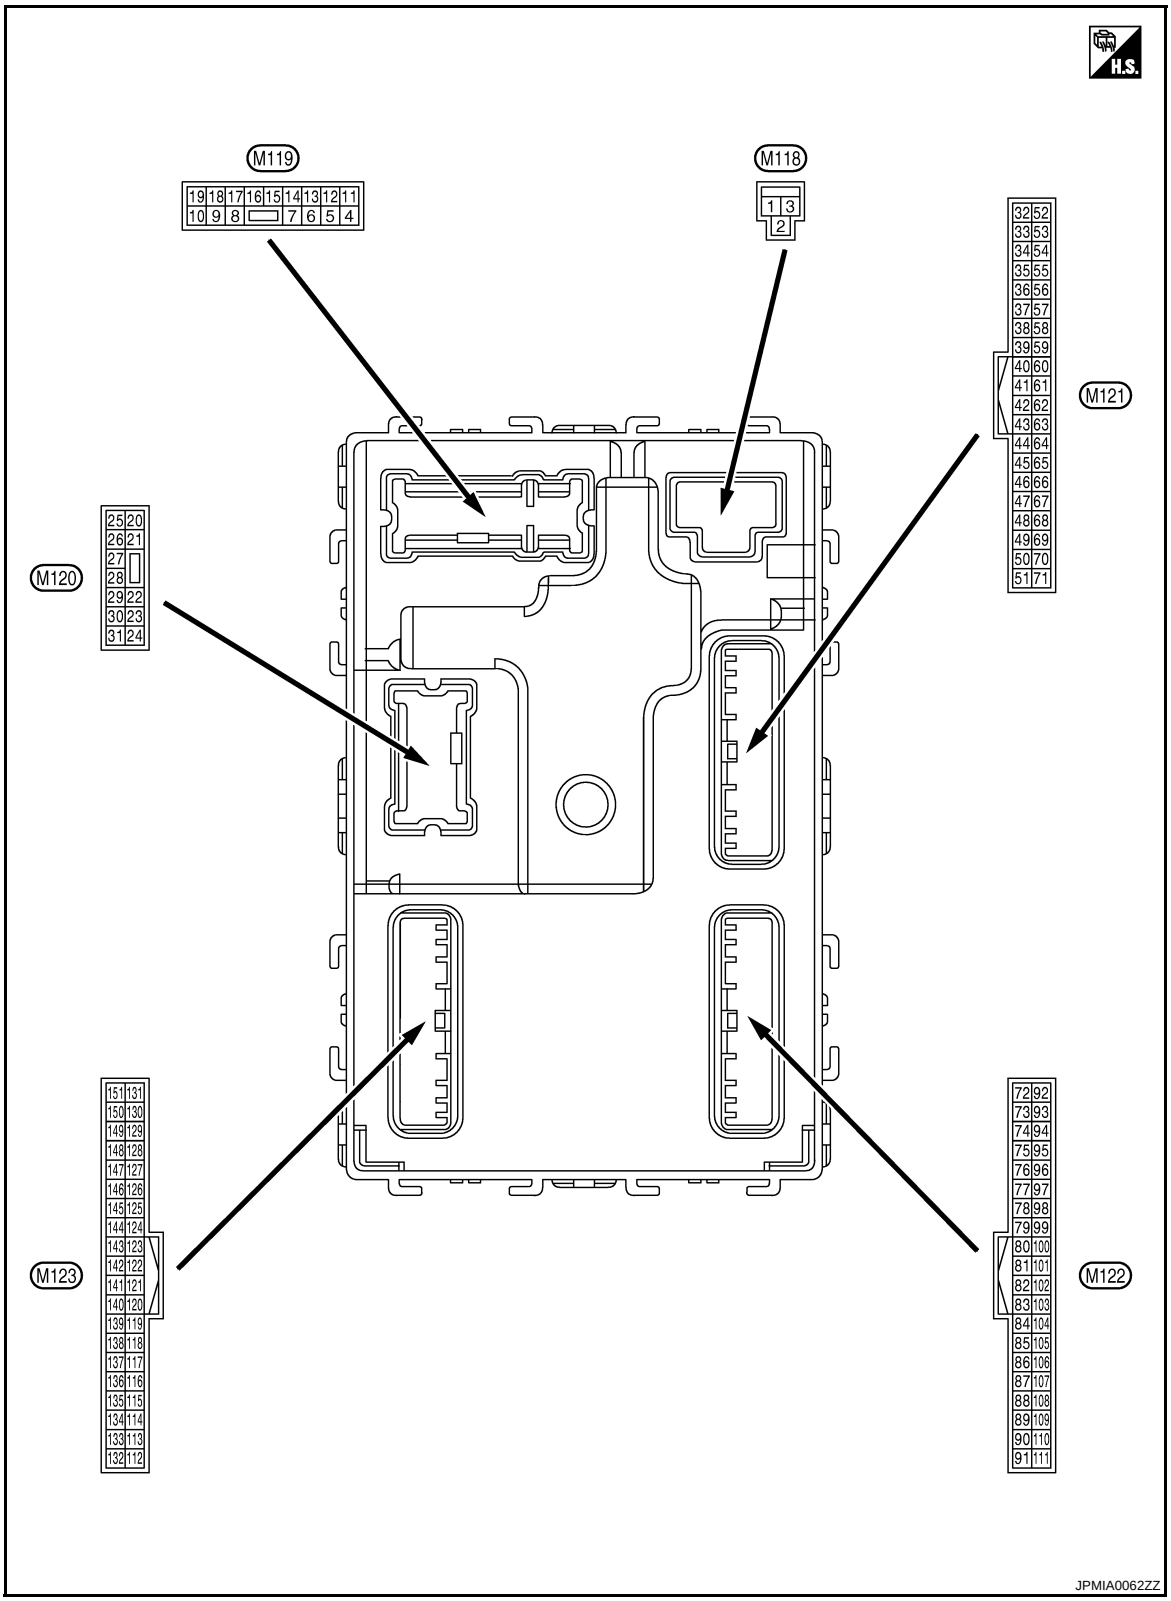

PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
1 (W/B)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (R/Y)	Ground	P/W power supply (BAT)	Output	Ignition switch OFF		Battery voltage
3 (L/W)	Ground	P/W power supply (IGN)	Output	Ignition switch ON		Battery voltage
4 (P/W)	Ground	Interior room lamp power supply	Output	Interior room lamp battery saver is activated. (Cuts the interior room lamp power supply)		0 V
				Interior room lamp battery saver is not activated. (Outputs the interior room lamp power supply)		Battery voltage
5 (G/Y)	Ground	Passenger door UNLOCK	Output	Passenger door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
7 (R/W)	Ground	Step lamp	Output	Step lamp	ON	0 V
					OFF	Battery voltage
8 (V)	Ground	All doors LOCK	Output	All doors	LOCK (Actuator is activated)	Battery voltage
					Other than LOCK (Actuator is not activated)	0 V
9 (G)	Ground	Driver door UNLOCK	Output	Driver door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
10 (G/Y)	Ground	Rear RH door and rear LH door UNLOCK	Output	Rear RH door and rear LH door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
11 (Y/R)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
13 (B)	Ground	Ground	—	Ignition switch ON		0 V
15 (Y)	Ground	ACC indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)	Battery voltage
					ACC or ON	0 V
17 (G/B)	Ground	Turn signal RH (Front and door mirror)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch RH	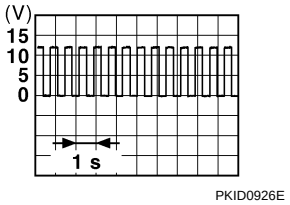 6.5 V

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
18 (G/Y)	Ground	Turn signal LH (Front and door mirror)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch LH	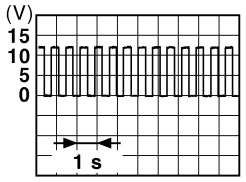 PKID0926E 6.5 V
19 (Y)	Ground	Room lamp timer control	Output	Interior room lamp	OFF	Battery voltage
					ON	0 V
20 (G/B)	Ground	Turn signal RH (Rear)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch RH	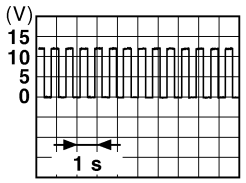 PKID0926E 6.5 V
23 (R)	Ground	Trunk lid opening	Output	Trunk lid	OPEN (Trunk lid opener actuator is activated)	Battery voltage
					Other than OPEN (Trunk lid opener actuator is not activated)	0 V
24 (G)	Ground	Rear fog lamp	Output	Rear fog lamp	OFF	0 V
					ON	Battery voltage
25 (G/Y)	Ground	Turn signal LH (Rear)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch LH	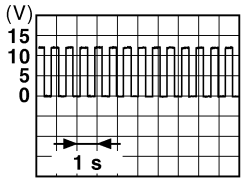 PKID0926E 6.5 V
30 (V/W)	Ground	Trunk room lamp	Output	Trunk room lamp	OFF	0 V
					ON	Battery voltage

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
34 (B)	Ground	Trunk room antenna (-)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compartment	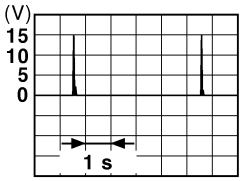 JMKIA0062GB
					When Intelligent Key is not in the passenger compartment	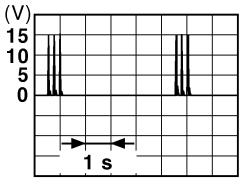 JMKIA0063GB
35 (W)	Ground	Trunk room antenna (+)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compartment	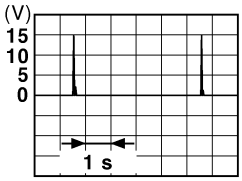 JMKIA0062GB
					When Intelligent Key is not in the passenger compartment	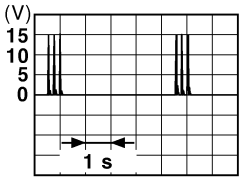 JMKIA0063GB
38 (L/O)	Ground	Rear bumper antenna (-)	Output	When the trunk lid opener request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area	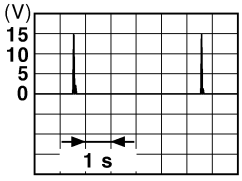 JMKIA0062GB
					When Intelligent Key is not in the antenna detection area	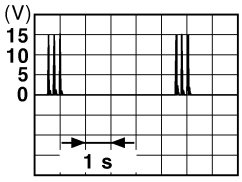 JMKIA0063GB

Terminal No. (Wire color) +	Terminal No. (Wire color) –	Description: Signal name	Description: Input/Output	Condition		Value (Approx.)
39 (BR/W)	Ground	Rear bumper antenna (+)	Output	When the trunk lid opener request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area	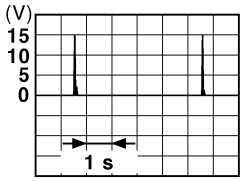 JMKIA0062GB
					When Intelligent Key is not in the antenna detection area	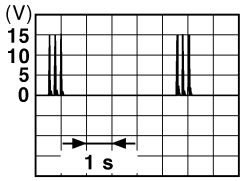 JMKIA0063GB
47 (BR/W)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0 V
50 (W)	Ground	Trunk room lamp switch	Input	Trunk room lamp switch	OFF (When trunk lid closes)	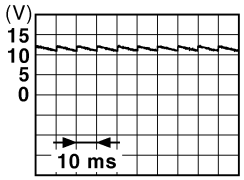 JPMIA0011GB 11.8 V
					ON (When trunk lid opens)	0 V
52 (R)	Ground	Starter relay control	Output	Ignition switch ON	When selector lever is in P or N position	Battery voltage
					When selector lever is not in P or N position	0.3 V
				Ignition switch OFF		0 V
61 (G/R)	Ground	Trunk lid request switch	Input	Trunk lid request switch	ON (Pressed)	0 V
					OFF (Not pressed)	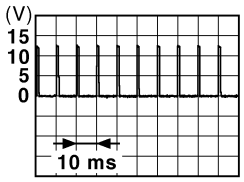 JPMIA0016GB 1.0 V
64 (GR)	Ground	Request switch buzzer	Output	Request switch buzzer	Sounding	0 V
					Not sounding	Battery voltage

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
67 (L/R)	Ground	Trunk lid opener switch	Input	Trunk lid opener switch	Pressed	0 V
					Not pressed	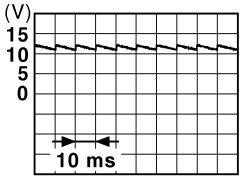 JPMIA0011GB 11.8 V
68 (R/W)	Ground	Rear RH door switch	Input	Rear RH door switch	OFF (When rear RH door closes)	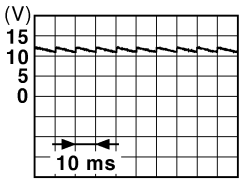 JPMIA0011GB 11.8 V
					ON (When rear RH door opens)	0 V
69 (R/B)	Ground	Rear LH door switch	Input	Rear LH door switch	OFF (When rear LH door closes)	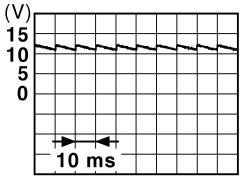 JPMIA0011GB 11.8 V
					ON (When rear LH door opens)	0 V
72 (B/R)	Ground	Room antenna 2 (-) (center console)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart-ment	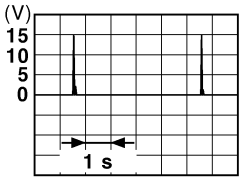 JMKIA0062GB
					When Intelligent Key is not in the passenger compartment	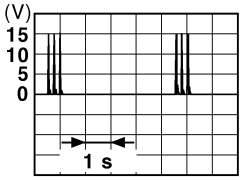 JMKIA0063GB

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
73 (W/R)	Ground	Room antenna 2 (+) (center console)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compartment	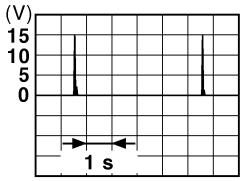 JMKIA0062GB
					When Intelligent Key is not in the passenger compartment	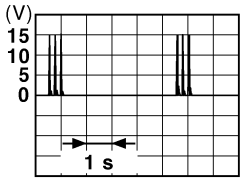 JMKIA0063GB
74 (B/Y)	Ground	Passenger door antenna (-)	Output	When the passenger door request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area	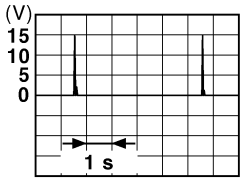 JMKIA0062GB
					When Intelligent Key is not in the antenna detection area	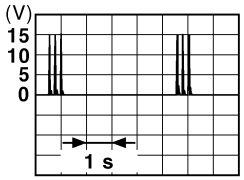 JMKIA0063GB
75 (LG)	Ground	Passenger door antenna (+)	Output	When the passenger door request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area	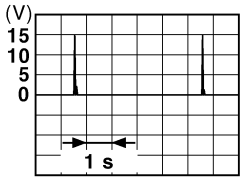 JMKIA0062GB
					When Intelligent Key is not in the antenna detection area	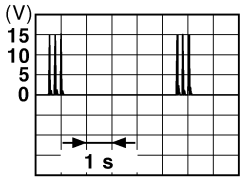 JMKIA0063GB

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
76 (V)	Ground	Driver door antenna (-)	Output	When the driver door request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area	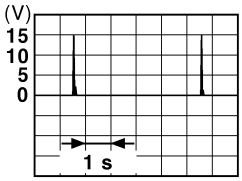 JMKIA0062GB
					When Intelligent Key is not in the antenna detection area	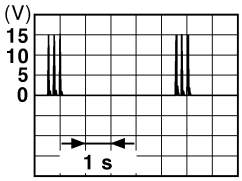 JMKIA0063GB
77 (P)	Ground	Driver door antenna (+)	Output	When the driver door request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area	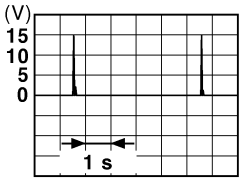 JMKIA0062GB
					When Intelligent Key is not in the antenna detection area	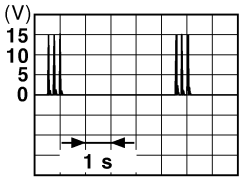 JMKIA0063GB
78 (R)	Ground	Room antenna 1 (-) (instrument panel)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compartment	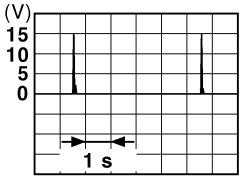 JMKIA0062GB
					When Intelligent Key is not in the passenger compartment	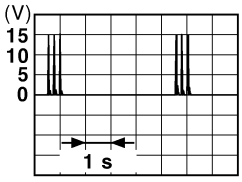 JMKIA0063GB

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
79 (G)	Ground	Room antenna 1 (+) (instrument panel)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compartment	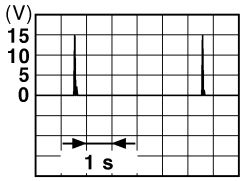 JMKIA0062GB
					When Intelligent Key is not in the passenger compartment	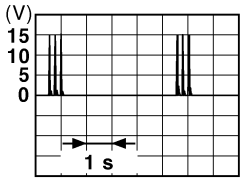 JMKIA0063GB
80 (G/O)	Ground	NATS antenna amp (built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
81 (O)	Ground	NATS antenna amp (built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
82 (R/B)	Ground	Ignition relay [fuse block (J/B)] control	Output	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage
83 (L/O)	Ground	Remote keyless entry receiver communication	Input/ Output	During waiting		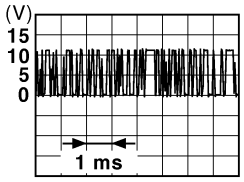 JMKIA0064GB
				When operating either button on the key		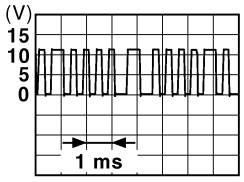 JMKIA0065GB

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
87 (R/Y)	Ground	Combination switch INPUT 5	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)	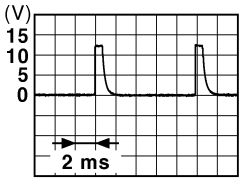 JPMIA0041GB 1.4 V
					Front fog lamp switch ON (Wiper intermittent dial 4)	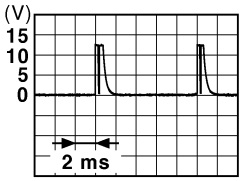 JPMIA0037GB 1.3 V
					Rear fog lamp switch ON (Wiper intermittent dial 4)	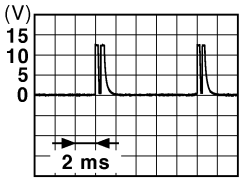 JPMIA0142GB 1.2 V
					Any of the conditions below with all switch OFF • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 6 • Wiper intermittent dial 7	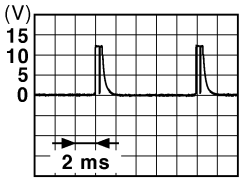 JPMIA0040GB 1.3 V

Terminal No. (Wire color) +	Terminal No. (Wire color) –	Description: Signal name	Description: Input/Output	Condition		Value (Approx.)
88 (R/G)	Ground	Combination switch INPUT 3	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)	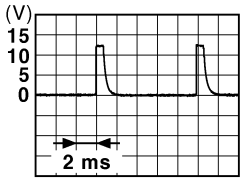 JPMIA0041GB 1.4 V
					Lighting switch HI (Wiper intermittent dial 4)	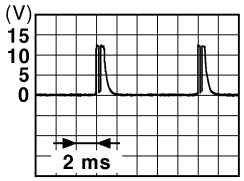 JPMIA0036GB 1.3 V
					Lighting switch 2ND (Wiper intermittent dial 4)	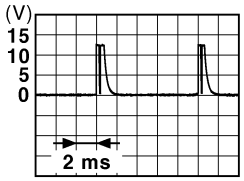 JPMIA0037GB 1.3 V
					Any of the conditions below with all switch OFF • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3	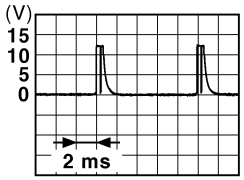 JPMIA0040GB 1.3 V
89 (BR)	Ground	Push-button ignition switch (push switch)	Input	Push-button ignition switch (push switch)	Pressed	0 V
					Not pressed	Battery voltage
90 (P)	Ground	CAN-L	Input/Output	—		—
91 (L)	Ground	CAN-H	Input/Output	—		—
92 (R/L)	Ground	Key slot illumination	Output	Key slot illumination	OFF	Battery voltage
					Blinking	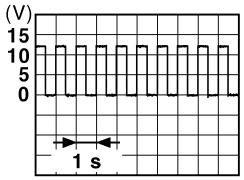 JPMIA0015GB 6.5 V
					ON	0 V

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
93 (Y)	Ground	ON indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)	Battery voltage
					ON or ACC	0 V
95 (L)	Ground	ACC relay control	Output	Ignition switch	OFF	0 V
					ACC or ON	Battery voltage
96 (Y/R)	Ground	Control device (detention switch) power supply	Output	—		Battery voltage
97 (L/O)	Ground	Steering lock condition No. 1	Input	Steering lock	LOCK status	0 V
					UNLOCK status	Battery voltage
98 (G/R)	Ground	Steering lock condition No. 2	Input	Steering lock	LOCK status	Battery voltage
					UNLOCK status	0 V
99 (G/B)	Ground	Selector lever P position switch	Input	Selector lever	P position	0 V
					Any position other than P	Battery voltage
100 (P/L)	Ground	Passenger door request switch	Input	Passenger door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	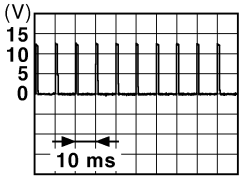 JPMIA0016GB 1.0 V
101 (B/W)	Ground	Driver door request switch	Input	Driver door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	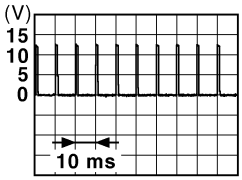 JPMIA0016GB 1.0 V
102 (Y)	Ground	Blower fan motor relay control	Output	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage
103 (L/R)	Ground	Remote keyless entry receiver power supply	Output	Ignition switch OFF		Battery voltage
106 (G/Y)	Ground	Steering wheel lock unit power supply	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0 V

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
107 (R/W)	Ground	Combination switch INPUT 1	Input	Combination switch (Wiper intermittent dial 4)	All switch OFF	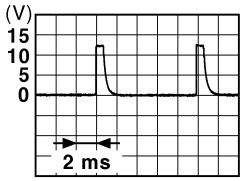 JPMIA0041GB 1.4 V
					Turn signal switch LH	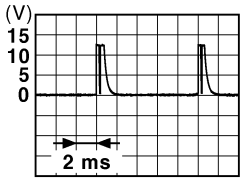 JPMIA0037GB 1.3 V
					Turn signal switch RH	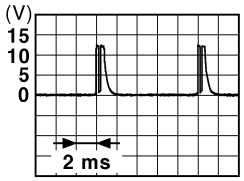 JPMIA0036GB 1.3 V
					Front wiper switch LO	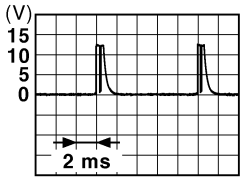 JPMIA0038GB 1.3 V
					Front washer switch ON	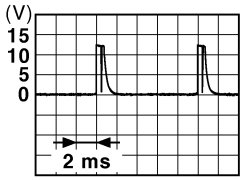 JPMIA0039GB 1.3 V

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
108 (P/B)	Ground	Combination switch INPUT 4	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)	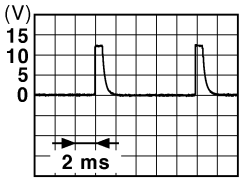 JPMIA0041GB 1.4 V
					Lighting switch AUTO (Wiper intermittent dial 4)	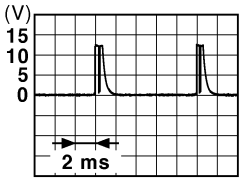 JPMIA0038GB 1.3 V
					Lighting switch 1ST (Wiper intermittent dial 4)	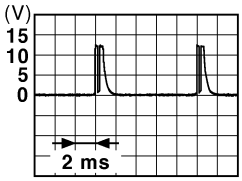 JPMIA0036GB 1.3 V
					Any of the conditions below with all switch OFF • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6	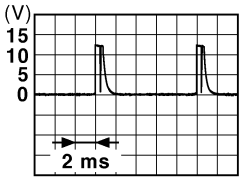 JPMIA0039GB 1.3 V

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
109 (R/B)	Ground	Combination switch INPUT 2	Input	Combination switch (Wiper intermittent dial 4)	All switch OFF	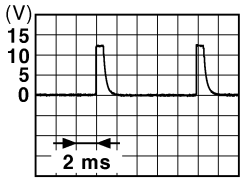 JPMIA0041GB 1.4 V
					Lighting switch PASS	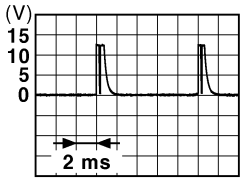 JPMIA0037GB 1.3 V
					Lighting switch 2ND	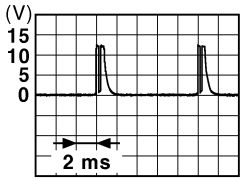 JPMIA0036GB 1.3 V
					Front wiper switch INT	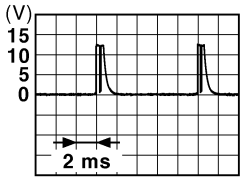 JPMIA0038GB 1.3 V
					Front wiper switch HI	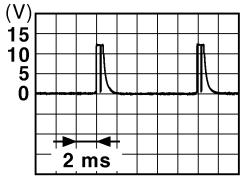 JPMIA0040GB 1.3 V
110 (G/O)	Ground	Hazard switch	Input	Hazard switch	ON	0 V
					OFF	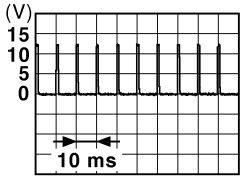 JPMIA0012GB 1.1 V

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
111 (L/Y)	Ground	Steering lock unit communication	Input/ Output	Steering lock	LOCK status	Battery voltage
					LOCK or UNLOCK	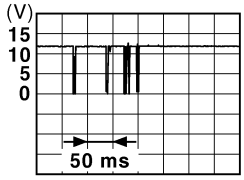 JMKIA0066GB
					For 15 seconds after UN-LOCK	Battery voltage
					15 seconds or later after UNLOCK	0 V
113 (P/B)	Ground	Optical sensor	Input	Ignition switch ON	When bright outside of the vehicle	Close to 5 V
					When dark outside of the vehicle	Close to 0 V
115 (L)	Ground	Shock sensor	Input	Ignition switch	OFF	0 V
					ACC	5.0 V
					ON	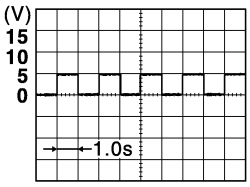 JPMIA1034GB 2.5 V
116 (R/W)	Ground	Fuse check (Stop lamp switch)	Input	—		Battery voltage
118 (O/L)	Ground	Stop lamp switch	Input	Stop lamp switch	OFF (Brake pedal is not depressed)	0 V
					ON (Brake pedal is de-pressed)	Battery voltage
119 (G/W)	Ground	Front door lock as-sembly driver side (unlock sensor)	Input	Driver door	LOCK status (unlock sen-sor switch OFF)	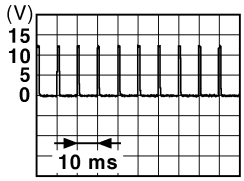 JPMIA0012GB 1.1 V
					UNLOCK status (unlock sensor switch ON)	0 V
121 (Y)	Ground	Key slot switch	Input	When the key is inserted into key slot		Battery voltage
				When the key is not inserted into key slot		0 V
122 (V/R)	Ground	ACC feedback	Input	Ignition switch	OFF	0 V
					ACC or ON	Battery voltage
123 (G/W)	Ground	IGN feedback	Input	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
124 (R/B)	Ground	Passenger door switch	Input	Passenger door switch	OFF (When passenger door closes)	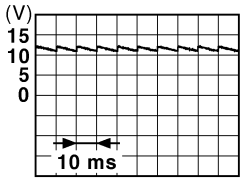 JPMIA0011GB 11.8 V
					ON (When passenger door opens)	0 V
128 (GR)	Ground	Door lock and unlock switch LOCK	Input	Door lock and unlock switch [power window main switch or front power window switch (passenger side)]	NEUTRAL position	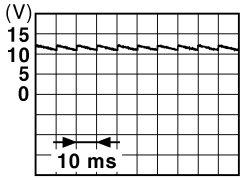 JPMIA0011GB 11.8 V
					LOCK position	0 V
130* (GR/W)	Ground	Rear window defogger switch	Input	Ignition switch ON	Rear window defogger switch OFF	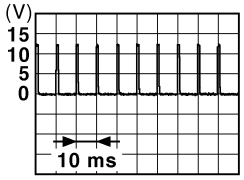 JPMIA0012GB 1.1 V
					Rear window defogger switch ON	0 V
131 (GR/R)	Ground	Door lock and unlock switch UNLOCK	Input	Door lock and unlock switch [power window main switch or front power window switch (passenger side)]	NEUTRAL position	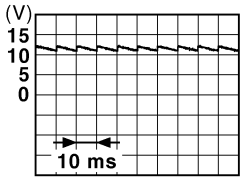 JPMIA0011GB 11.8 V
					UNLOCK position	0 V
133 (W)	Ground	Push-button ignition switch illumination	Output	Push-button ignition switch illumination	ON	9.5 V
					OFF	0 V
134 (R)	Ground	LOCK indicator lamp	Output	LOCK indicator lamp	OFF	Battery voltage
					ON	0 V
137 (P)	Ground	Receiver and sensor ground	Input	Ignition switch ON		0 V
138 (V/W)	Ground	Receiver and sensor power supply output	Output	Ignition switch	OFF	0 V
					ACC or ON	5.0 V
140 (R/G)	Ground	Selector lever P/N position	Input	Selector lever	P or N position	Battery voltage
					Except P and N positions	0 V

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
141 (L/O)	Ground	Security indicator	Output	Security indicator	ON	0 V
					Blinking	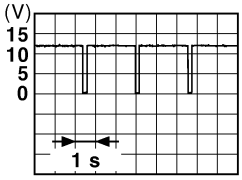 JPMIA0014GB 11.3 V
					OFF	Battery voltage
142 (LG/B)	Ground	Combination switch OUTPUT 5	Output	Combination switch (Wiper intermittent dial 4)	All switch OFF	0 V
					Lighting switch 1ST	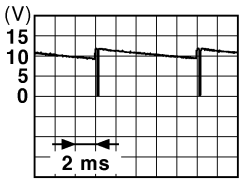 JPMIA0031GB 10.7 V
					Lighting switch HI	
					Lighting switch 2ND	
					Turn signal switch RH	
143 (L/W)	Ground	Combination switch OUTPUT 1	Output	Combination switch	All switch OFF (Wiper intermittent dial 4)	0 V
					Front wiper switch HI (Wiper intermittent dial 4)	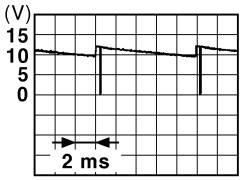 JPMIA0032GB 10.7 V
					Any of the conditions below with all switch OFF • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 • Wiper intermittent dial 6 • Wiper intermittent dial 7	
144 (G/B)	Ground	Combination switch OUTPUT 2	Output	Combination switch	All switch OFF (Wiper intermittent dial 4)	0 V
					Front washer switch ON (Wiper intermittent dial 4)	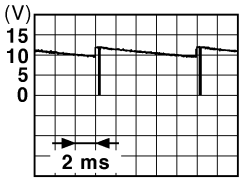 JPMIA0033GB 10.7 V
					Any of the conditions below with all switch OFF • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6	

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
145 (LG/R)	Ground	Combination switch OUTPUT 3	Output	Combination switch (Wiper intermittent dial 4)	All switch OFF	0 V
					Front wiper switch INT	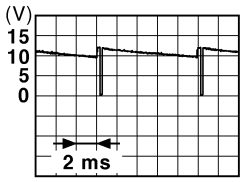 JPMIA0034GB 10.7 V
					Front wiper switch LO	
					Lighting switch AUTO	
					Rear fog lamp switch ON	
146 (G/Y)	Ground	Combination switch OUTPUT 4	Output	Combination switch (Wiper intermittent dial 4)	All switch OFF	0 V
					Front fog lamp switch ON	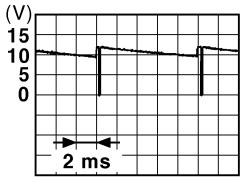 JPMIA0035GB 10.7 V
					Lighting switch 2ND	
					Lighting switch PASS	
					Turn signal switch LH	
150 (SB)	Ground	Driver door switch	Input	Driver door switch	OFF (When driver door closes)	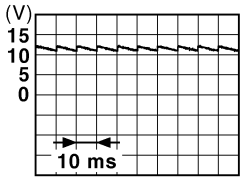 JPMIA0011GB 11.8 V
					ON (When driver door opens)	0 V
151 (G/R)	Ground	Rear window defogger relay	Output	Rear window defogger	Active	0 V
					Not activated	Battery voltage

NOTE:

*: Without BOSE audio system

Wiring Diagram - BCM -

INFOID:0000000003880875

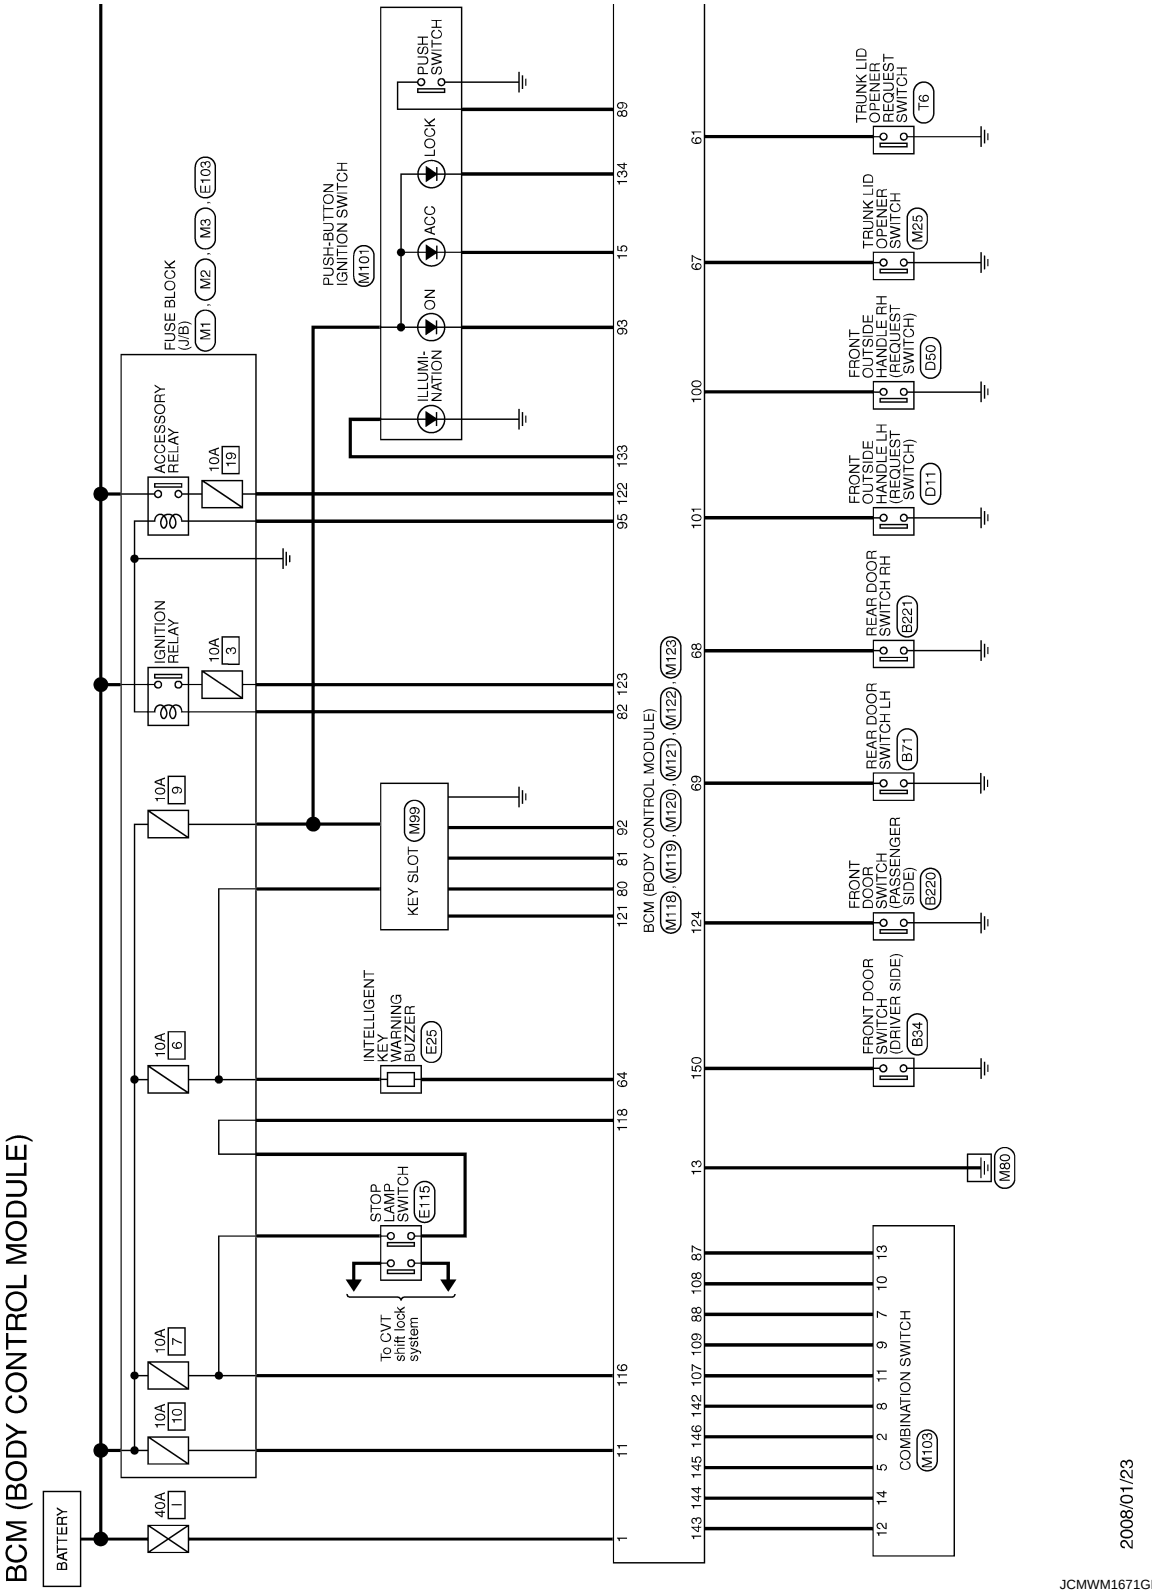

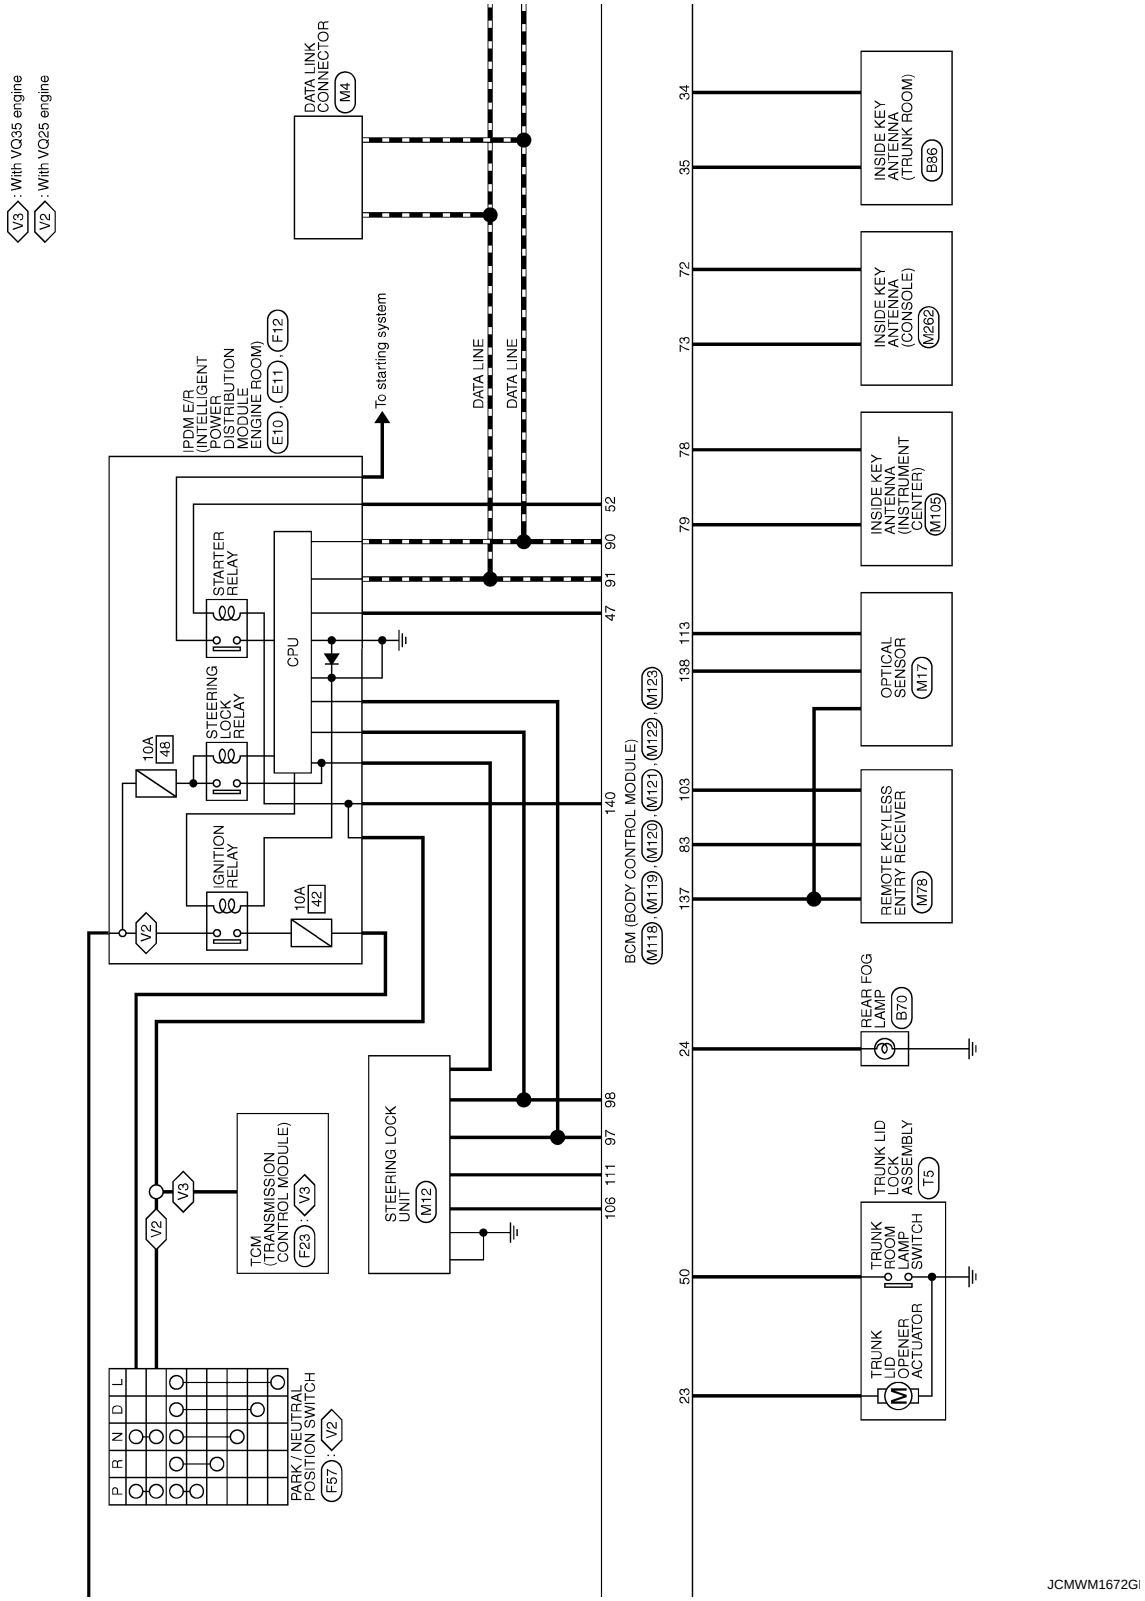
V3 : With VQ35 engine
V2 : With VQ25 engine
DATA LINK CONNECTOR
M4
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
E10, E11, F12
To starting system
DATA LINE
DATA LINE
STARTER RELAY
STEERING LOCK RELAY
CPU
10A
46
IGNITION RELAY
10A
42
V2
V3
V2
TCM (TRANSMISSION CONTROL MODULE)
F23, V3
STEERING LOCK UNIT
M12
PARK/ NEUTRAL POSITION SWITCH
F57, V2
P R N D L
52
90
91
47
140
98
97
111
106
BCM (BODY CONTROL MODULE)
M118, M119, M120, M121, M122, M123
34
35
72
73
78
79
113
138
103
83
137
24
50
23
INSIDE KEY ANTENNA (TRUNK ROOM)
B86
INSIDE KEY ANTENNA (CONSOLE)
M262
INSIDE KEY ANTENNA (INSTRUMENT CENTER)
M105
OPTICAL SENSOR
M17
REMOTE KEYLESS ENTRY RECEIVER
M78
REAR FOG LAMP
B70
TRUNK LID LOCK ASSEMBLY
T5
TRUNK ROOM LAMP SWITCH
TRUNK LID OPENER ACTUATOR
JCMWM1672GI

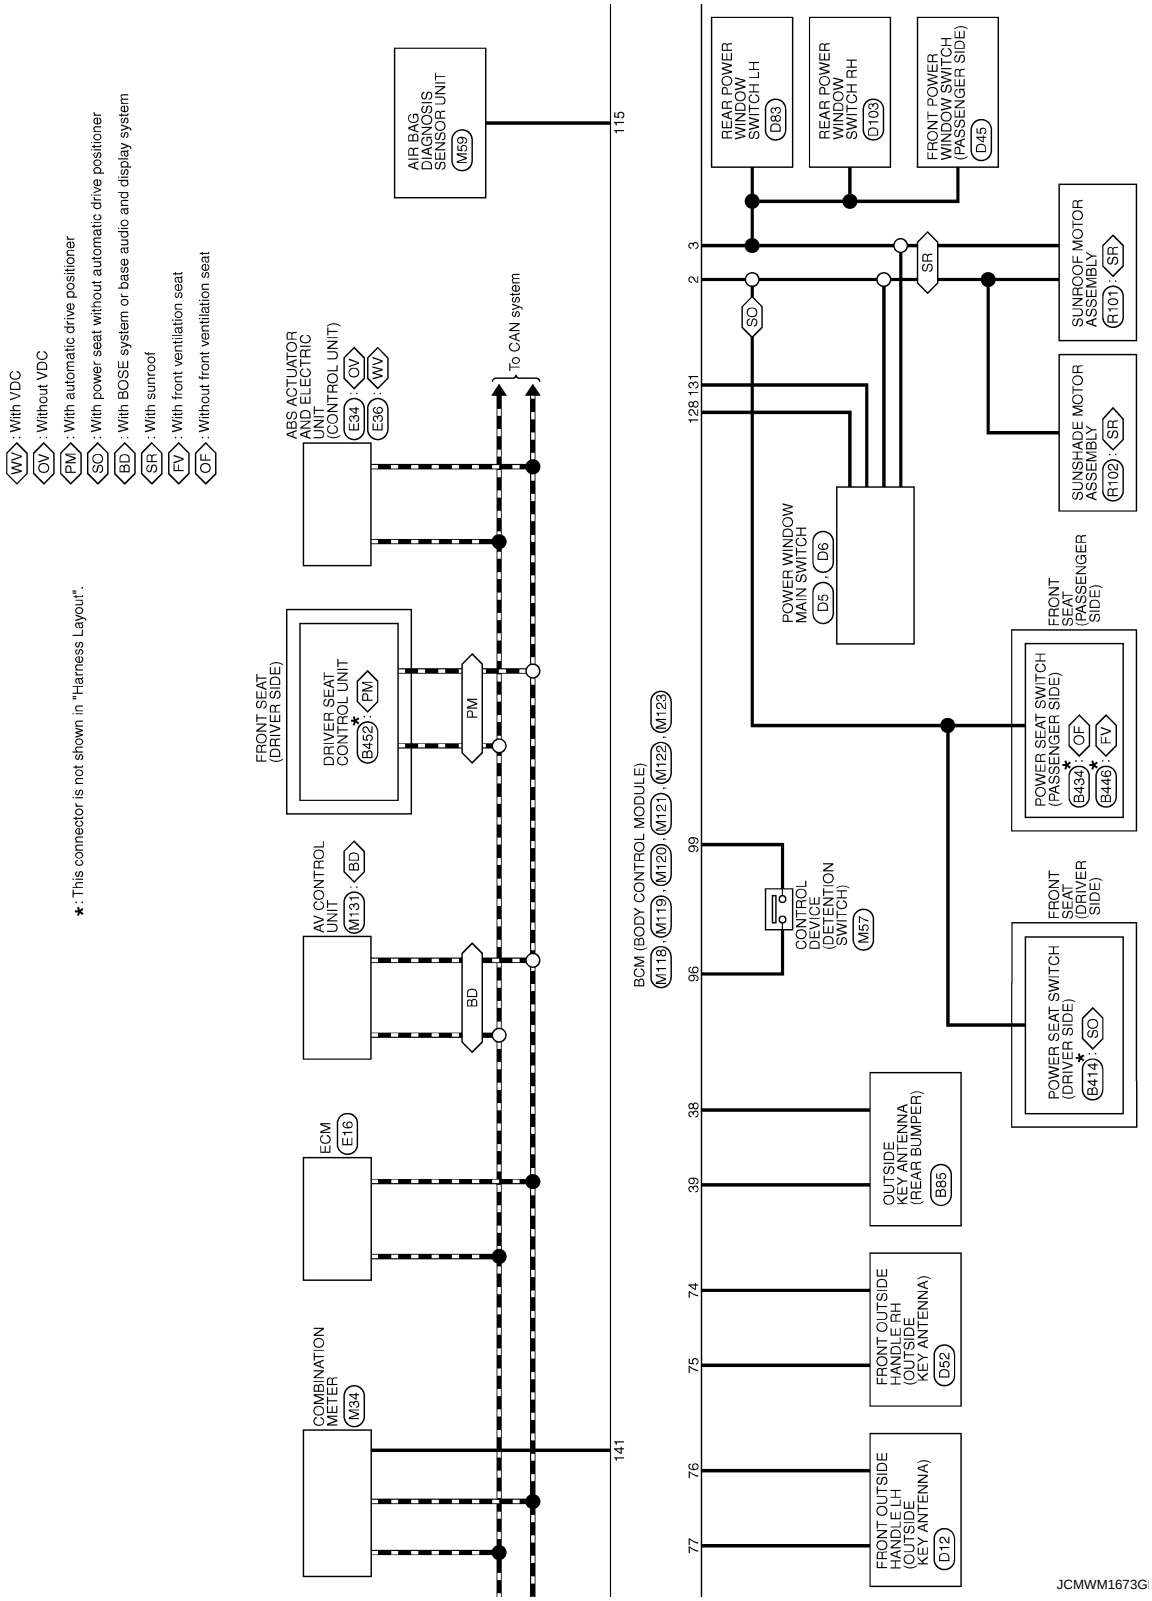
WV : With VDC
OV : Without VDC
PM : With automatic drive positioner
SO : With power seat without automatic drive positioner
BD : With BOSE system or base audio and display system
SR : With sunroof
FV : With front ventilation seat
OF : Without front ventilation seat
*: This connector is not shown in "Harness Layout".
COMBINATION METER M34
ECM E16
AV CONTROL UNIT M131 BD
FRONT SEAT (DRIVER SIDE)
DRIVER SEAT CONTROL UNIT B452 PM
ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) E34 OV E36 WV
To CAN system
AIR BAG DIAGNOSIS SENSOR UNIT M59
141
115
BCM (BODY CONTROL MODULE) M118, M119, M120, M121, M122, M123
77
76
75
74
39
38
96
99
128 131
2
3
FRONT OUTSIDE HANDLE LH (OUTSIDE KEY ANTENNA) D12
FRONT OUTSIDE HANDLE RH (OUTSIDE KEY ANTENNA) D52
OUTSIDE KEY ANTENNA (REAR BUMPER) B85
CONTROL DEVICE (DETENTION SWITCH) M57
POWER WINDOW MAIN SWITCH D5 D6
POWER SEAT SWITCH (DRIVER SIDE) B413 SO
POWER SEAT SWITCH (PASSENGER SIDE) B434 OF B446 FV
FRONT SEAT (DRIVER SIDE)
FRONT SEAT (PASSENGER SIDE)
SO
SR
SUNSHADE MOTOR ASSEMBLY R102 SR
SUNROOF MOTOR ASSEMBLY R101 SR
REAR POWER WINDOW SWITCH LH D83
REAR POWER WINDOW SWITCH RH D103
FRONT POWER WINDOW SWITCH (PASSENGER SIDE) D45
JCMWM1673G

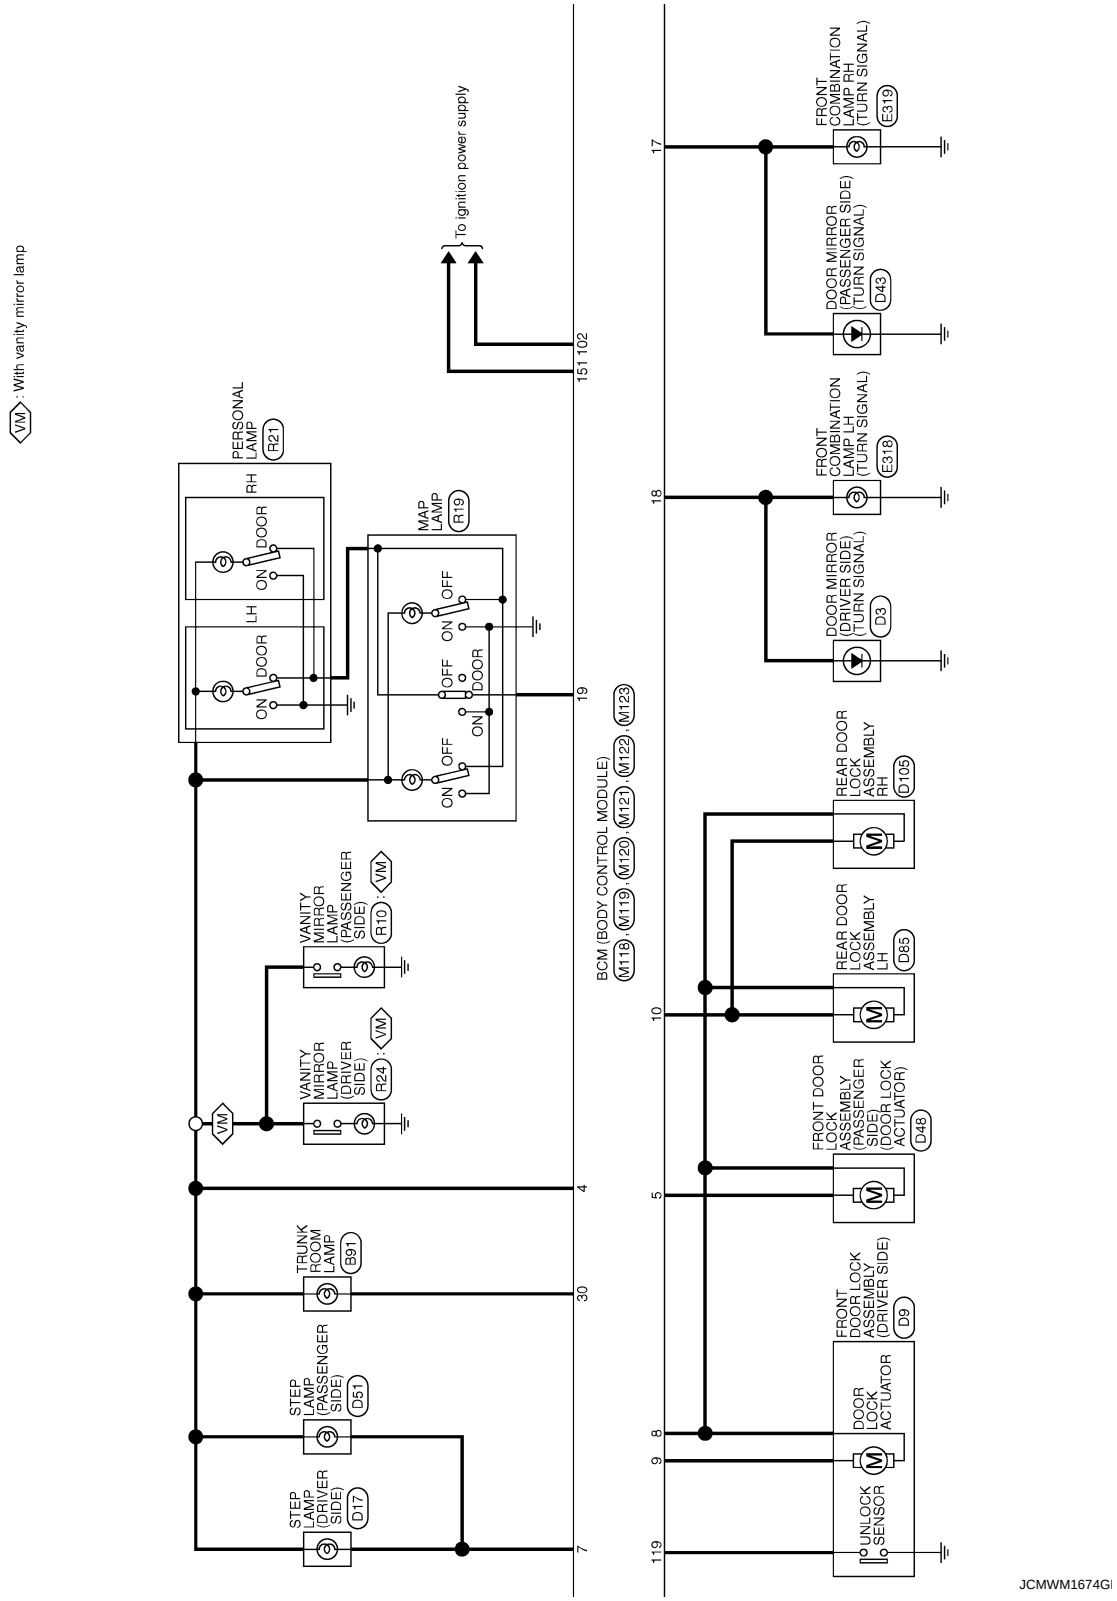
VM : With vanity mirror lamp
To ignition power supply
151 102
PERSONAL LAMP R21
RH
LH
DOOR
ON
MAP LAMP R19
OFF
ON
DOOR
19
VANITY MIRROR LAMP (PASSENGER SIDE) R10
VANITY MIRROR LAMP (DRIVER SIDE) R24
VM
4
TRUNK ROOM LAMP B91
30
STEP LAMP (PASSENGER SIDE) D51
STEP LAMP (DRIVER SIDE) D17
7
BCM (BODY CONTROL MODULE)
M118, M119, M120, M121, M122, M123
17
18
10
5
8
9
119
FRONT COMBINATION LAMP RH (TURN SIGNAL) E319
DOOR MIRROR (PASSENGER SIDE) (TURN SIGNAL) D43
FRONT COMBINATION LAMP LH (TURN SIGNAL) E318
DOOR MIRROR (DRIVER SIDE) (TURN SIGNAL) D3
REAR DOOR LOCK ASSEMBLY RH D105
REAR DOOR LOCK ASSEMBLY LH D85
FRONT DOOR LOCK ASSEMBLY (PASSENGER SIDE) (DOOR LOCK ACTUATOR) D48
FRONT DOOR LOCK ASSEMBLY (DRIVER SIDE) D9
DOOR LOCK ACTUATOR
UNLOCK SENSOR
JCMWM1674GI

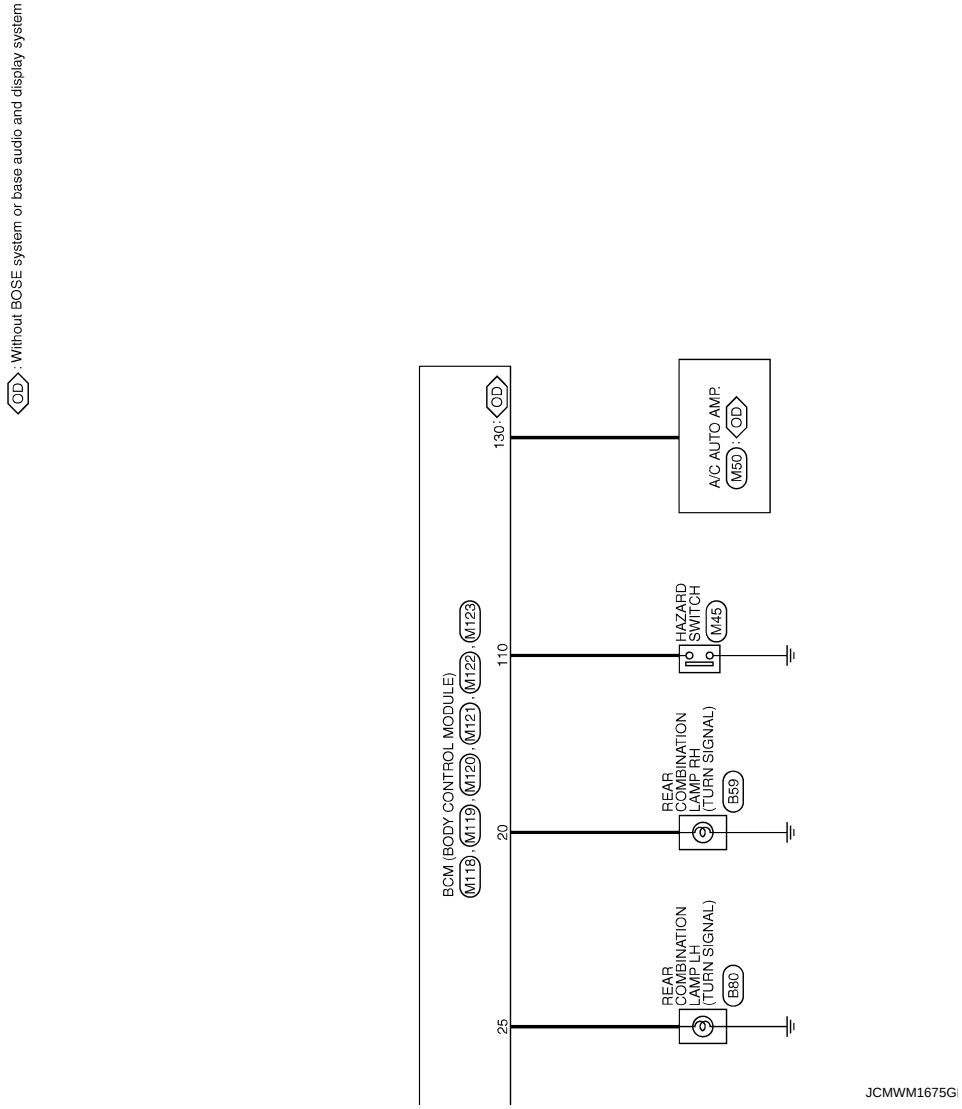
OD : Without BOSE system or base audio and display system
BCM (BODY CONTROL MODULE)
M118, M119, M120, M121, M122, M123
25
20
110
130 : OD
REAR COMBINATION LAMP LH (TURN SIGNAL)
B80
REAR COMBINATION LAMP RH (TURN SIGNAL)
B59
HAZARD SWITCH
M45
A/C AUTO AMP.
M50 : OD
JCMWM1675G

BCM (BODY CONTROL MODULE)

Connector No.	M103
Connector Name	COMBINATION SWITCH
Connector Type	TH16FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
2	G/Y	OUTPUT 4
5	LG/R	OUTPUT 3
7	R/G	INPUT 3
8	LG/B	OUTPUT 5
9	R/B	INPUT 2
10	P/B	INPUT 4
11	R/W	INPUT 1
12	L/W	OUTPUT 1
13	R/Y	INPUT 5
14	G/B	OUTPUT 2

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC

Terminal No.	Color of Wire	Signal Name [Specification]
1	W/B	BAT (F/L)
2	R/Y	POWER WINDOW POWER SUPPLY (BAT)
3	L/W	POWER WINDOW POWER SUPPLY (IGN)

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
4	P/W	INTERIOR ROOM LAMP POWER SUPPLY
5	G/Y	PASSENGER DOOR UNLOCK OUTPUT
7	R/W	STEP LAMP OUTPUT
8	V	ALL DOOR LOCK OUTPUT
9	G	DRIVER DOOR UNLOCK OUTPUT
10	G/Y	REAR DOOR UNLOCK OUTPUT
11	Y/R	BAT (FUSE)
13	B	GND
15	Y	ACC IND
17	G/B	TURN SIGNAL RH (FRONT, D/MIRROR)
18	G/Y	TURN SIGNAL LH (FRONT, D/MIRROR)
19	Y	ROOM LAMP TIMER CONTROL
69	R/B	REAR LH DOOR SW

Connector No.	M120
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS12FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
20	G/B	TURN SIGNAL RH (REAR)
23	R	TRUNK OPEN OUTPUT
24	G	REAR FOG LAMP OUTPUT
25	G/Y	TURN SIGNAL LH (REAR)
30	V/W	TRUNK LAMP OUTPUT

Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FGY-NH



Terminal No.	Color of Wire	Signal Name [Specification]
34	B	TRUNK ANT 1 B
35	W	TRUNK ANT 1 A
38	L/O	RR BUMPER ANT B
39	BR/W	RR BUMPER ANT A
47	BR/W	IGN RELAY IPDM E/R CONT
50	W	TRUNK SW
52	R	IGN RELAY IPDM E/R CONT
61	G/R	TRUNK REQUEST SW
64	GR	REQUEST SW BUZZER
67	L/R	INTERIOR TRUNK SW
68	R/W	REAR RH DOOR SW

JCMWM1676GI

BCM (BODY CONTROL MODULE)

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Color of Wire	Signal Name [Specification]
72	B/R	ROOM ANT2–
73	W/R	ROOM ANT2+
74	B/Y	PASSENGER DOOR ANT–
75	LG	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT–
77	P	DRIVER DOOR ANT+
78	R	ROOM ANT1–
79	G	ROOM ANT1+
80	G/O	FOB READER CLOCK
81	O	FOB READER DATA
82	R/B	IGN RELAY (F/B) CONT

83	L/O	KEYLESS ENTRY RECEIVER SIGNAL
87	R/Y	COMBI SW INPUT 5
88	R/G	COMBI SW INPUT 3
89	BR	PUSH SW
90	P	CAN–L
91	L	CAN–H
92	R/L	FOB SLOT ILLUMINATION
93	Y	ON IND
95	L	ACC RELAY CONT
96	Y/R	CONTROL DEVICE POWER SUPPLY
97	L/O	S/L CONDITION 1
98	G/R	S/L CONDITION 2
99	G/B	SHIFT P
100	P/L	PASSENGER DOOR REQUEST SW
101	B/W	DRIVER DOOR REQUEST SW
102	Y	BLOWER FAN MOTOR RELAY CONT
103	L/R	KEYLESS ENTRY RECEIVER POWER SUPPLY
106	G/Y	S/L POWER SUPPLY
107	R/W	COMBI SW INPUT 1
108	P/B	COMBI SW INPUT 4
109	R/B	COMBI SW INPUT 2
110	G/O	HAZARD SW
111	L/Y	S/L COMM

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH



Terminal No.	Color of Wire	Signal Name [Specification]
113	P/B	OPTICAL SENSOR
115	L	SHOCK SENSOR SIGNAL
116	R/W	STOP L LOW SW
118	O/L	STOP L HIGH SW
119	G/W	DR DOOR UNLOCK SENSOR
121	Y	KEY SLOT SW
122	V/R	ACC F/B
123	G/W	IGN F/B
124	R/B	PASSENGER DOOR SW
128	GR	CENTRAL LOCK SW
130	GR/W	REAR DEFOGGER SW

131	GR/R	CENTRAL UNLOCK SW
133	W	PUSH–BUTTON IGNITION SW ILL POWER
134	R	LOCK LED
137	P	RECEIVER/SENSOR GND
138	V/W	RECEIVER/SENSOR POWER SUPPLY
140	R/G	SHIFT N/P
141	L/O	SECURITY INDICATOR OUTPUT
142	LG/B	COMBI SW OUTPUT 5
143	L/W	COMBI SW OUTPUT 1
144	G/B	COMBI SW OUTPUT 2
145	LG/R	COMBI SW OUTPUT 3
146	G/Y	COMBI SW OUTPUT 4
150	SB	DRIVER DOOR SW
151	G/R	REAR WINDOW DEFOGGER RELAY

JCMWM1677G

Fail-safe

INFOID:0000000003880876

FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC is detected.

Display contents of CONSULT	Fail-safe	Cancellation
B2013: ID DISCORD BCM-S/L	Inhibit engine cranking	Erase DTC
B2014: CHAIN OF S/L-BCM	Inhibit engine cranking	Erase DTC
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2557: VEHICLE SPEED	Inhibit steering lock	When normal vehicle speed signals have been received from ABS actuator and electric unit (control unit) for 500 ms
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent • Starter control relay signal • Starter relay status signal
B2601: SHIFT POSITION	Inhibit steering lock	500 ms after the following signal reception status becomes consistent • Selector lever P position switch signal • P range signal (CAN)
B2602: SHIFT POSITION	Inhibit steering lock	5 seconds after the following BCM recognition conditions are fulfilled • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (battery voltage) • Vehicle speed: 4 km/h (2.5 MPH) or more
B2603: SHIFT POSI STATUS	Inhibit steering lock	500 ms after the following BCM recognition conditions are fulfilled • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (battery voltage) • Selector lever P/N position signal: Except P and N positions (0 V)
B2604: PNP SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions is fulfilled • Status 1 - Ignition switch is in the ON position - Selector lever P/N position signal: P and N position (battery voltage) - P range signal or N range signal (CAN): ON • Status 2 - Ignition switch is in the ON position - Selector lever P/N position signal: Except P and N positions (0 V) - P range signal and N range signal (CAN): OFF
B2605: PNP SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions is fulfilled • Ignition switch is in the ON position - Power position: IGN - Selector lever P/N position signal: Except P and N positions (0 V) - Interlock/PNP switch signal (CAN): OFF • Status 2 - Ignition switch is in the ON position - Selector lever P/N position signal: P or N position (battery voltage) - PNP switch signal (CAN): ON
B2606: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent • Steering lock relay signal (Request signal) • Steering lock relay signal (Condition signal)
B2607: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent • Steering lock relay signal (Request signal) • Steering lock relay signal (Condition signal)

Display contents of CONSULT	Fail-safe	Cancellation
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent • Starter motor relay control signal • Starter relay status signal (CAN)
B2609: S/L STATUS	• Inhibit engine cranking • Inhibit steering lock	When the following steering lock conditions agree • BCM steering lock control status • Steering lock condition No. 1 signal status • Steering lock condition No. 2 signal status
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled • IGN relay (IPDM E/R) control signal: OFF (Battery voltage) • Ignition ON signal (CAN to IPDM E/R): OFF (Request signal) • Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions is fulfilled • Power position changes to ACC • Receives engine status signal (CAN)
B2612: S/L STATUS	• Inhibit engine cranking • Inhibit steering lock	When any of the following conditions is fulfilled • Steering lock unit status signal (CAN) is received normally • The BCM steering lock control status matches the steering lock status recognized by the steering lock unit status signal (CAN from IPDM E/R)
B2617: STARTER RELAY CIRC	Inhibit engine cranking	1 second after the starter motor relay control inside BCM becomes normal
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B2619: BCM	Inhibit engine cranking	1 second after the steering lock unit power supply output control inside BCM becomes normal
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization
B26E1: ENG STATE NO RES	Inhibit engine cranking	When any of the following conditions is fulfilled • Power position changes to ACC • Receives engine status signal (CAN)
B26E9: S/L STATUS	• Inhibit engine cranking • Inhibit steering lock	When BCM transmits the LOCK request signal to steering lock unit, and receives LOCK response signal from steering lock unit, the following conditions is fulfilled • Steering condition No. 1 signal: LOCK (0 V) • Steering condition No. 2 signal: LOCK (Battery voltage)

HIGH FLASHER OPERATION

BCM detects the turn signal lamp circuit status by the current value.
BCM increases the turn signal lamp blinking speed if the bulb or harness open is detected with the turn signal lamp operating.

NOTE:
The blinking speed is normal while activating the hazard warning lamp.

DTC Inspection Priority Chart

INFOID:0000000003880877

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	B2562: LOW VOLTAGE
2	• U1000: CAN COMM CIRCUIT • U1010: CONTROL UNIT (CAN)
3	• B2190: NATS ANTENNA AMP • B2191: DIFFERENCE OF KEY • B2192: ID DISCORD BCM-ECM • B2193: CHAIN OF BCM-ECM

Priority	DTC
4	• B2013: ID DISCORD BCM-S/L • B2014: CHAIN OF S/L-BCM • B2553: IGNITION RELAY • B2555: STOP LAMP • B2556: PUSH-BTN IGN SW • B2557: VEHICLE SPEED • B2560: STARTER CONT RELAY • B2601: SHIFT POSITION • B2602: SHIFT POSITION • B2603: SHIFT POSI STATUS • B2604: PNP SW • B2605: PNP SW • B2606: S/L RELAY • B2607: S/L RELAY • B2608: STARTER RELAY • B2609: S/L STATUS • B260A: IGNITION RELAY • B260B: STEERING LOCK UNIT • B260C: STEERING LOCK UNIT • B260D: STEERING LOCK UNIT • B260F: ENG STATE SIG LOST • B2612: S/L STATUS • B2614: ACC RELAY CIRC • B2615: BLOWER RELAY CIRC • B2616: IGN RELAY CIRC • B2617: STARTER RELAY CIRC • B2618: BCM • B2619: BCM • B261A: PUSH-BTN IGN SW • B261E: VEHICLE TYPE • B26E1: ENG STATE NO RES • B26E9: S/L STATUS • B26EA: KEY REGISTRATION • U0415: VEHICLE SPEED SIG
5	• B2621: INSIDE ANTENNA • B2622: INSIDE ANTENNA • B2623: INSIDE ANTENNA

DTC Index

INFOID:0000000003880878

NOTE:
The details of time display are as follows.
- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data and IGN Counter, refer to BCS-16, "COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)".

CONSULT display	Fail-safe	Freeze Frame Data	Intelligent Key warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—	—
U1000: CAN COMM CIRCUIT	—	—	—	BCS-33
U1010: CONTROL UNIT (CAN)	—	—	—	BCS-34
U0415: VEHICLE SPEED SIG	—	—	—	BCS-35
B2013: ID DISCORD BCM-S/L	×	×	—	SEC-46
B2014: CHAIN OF S/L-BCM	×	×	—	SEC-47
B2190: NATS ANTENNA AMP	×	—	—	SEC-39
B2191: DIFFERENCE OF KEY	×	—	—	SEC-42

CONSULT display	Fail-safe	Freeze Frame Data	Intelligent Key warning lamp ON	Reference page
B2192: ID DISCORD BCM-ECM	×	—	—	SEC-43
B2193: CHAIN OF BCM-ECM	×	—	—	SEC-45
B2553: IGNITION RELAY	—	×	—	PCS-49
B2555: STOP LAMP	—	×	—	SEC-50
B2556: PUSH-BTN IGN SW	—	×	×	SEC-52
B2557: VEHICLE SPEED	×	×	×	SEC-54
B2560: STARTER CONT RELAY	×	×	×	SEC-55
B2562: LOW VOLTAGE	—	×	—	BCS-36
B2601: SHIFT POSITION	×	×	×	SEC-56
B2602: SHIFT POSITION	×	×	×	SEC-59
B2603: SHIFT POSI STATUS	×	×	×	SEC-61
B2604: PNP SW	×	×	×	SEC-64
B2605: PNP SW	×	×	×	SEC-67
B2606: S/L RELAY	×	×	×	SEC-69
B2607: S/L RELAY	×	×	×	SEC-70
B2608: STARTER RELAY	×	×	×	SEC-72
B2609: S/L STATUS	×	×	×	SEC-74
B260A: IGNITION RELAY	×	×	×	PCS-51
B260B: STEERING LOCK UNIT	—	×	×	SEC-78
B260C: STEERING LOCK UNIT	—	×	×	SEC-79
B260D: STEERING LOCK UNIT	—	×	×	SEC-80
B260F: ENG STATE SIG LOST	×	×	×	SEC-81
B2612: S/L STATUS	×	×	×	SEC-85
B2614: ACC RELAY CIRC	—	×	×	PCS-53
B2615: BLOWER RELAY CIRC	—	×	×	PCS-55
B2616: IGN RELAY CIRC	—	×	×	PCS-57
B2617: STARTER RELAY CIRC	×	×	×	SEC-89
B2618: BCM	×	×	×	PCS-59
B2619: BCM	×	×	×	SEC-91
B261A: PUSH-BTN IGN SW	—	×	×	SEC-92
B261E: VEHICLE TYPE	×	×	× (Turn ON for 15 seconds)	SEC-95
B2621: INSIDE ANTENNA	—	×	—	DLK-50
B2622: INSIDE ANTENNA	—	×	—	DLK-52
B2623: INSIDE ANTENNA	—	×	—	DLK-54
B26E1: ENG STATE NO RES	×	×	×	SEC-82
B26E9: S/L STATUS	×	×	× (Turn ON for 15 seconds)	SEC-83
B26EA: KEY REGISTRATION	—	×	× (Turn ON for 15 seconds)	SEC-84

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:0000000003880879

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition		Value/Status
MOTOR FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	1/2/3/4
AC COMP REQ	Engine running	A/C switch OFF	Off
		A/C switch ON (Compressor is operating)	On
TAIL&CLR REQ	Lighting switch OFF		Off
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)		On
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND HI or AUTO (Light is illuminated)		On
HL HI REQ	Lighting switch OFF		Off
	Lighting switch HI		On
FR FOG REQ	Lighting switch 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF	Off
		Front fog lamp switch ON	On
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	Stop
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	Hi
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	Off
		Front wiper stops at fail-safe operation	BLOCK
IGN RLY1 -REQ	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
PUSH SW	Release the push-button ignition switch		Off
	Press the push-button ignition switch		On
INTER/NP SW	Ignition switch ON	Selector lever in any position other than P or N	Off
		Selector lever in P or N position	On
ST RLY CONT	Ignition switch ON		Off
	At engine cranking		On
IHBT RLY -REQ	Ignition switch ON		Off
	At engine cranking		On

Monitor Item	Condition		Value/Status
ST/INHI RLY	Ignition switch ON		Off
	At engine cranking		INHI → ST
	The status of starter relay or starter control relay cannot be recognized by the battery voltage malfunction, etc. when the starter relay is ON and the starter control relay is OFF		UNKWN
DETENT SW	Ignition switch ON	• Press the selector button with selector lever in P position • Selector lever in any position other than P	Off
	Release the selector button with selector lever in P position		On
S/L RLY -REQ	None of the conditions below are present		Off
	• Open the driver door after the ignition switch is turned OFF (for a few seconds) • Press the push-button ignition switch when the steering lock is activated		On
S/L STATE	Steering lock is activated		LOCK
	Steering lock is deactivated		UNLOCK
	[DTC: B210A] is detected		UNKWN
DTRL REQ	**NOTE:** The item is indicated, but not monitored.		Off
OIL P SW	Ignition switch OFF, ACC or engine running		Open
	Ignition switch ON		Close
HOOD SW	Close the hood		Off
	Open the hood		On
HL WASHER REQ	Not operating		Off
	Headlamp washer operating		On
THFT HRN REQ	Not operating		Off
	Horn is activated with vehicle security (theft warning) system		On
HORN CHIRP	Not operating		Off
	• Door locking with Intelligent Key (horn chirp mode) • Door locking with key fob (horn chirp mode)		On
CRNRNG LMP REQ	**NOTE:** The item is indicated, but not monitored.		Off

TERMINAL LAYOUT

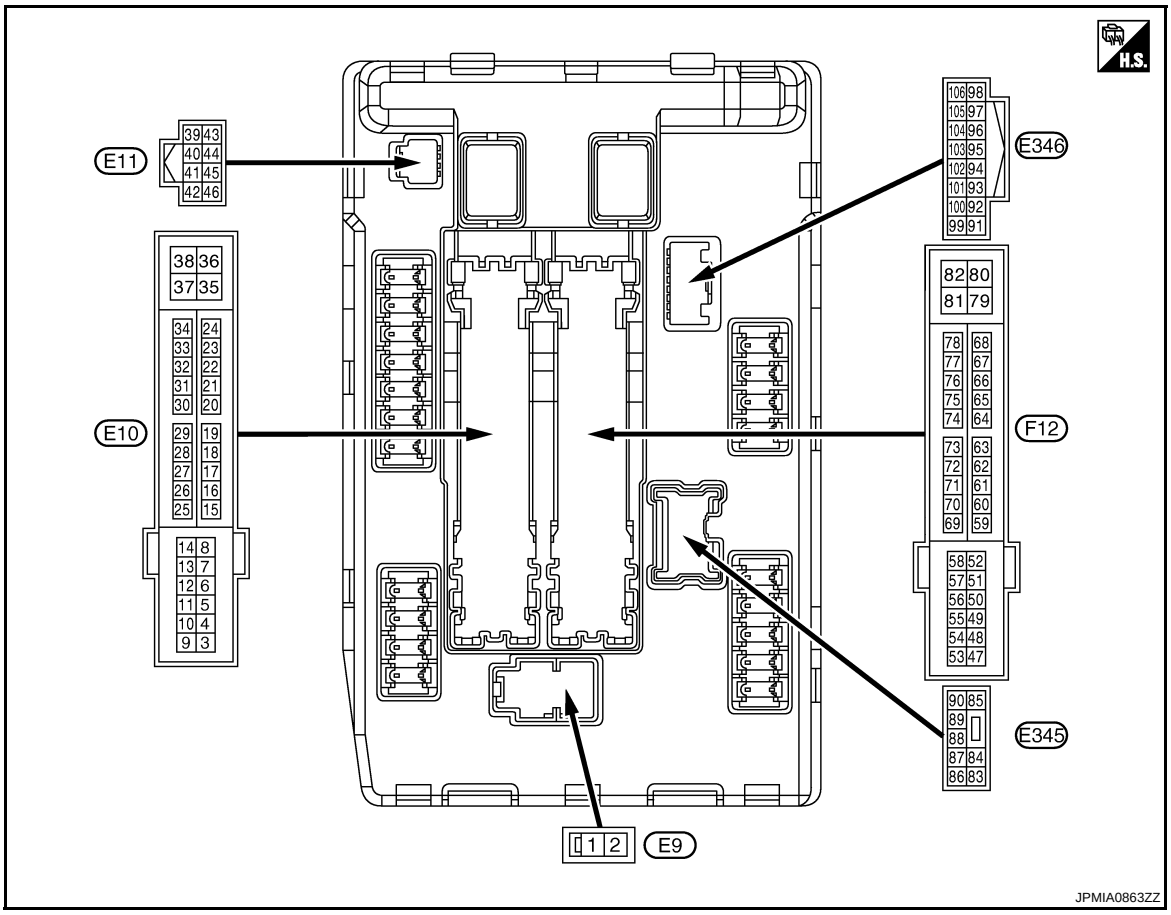

PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
1 (R)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (L)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
4 (LG)	Ground	Front wiper LO	Output	Ignition switch ON	Front wiper switch OFF	0 V
					Front wiper switch LO	Battery voltage
5 (Y)	Ground	Front wiper HI	Output	Ignition switch ON	Front wiper switch OFF	0 V
					Front wiper switch HI	Battery voltage
7 (GR)	Ground	Tail, license plate lamps & illuminations	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 1ST	Battery voltage
10 (BR)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		0 V
				• Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF)		Battery voltage

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
11 (P)	Ground	Steering lock unit power supply	Output	Ignition switch OFF	A few seconds after opening the driver door	Battery voltage
				Ignition switch LOCK	Press the push-button ignition switch	Battery voltage
				Ignition switch ACC or ON		0 V
12 (B/W)	Ground	Ground	—	Ignition switch ON		0 V
13 (SB)	Ground	Fuel pump power supply	Output	Approximately 1 second or more after turning the ignition switch ON		0 V
				• Approximately 1 second after turning the ignition switch ON • Engine running		Battery voltage
15 (W)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
16 (R)	Ground	Front wiper auto stop	Input	Ignition switch ON	Front wiper stop position	0 V
					Any position other than front wiper stop position	Battery voltage
17 (V)	Ground	Headlamp washer relay control	Input	Ignition switch ON	Headlamp washer deactivated	Battery voltage
					Headlamp washer activated	0 V
19 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
20 (B)	Ground	Ambient sensor ground	Output	Ignition switch ON		0 V
21 (O)	Ground	Ambient sensor	Input	Ignition switch ON **NOTE:** Changes depending to ambient temperature		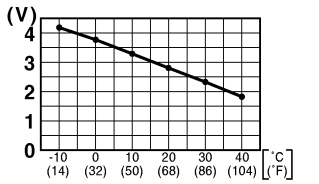 JSNIA0014GB
22 (SB)	Ground	Refrigerant pressure sensor ground	Output	Engine running	• Warm-up condition • Idle speed	0 V
23 (GR)	Ground	Refrigerant pressure sensor	Output	Engine running	• Warm-up condition • Both A/C switch and blower fan motor switch ON (Compressor operates)	1.0 - 4.0 V
24 (G)	Ground	Refrigerant pressure sensor power supply	Input	Ignition switch OFF		0 V
				Ignition switch ON		5.0 V
25 (GR)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
27 (W)	Ground	Ignition relay monitor	Input	Ignition switch OFF or ACC		Battery voltage
				Ignition switch ON		0 V

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
28 (SB)	Ground	Push-button ignition switch	Input	Press the push-button ignition switch		0 V
				Release the push-button ignition switch		Battery voltage
30 (BR)	Ground	Starter relay control	Input	Ignition switch ON	Selector lever in any position other than P or N	0 V
					Selector lever P or N	Battery voltage
32 (V)	Ground	Steering lock unit condition-1	Input	Steering lock is activated		0 V
				Steering lock is deactivated		Battery voltage
33 (G)	Ground	Steering lock unit condition-2	Input	Steering lock is activated		Battery voltage
				Steering lock is deactivated		0 V
34 (O)	Ground	Cooling fan relay-3 control	Input	Cooling fan stopped		Battery voltage
				Cooling fan at HI operation		0 V
35 (P)	Ground	Cooling fan relay-1 power supply	Input	Cooling fan stopped		Battery voltage
				Cooling fan at LO operation		6.0 V
36 (G)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
38 (GR)	Ground	Cooling fan relay-1 power supply	Output	Cooling fan not operating		0 V
				Cooling fan at LO operation		6.0 V
39 (P)	—	CAN-L	Input/ Output	—		—
40 (L)	—	CAN-H	Input/ Output	—		—
41 (B)	Ground	Ground	—	Ignition switch ON		0 V
42 (SB)	Ground	Cooling fan relay-2 control	Input	Cooling fan stopped		Battery voltage
				• Cooling fan MID operating • Cooling fan HI operating		0 V
43 (Y)	Ground	Control device (Detention switch)	Input	Ignition switch ON	Press the selector button (selector lever P)	Battery voltage
					• Selector lever in any position other than P • Release the selector button (selector lever P)	0 V
44 (G)	Ground	Horn relay control	Input	The horn is deactivated		Battery voltage
				The horn is activated		0 V
45 (O)	Ground	Horn switch	Input	The horn is deactivated		Battery voltage
				The horn is activated		0 V
46 (BR)	Ground	Starter relay control	Input	Ignition switch ON	Selector lever in any position other than P or N	0 V
					Selector lever P or N	Battery voltage
48 (Y/R)	Ground	A/C relay power supply	Output	Engine running	A/C switch OFF	0 V
					A/C switch ON (A/C compressor is operating)	Battery voltage

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
49 (R/B)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		0 V
				• Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF)		Battery voltage
51 (LG)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
52 (Y/G)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
53 (R/W)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		0 V
				• Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF)		Battery voltage
54 (G/W)	Ground	Throttle control motor relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		0 V
				• Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF)		Battery voltage
55 (W/L)	Ground	ECM power supply	Output	Ignition switch OFF		Battery voltage
56 (R/Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
57 (O)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
58 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
69 (W/B)	Ground	ECM relay control	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		Battery voltage
				• Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF)		0 - 1.5 V
70 (O)	Ground	Throttle control motor relay control	Output	Ignition switch ON → OFF		0 -1.0 V ↓ Battery voltage ↓ 0 V
				Ignition switch ON		0 - 1.0 V
72 (R/B)	Ground	Starter relay control	Input	Ignition switch ON	Selector lever in any position other than P or N	0 V
					Selector lever P or N	Battery voltage
74 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
75 (P/L)	Ground	Oil pressure switch	Input	Ignition switch ON	Engine stopped	0 V
					Engine running	Battery voltage
76 (SB)	Ground	Power generation command signal	Output	Ignition switch ON		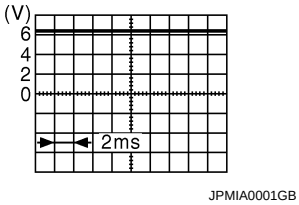 6.3 V
				40% is set on “ACTIVE TEST”, “ALTERNATOR DUTY” of “ENGINE”		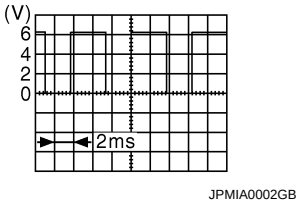 3.8 V
				80% is set on “ACTIVE TEST”, “ALTERNATOR DUTY” of “ENGINE”		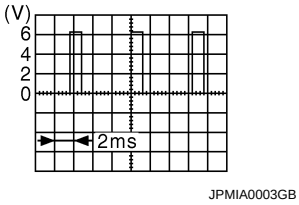 1.4 V
77 (GR)	Ground	Fuel pump relay control	Output	• Approximately 1 second after turning the ignition switch ON • Engine running		0 - 1.5 V
				Approximately 1 second or more after turning the ignition switch ON		Battery voltage
80 (B/W)	Ground	Starter motor	Output	At engine cranking		Battery voltage
83 (Y)	Ground	Headlamp LO (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 2ND	Battery voltage
84 (SB)	Ground	Headlamp LO (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 2ND	Battery voltage
86 (L)	Ground	Front fog lamp (RH)	Output	Lighting switch 2ND	• Front fog lamp switch ON • Daytime running light activated (Only for Canada)	Battery voltage
					Front fog lamp switch OFF	0 V
87 (R)	Ground	Front fog lamp (LH)	Output	Lighting switch 2ND	• Front fog lamp switch ON • Daytime running light activated (Only for Canada)	Battery voltage
					Front fog lamp switch OFF	0 V

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
88 (P)	Ground	Washer pump power supply	Output	Ignition switch ON		Battery voltage
89 (W)	Ground	Headlamp HI (RH)	Output	Ignition switch ON	• Lighting switch HI • Lighting switch PASS	Battery voltage
					Lighting switch OFF	0 V
90 (O)	Ground	Headlamp HI (LH)	Output	Ignition switch ON	• Lighting switch HI • Lighting switch PASS	Battery voltage
					Lighting switch OFF	0 V
91 (O)	Ground	Parking lamp (RH)	Output	Ignition switch ON	Lighting switch 1ST	Battery voltage
					Lighting switch OFF	0 V
92 (L)	Ground	Parking lamp (LH)	Output	Ignition switch ON	Lighting switch 1ST	Battery voltage
					Lighting switch OFF	0 V
93 (BR)	Ground	Headlamp aiming motor (RH)	Output	Ignition switch ON	Lighting switch 1ST	Battery voltage
					Lighting switch OFF	0 V
94 (Y)	Ground	Headlamp aiming motor (LH)	Output	Ignition switch ON	Lighting switch 1ST	Battery voltage
					Lighting switch OFF	0 V
99 (W)	Ground	Ambient sensor ground	Input	Ignition switch ON		0 V
100 (SB)	Ground	Ambient sensor	Output	Ignition switch ON **NOTE:** Changes depending to ambient temperature		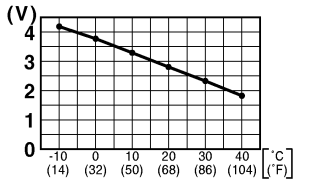 JSNIA0014GB
101 (GR)	Ground	Refrigerant pressure sensor ground	Input	Engine running	• Warm-up condition • Idle speed	0 V
102 (R)	Ground	Refrigerant pressure sensor	Input	Engine running	• Warm-up condition • Both A/C switch and blower fan motor switch ON (Compressor operates)	1.0 - 4.0 V
103 (P)	Ground	Refrigerant pressure sensor power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		5.0 V
104 (LG)	Ground	Hood switch	Output	Close the hood		Battery voltage
				Open the hood		0 V

Wiring Diagram - IPDM E/R -

INFOID:0000000003880880

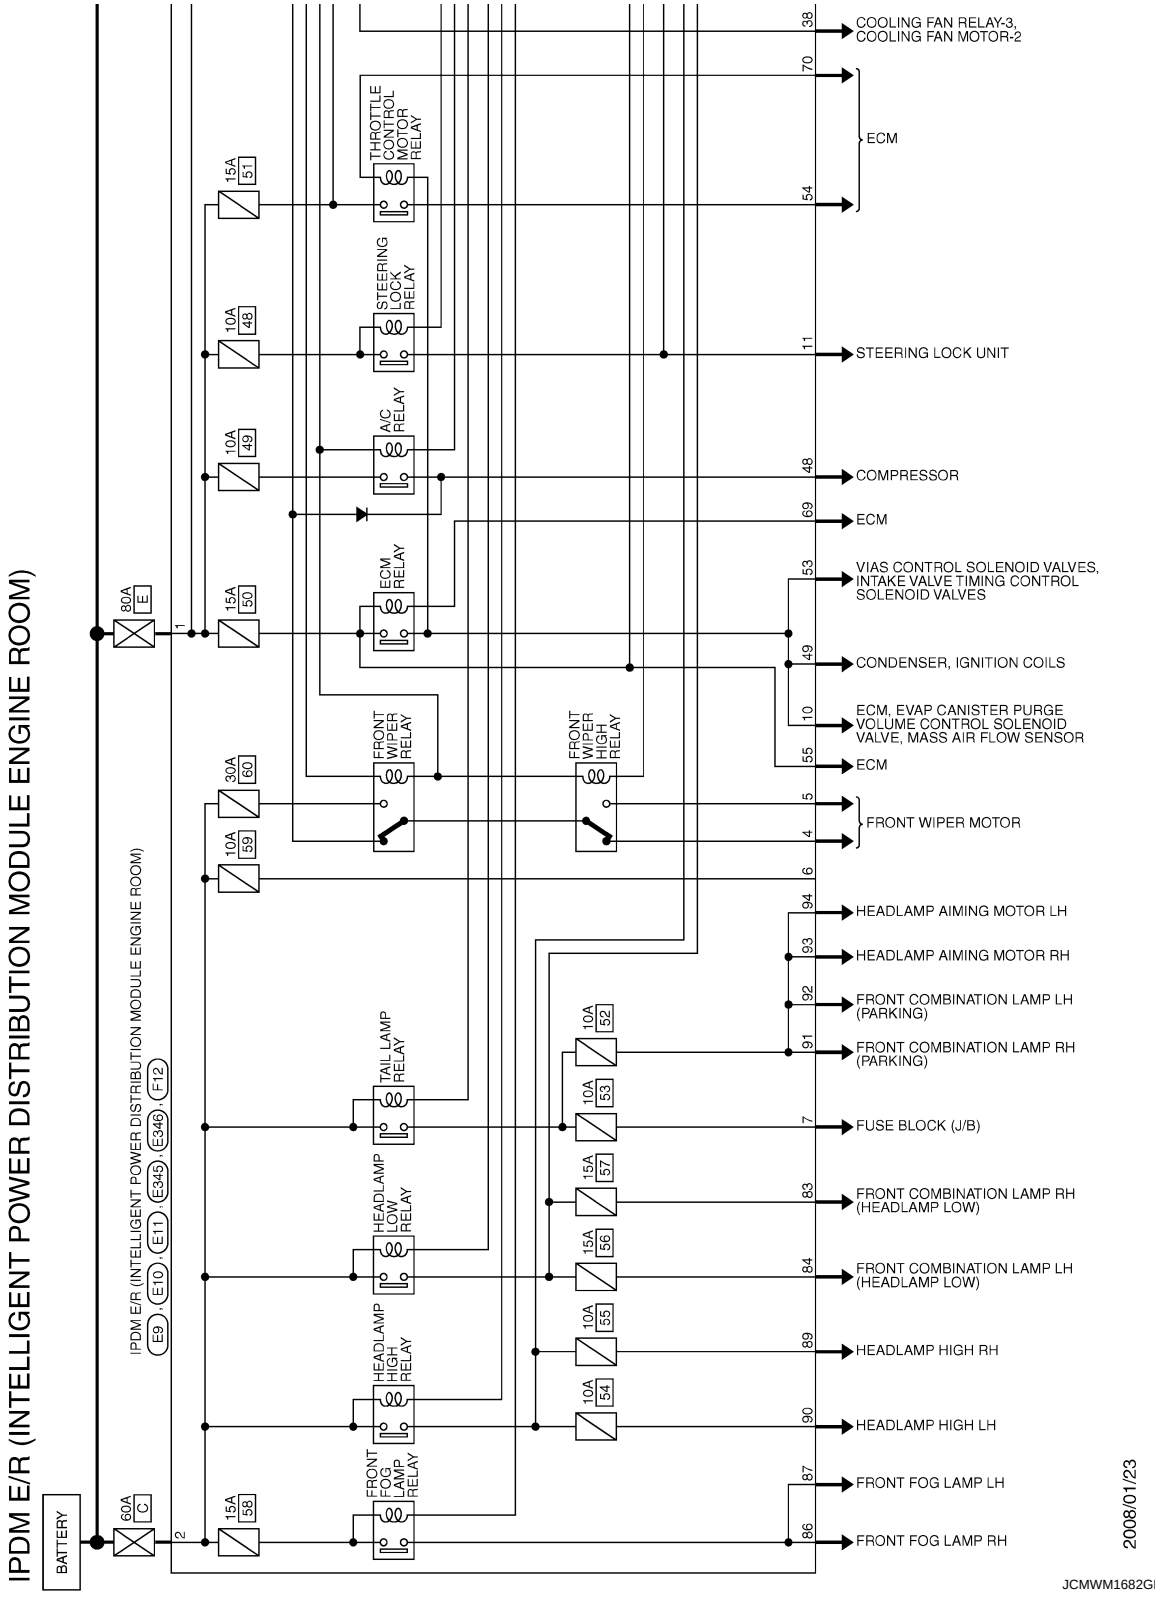

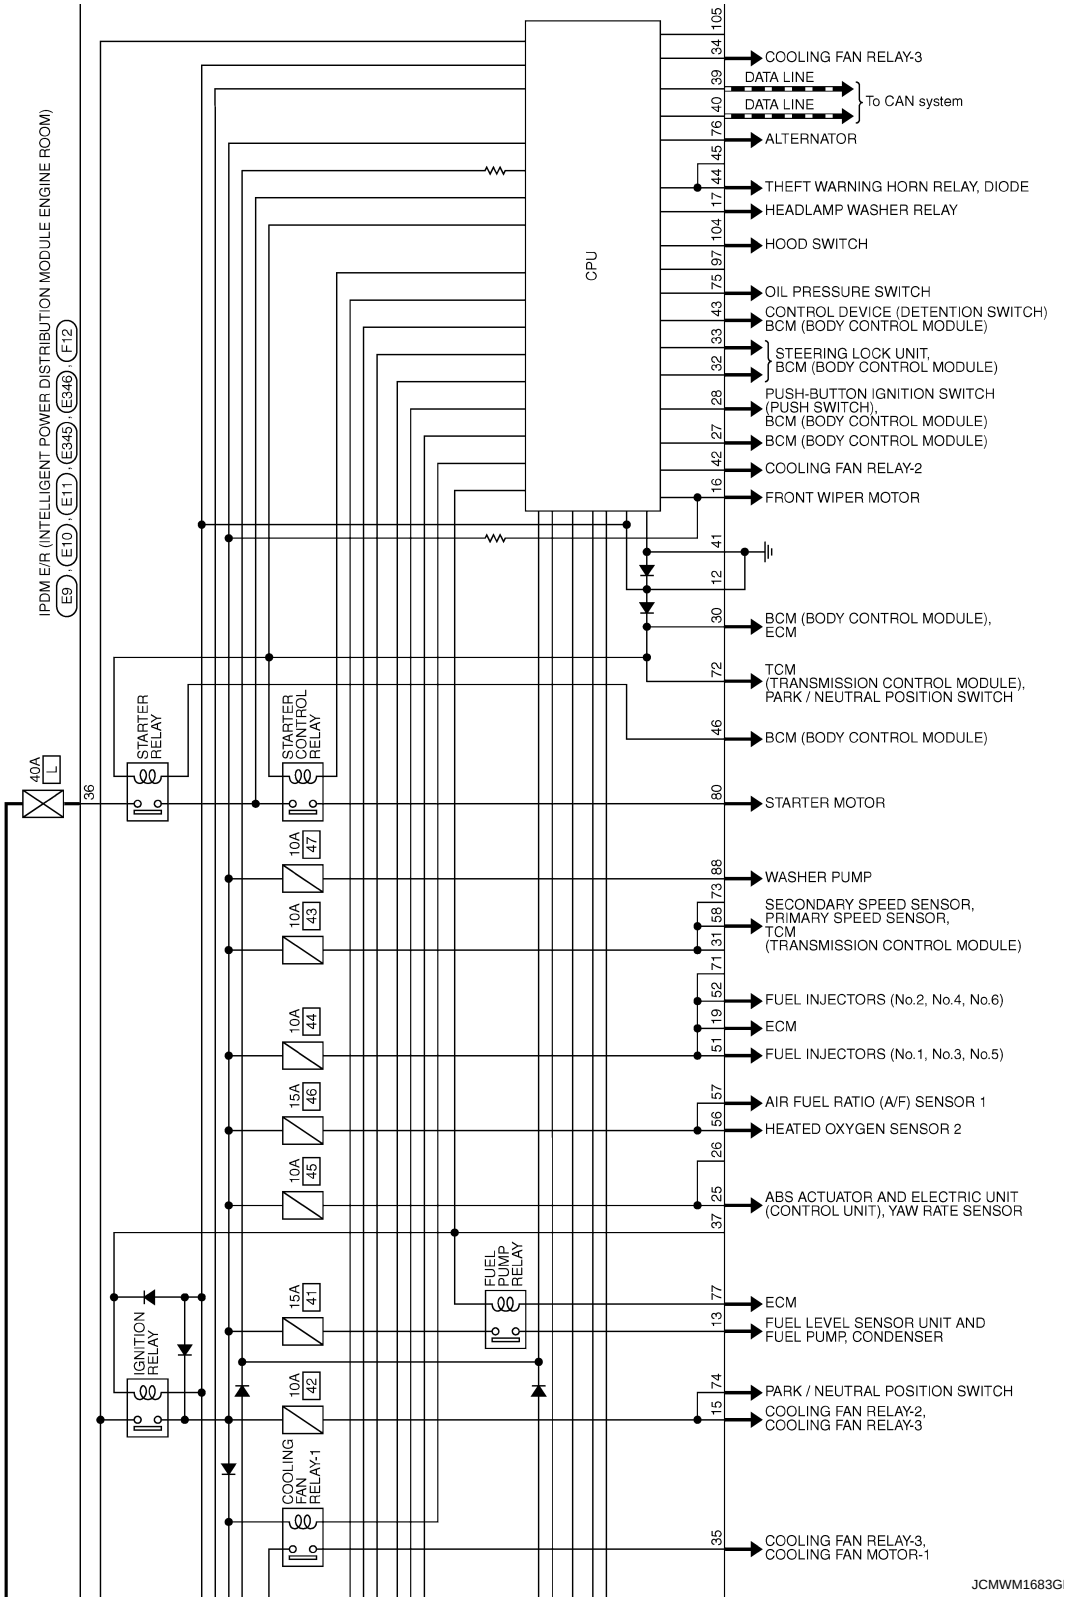
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
E9, E10, E11, E345, E346, F12
CPU
105
34
COOLING FAN RELAY-3
39
DATA LINE
40
DATA LINE
To CAN system
76
ALTERNATOR
45
44
THEFT WARNING HORN RELAY, DIODE
17
HEADLAMP WASHER RELAY
104
HOOD SWITCH
97
75
OIL PRESSURE SWITCH
43
CONTROL DEVICE (DETENTION SWITCH)
BCM (BODY CONTROL MODULE)
33
32
STEERING LOCK UNIT,
BCM (BODY CONTROL MODULE)
28
PUSH-BUTTON IGNITION SWITCH
(PUSH SWITCH),
BCM (BODY CONTROL MODULE)
27
BCM (BODY CONTROL MODULE)
42
COOLING FAN RELAY-2
16
FRONT WIPER MOTOR
41
12
30
BCM (BODY CONTROL MODULE),
ECM
72
TCM
(TRANSMISSION CONTROL MODULE),
PARK / NEUTRAL POSITION SWITCH
46
BCM (BODY CONTROL MODULE)
80
STARTER MOTOR
88
WASHER PUMP
73
58
31
SECONDARY SPEED SENSOR,
PRIMARY SPEED SENSOR,
TCM
(TRANSMISSION CONTROL MODULE)
71
52
FUEL INJECTORS (No.2, No.4, No.6)
19
ECM
51
FUEL INJECTORS (No.1, No.3, No.5)
57
AIR FUEL RATIO (A/F) SENSOR 1
56
HEATED OXYGEN SENSOR 2
26
25
ABS ACTUATOR AND ELECTRIC UNIT
(CONTROL UNIT), YAW RATE SENSOR
37
77
ECM
13
FUEL LEVEL SENSOR UNIT AND
FUEL PUMP, CONDENSER
74
PARK / NEUTRAL POSITION SWITCH
15
COOLING FAN RELAY-2,
COOLING FAN RELAY-3
35
COOLING FAN RELAY-3,
COOLING FAN MOTOR-1
40A
L
36
STARTER RELAY
STARTER CONTROL RELAY
10A 47
10A 43
10A 44
15A 46
10A 45
15A 41
10A 42
IGNITION RELAY
FUEL PUMP RELAY
COOLING FAN RELAY-1
JCMWM1683G

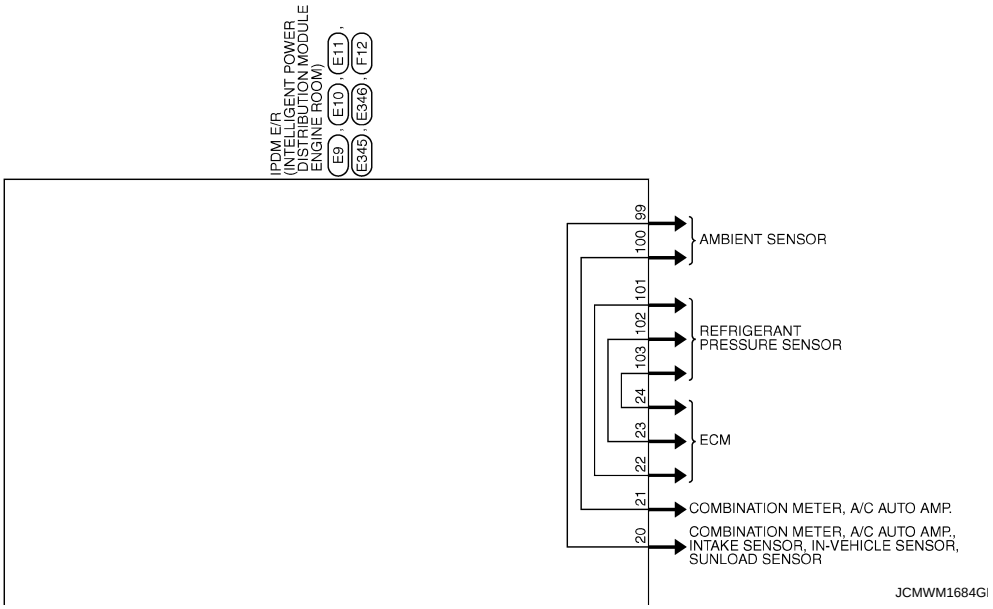
IPDM E/R
(INTELLIGENT POWER
DISTRIBUTION MODULE
ENGINE ROOM)
E9, E10, E11,
E345, E346, F12
99
100
101
102
103
24
23
22
21
20
AMBIENT SENSOR
REFRIGERANT
PRESSURE SENSOR
ECM
COMBINATION METER, A/C AUTO AMP.
COMBINATION METER, A/C AUTO AMP.,
INTAKE SENSOR, IN-VEHICLE SENSOR,
SUNLOAD SENSOR
JCMWM1684GI

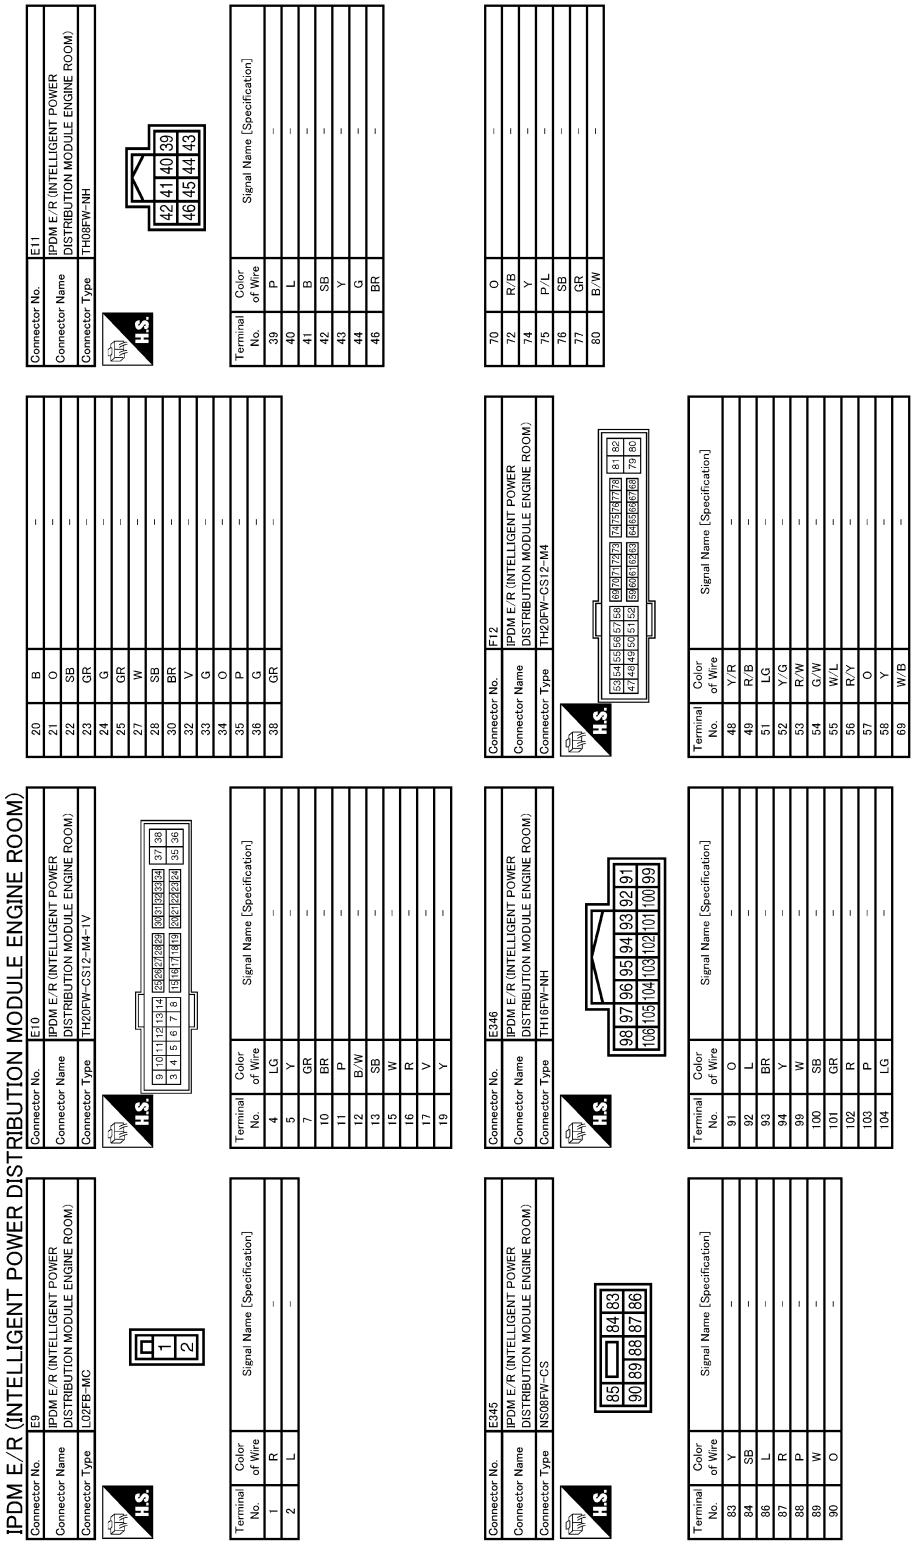

Fail-safe

INFOID:0000000003880881

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

Control part	Fail-safe operation
Cooling fan	• Turns ON the cooling fan relay-2 and the cooling fan relay-3 when ignition switch is turned ON (Cooling fan operates at HI) • Turns OFF the cooling fan relay-1, the cooling fan relay-2 and the cooling fan relay-3 when the ignition switch is turned OFF (Cooling fan does not operate)
A/C compressor	A/C relay OFF
Alternator	Outputs the power generation command signal (PWM signal) 0%

If No CAN Communication Is Available With BCM

Control part	Fail-safe operation
Headlamp	• Turns ON the headlamp low relay when the ignition switch is turned ON • Turns OFF the headlamp low relay when the ignition switch is turned OFF • Headlamp high relay OFF
• Parking lamps • License plate lamps • Illuminations • Tail lamps	• Turns ON the tail lamp relay when the ignition switch is turned ON • Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper	• The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. • The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.
Front fog lamps	Front fog lamp relay OFF
Horn	Horn OFF
Ignition relay	The status just before activation of fail-safe is maintained.
Starter motor	Starter control relay OFF
Steering lock unit	Steering lock relay OFF
Headlamp washer relay	Headlamp washer relay OFF

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Voltage judgment		IPDM E/R judgment	Operation
Ignition relay contact side	Ignition relay excitation coil side		
ON	ON	Ignition relay ON normal	—
OFF	OFF	Ignition relay OFF normal	—
ON	OFF	Ignition relay ON stuck	• Detects DTC “B2098: IGN RELAY ON” • Turns ON the tail lamp relay for 10 minutes
OFF	ON	Ignition relay OFF stuck	Detects DTC “B2099: IGN RELAY OFF”

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper auto stop signal.
When a front wiper auto stop signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

Ignition switch	Front wiper switch	Front wiper auto stop signal
ON	OFF	The front wiper auto stop signal (stop position) cannot be input for 10 seconds.
	ON	The front wiper auto stop signal does not change for 10 seconds.

NOTE:
This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

DTC Index

INFOID:0000000003880882

NOTE:
- The details of time display are as follows.
- CRNT: A malfunction is detected now
- PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
- The number is 0 when is detected now
- The number increases like 1 → 2 ··· 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
- The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

×: Applicable

CONSULT display	Fail-safe	Refer to
No DTC is detected. further testing may be required.	—	—
U1000: CAN COMM CIRCUIT	×	PCS-16
B2098: IGN RELAY ON	×	PCS-17
B2099: IGN RELAY OFF	—	PCS-18
B2108: STRG LCK RELAY ON	—	SEC-96
B2109: STRG LCK RELAY OFF	—	SEC-97
B210A: STRG LCK STATE SW	—	SEC-98
B210B: START CONT RLY ON	—	SEC-102
B210C: START CONT RLY OFF	—	SEC-103
B210D: STARTER RELAY ON	—	SEC-104
B210E: STARTER RELAY OFF	—	SEC-105
B210F: INTRLCK/PNP SW ON	—	SEC-107
B2110: INTRLCK/PNP SW OFF	—	SEC-109

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000003940025

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the “SRS AIRBAG” and “SEAT BELT” of this Service Manual.

WARNING:

- **To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.**
- **Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the “SRS AIRBAG”.**
- **Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.**

Precaution Necessary for Steering Wheel Rotation after Battery Disconnect

INFOID:0000000003940024

NOTE:

- Before removing and installing any control units, first turn the push-button ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

This vehicle is equipped with a push-button ignition switch and a steering lock unit.
If the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.
If turning the steering wheel is required with the battery disconnected or discharged, follow the procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.
   NOTE:
   Supply power using jumper cables if battery is discharged.
2. Turn the push-button ignition switch to ACC position.
   (At this time, the steering lock will be released.)
3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
4. Perform the necessary repair operation.
5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the push-button ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the push-button ignition switch is turned to LOCK position.)
6. Perform self-diagnosis check of all control units using CONSULT-III.

SYMPTOM DIAGNOSIS

POWER DISTRIBUTION SYSTEM

Symptom Table

INFOID:0000000003805778

The engine start function, door lock function, power distribution system and NATS-IVIS/NVIS in the Intelligent Key system are closely related to each other regarding control. Narrow down the functional area in question by checking the following table to identify which function is malfunctioning. The vehicle security function can operate only when the door lock and power distribution system are operating normally. Therefore, it is easy to identify any factor unique to the vehicle security system by checking the following table.
Use the chart below to help you find the cause of the symptom. The numbers indicate the order of the inspection.

NOTE:
Before starting vehicle security system operation check, the following conditions must be met.
- Open front windows
- Turn ignition switch OFF
- Pull out Intelligent Key from key slot.

NO.	Function	Operation condition	Symptom	Diagnostic Item	Reference page
1	INTELLIGENT KEY SYSTEM/ DOOR LOCK FUNCTION	Lock/unlock door with door request switch. (Intelligent Key is in the inside key antenna detection area)	Door does not lock/unlock	—	DLK-158
2	POWER DISTRIBUTION FUNCTION	Press push-button ignition switch under the following conditions. • Selector lever position is in the P or N position • Do not depress brake pedal	Push-button ignition switch does not operate	—	PCS-124
3	INTELLIGENT KEY SYSTEM/ ENGINE START FUNCTION	Start engine with Intelligent Key into the vehicle (Intelligent Key is in the inside key antenna detection area)	Engine can not start with Intelligent Key	—	SEC-193
4		Open the door after the ignition switch is turned ON to OFF	Steering is not locked	—	SEC-194
5	NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS FUNCTION	Start engine with Intelligent Key in the key slot	Engine can not start	—	SEC-195
6		Open the door after the ignition switch is turned ON to OFF	Steering is not locked	—	SEC-194
7		Insert Intelligent Key in the key slot	Key slot indicator does not illuminate	—	SEC-196

NO.	Function	Operation condition	Symptom	Diagnostic Item	Reference page
8	VEHICLE SECURITY SYSTEM	Lock all doors with Intelligent Key	Vehicle security system can not be set	—	SEC-197
		Lock all doors with door request switch		—	SEC-197
		Lock all doors with Intelligent Key or door request switch	Security indicator lamp does not turn ON	—	SEC-196
		In the armed phase, open the door	Vehicle security alarm does not activate	Horn	SEC-199
				Hazard warning lamp	
		When alarm sounds, press Intelligent Key button	Vehicle security system can not be canceled	—	SEC-200
		When alarm sounds, press door request switch		—	SEC-200
9	POWER DISTRIBUTION FUNCTION	Press push-button ignition switch under the following conditions. • Selector lever position is in the P or N position • Do not depress brake pedal	Push-button ignition switch position indicator does not illuminate	—	PCS-125

PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE

Description

INFOID:0000000003805779

- Before performing the diagnosis in the following table, check “Work Flow”. Refer to PCS-35, "Work Flow".
- Check that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis, and check each symptom.

Conditions of Vehicle (Operating Conditions)

- “ENGINE START BY I-KEY” in “WORK SUPPORT” is ON when setting on CONSULT-III.
- One or more of Intelligent Keys with registered Intelligent Key ID is in the vehicle.

Diagnosis Procedure

INFOID:0000000003805780

1. CHECK PUSH-BUTTON IGNITION SWITCH

Check push-button ignition switch.
Refer to PCS-63, "Component Function Check".

Is the inspection normal?

YES >> GO TO 2.
NO >> Repair or replace malfunctioning parts.

2. CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection normal?

YES >> Check intermittent incident. Refer to GI-35, "Intermittent Incident".
NO >> GO TO 1.

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR DOES NOT ILLUMINATE

Description

INFOID:0000000003805781

- Before performing the diagnosis in the following table, check “Work Flow”. Refer to PCS-35, "Work Flow".
- Check that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis, and check each symptom.

Conditions of Vehicle (Operating Conditions)

- “ENGINE START BY I-KEY” in “WORK SUPPORT” is ON when setting on CONSULT-III.
- One or more of Intelligent Keys with registered Intelligent Key ID is in the vehicle.

Diagnosis Procedure

INFOID:0000000003805782

1. CHECK PUSH-BUTTON IGNITION SWITCH INDICATOR

Check push-button ignition switch indicator.
Refer to PCS-66, "Component Function Check".

Is the inspection result normal?

YES >> GO TO 2.
NO >> Repair or replace the malfunctioning parts.

2. CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to GI-35, "Intermittent Incident".
NO >> GO TO 1.

ON-VEHICLE REPAIR

BCM (BODY CONTROL MODULE)

Exploded View

INFOID:0000000003839087

CAUTION:
Before replacing BCM, perform “READ CONFIGURATION” to save or print current vehicle specification. Refer to BCS-3, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM) : Description".

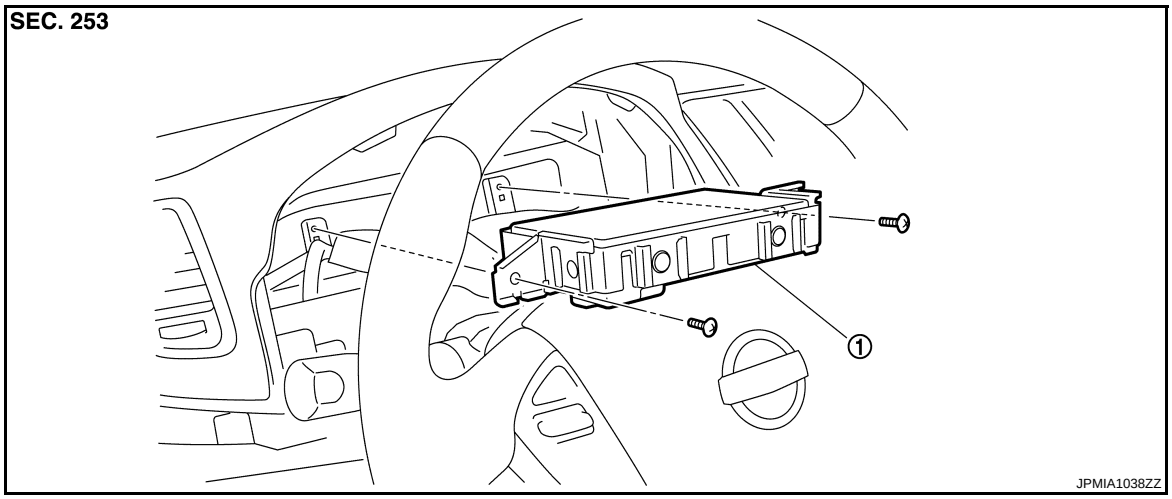

1. BCM

Removal and Installation

INFOID:0000000003839088

CAUTION:
Before replacing BCM, perform “READ CONFIGURATION” to save or print current vehicle specification. Refer to BCS-3, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM) : Description".

REMOVAL

1. Remove combination meter. Refer to MWI-126, "Removal and Installation".
2. Remove screws.
3. Remove BCM and disconnect the connector.

INSTALLATION

Install in the reverse order of removal.

CAUTION:
- **Be sure to perform “WRITE CONFIGURATION” when replacing BCM.**
- **Be sure to perform the system initialization (NATS) when replacing BCM. Refer to BCS-3, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM) : Special Repair Requirement".**

PUSH BUTTON IGNITION SWITCH

Removal and Installation

INFOID:0000000003805786

REMOVAL

Remove the push-button ignition switch fixing pawl using a remover tool (A), and then remove push-button ignition switch (1).

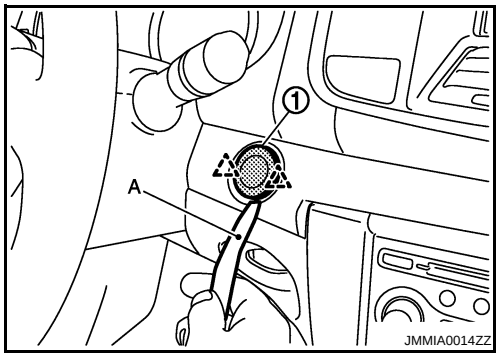

INSTALLATION

Install in the reverse order of removal.