REMOVAL

1. **REMOVE REAR WHEEL**

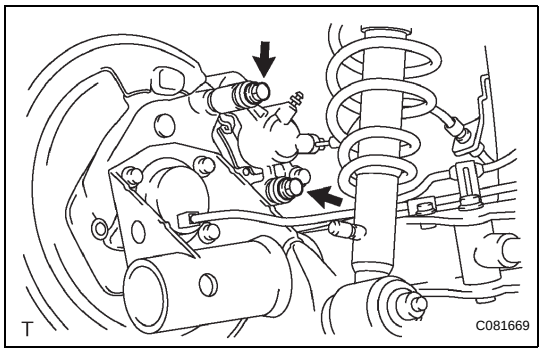

2. **SEPARATE REAR DISC BRAKE CALIPER ASSEMBLY LH (DISC REAR BRAKE TYPE)**
   (a) Remove the 2 bolts, separate the rear disc brake caliper assembly LH.
3. **REMOVE REAR DISC (DISC REAR BRAKE TYPE)**
4. **REMOVE REAR BRAKE DRUM SUB-ASSEMBLY (DRUM REAR BRAKE TYPE)**
5. **DISCONNECT SKID CONTROL SENSOR WIRE (WITH ABS)**

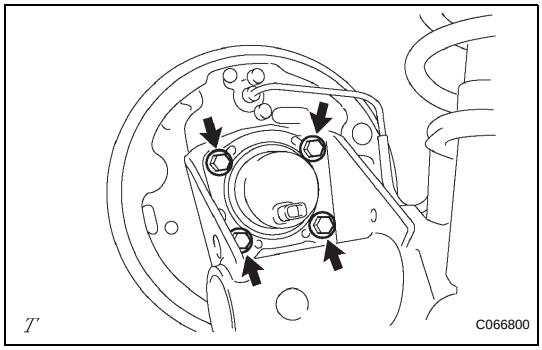

6. **REMOVE REAR AXLE HUB & BEARING ASSEMBLY LH**
   (a) Remove the 4 bolts and hub & bearing assembly LH.

INSTALLATION

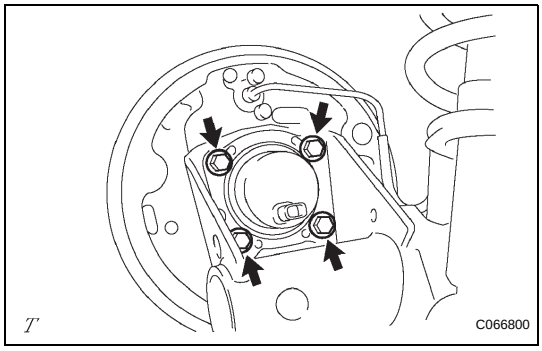

1. **INSTALL REAR AXLE HUB & BEARING ASSEMBLY LH**
   (a) Install the hub & bearing assembly LH with the 4 bolts.
   Torque: 61 N*m (622 kgf*cm, 45 ft.*lbf)
2. **CONNECT SKID CONTROL SENSOR WIRE (WITH ABS)**
   NOTICE:
   Do not twist the sensor wire when connecting it.
3. **INSTALL REAR DISC (DISC REAR BRAKE TYPE)**

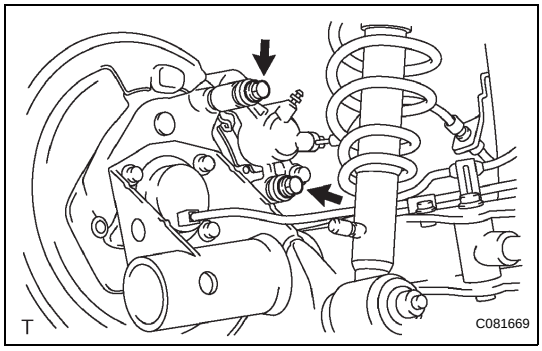

4. **INSTALL REAR DISC BRAKE CALIPER ASSEMBLY LH (DISC REAR BRAKE TYPE)**
   (a) Install the rear disc brake caliper assembly LH with 2 bolts.
   Torque: 47 N*m (479 kgf*cm, 35 ft.*lbf)
5. **INSTALL REAR BRAKE DRUM SUB-ASSEMBLY (DRUM REAR BRAKE TYPE)**
6. **INSTALL REAR WHEEL**
   Torque: 103 N*m (1,050 kgf*cm, 76 ft.*lbf)
7. **INSPECT ABS SPEED SENSOR SIGNAL (WITH ABS)**
   (a) Vehicle Stability Control System (See page BC-83)
   (b) Anti-lock Brake System (See page BC-7)