FRONT SEAT INNER BELT ASSEMBLY

COMPONENTS

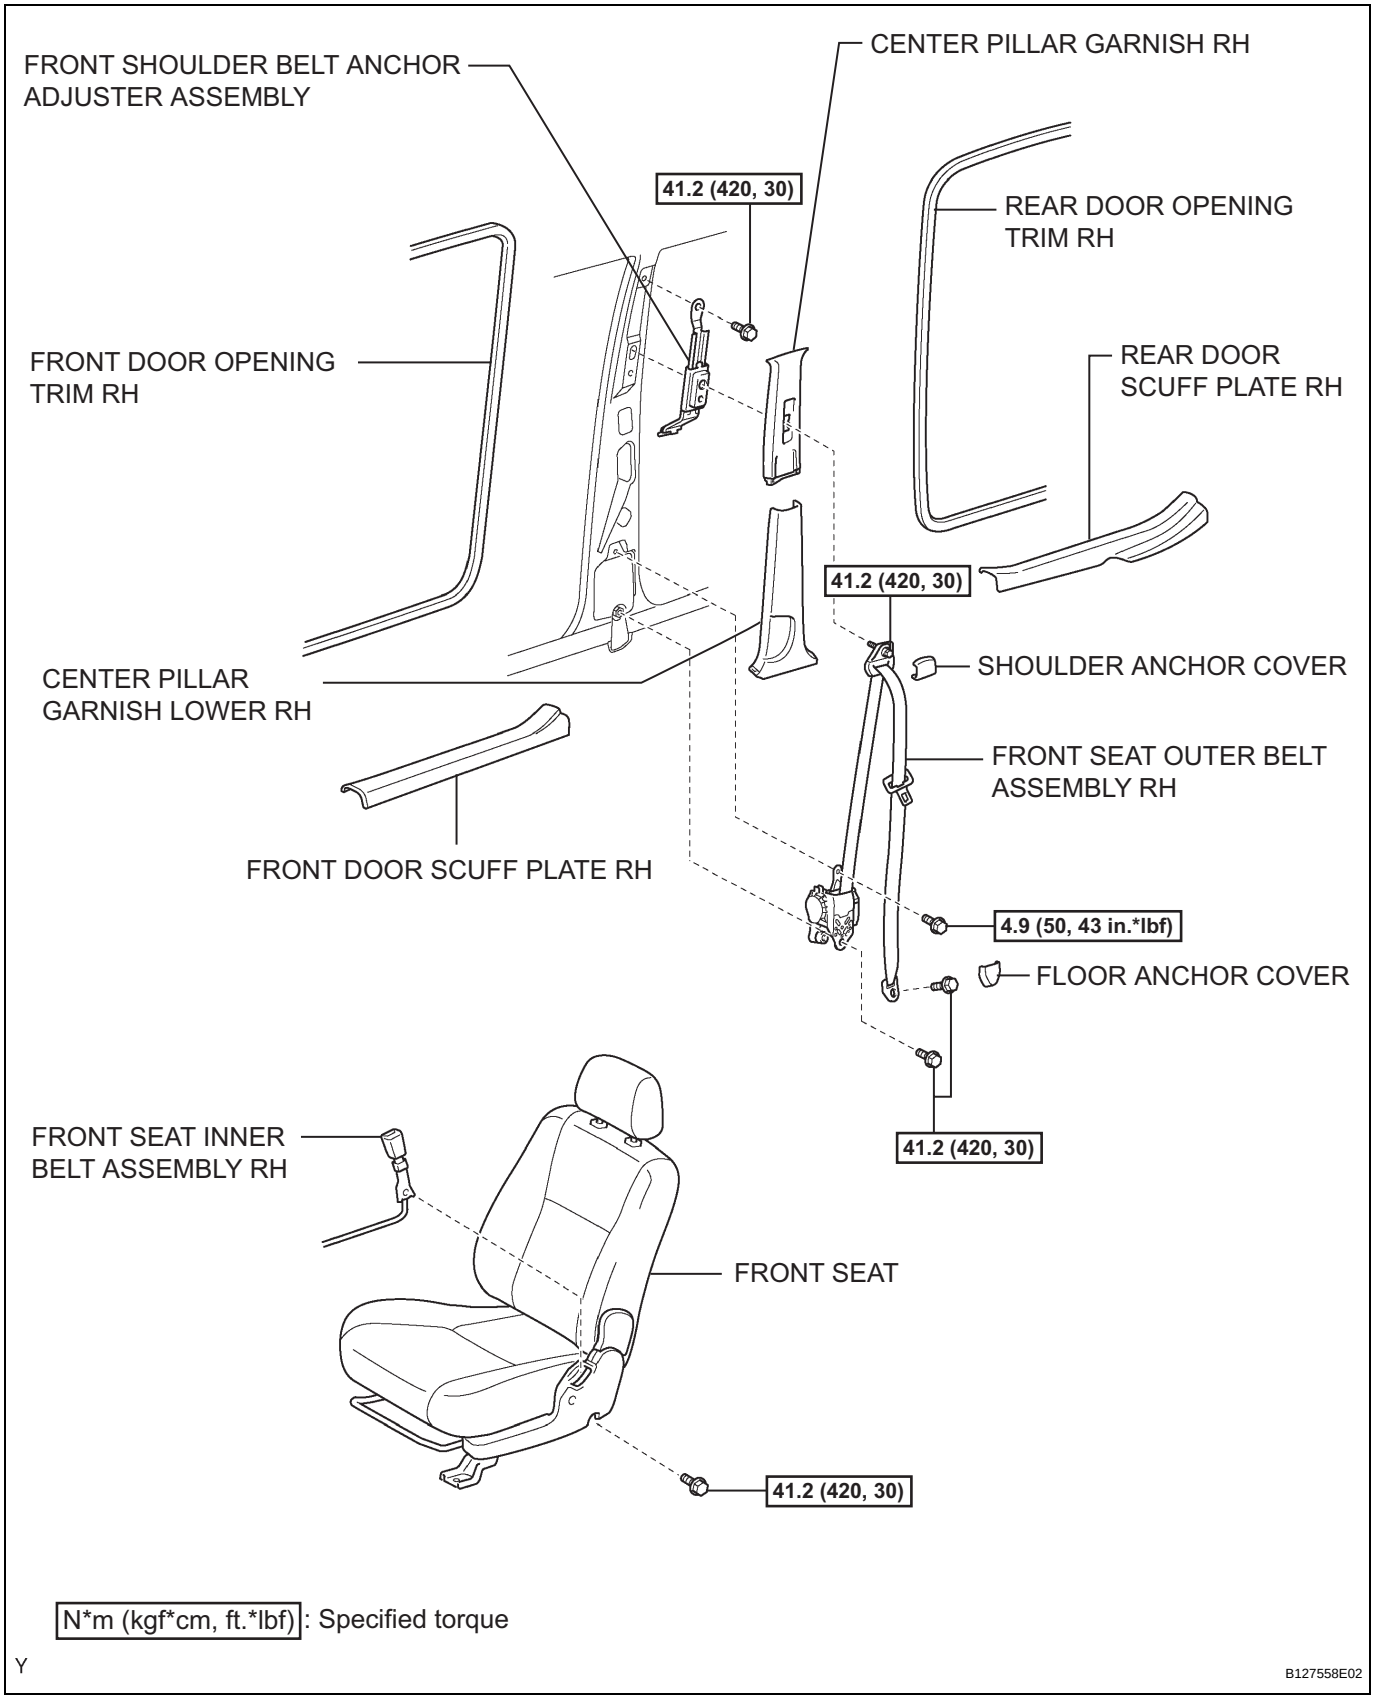

SB

SB

REMOVAL

HINT:
- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the RH side.

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
   NOTICE:
   Wait for 90 seconds after disconnecting the cable to prevent the airbag from deploying.
2. **REMOVE SEAT TRACK BRACKET COVER OUTER RH**
3. **REMOVE SEAT TRACK BRACKET COVER INNER RH**
4. **REMOVE FRONT SEAT TRACK COVER RH REAR OUTER (See page SE-10)**
5. **REMOVE FRONT SEAT TRACK COVER RH REAR INNER (See page SE-10)**
6. **REMOVE FRONT SEAT HEADREST ASSEMBLY**
7. **REMOVE FRONT SEAT ASSEMBLY RH**
8. **REMOVE FRONT SEAT INNER BELT ASSEMBLY RH (See page SE-11)**

INSPECTION

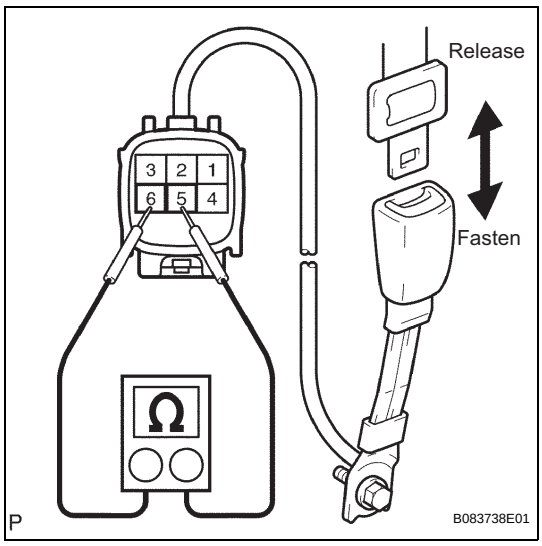

1. **INSPECT FRONT SEAT INNER BELT ASSEMBLY LH**
   (a) Measure the resistance of the buckle switch.
   Standard resistance

Tester Connection	Condition	Specified Condition
5 - 6	Fasten seat belt	1 MΩ or higher
5 - 6	Release seat belt	Below 1 Ω

If the result is not as specified, replace the inner belt assembly.