REMOVAL

HINT:
- A bolt without a torque specification is shown in the standard bolt chart.
- Tape the screwdriver tip before prying parts with it.

NOTICE:
Wear the gloves, because the cutting surface of the seatback frame and seat cushion frame may injure your hand.

1. REMOVE REAR SEAT ASSEMBLY LH
(a) Remove the headrest.
(b) Using a screwdriver, remove the 2 seatback hinge covers.
(c) Remove the 4 bolts and rear seat assembly LH.

2. REMOVE REAR SEAT ASSEMBLY RH
(a) Remove the headrest.
(b) Remove the bolt and rear seat lap type belt center floor anchor.
(c) Using a screwdriver, remove the 2 seatback hinge covers.
(d) Remove the 4 bolts and rear seat assembly RH.

DISASSEMBLY

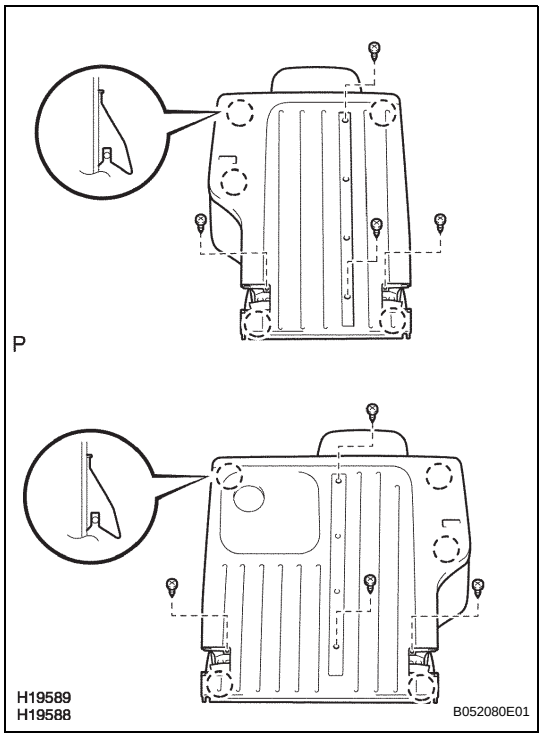

1. REMOVE REAR SEATBACK BOARD LH
(a) Remove the 4 screws and rear seatback board LH.
(b) Remove the 2 bolts and rear seatback LH.

2. REMOVE REAR SEATBACK BOARD RH
HINT:
Use the same procedures described for the LH side.

3. REMOVE SEPARATE TYPE REAR SEATBACK COVER LH
(a) Remove the 2 headrest supports.
(b) Remove the rear seatback lock release button.
(c) Remove the rear seatback stop button grommet.
(d) Remove the hog rings and rear seatback cover.

4. REMOVE SEPARATE TYPE REAR SEATBACK COVER RH
(a) Remove the 2 headrest supports.
(b) Remove the rear seatback lock release button.
(c) Remove the rear seatback stop button grommet.
(d) Using a screwdriver, remove the rear seat shoulder belt cover.
(e) Remove the bolt and rear seat lap type belt center.
(f) Remove the hog rings and rear seatback cover.

5. REMOVE SEPARATE TYPE REAR SEAT CUSHION COVER LH
(a) Remove the hog rings and rear seat cushion cover LH.

6. REMOVE SEPARATE TYPE REAR SEAT CUSHION COVER RH

(a) Remove the hog rings and rear seat cushion cover RH.

7. REMOVE REAR SEATBACK LOCK ASSEMBLY LH

(a) Remove the 2 bolts and rear seatback lock LH.

8. REMOVE REAR SEATBACK LOCK ASSEMBLY RH

(a) Remove the 2 bolts and rear seatback lock RH.