MA

ENGINE

GENERAL MAINTENANCE

HINT:
Inspect these items on a cooled down engine.

1. INSPECT DRIVE BELT

Type	See procedures
1ZZ-FE	See page EM-1

2. REPLACE ENGINE OIL AND OIL FILTER

Type	See procedures
1ZZ-FE	See page LU-3

3. REPLACE ENGINE COOLANT

Type	See procedures
1ZZ-FE	See page CO-5

4. INSPECT EXHAUST PIPES AND MOUNTINGS

(a) Visually check the pipes, hangers and connections for severe corrosion, leaks or damage.

5. REPLACE SPARK PLUGS

Type	See procedures
1ZZ-FE	See page IG-3

6. INSPECT BATTERY

Type	See procedures
1ZZ-FE	See page CH-1

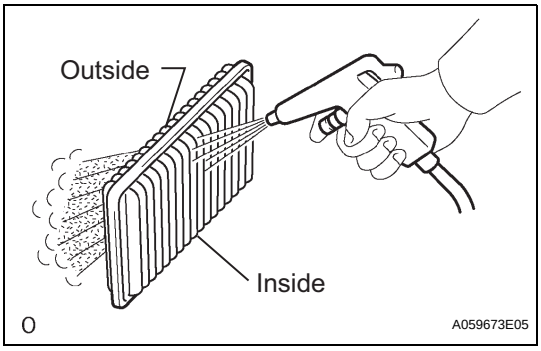

7. INSPECT AIR CLEANER FILTER

(a) Remove the air filter.
(b) Visually check that the air filter is not excessively damaged or oily. If necessary, replace the air filter.
(c) Reinstall the air filter.

8. REPLACE AIR CLEANER FILTER

(a) Replace the air filter with a new one.

9. INSPECT FUEL TANK CAP GASKET

Type	See procedures
1ZZ-FE	See page EC-7

10. INSPECT FUEL LINES AND CONNECTIONS AND FUEL TANK VAPOR VENT SYSTEM HOSES AND FUEL TANK BANDS

(a) Visually check the fuel lines for cracks, leakage, loose connections, deformation or tank band looseness.

11. INSPECT CHARCOAL CANISTER

Type	See procedures
1ZZ-FE	See page EC-8