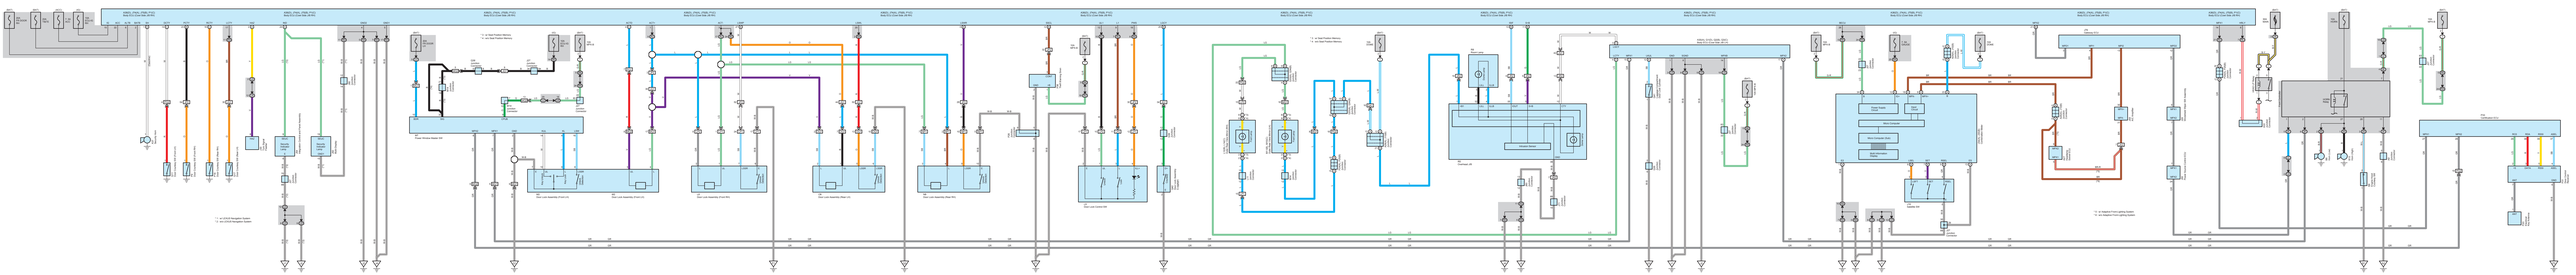
Fuse Block - Engine Compartment
Fuse Block - Engine Compartment
Fuse Block - Engine Compartment
Fuse Block - Engine Compartment
Ignition Switch
Ignition Switch
Ignition Switch