



Urban Cruiser

Overfenders





Repair manual









Model year:	2009	
Vehicle code:	NLP115*-AHF**W	(AWD)
	N*P110*-AHF**W	(2WD)
Part number:	PZ415-B4400-00	(AWD)
	PZ415-B4401-00	(2WD)

Manual reference number: AIM 001 702-2

Revision Record


Rev. No.	Date	Page	Picture	Update	New	Deleted
1	07/05/2009	4	Tools		X	
2	03/06/2009	4,5	Tools, 3	X		

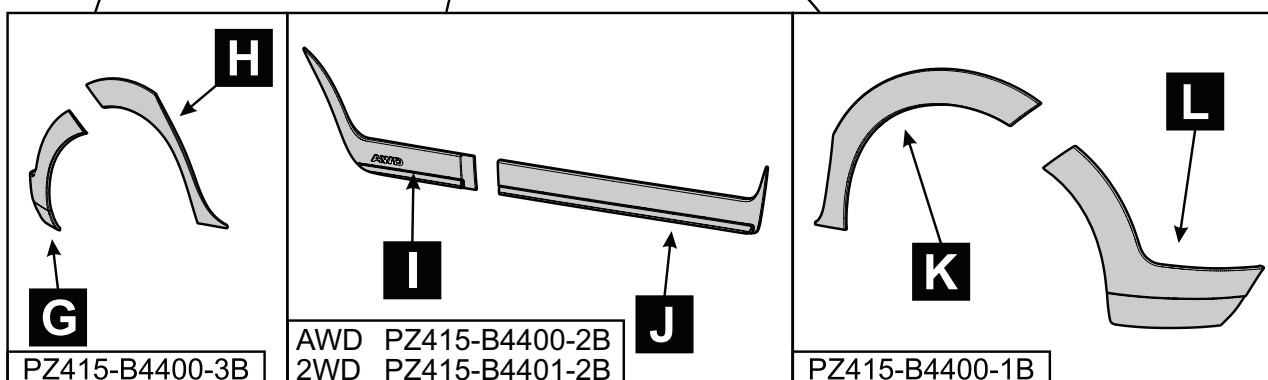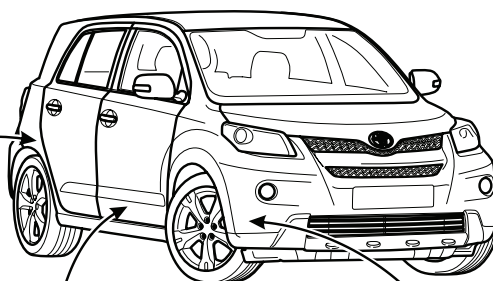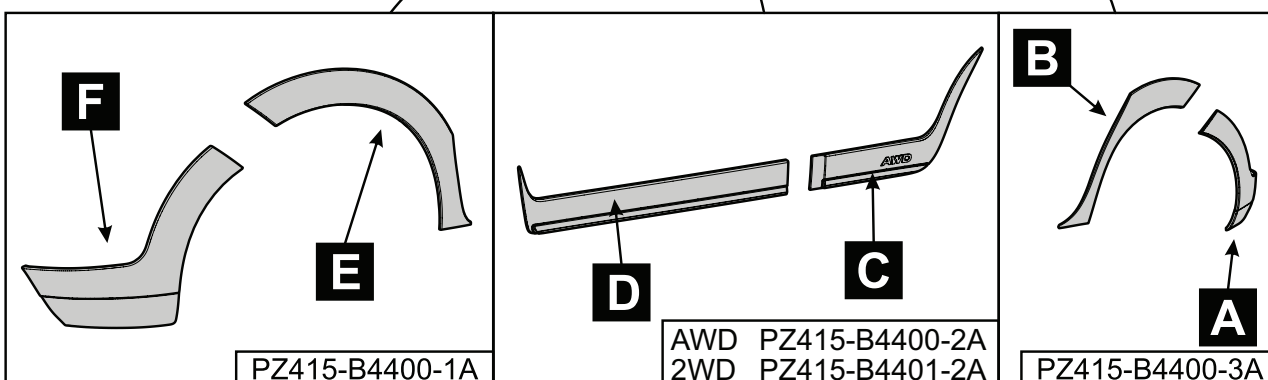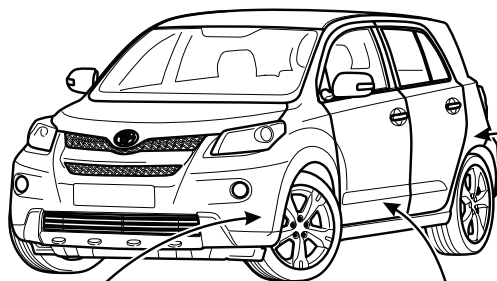

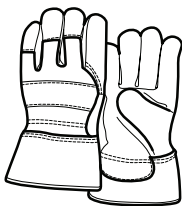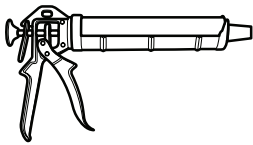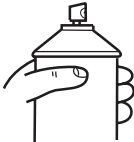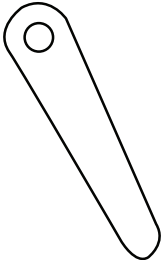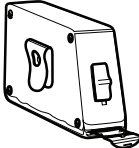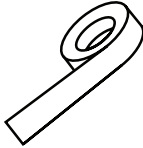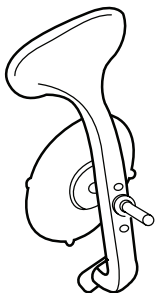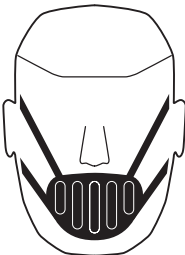	 GLUE	 PRIMER	 CLEANER
	• MAKRA : EVO - BOND 500 302-77/EVO	• MAKRA : Plastic Repair primer 302-93	• MAKRA : MAKRY SOL 302-11
	• TEROSON : TEROSTAT 9096PL	• TEROSON : TERKAL 150	• TEROSON : TEROSON FL
 Sontara			
			

Makra EVO - BOND 500 / Teroson - Terostat 9096PL


	Min	Max	
Application of glue	+5	+35	°C
Installation of parts (after glue application)	0	10	min
Adhesion of parts	1	2	H
Removal of tape/clamps	3	12	H
Ambient Temp. after installation	+5	+40	°C
Exposure to ambient temp (as above)	1		H
Carwash	24		H

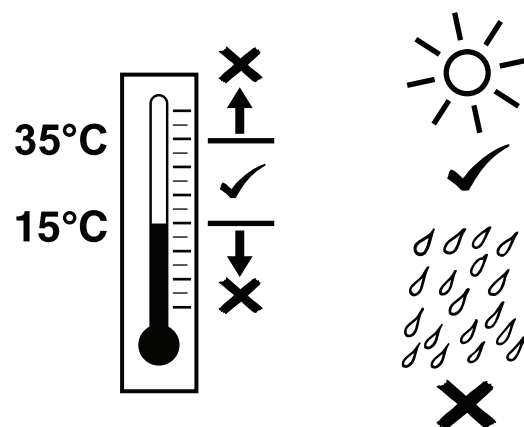


1



2

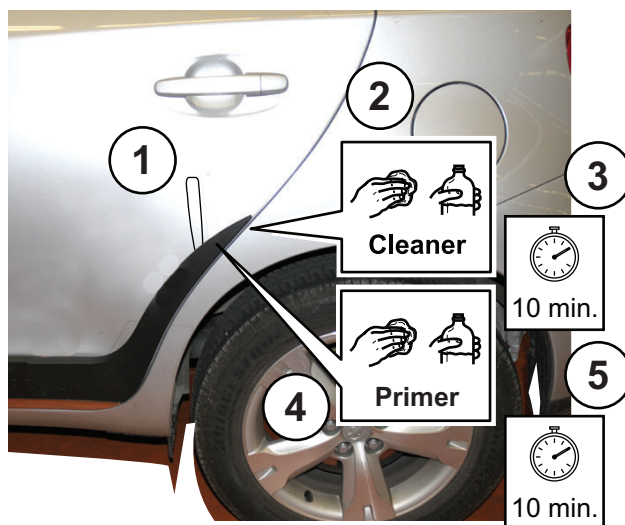

3

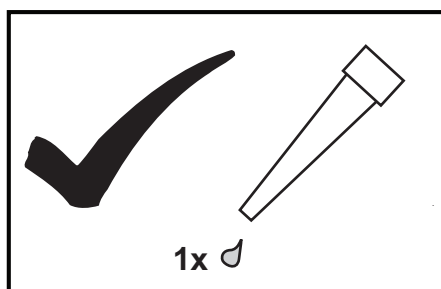




4





5



6

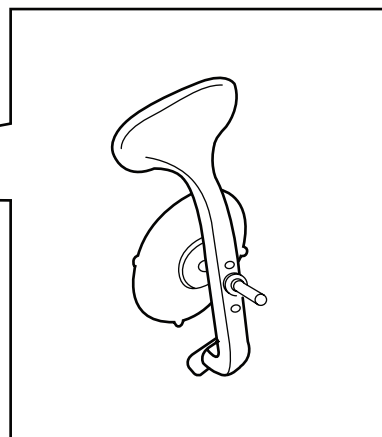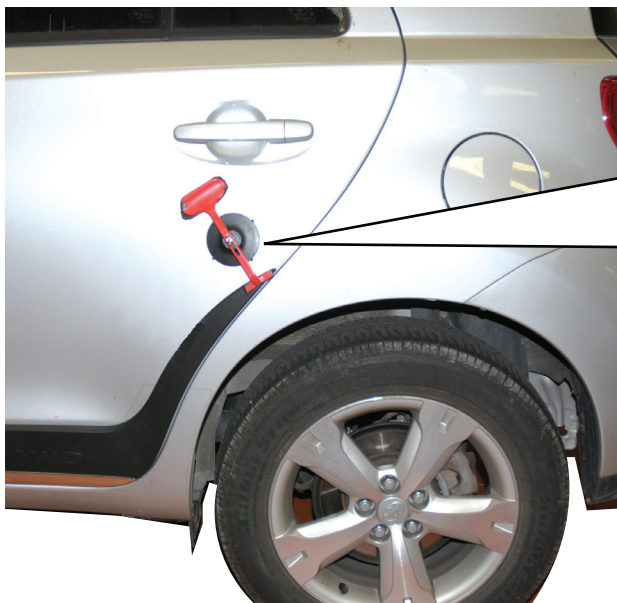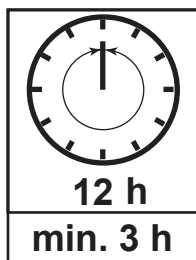

7

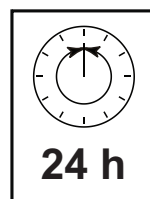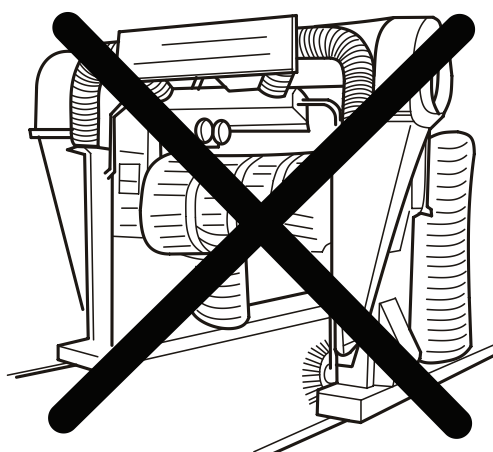

8