



Fortuner

Side mouldings

Installation instructions

ALWAYS A
BETTER WAY


Model year:	As from 2020/05
Vehicle code:	**N1***_*****W
Part number:	PC170-0K00H PZ415-00000 Adhesion promoter (4x)

Manual reference number: AIM 005 094 - 0

Revision Record

Rev. No.	Date	Page	Step	Remarks

PC170-0K00H

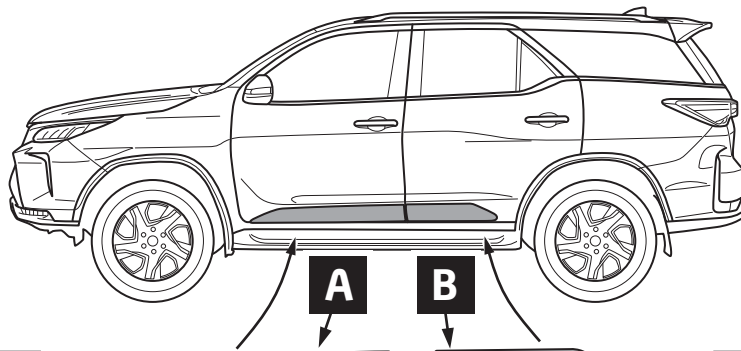


PC170-0K01Q

Front Left

Rear Left

PC170-0K01S



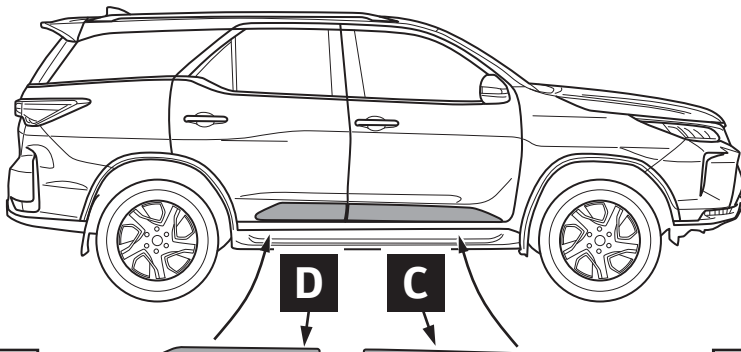


PC170-0K01R

Rear Right

Front Right

PC170-0K01N

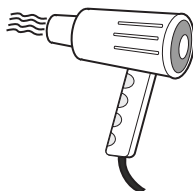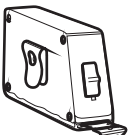

PZ415-00000-00

adhesion promoter
(4x)




AIM 003-516-*










INFO




Material Safety Data Sheet

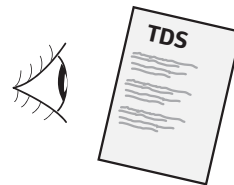

Technical Data Sheet

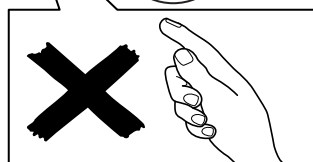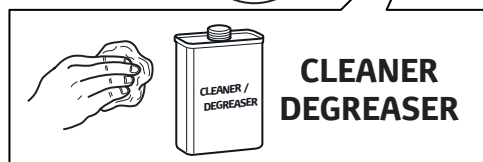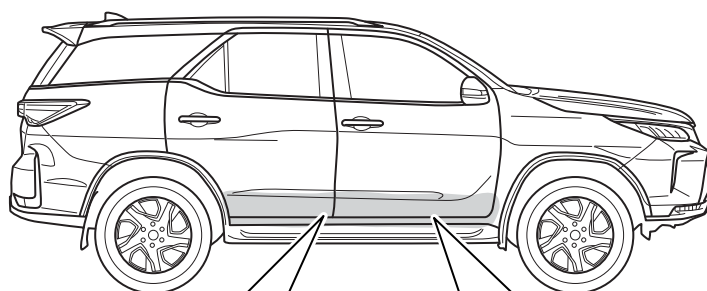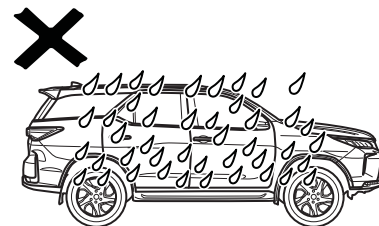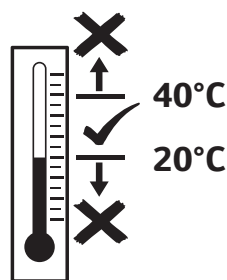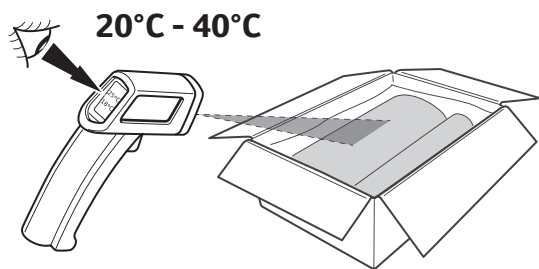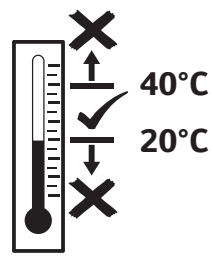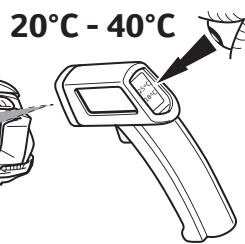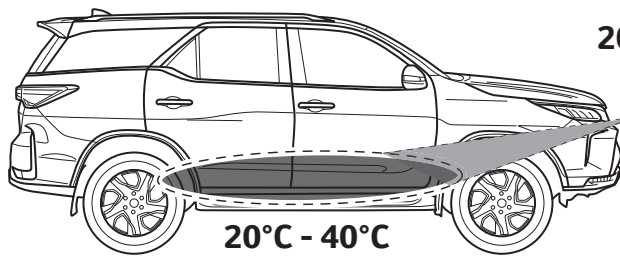


1




1	20°C - 40°C → 2 20°C < 40°C → 3	2
3	20°C < 40°C → 3	INFO 2 → 12 ✓ ✗

2

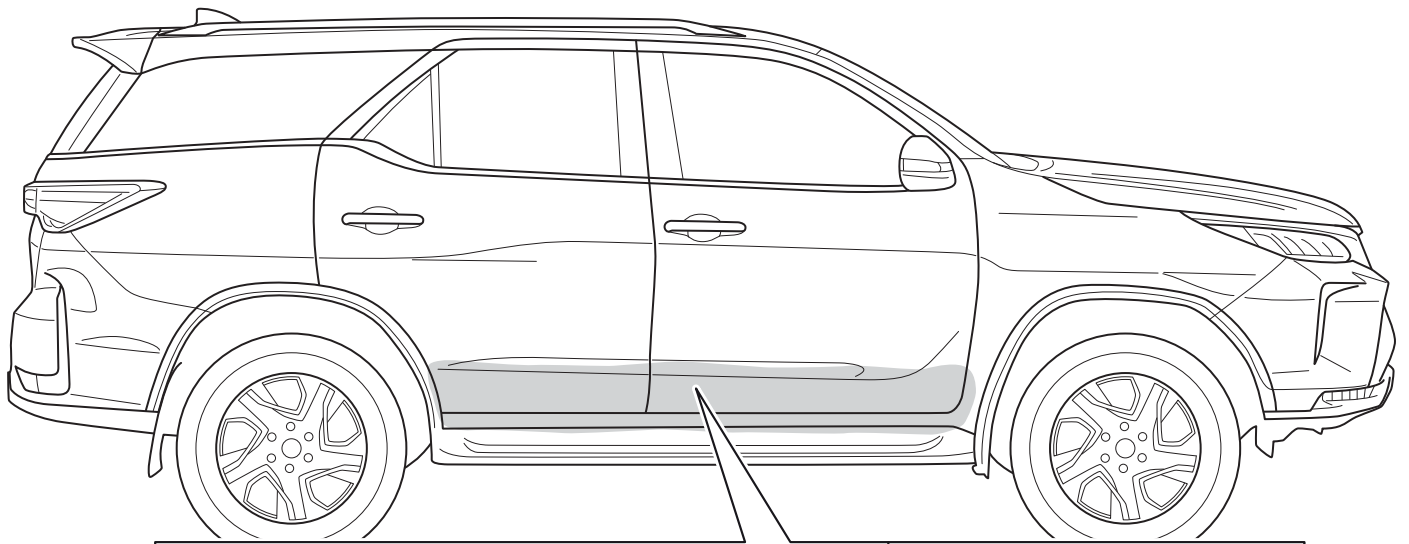

 1	$< 20^{\circ}\text{C} \rightarrow \textcircled{2}$ $20^{\circ}\text{C} < 40^{\circ}\text{C} \rightarrow \text{4}$	 2
 3	$20^{\circ}\text{C} < 40^{\circ}\text{C} \rightarrow \text{4}$	INFO 3 $\rightarrow$ 12


3

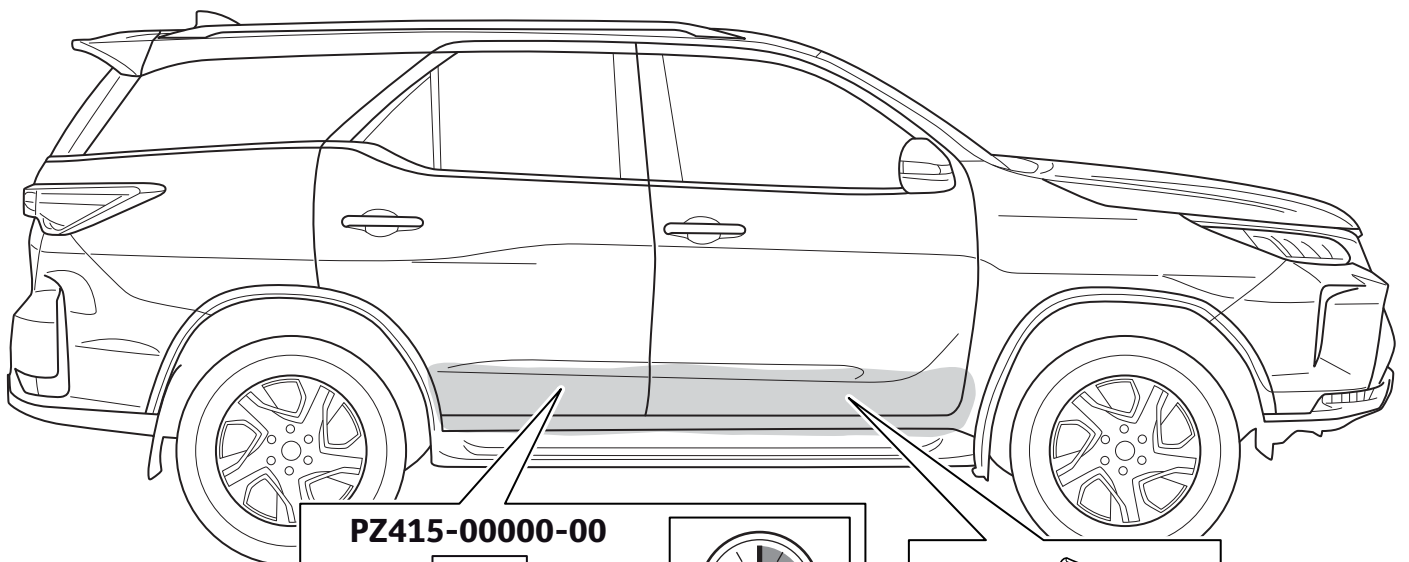



PZ415-00000-00


**3M adhesion promoter
4298 UV**

**>45 secs.
< 1 hour**

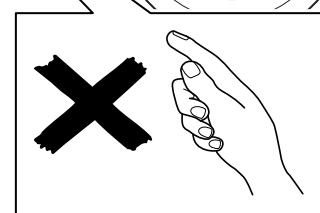


4

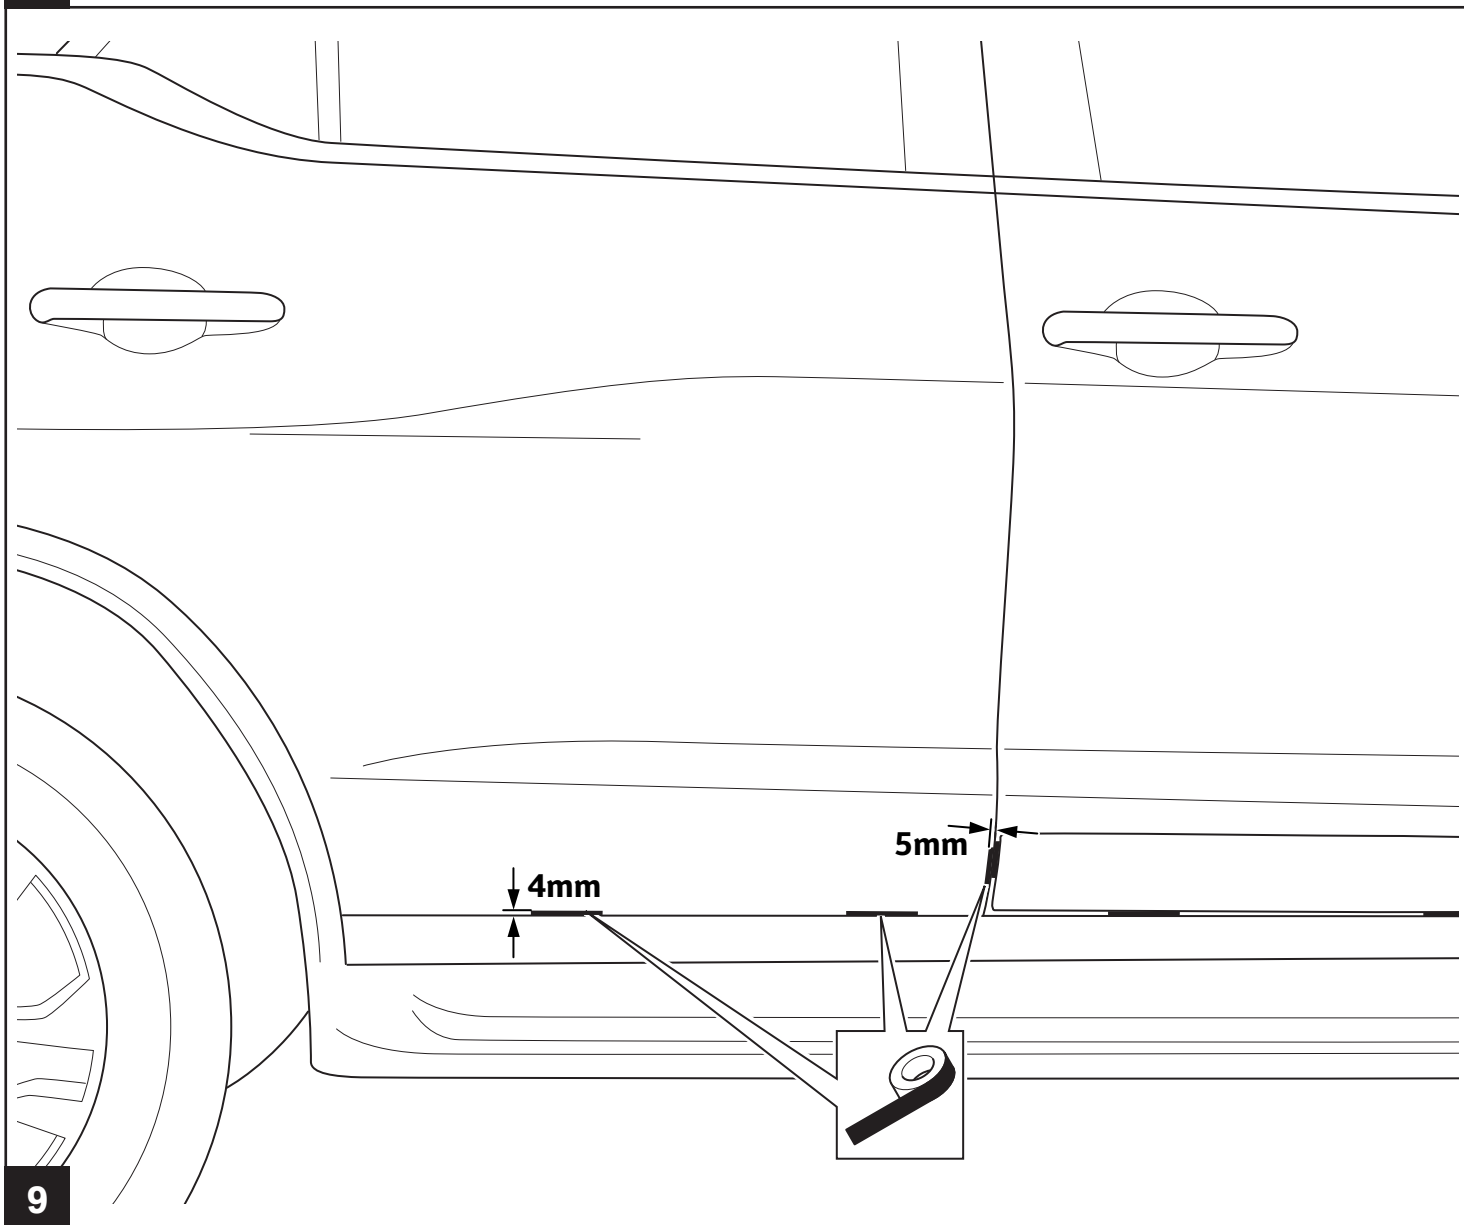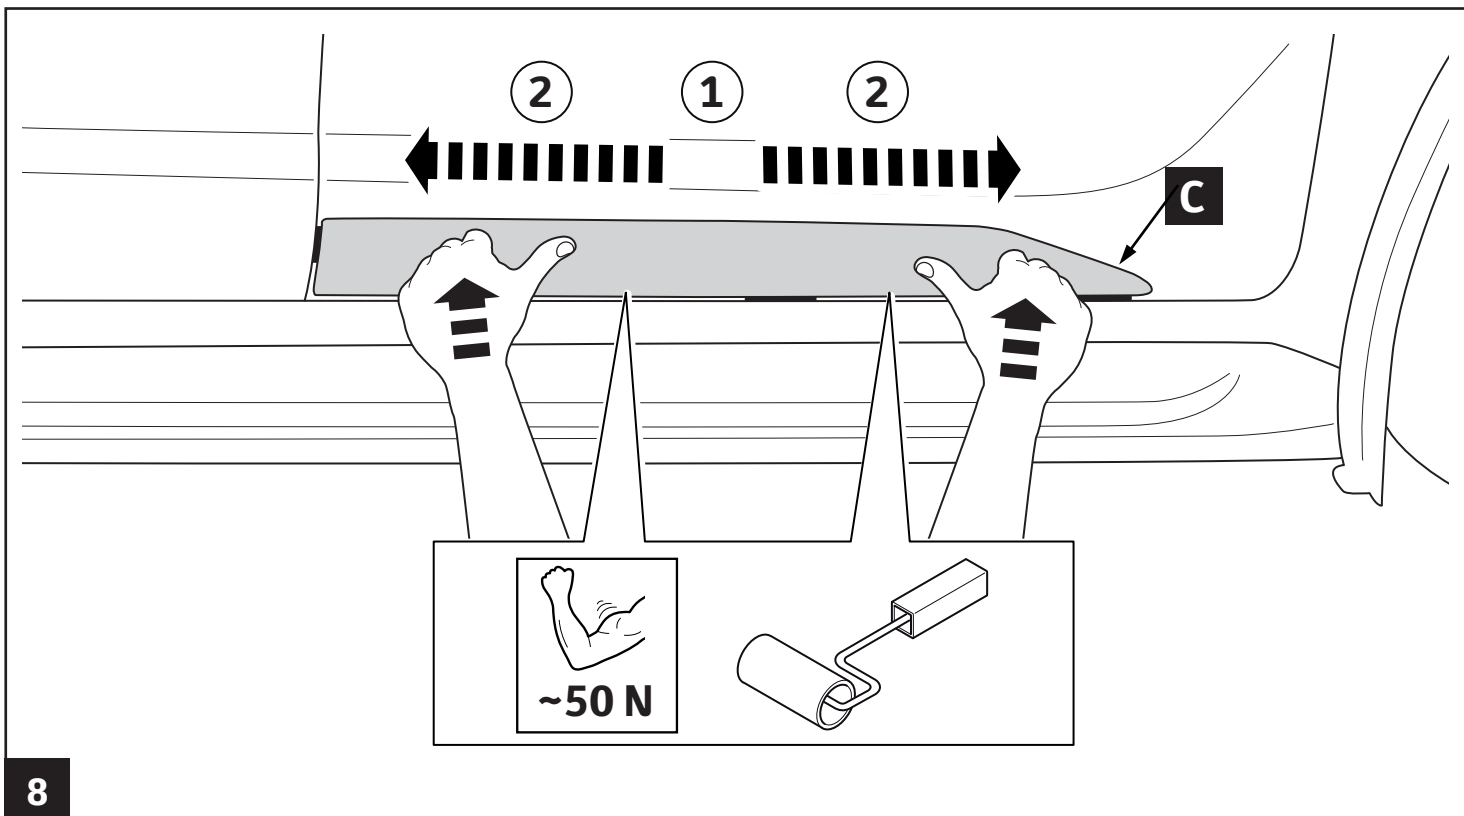


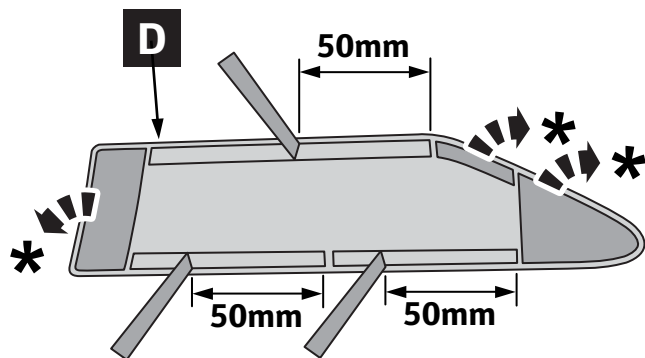

10

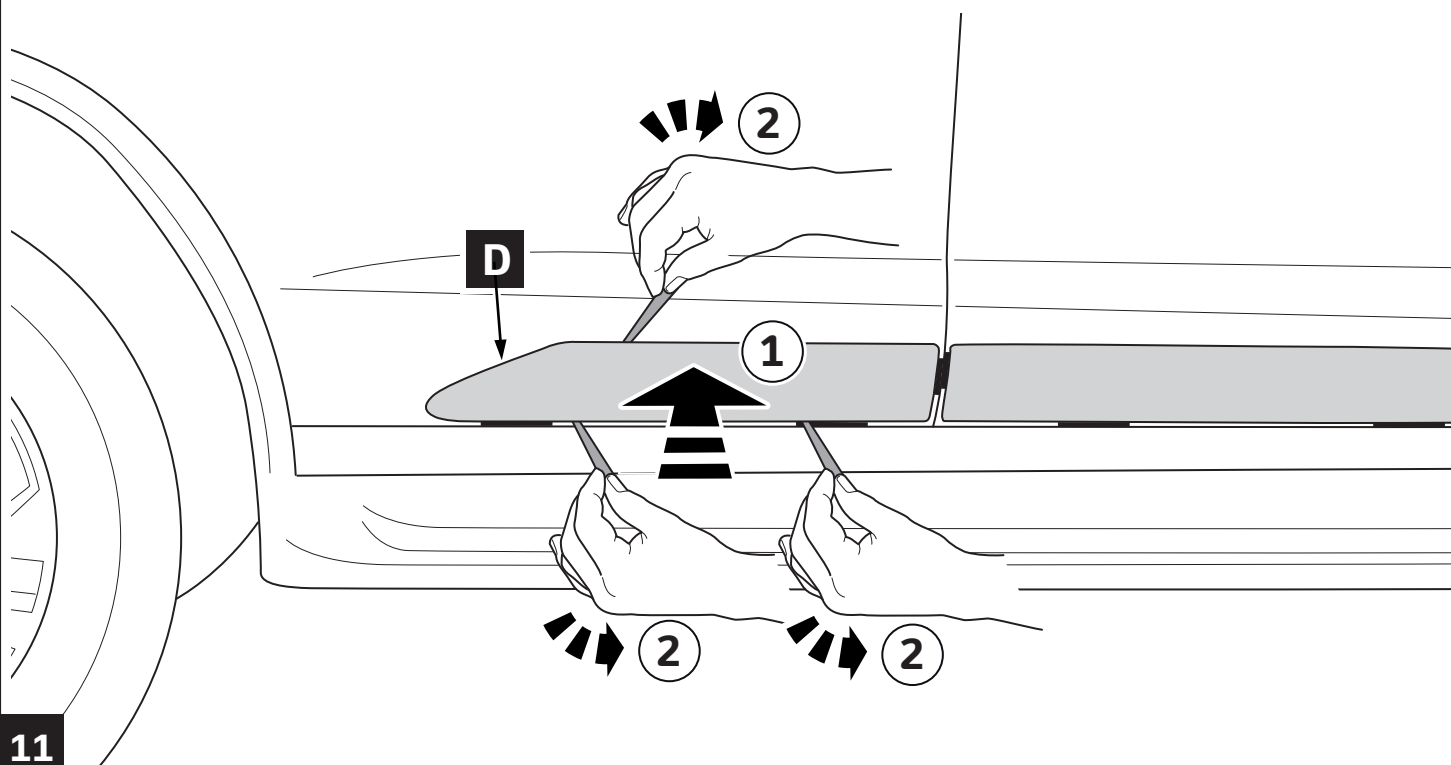

11

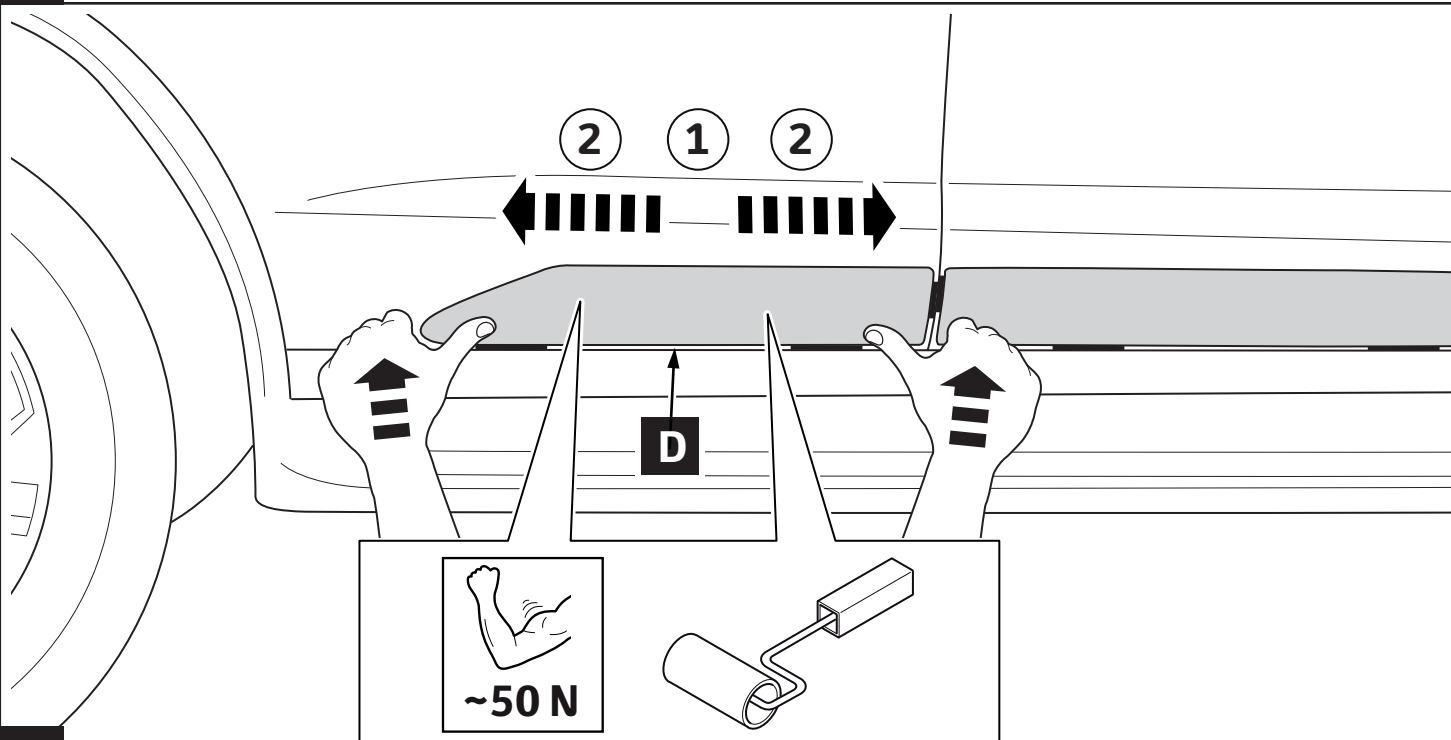

12

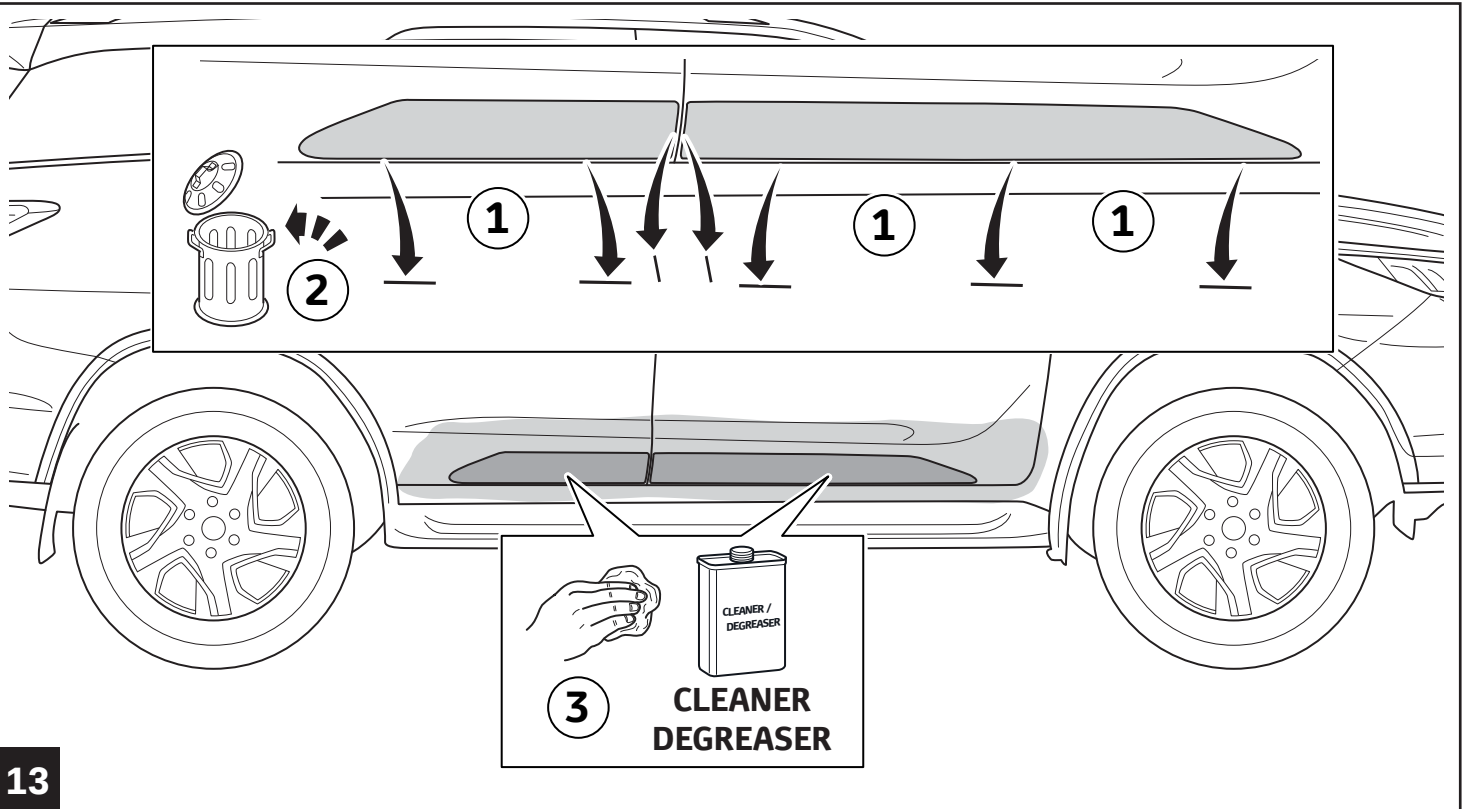






Fig.1 - Fig.13

RHS = LHS
C D A B



Fig.1 - Fig.13

14

INFO

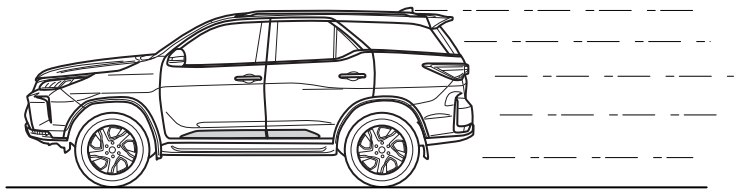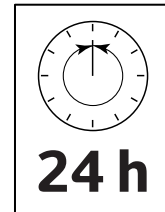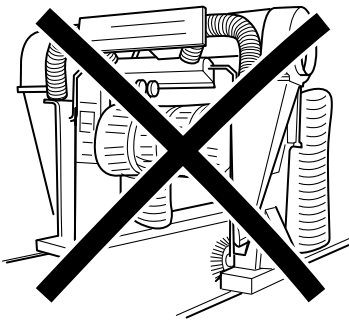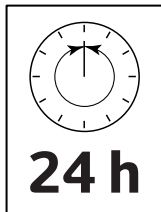

Max. 90 Km/h

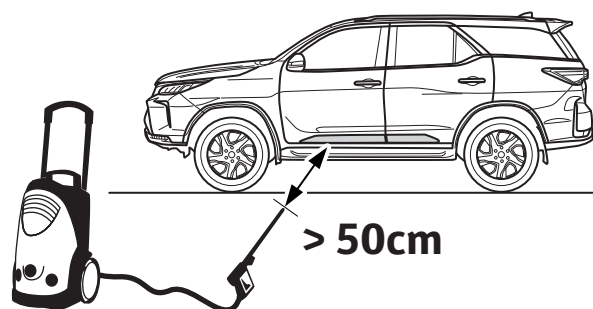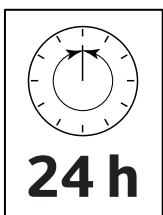

CHECK SHEET 1 of 1



TOYOTA


ALWAYS A
BETTER WAY

Model / Year Fortuner
as from 2020/05








Side mouldings

VIN n°

DURING INSTALLATION

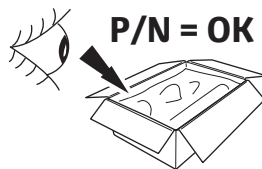☐

AFTER INSTALLATION

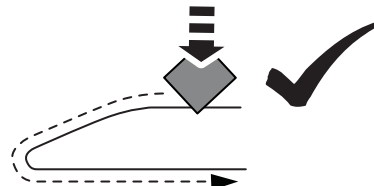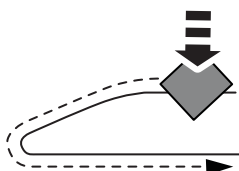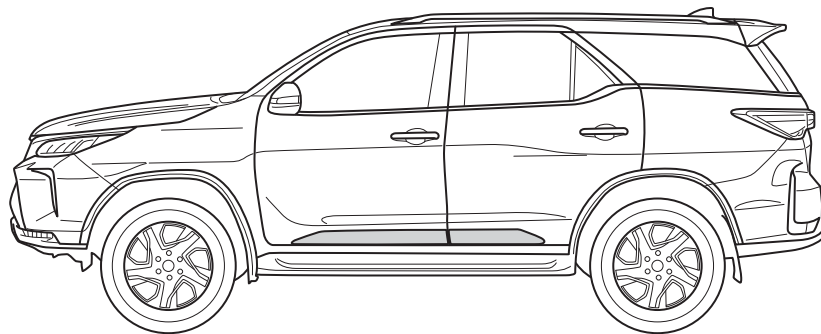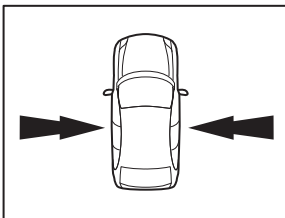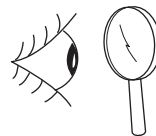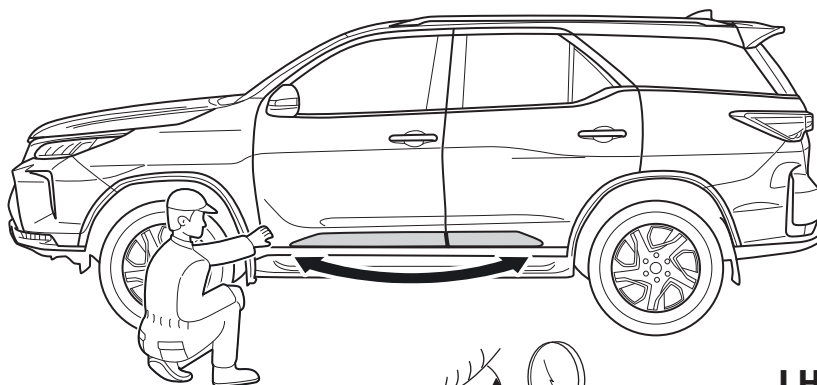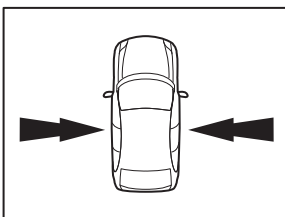☐

= OK

LHS

RHS

☐☐

Installation Date:

. . / . . /

Technician Name & Signature:

Stamp: