

34 41 120**Removing and installing or replacing
both handbrake Bowden cables****Special tools required:**

- 32 1 030

**Necessary preliminary tasks:**


- Remove [centre console](#).

Note:

After completing repair work:


- Adjusting [parking brake](#)

cardiagn.com

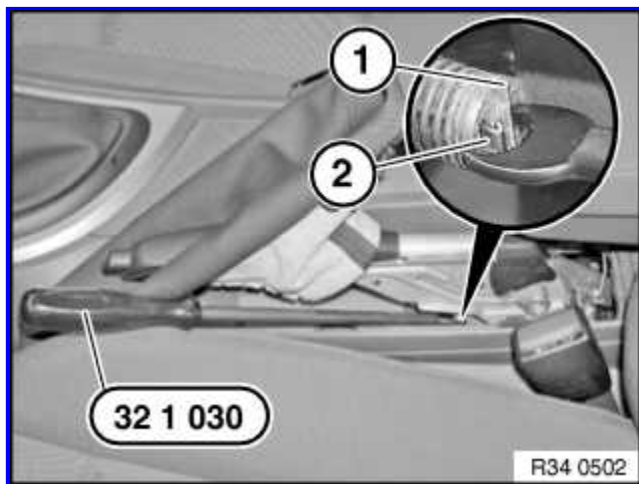

Lock adjustment unit (ASZE).


Actuate parking brake lever. Connect special tool 32 1 030. Press limit position (1) of adjusting spring back to such an extent that retaining hook (2) engages in limit position (1).

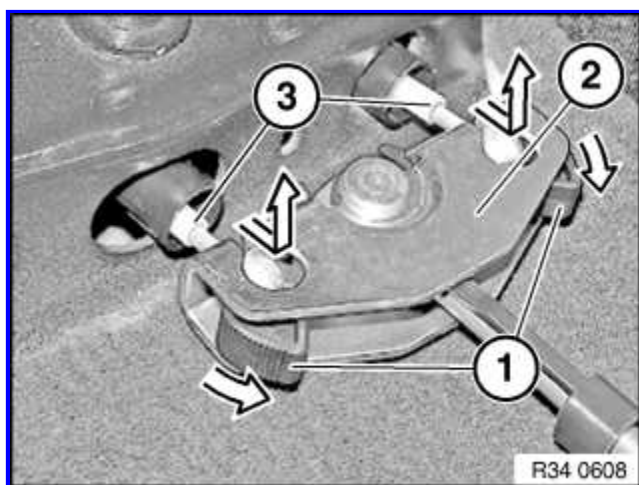

Press retainer (1) in balance arm (2) forward in direction of arrow.


Detach parking brake Bowden cables (3) from balance arm (2).

Release screw (1) and remove holder (2).

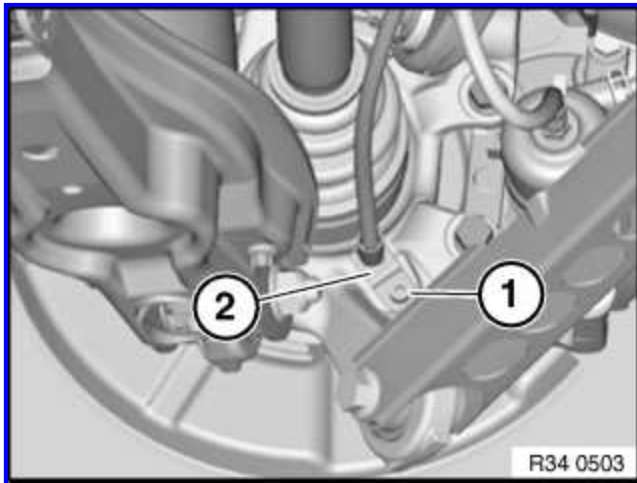

Installation note:

Tightening torque [34 41 2AZ](#).

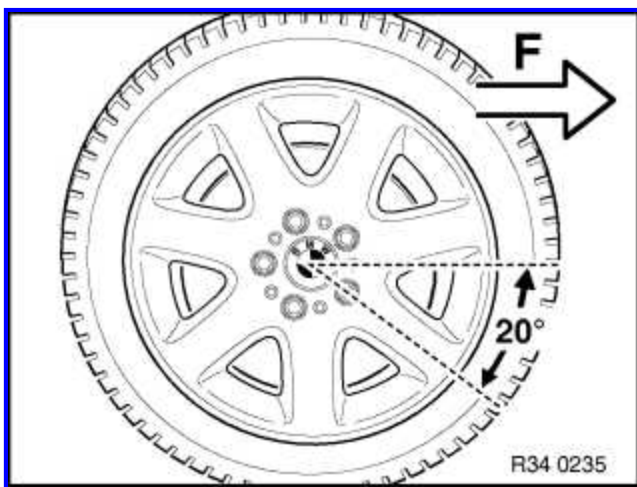

Release one wheel stud.


Bring wheel into position (threaded hole turned down approx. 20° from horizontal).

F = direction of travel

Installation note:

Reinstall wheel stud only after handbrake has been adjusted.

Tightening torque [36 10 1AZ](#).

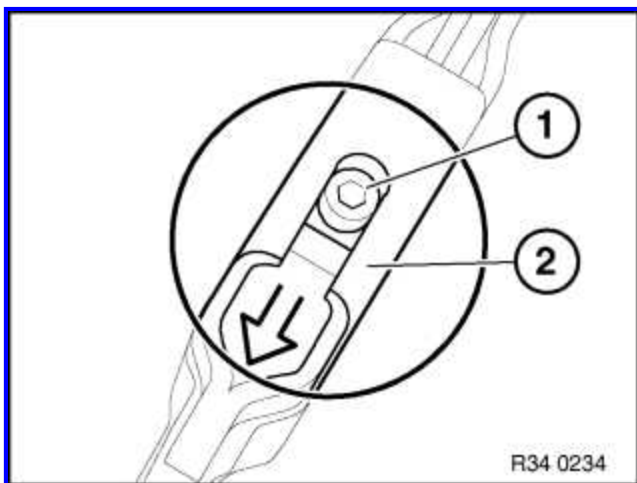

Nipple (1) and brake shoe expander lock (2) are visible through threaded hole.

Push in core of parking brake Bowden cable in direction of brake shoe expander to limit position and grip firmly.

Press nipple (1) downwards through threaded hole with a screwdriver.


Pull parking brake Bowden cables out of wheel carrier.



Installation note:

Insert parking brake Bowden cable into brake anchor plate/brake guard plate. Sleeve must be inserted up to stop.

Nipple of parking brake Bowden cable must audibly snap into place in brake shoe expander.

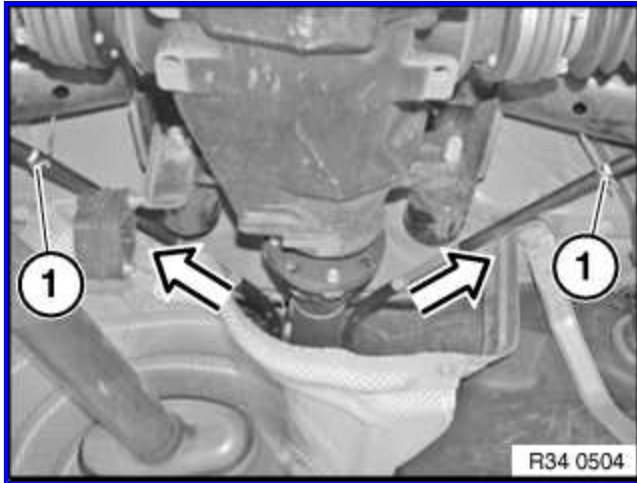

Disconnect parking brake Bowden cables from holders (1).

Pull parking brake Bowden cables rearwards out of guide tube.