


34 41 140**Removing and installing or replacing
guide tube for handbrake cables****Special tools required:**

- 32 1 030

**Necessary preliminary tasks:**

- Remove [centre console](#).
- Remove exhaust system.
- Remove heat shield.

cardiagn.com

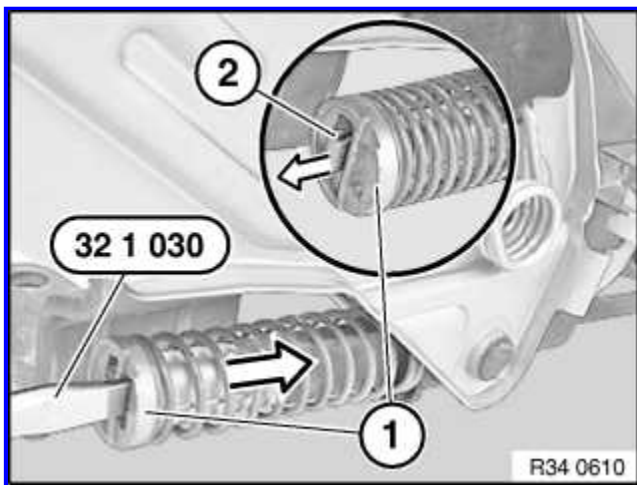

Lock adjustment unit (ASZE).

Actuate parking brake lever. Connect special tool 32 1 030. Press limit position (1) of adjusting spring back to such an extent that retaining hook (2) engages in limit position (1).

Installation note:



Unlock adjustment unit (ASZE).

Lever out restraining hook (2) with a suitable screwdriver.

Restraining hook (2) must detach from limit position (1) of adjusting spring.

Press retainer (1) in balance arm (2) forward in direction of arrow.

Detach parking brake Bowden cables (3) from balance arm (2).

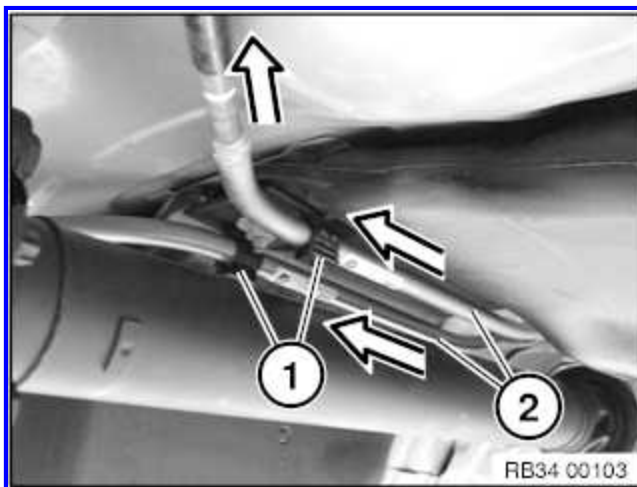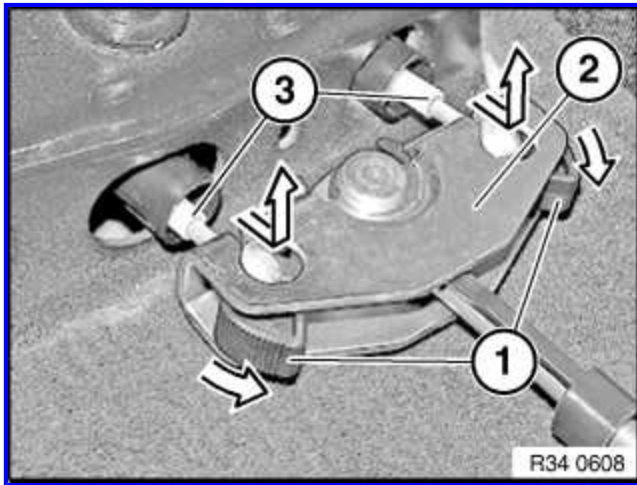

Pull parking brake Bowden cables out of guide tube.

Detach the guide tubes from the clip (1).

Installation note:

It is absolutely necessary to replace damaged clips (1).

Pull both guide tubes (2) a little in direction of arrow to the back and remove guide tubes.

Installation note:

The two guide tubes must be inserted into the holder under the centre console by touch!

Both rubber grommets must be correctly pressed into the body after securing the guide tubes in the clips (1).



After installation:

- Adjusting [parking brake](#)