



TOYOTA

ALWAYS A
BETTER WAY

Toyota C-HR

Foglamp ornament surround

Installation instructions




Model year: 2019/10
Vehicle code: **X****-AH***W
Part number: PW401-10002-**


Manual reference number: AIM 004 579 - 1





Revision Record

Rev. No.	Date	Page	Step	Remarks
	20.05.20	8		Info updated
	20.05.20	9, 10	C/S	CheckSheet updated

PW401-10002-AG
PW401-10002-BN
PW401-10002-DJ
PW401-10002-GF
PW401-10002-24
PW401-10002-01

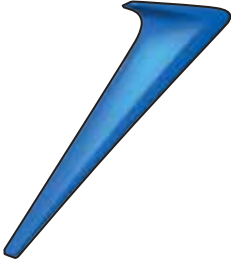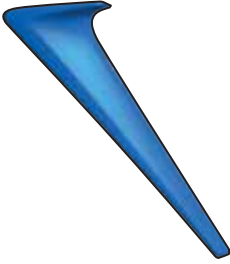 A	 B	 C
1x	1x	4x


 = 	 = 	 = 	 = 	
 = 	 = 	 = 	 = 	 = START

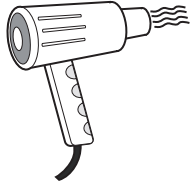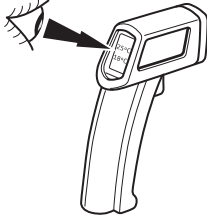 10 mm						 CLEANER / DEGREASER  AIM 003-516-*
 Ø3 mm Ø7 mm			 + °C 		 ? °C 	








INFO








Material Safety Data Sheet

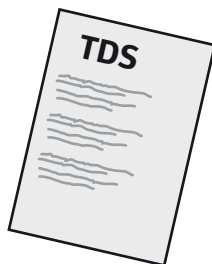


Technical Data Sheet

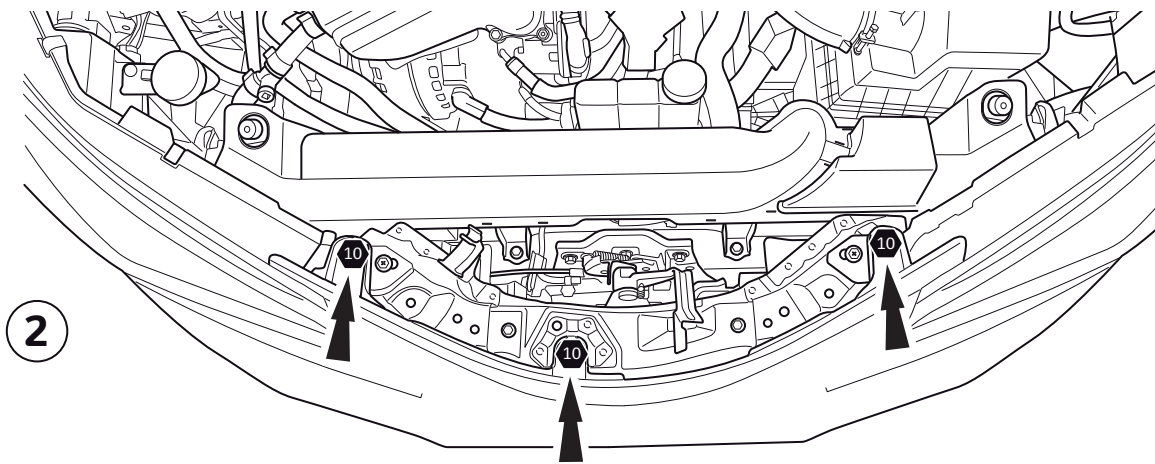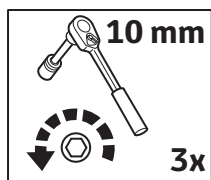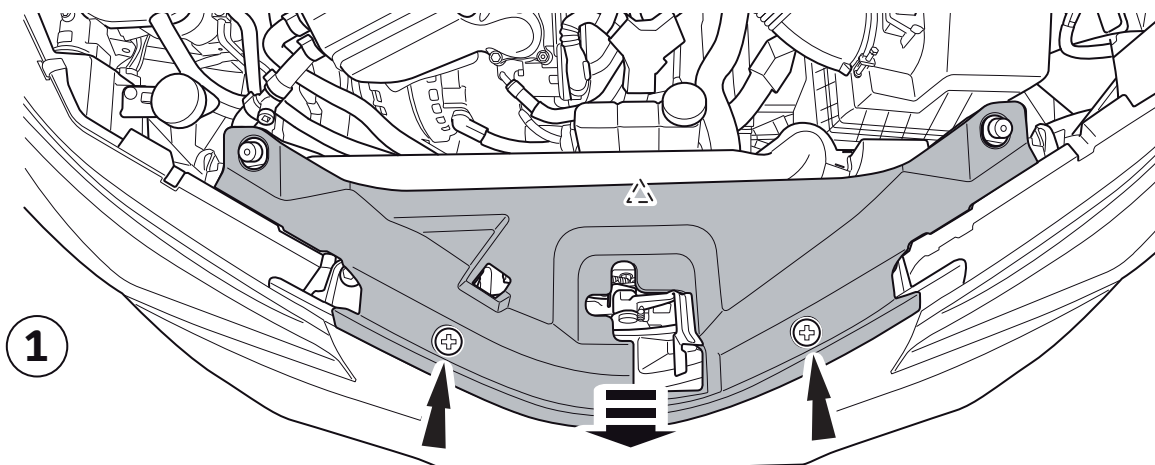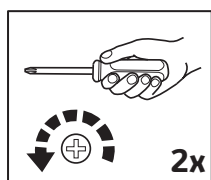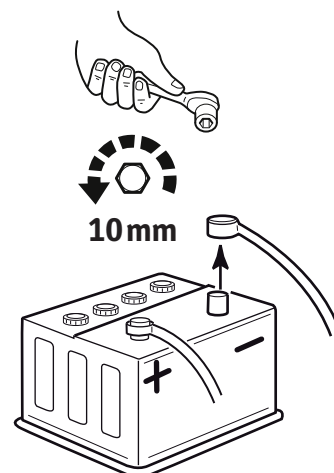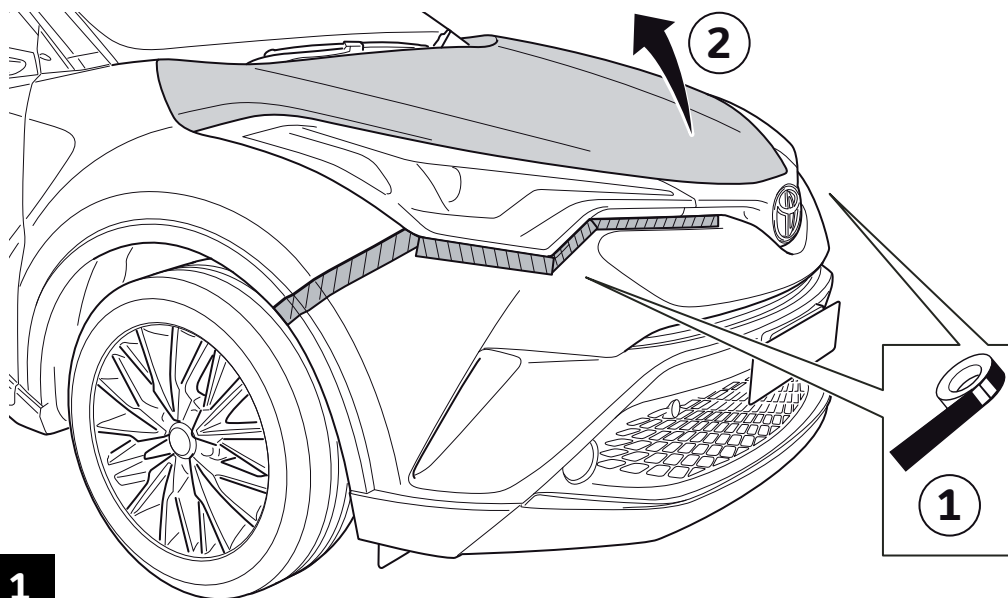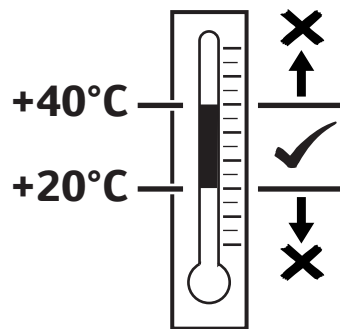

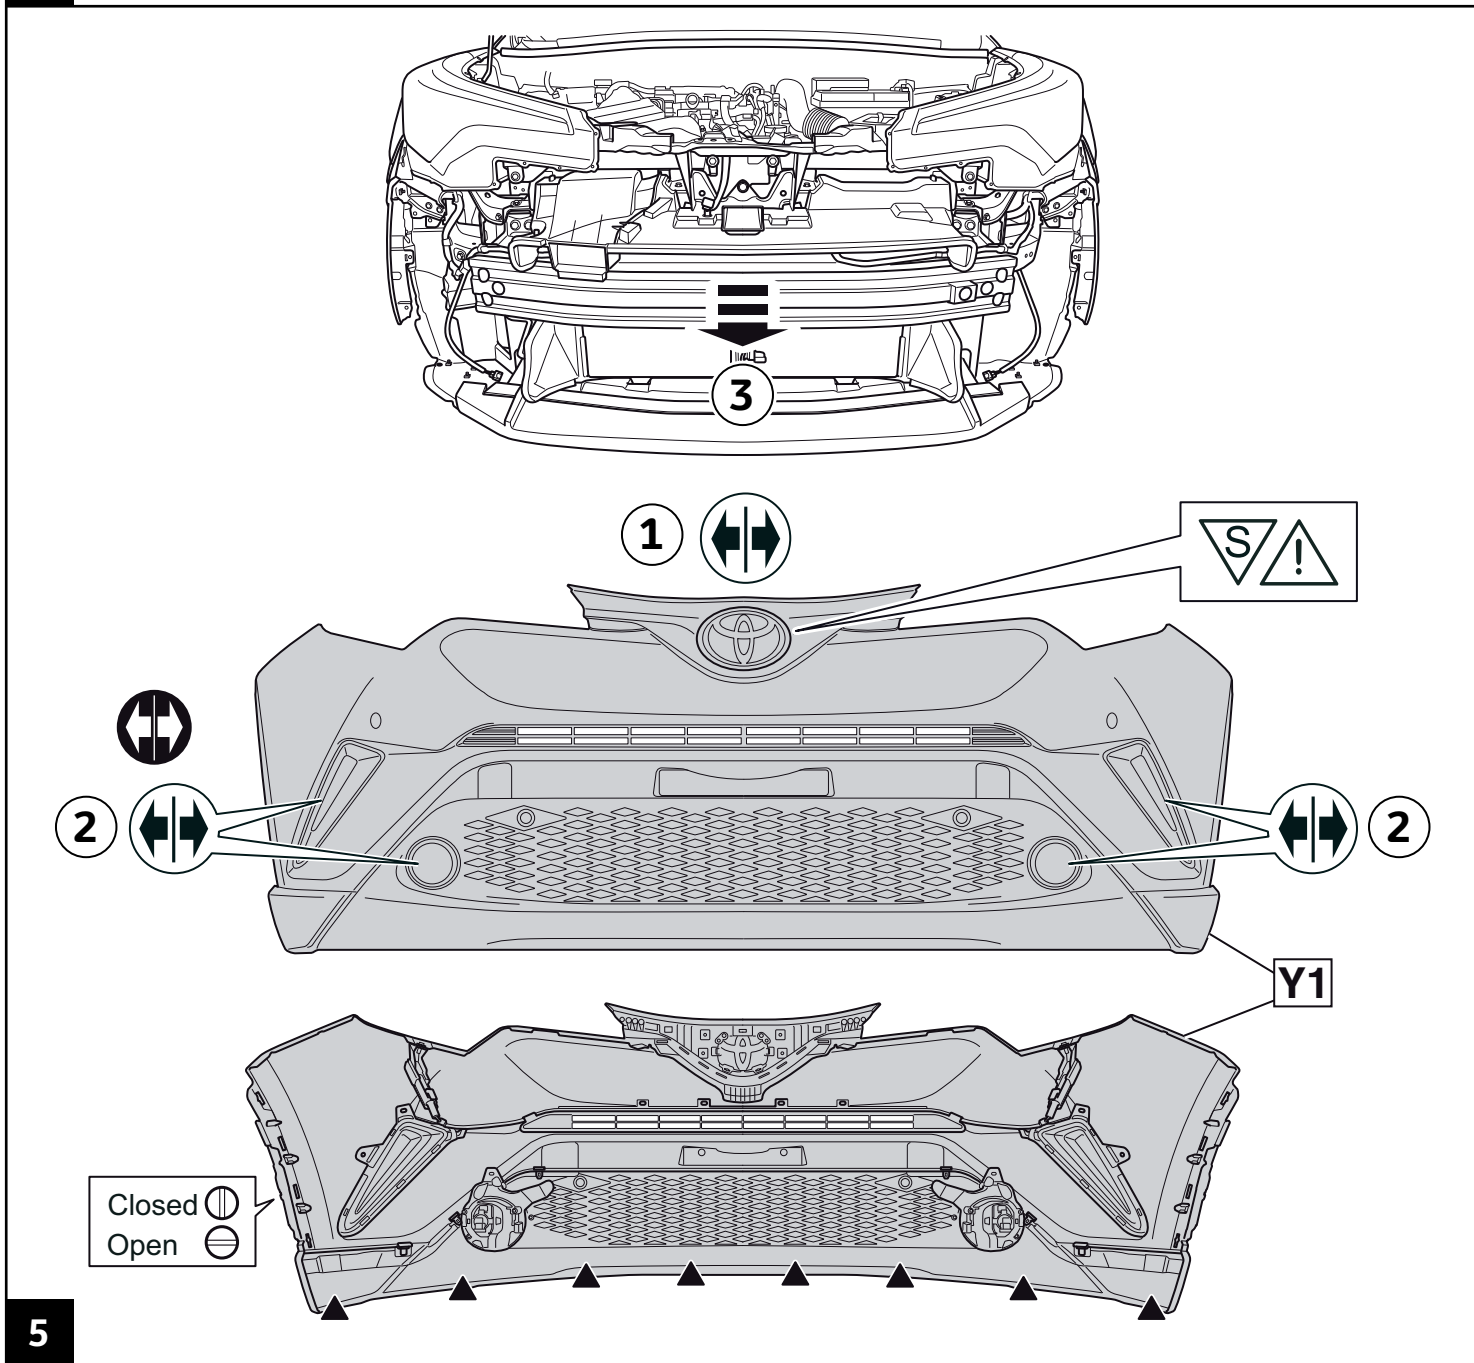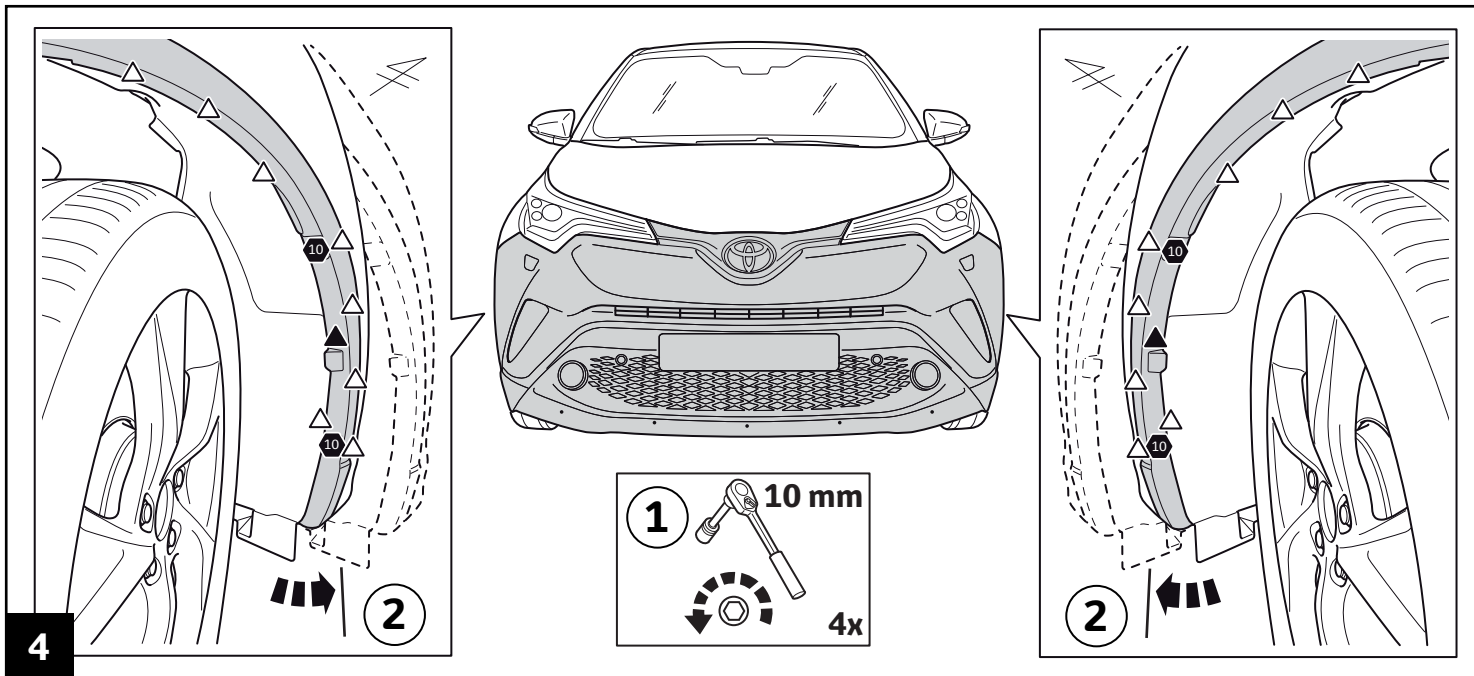


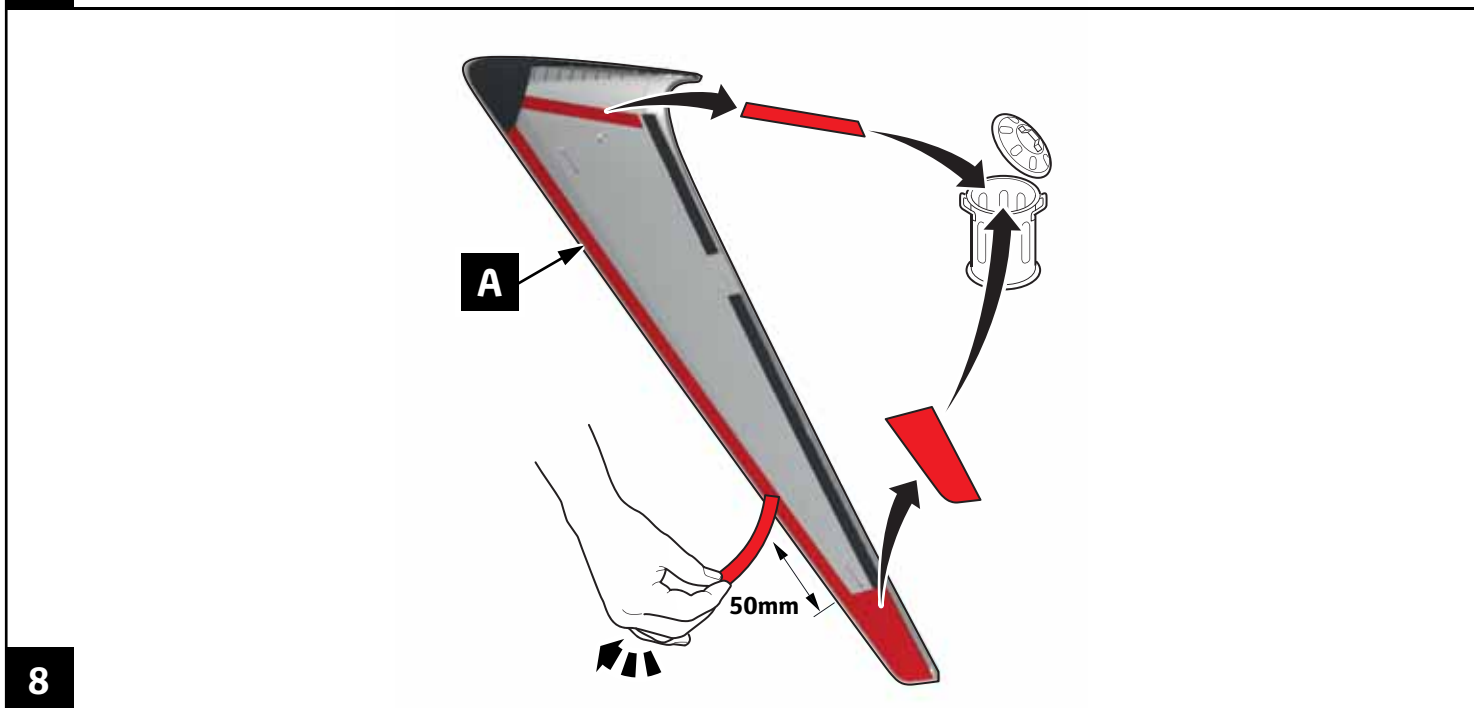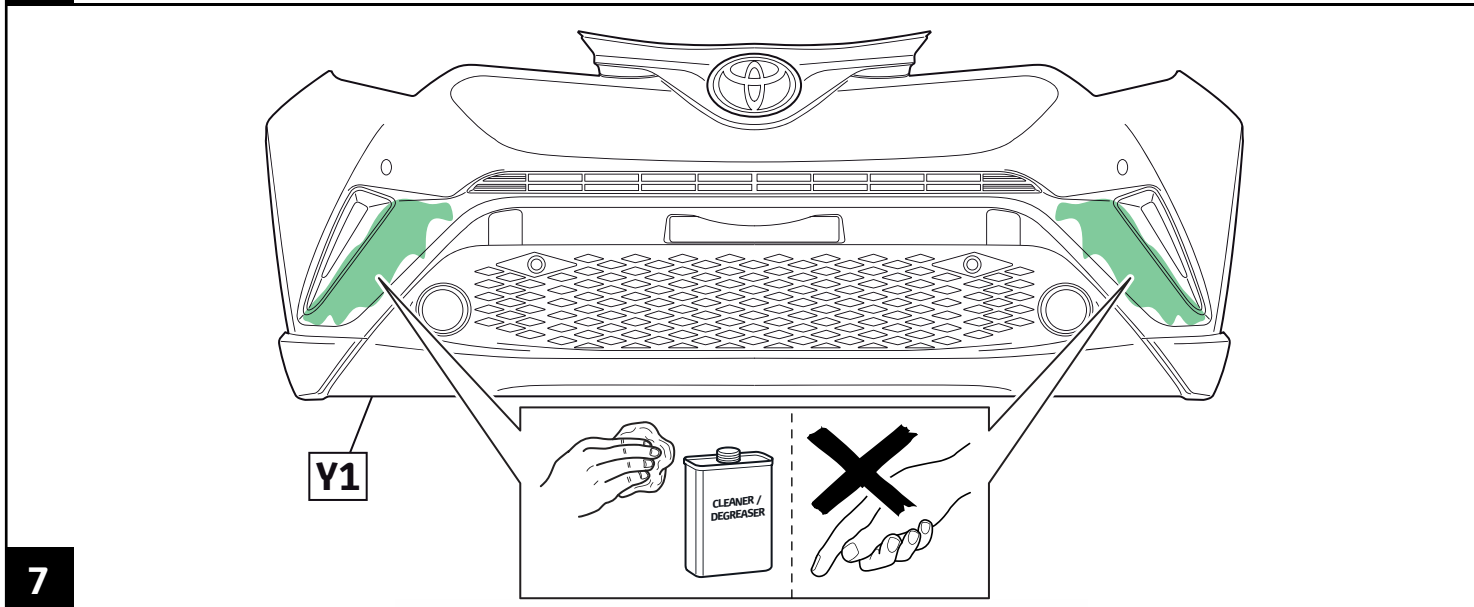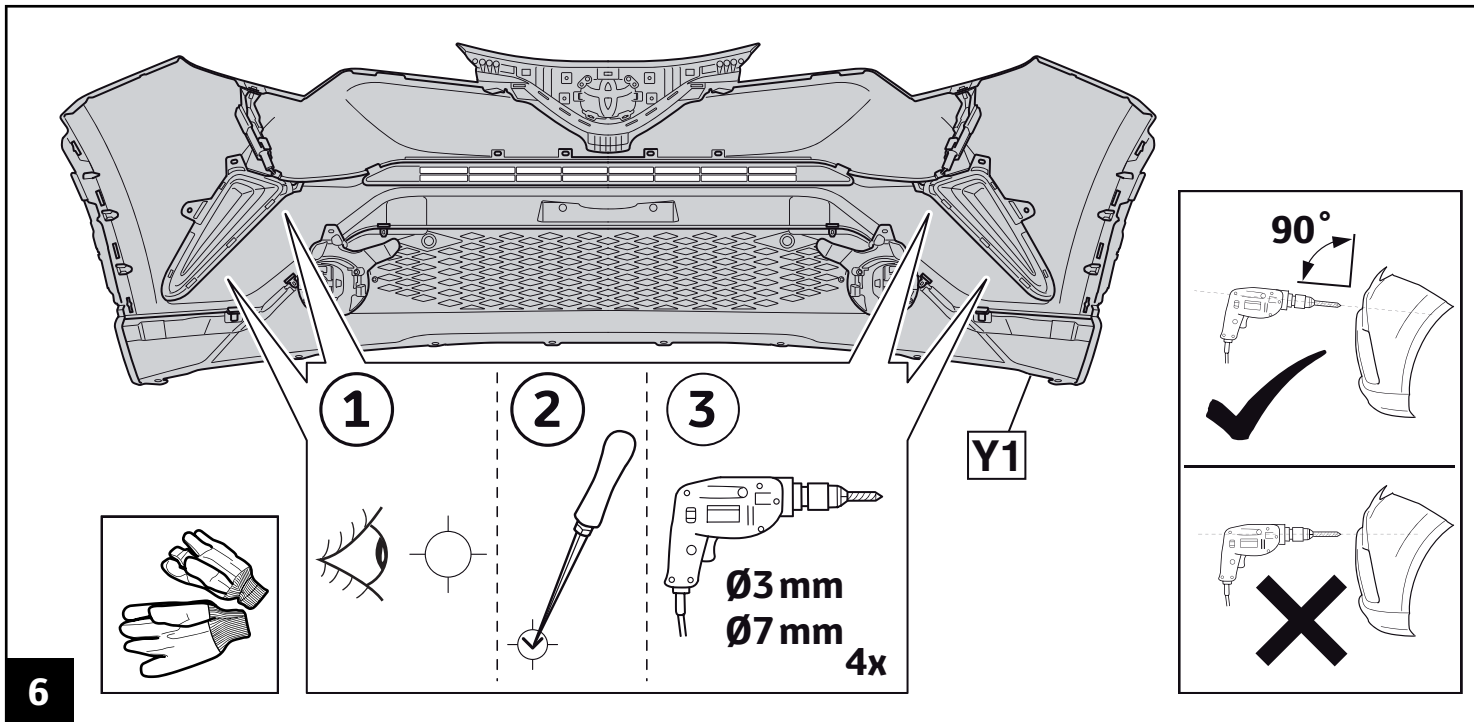

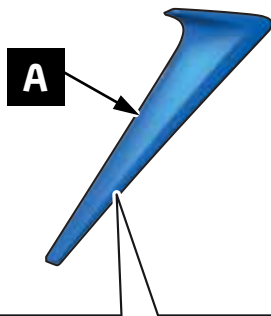

①	< 20°C ➔ ② 20°C - 40°C ➔ 10	②
③	20°C - 40°C ➔ 10	INFO 9 ➔ 13 ✓ ✗

9

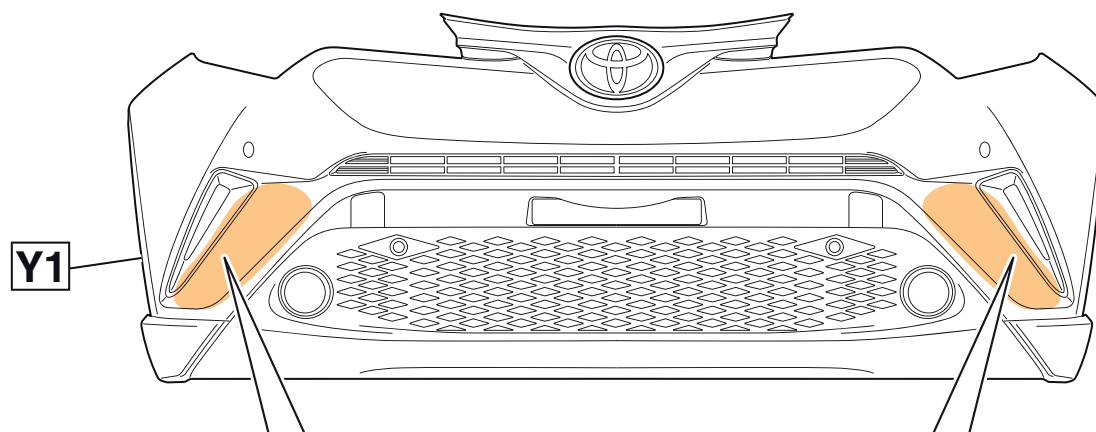

①	< 20°C ➔ ② 20°C - 40°C ➔ 11	②
③	20°C - 40°C ➔ 11	INFO 10 ➔ 13 ✓ ✗

10

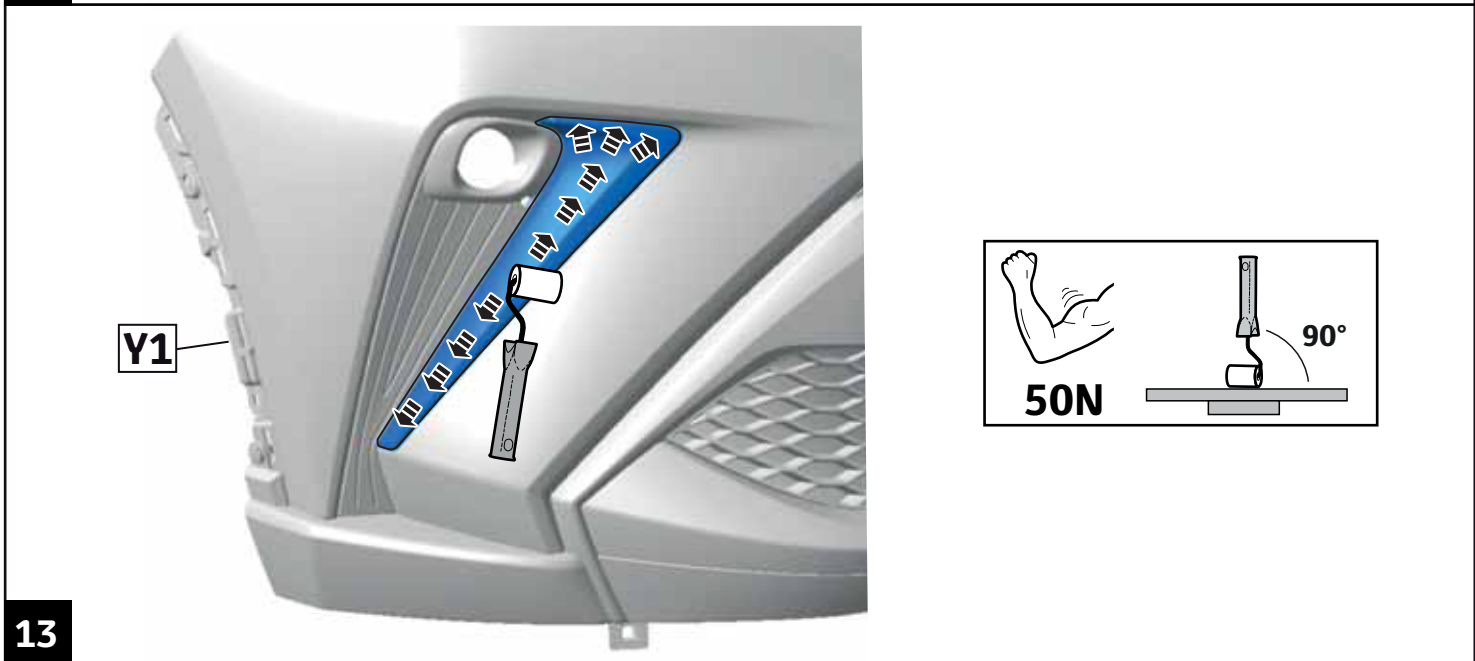
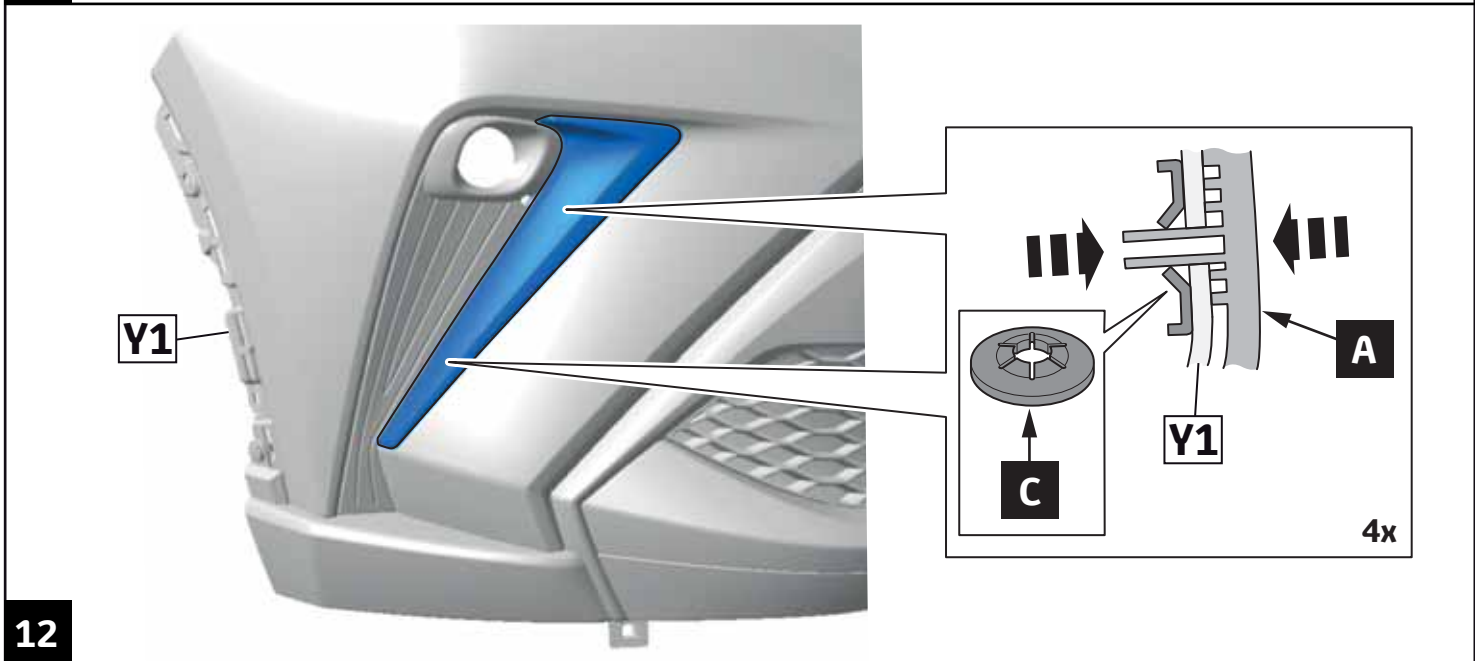
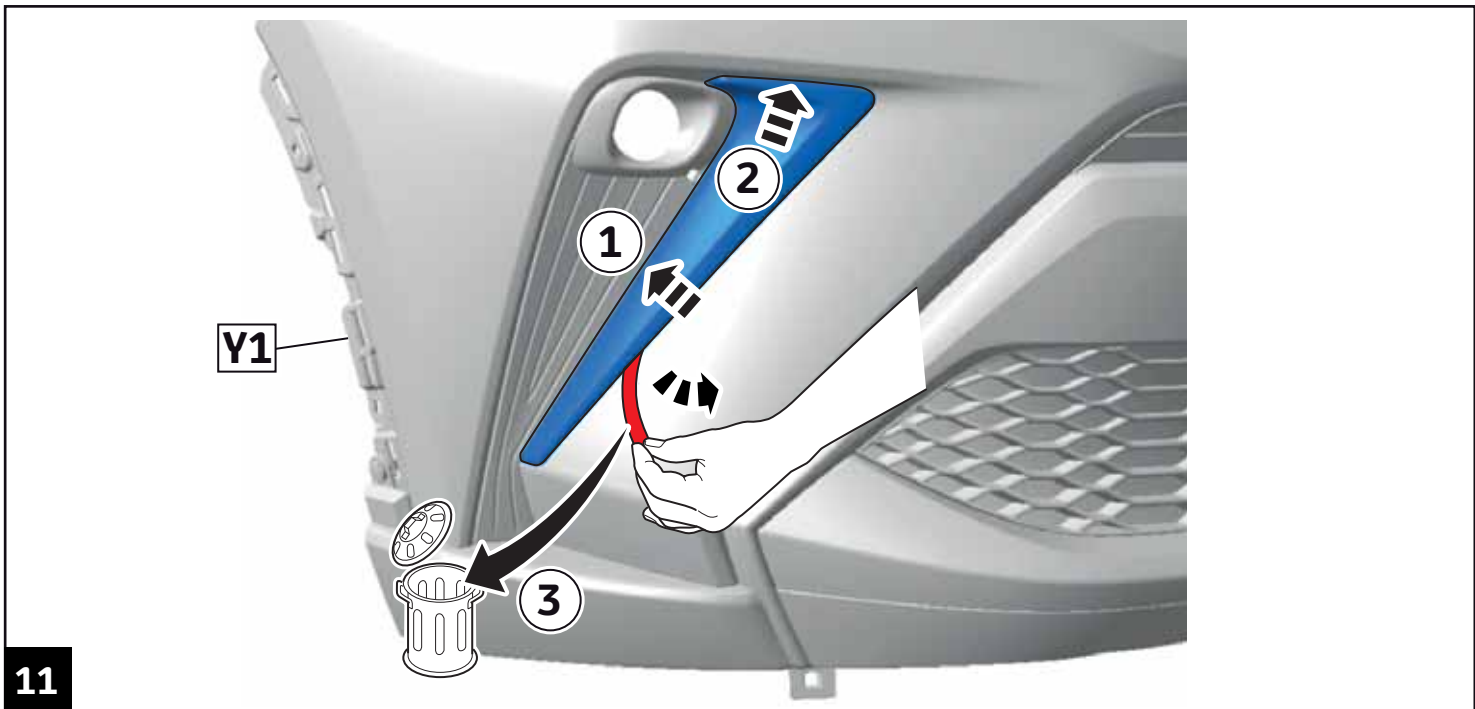


Fig.6 - Fig.13


$$\begin{matrix} \text{RHS} \\ \text{A} \end{matrix} = \begin{matrix} \text{LHS} \\ \text{B} \end{matrix}$$

Fig.6 - Fig.13



INFO

1



24 h



24 h

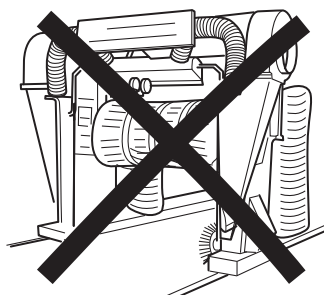


24 h

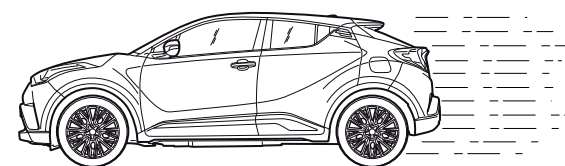

Max. 90 Km/h

> 50 cm

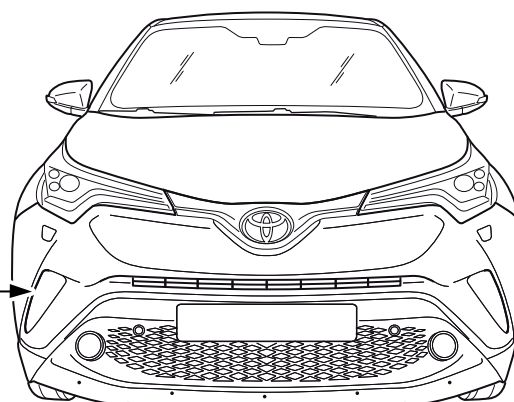

CHECK SHEET Page 1 of 2



TOYOTA

Model / Year Toyota C-HR
2019/10


Fog lamp garnish

VIN n°

ALWAYS A
BETTER WAY

DURING INSTALLATION


1

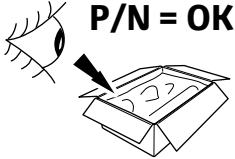




=A =B

2

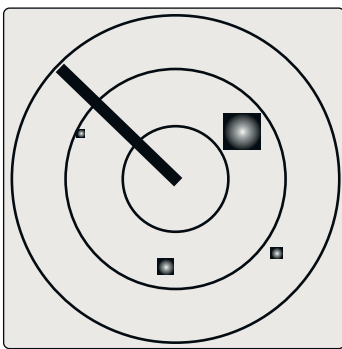

S

!

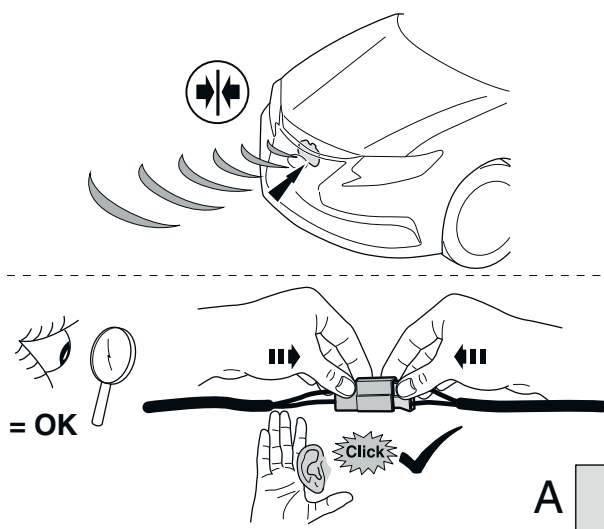

A

B


AFTER INSTALLATION

1

5,4 Nm









CLICK

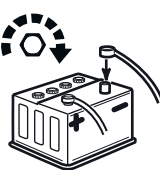

Serial Number

2

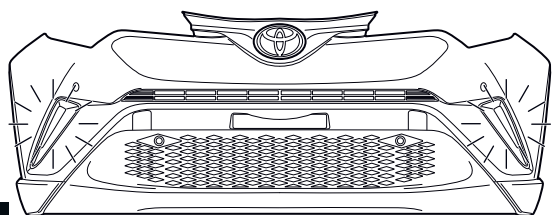

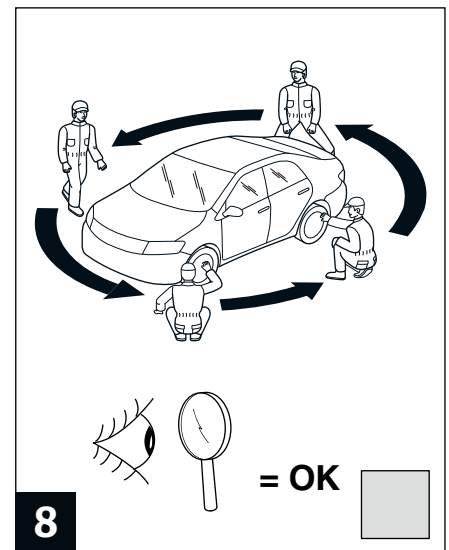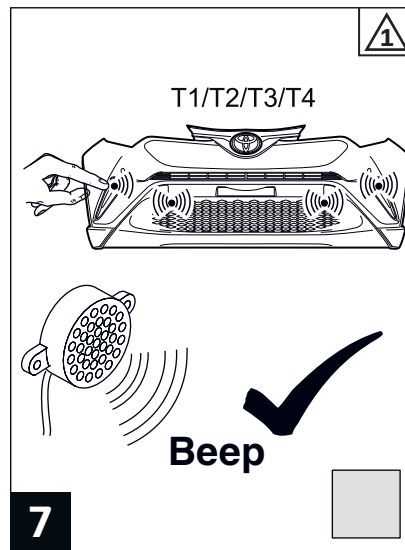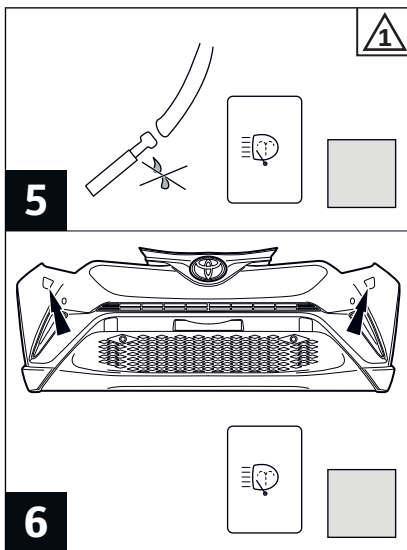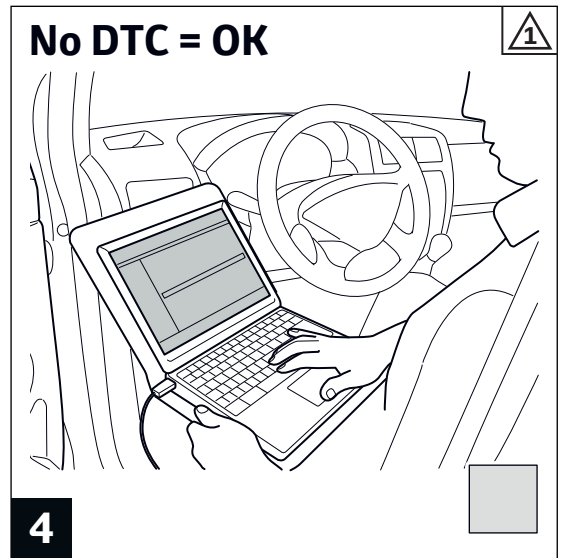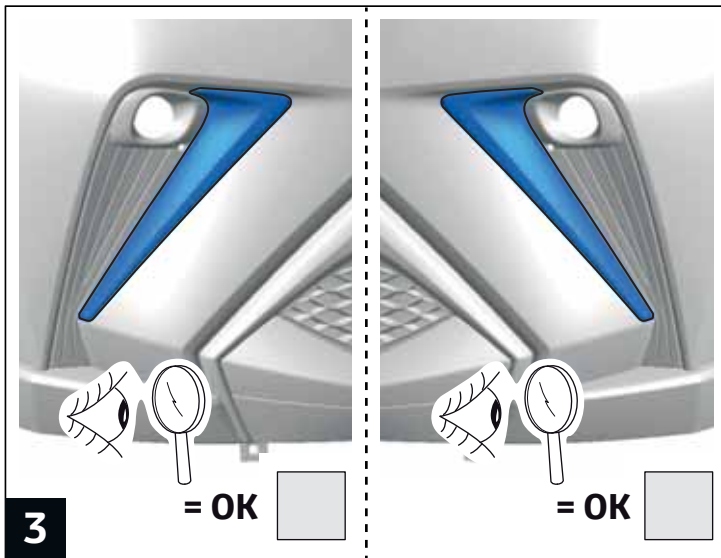

Installation Date:

. . / . . /

Technician Name & Signature:

Stamp: