


SUBARU®

INSTALLATION INSTRUCTIONS

RECEIVER HITCH 2003 AND LATER BAJA L1010LS200

KIT CONTENTS

NO.	DESCRIPTION	QTY.
(1)	HITCH ASSEMBLY	1
(2)	1/2"-13 X 6.00" HX HD CAP SCREW (BLACK)	2
(3)	1/2"-13 X 2.00" HX HD CAP SCREW (BLACK)	2
(4)	1/2" FLAT WASHER (BLACK)	4
(5)	1/2" LOCK WASHER (BLACK)	4
(6)	1/2"-13 HEX FLANGE LOCK NUT (BLACK)	2
(7)	6mm REINFORCEMENT SPACER (BLACK)	4
(8)	3mm REINFORCEMENT SPACER (BLACK)	2
(9)	BALL MOUNT	1
(10)	HITCH PIN	1
(11)	HAIR PIN	1
(12)	RECEIVER COVER	1

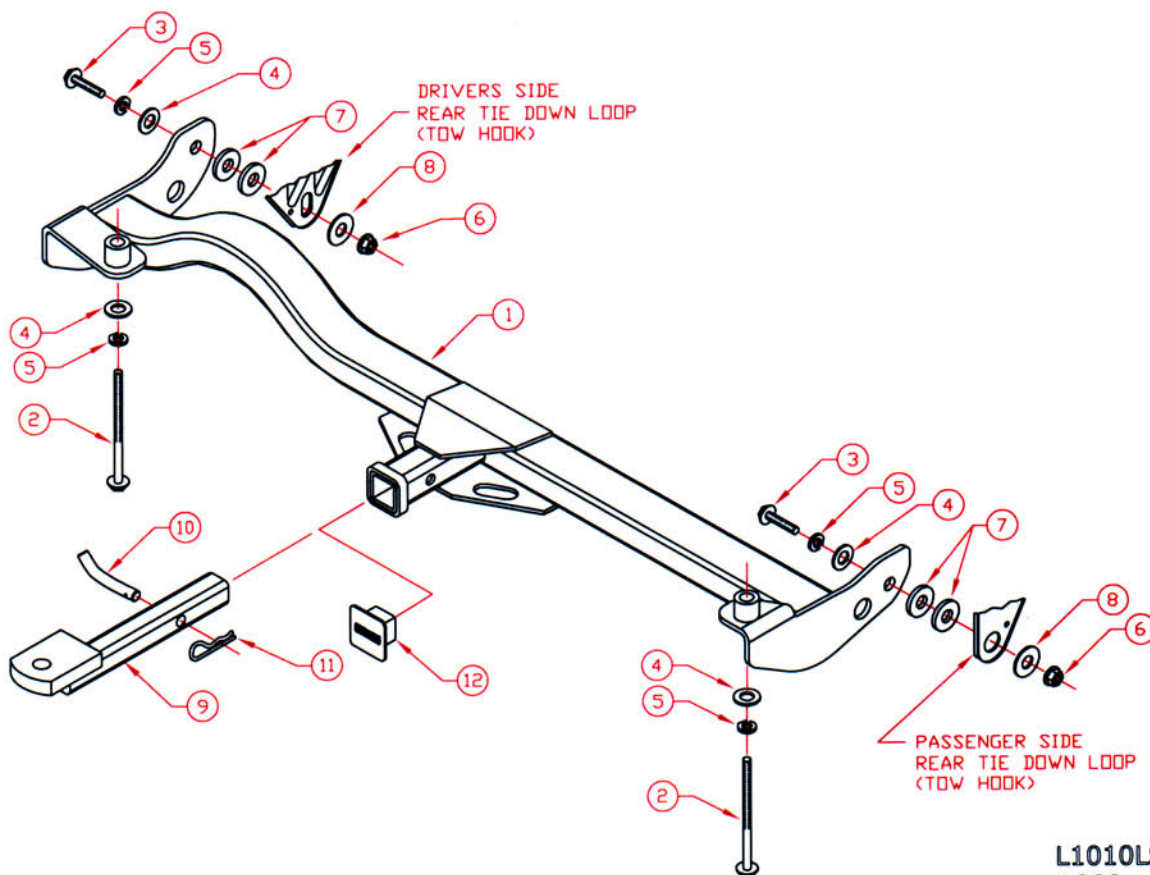

TOOLS REQUIRED

1/2" DRIVE RATCHET



1/2" DRIVE TORQUE WRENCH

1/2" DRIVE EXTENSION


SOCKET 3/4"

BOX END WRENCH 3/4"


FLAT SCREWDRIVER

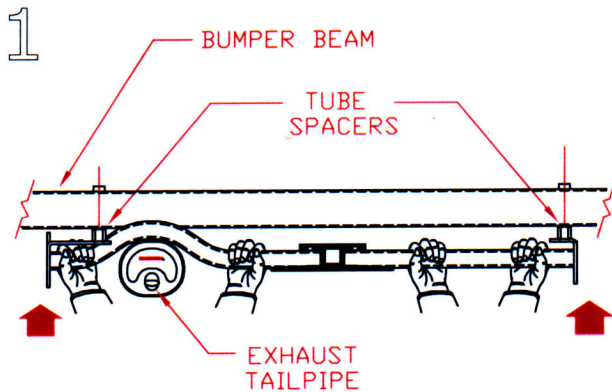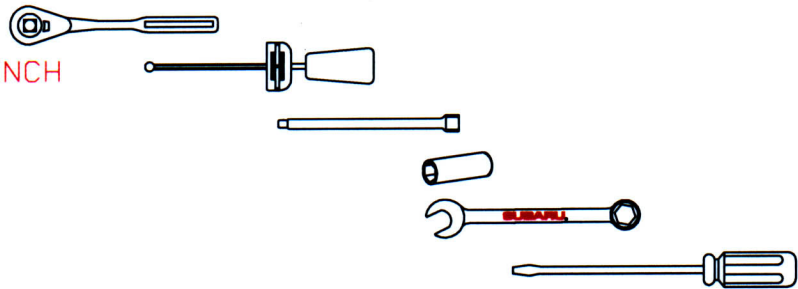

RAISE AND SECURE VEHICLE ON A LIFT. WITH (2) SERVICE TECHNICIANS, LIFT HITCH ASSEMBLY (ITEM #1) OVER EXHAUST TAILPIPE. ALIGN TUBE SPACERS ON BOTH SIDES OF HITCH WITH CORRESPONDING HOLES IN BUMPER BEAMS.

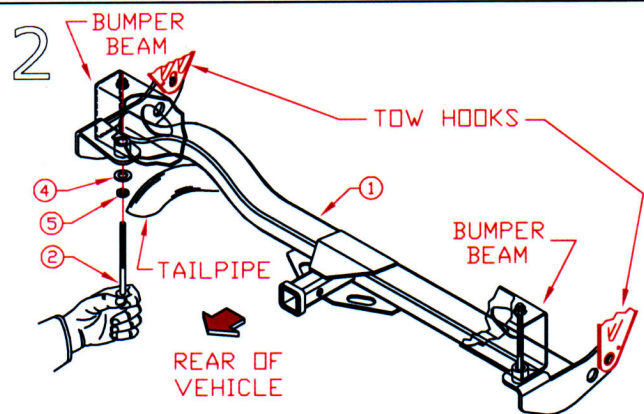


INSERT ITEMS 2,4, AND 5 THROUGH THE TUBE SPACERS INTO THE THREADED NUTS ON THE BUMPER BEAM. FINGER TIGHTEN. ALIGN TOW HOOK HOLES WITH CORRESPONDING HITCH END BRACKET MOUNTING HOLES ON BOTH ENDS OF HITCH.

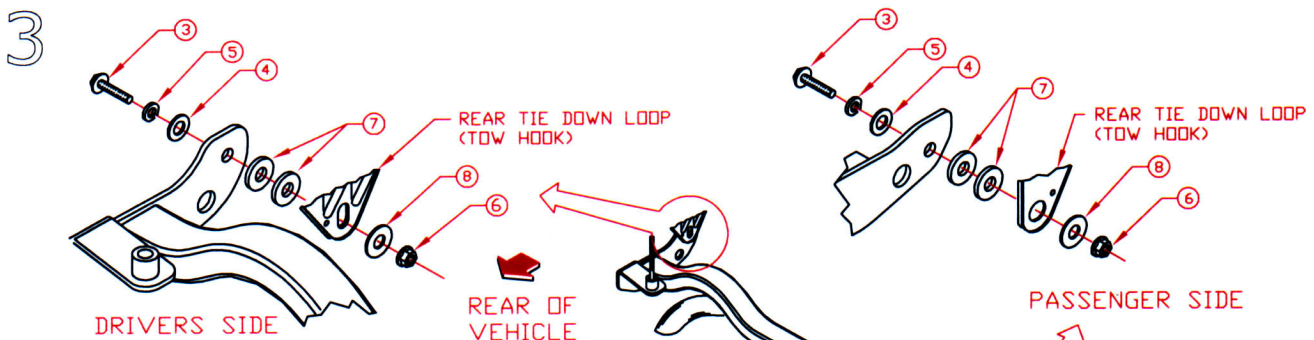


INSERT ITEMS 3,5,4,7,8 AND 6 IN SEQUENCE SHOWN
NOTE-IT MAY BE NECESSARY TO USE A SCREWDRIVER BETWEEN THE HITCH AND THE TOW HOOKS TO CREATE ENOUGH CLEARANCE TO INSERT THE 6MM REINFORCEMENT SPACERS (ITEM 7).
FINGER TIGHTEN BOTH SIDES OF HITCH.
SNUG BOTH HORIZONTAL AND VERTICAL BOLTS.

4

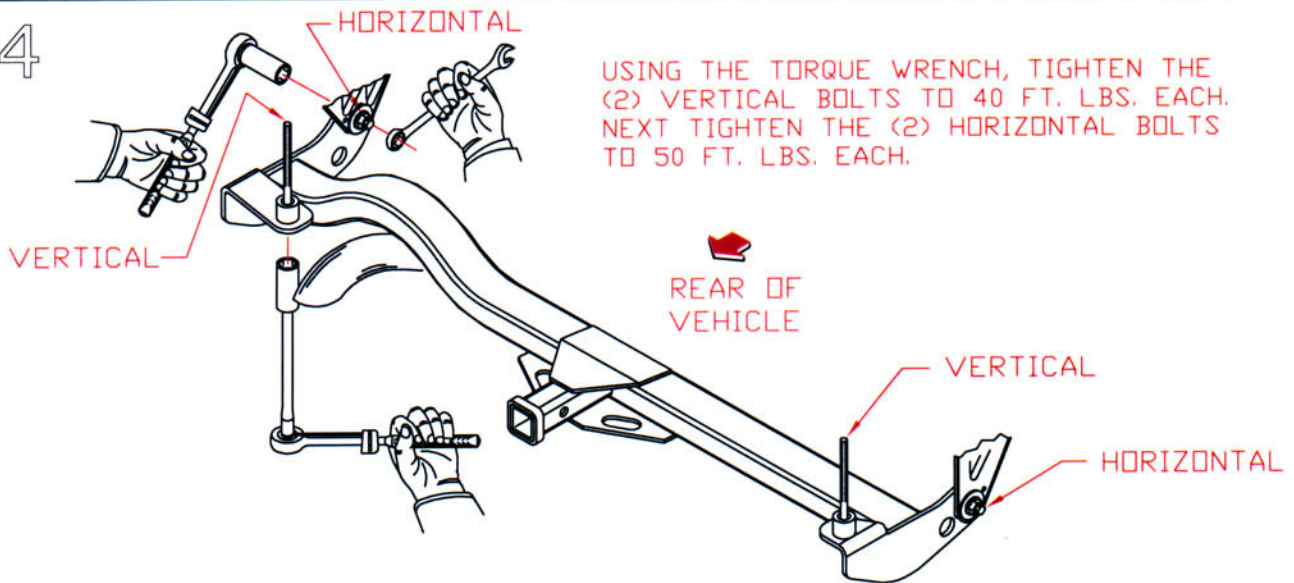


5

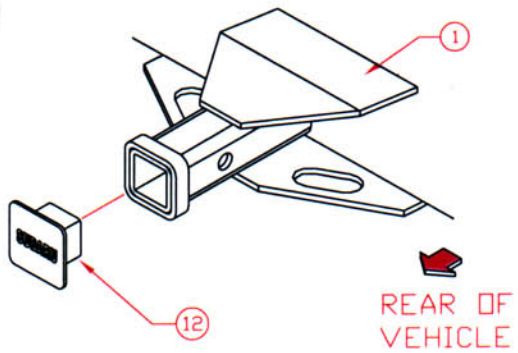

INSERT RECEIVER COVER INTO HITCH WHEN NOT TOWING.

6

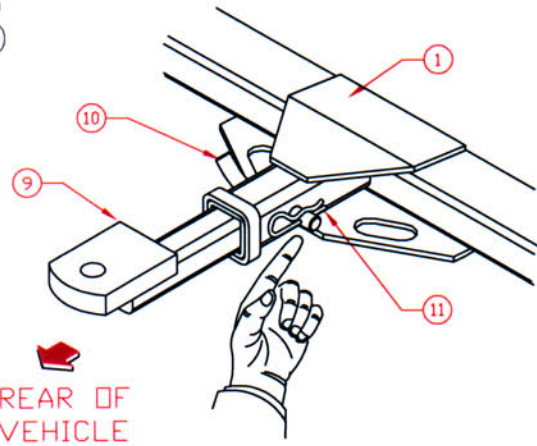

BEFORE TOWING ANY LOAD MAKE SURE THAT HITCH PIN (10) AND HAIR PIN (11) ARE FULLY ENGAGED.