

HANDS-FREE CAR KIT
KFZ FREISPRECHEINRICHTUNG
HANDS-FREE CAR KIT
LE KIT MAINS-LIBRES
EQUIPO DE MANOS LIBRES

THF 10, 20, 30

TOYOTA
AVENSIS VERSO

INSTALLATION MANUAL-EINBAUANLEITUNG-MANUEL D'INSTALLATION-MONTAGE HANDLEIDING-EQUIPO DE MANOS LIBRES

RHD

HANDS-FREE CAR KIT
KFZ FREISPRECHEINRICHTUNG
HANDENVRIJE CAR KIT
LE KIT MAINS-LIBRES
EQUIPO DE MANOS LIBRES


THF 10

TOYOTA
AVENSIS VERSO

INSTALLATION MANUAL-EINBAUANLEITUNG-MANUEL D'INSTALLATION-MONTAGE HANDLEIDING-EQUIPO DE MANOS LIBRES

RHD

21

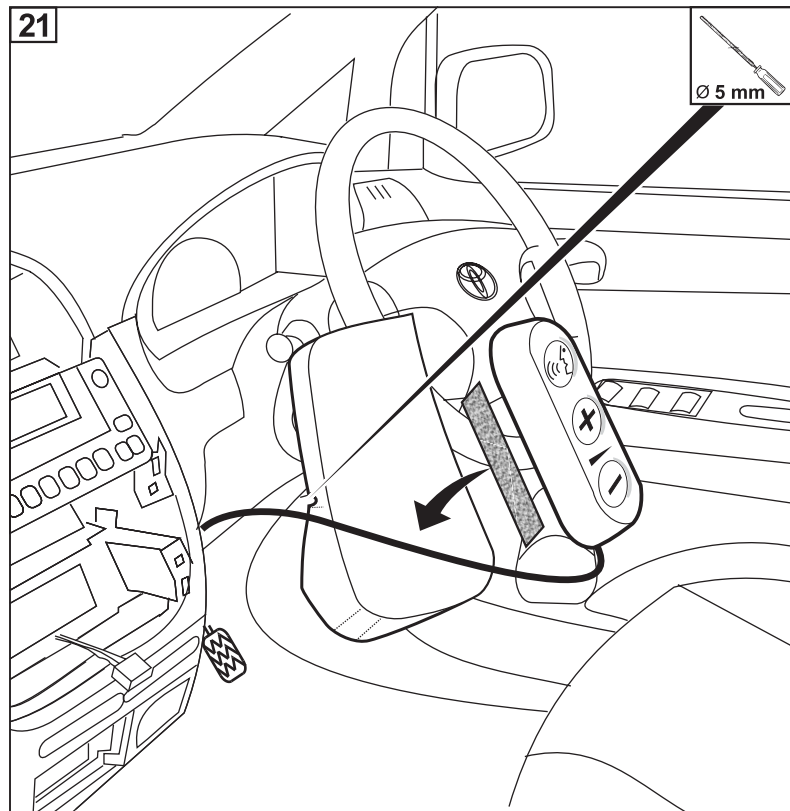

Page: 16/16

Issue 01

THF 30 - INSTALLATION MANUAL FOR AVENSIS VERSO


Date: 11.12.2003



AVENSIS VERSO


RHD

PARTNUMBER:THF 10

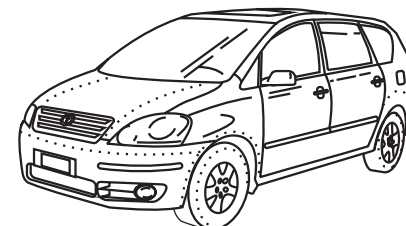

HANDS-FREE CAR KIT
KFZ FREISPRECHEINRICHTUNG
HANDENVRIJE CAR KIT
LE KIT MAINS-LIBRES
EQUIPO DE MANOS LIBRES

KIT CONTENT - STÜCKLISTE - CONTENU - KIT INHOUD - CONTENIDO

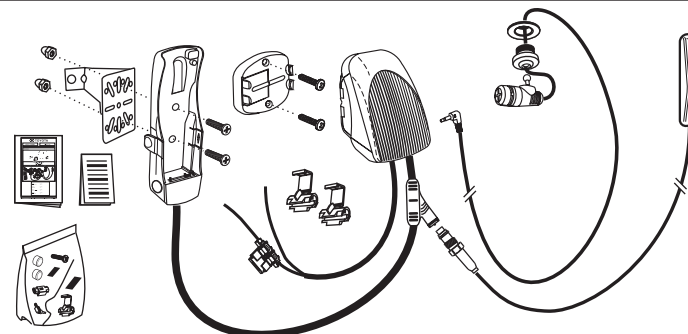

Weight: 0, 54 kg
Installation time: 1 h

Gewicht: 0, 54 kg
Einbauzeit: 1 h

Poids: 0, 54 kg
Temps d'installation: 1 h

Gewicht: 0, 54 kg
Installatie tijd: 1 h






INSTALLATION MANUAL-EINBAUANLEITUNG-MANUEL D'INSTALLATION-MONTAGE HANDLEIDING-EQUIPO DE MANOS LIBRES


Page: 1/13

Issue 01



THF 10 - INSTALLATION MANUAL FOR TOYOTA AVENSIS VERSO

Date: 11.12.2003


PARTNAME: HANDS-FREE CAR KIT		PARTNUMBER: THF10	
TOOLS/WERKZEUGE/OUTILS/WERKTUIGEN/HERRAMIENTAS			
MODEL CODE: **M20R-A***W			
😊		☹️	
VEHICLE OPTION/FAHRZEUG OPTION/OPTION VEHICULE/VOERTUIG OPTIE/OPCIÓN VEHÍCULO		VEHICLE OPTION/FAHRZEUG OPTION/OPTION VEHICULE/VOERTUIG OPTIE/OPCIÓN VEHÍCULO	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
10		10	
ACCESSORIES/ZUBEHÖR/ACCESSOIRES/TOEBEHOREN/ACCESORIOS		ACCESSORIES/ZUBEHÖR/ACCESSOIRES/TOEBEHOREN/ACCESORIOS	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
10		10	
SAFETY PRECAUTION/SICHERHEITSMASSNAHME/PRECAUTIONS DE SECURITE/VEILIGHEIDVOORZIENINGEN/MEDIDA DE SEGURIDAD			
	Step/Punkt/Point/Stap/Punto 4/20		
	Step/Punkt/Point/Stap/Punto		Step/Punkt/Point/Stap/Punto
TOOLS/WERKZEUGE/OUTILS/WERKTUIGEN/HERRAMIENTAS			
			
Drill Bohrmaschine Perceuse Boormachine Taladradora	Ø 3 mm Bits Ø 3 mm Bohrer Ø 3 mm Forets Ø 3 mm Boor Ø 3 mm Taladro	Ø 15 mm Bits Ø 15 mm Bohrer Ø 15 mm Forets Ø 15 mm Boor Ø 15 mm Taladro	
			
Philips 2	PLASTIC CLEANER Cleaner Entfetter Dégrossisseur Onvetter Desengrasante	10 mm	
			
5,5 mm		Pencil Stift Stylo pointe Potlood Lápiz	
			
Gum tape Klebeband Ruban adhésif Kleefband Cinta adhesiva		Ø 5 mm	
			

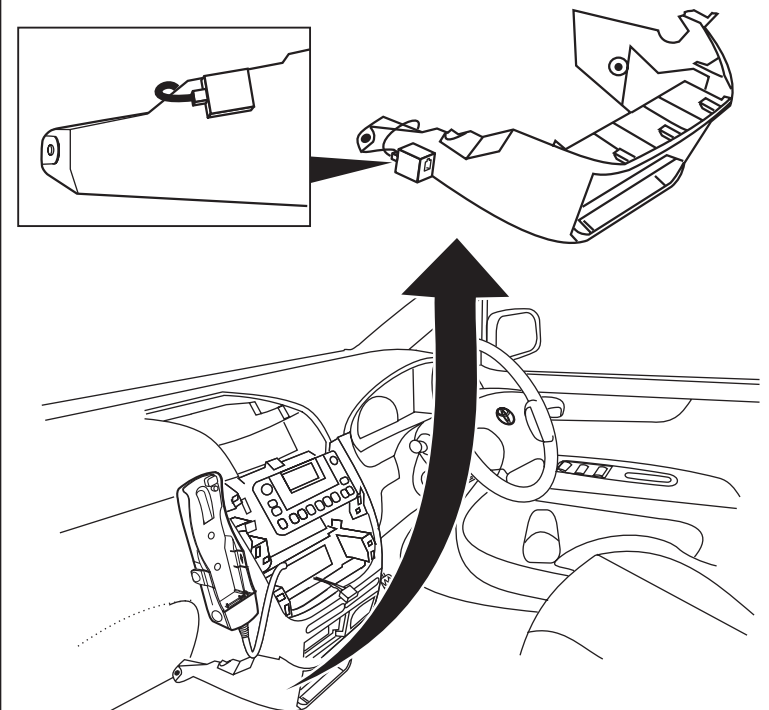


19



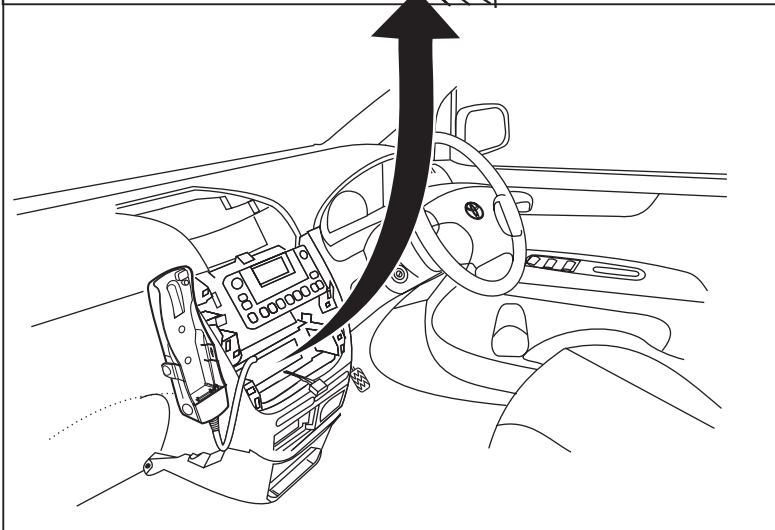
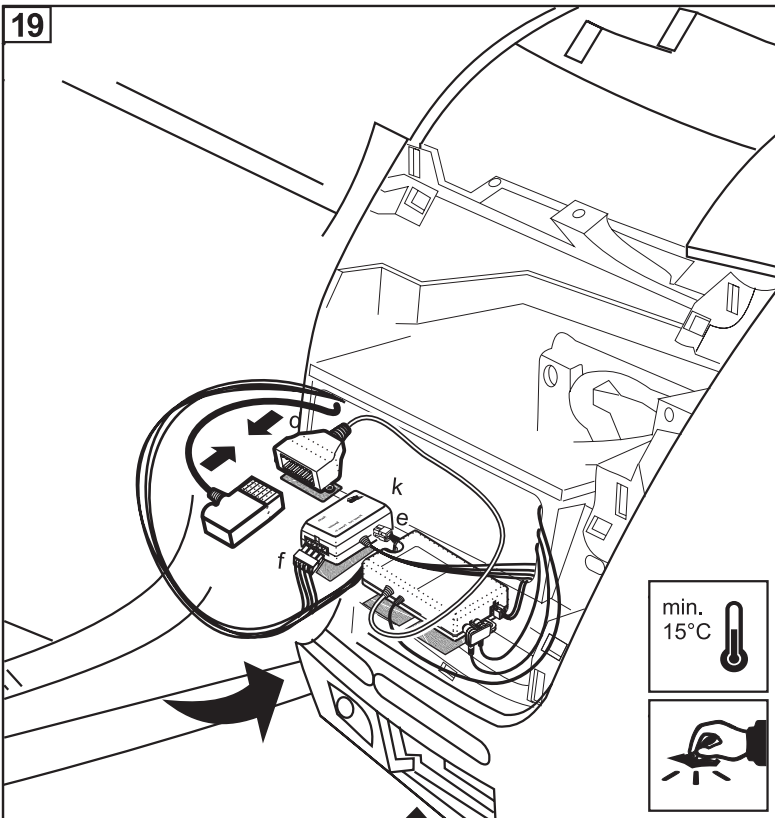


INFO

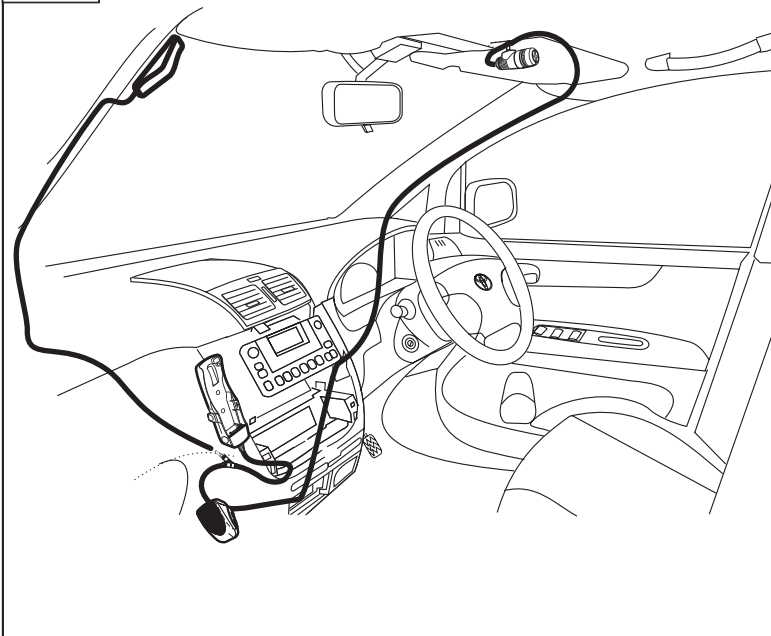

1

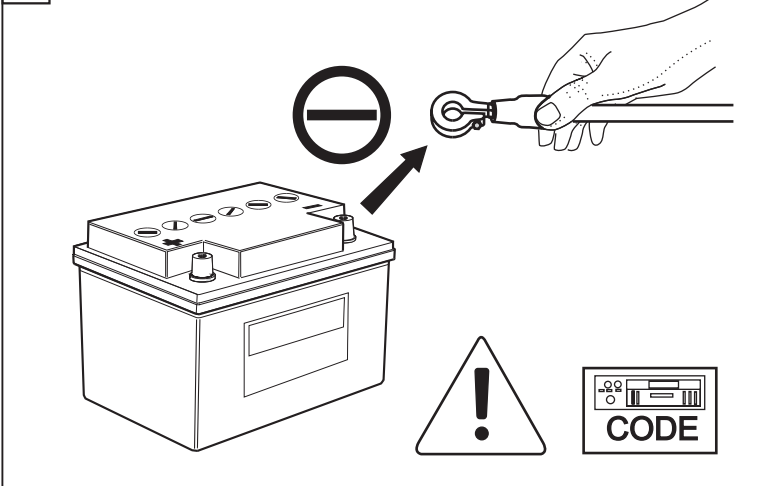


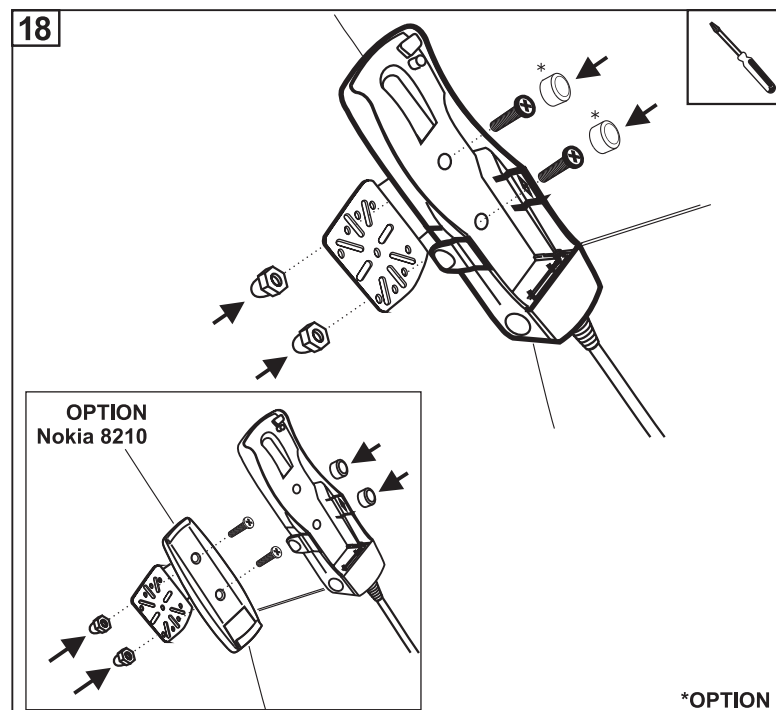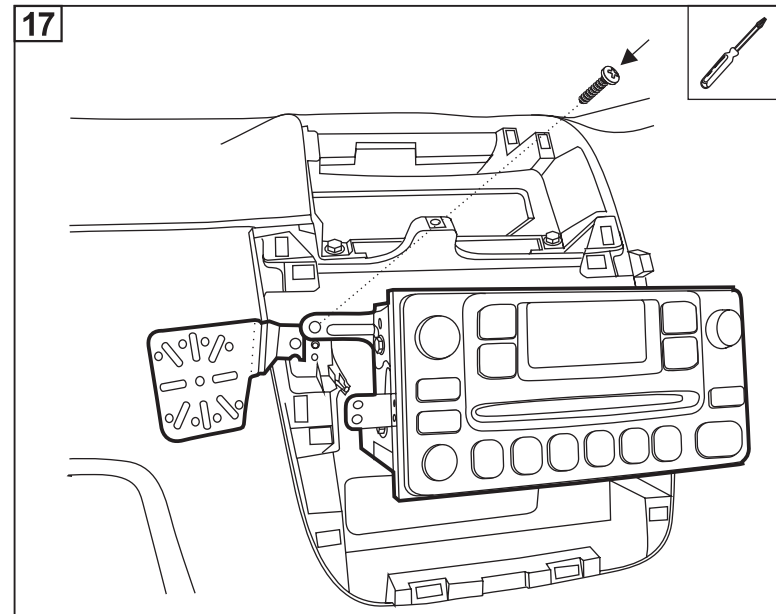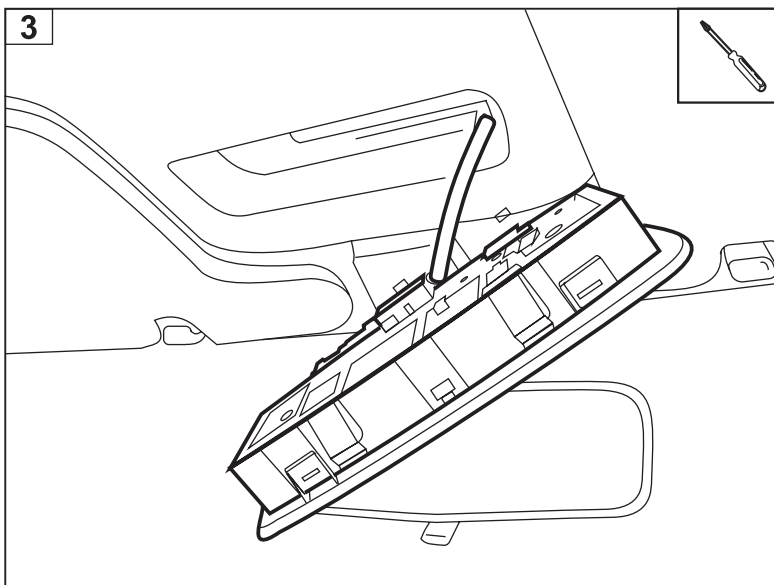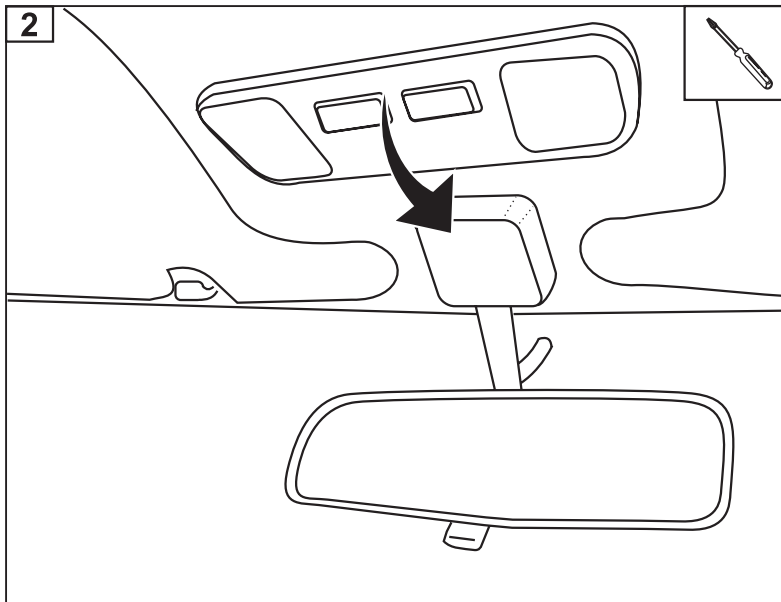


***OPTION**

STANDARD AUDIO


16A

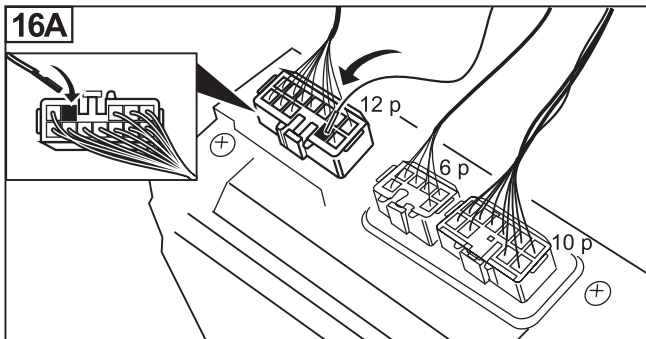


16B

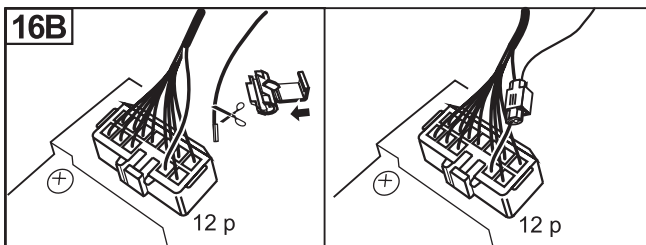



16C




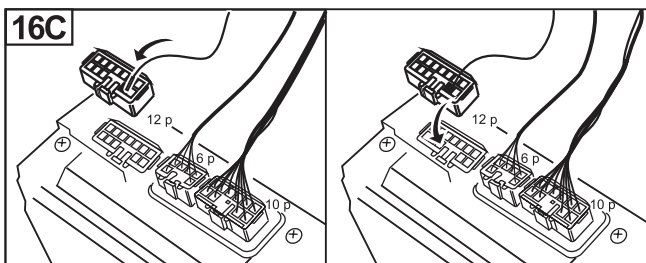





FULL MAP NAVI

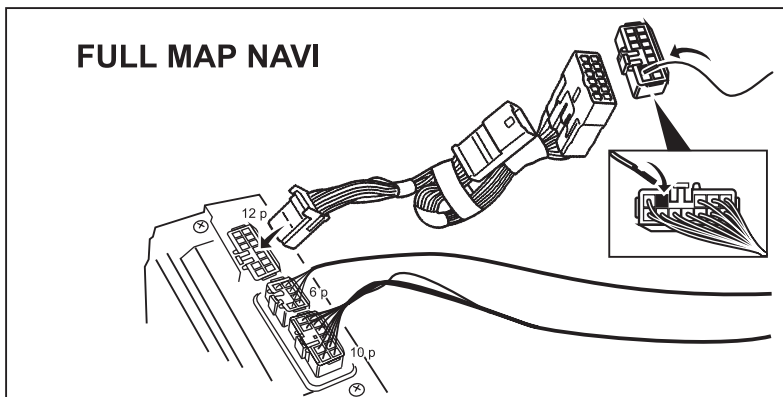


4

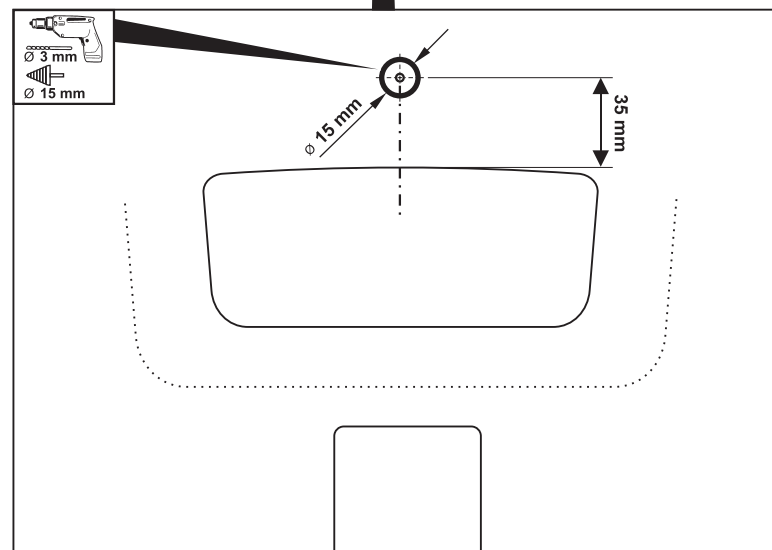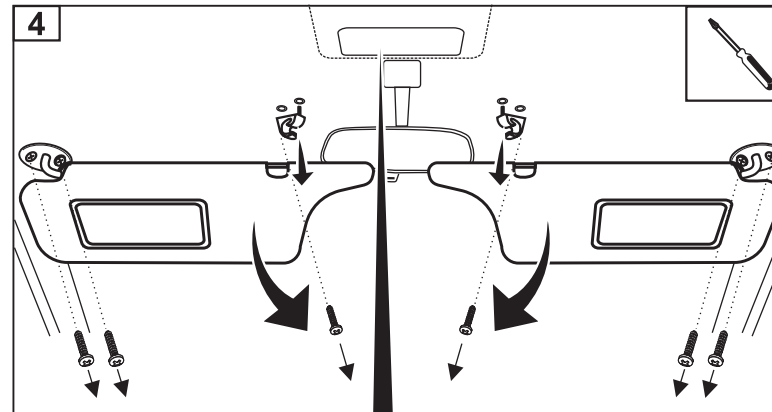

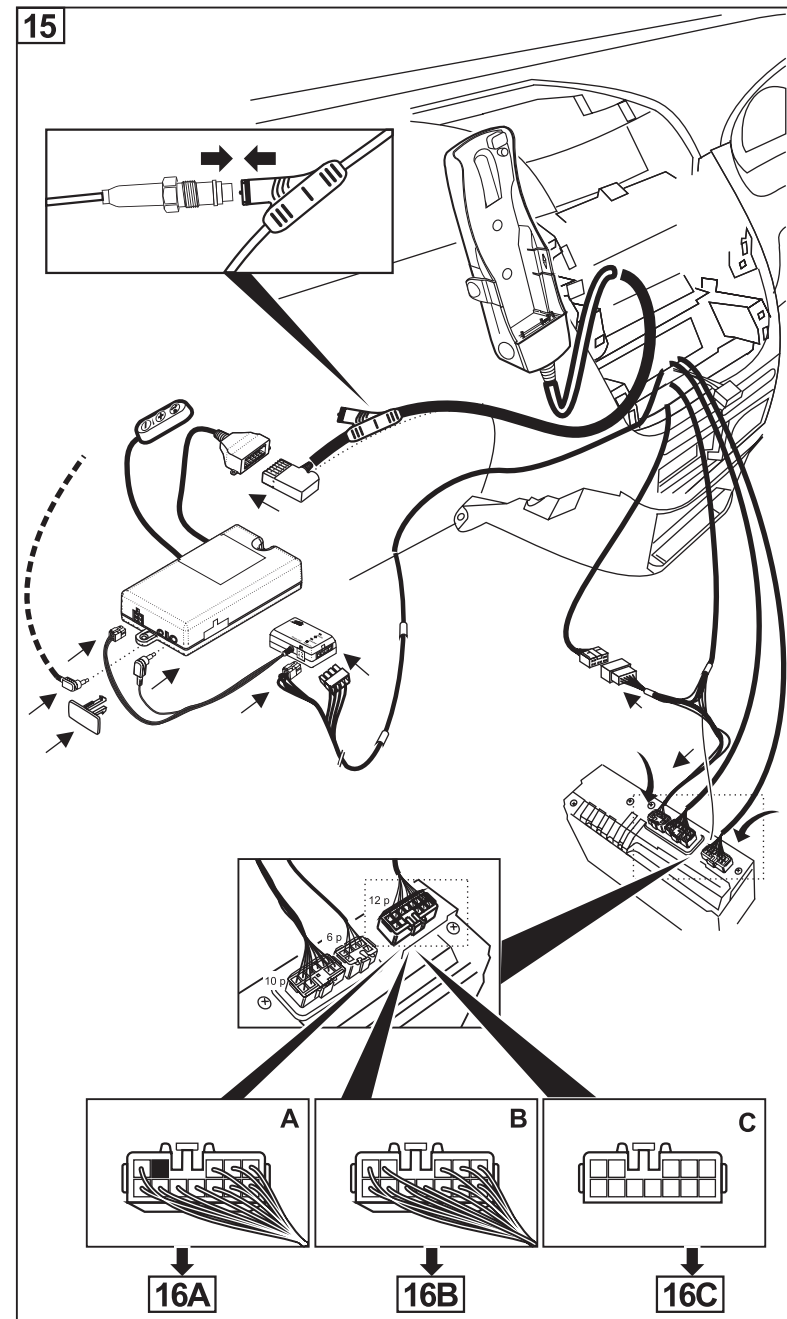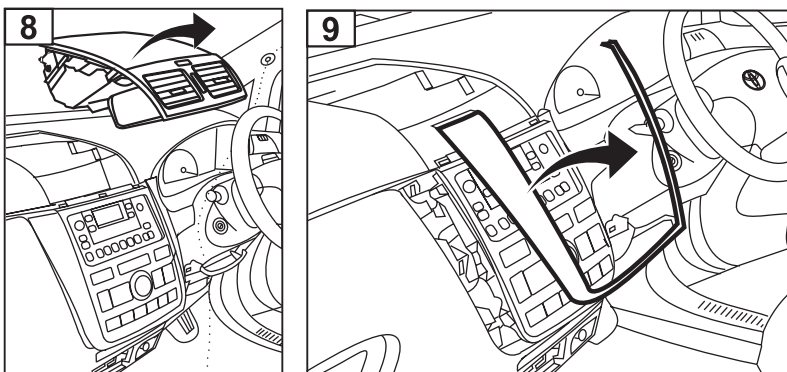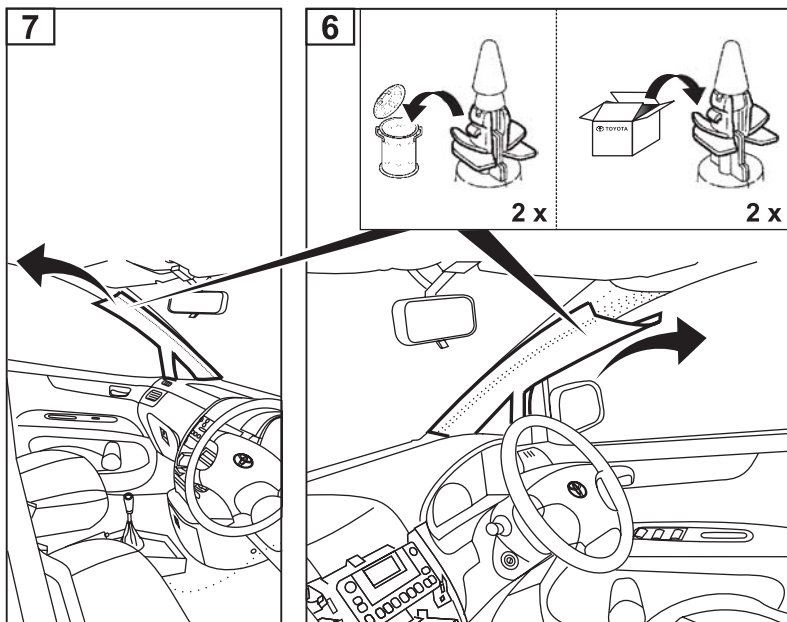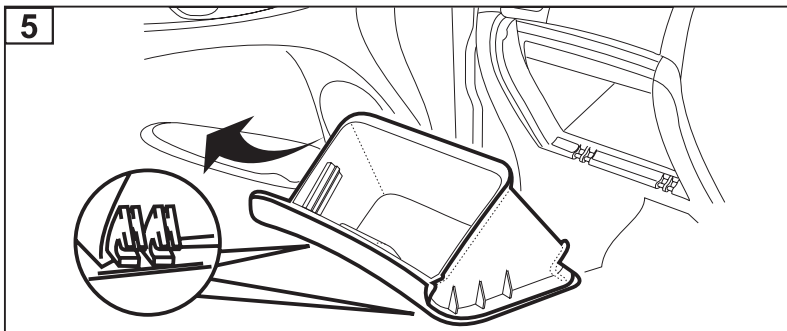

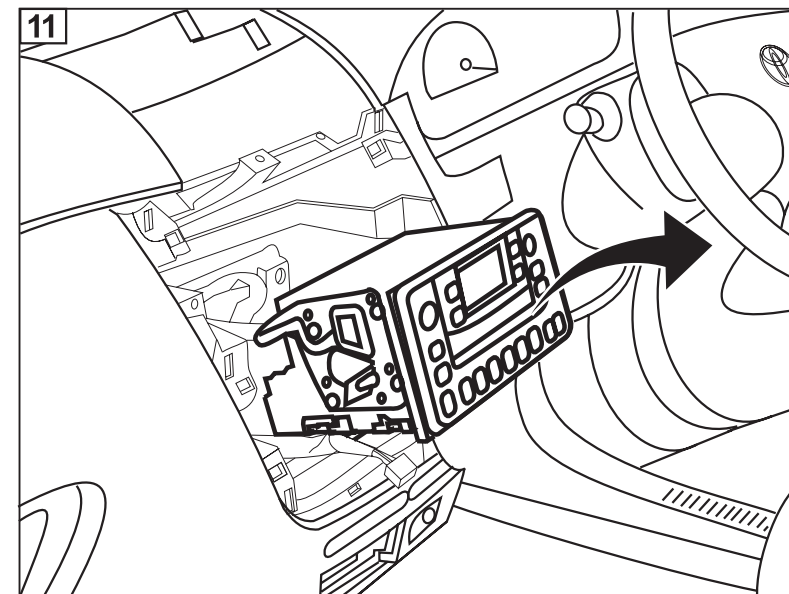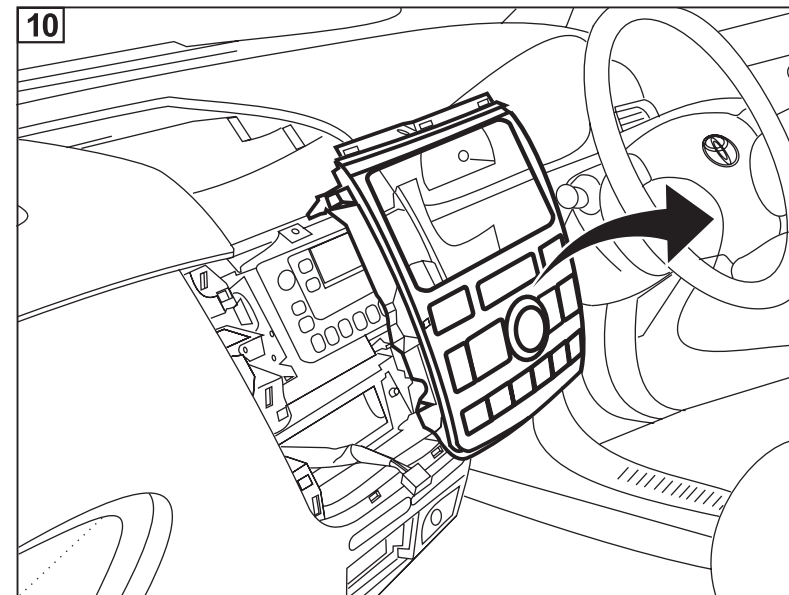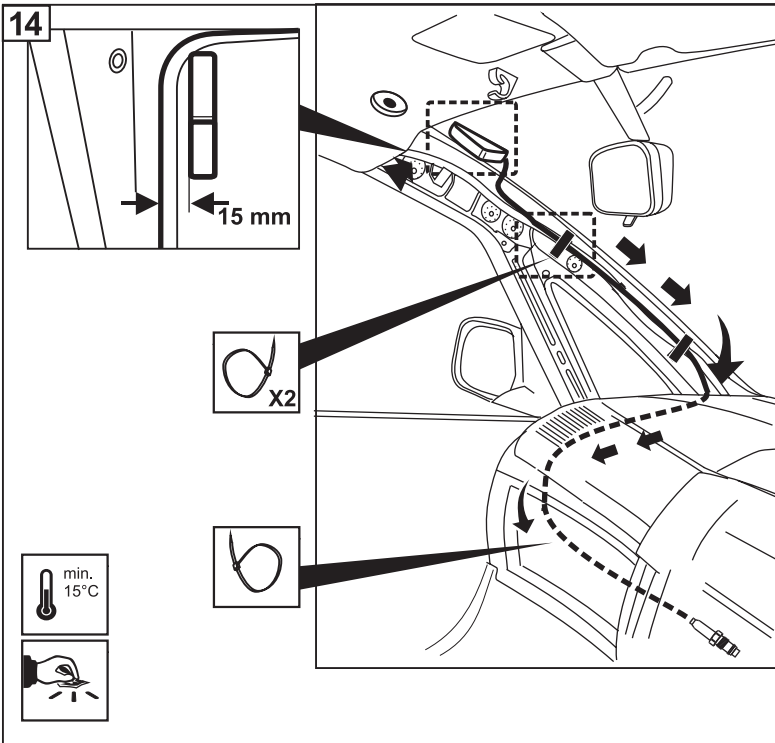

12

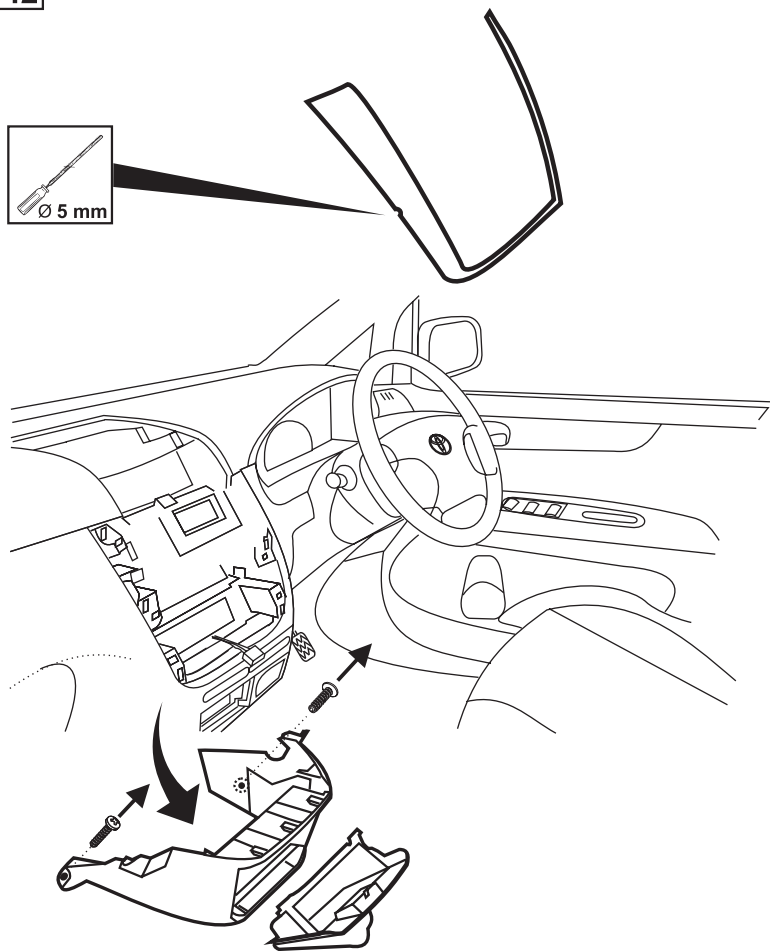




Page: 8/13

Issue 01

THF 10 - INSTALLATION MANUAL FOR TOYOTA AVENSIS VERSO

Date: 11.12.2003

13

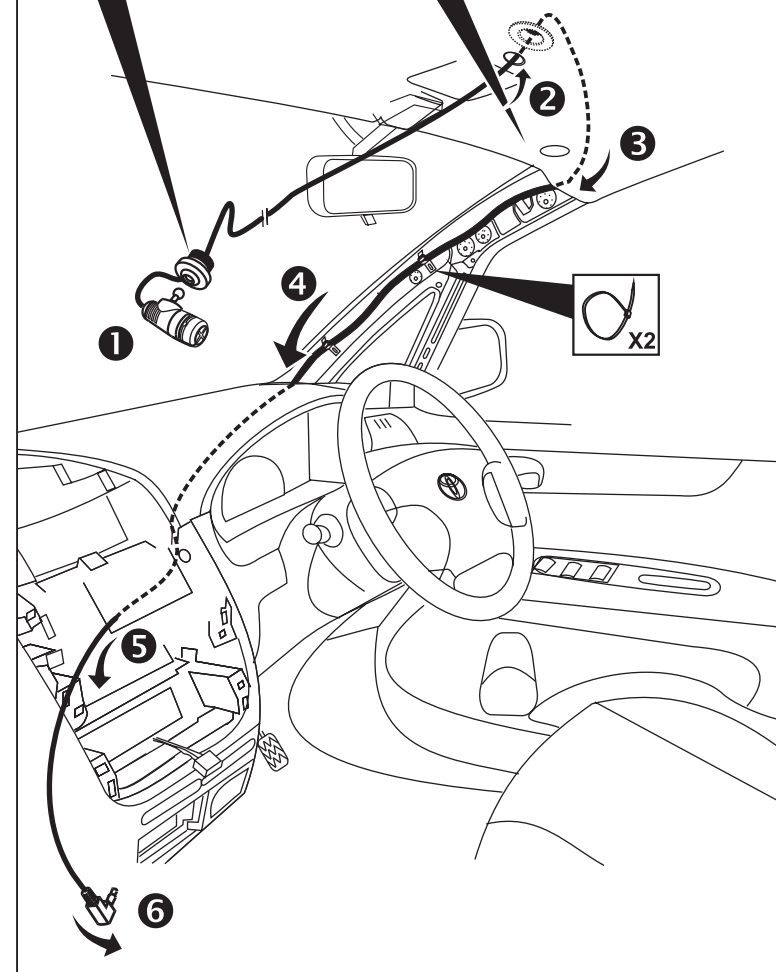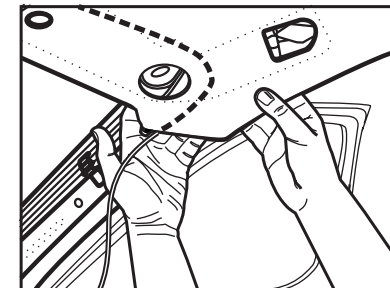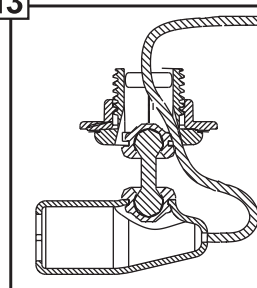


Page: 9/16

Issue 01




THF 30 - INSTALLATION MANUAL FOR AVENSIS VERSO




Date: 11.12.2003









12

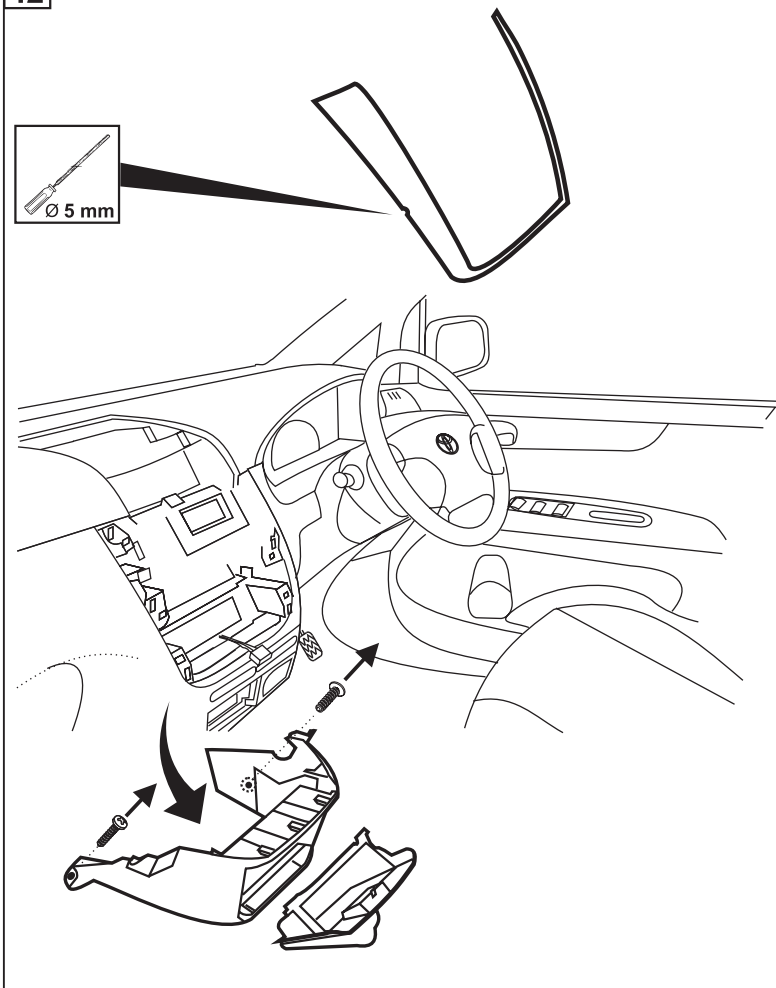


13

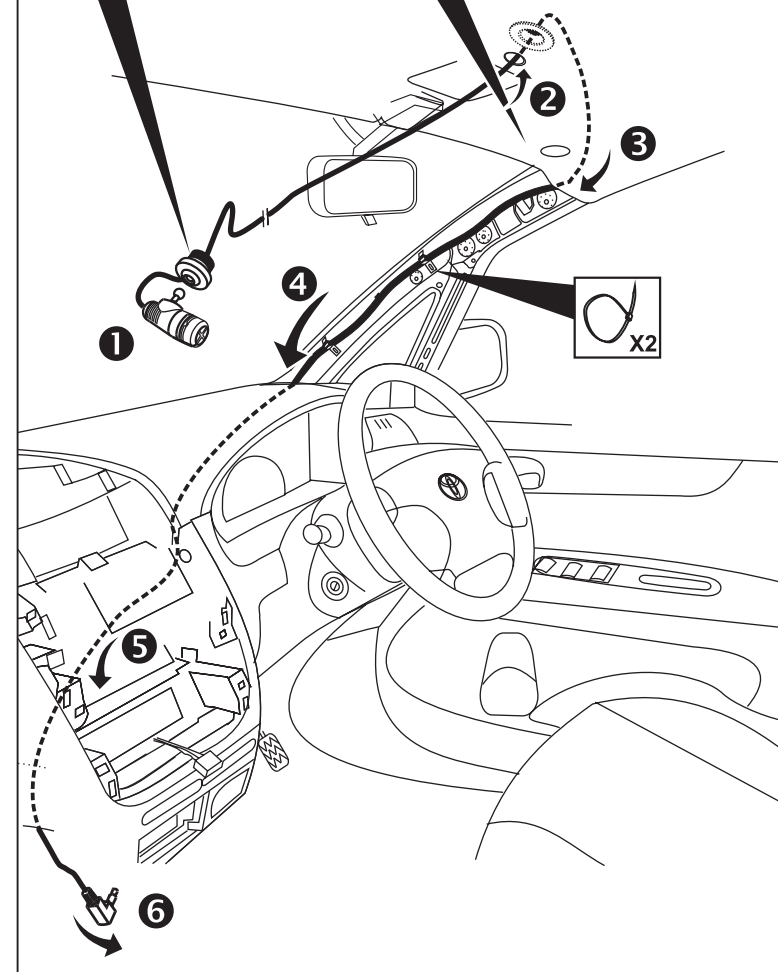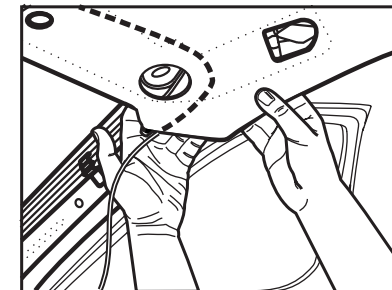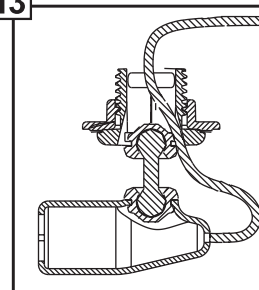

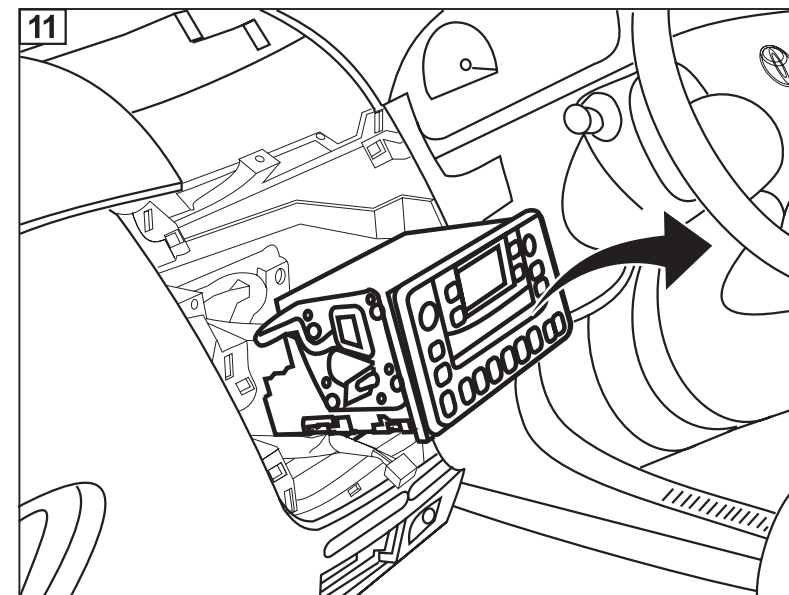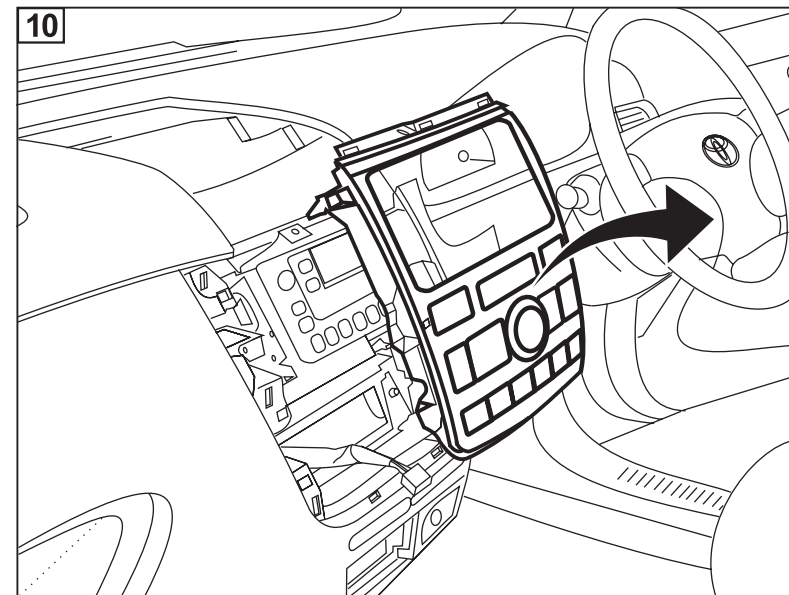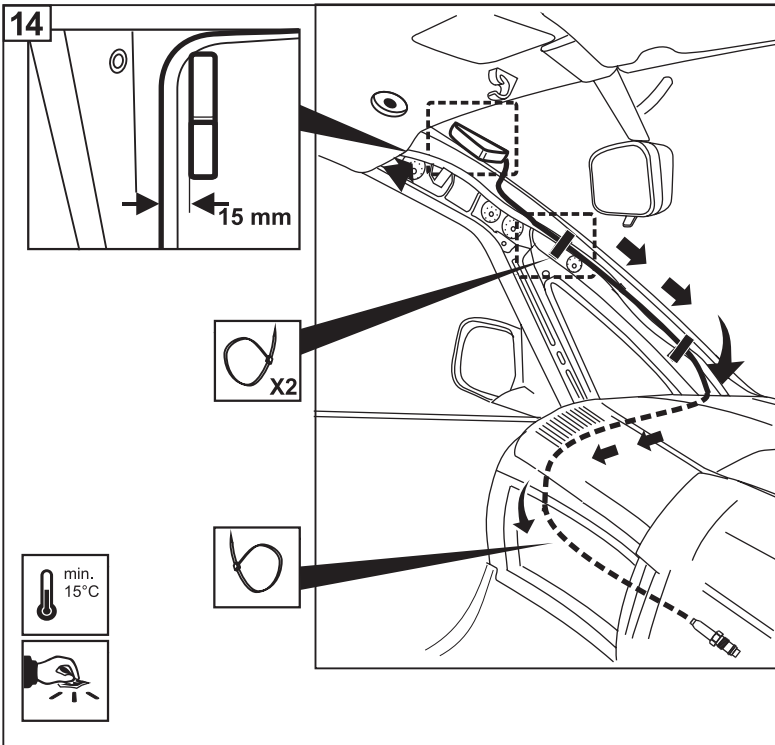


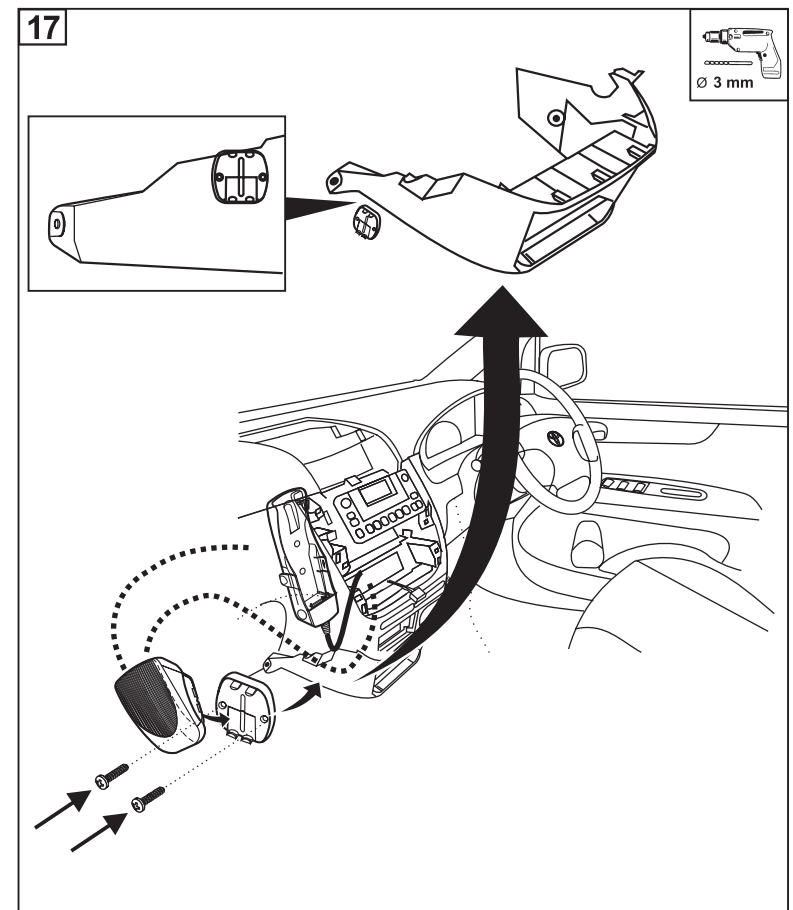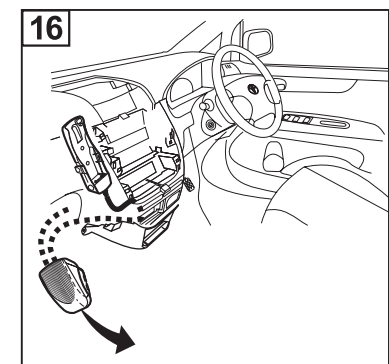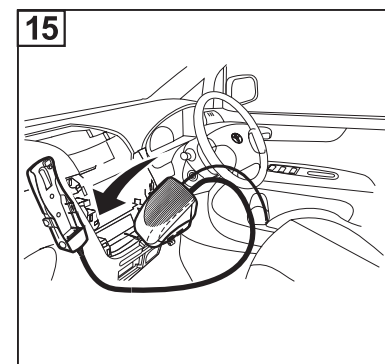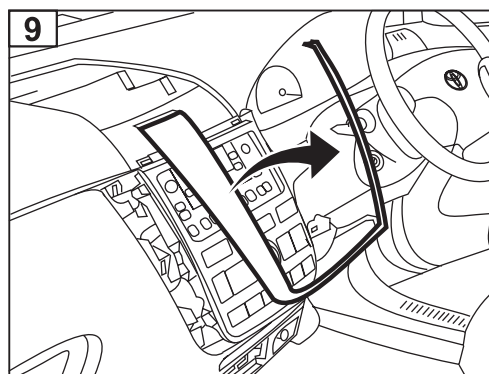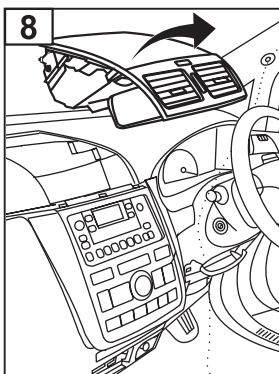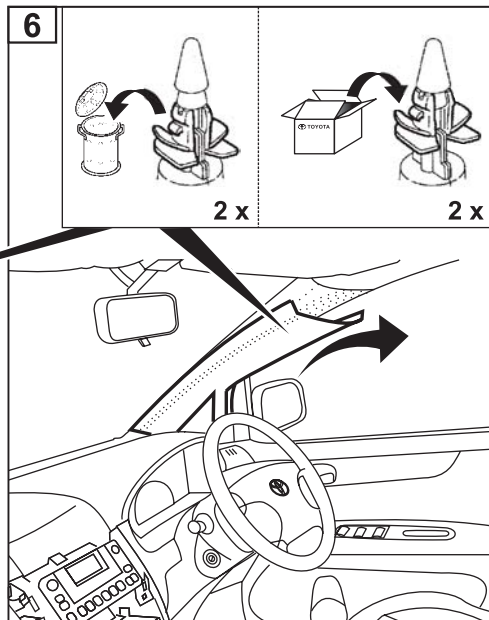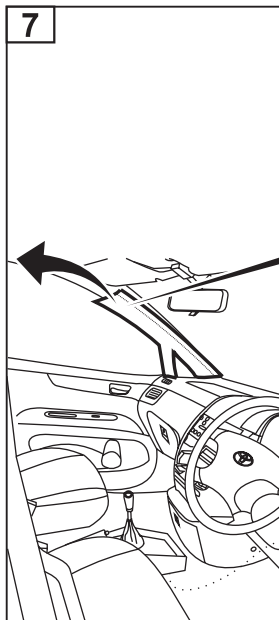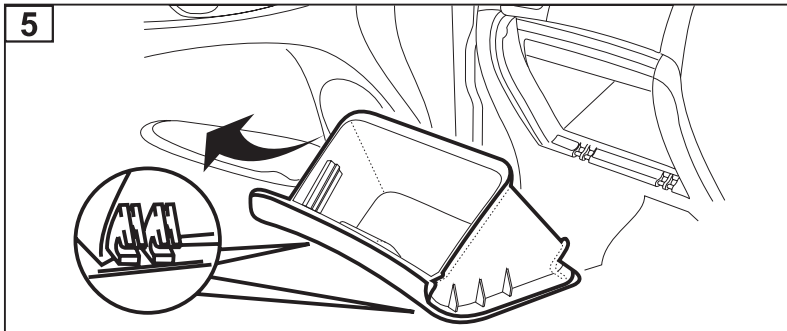



18




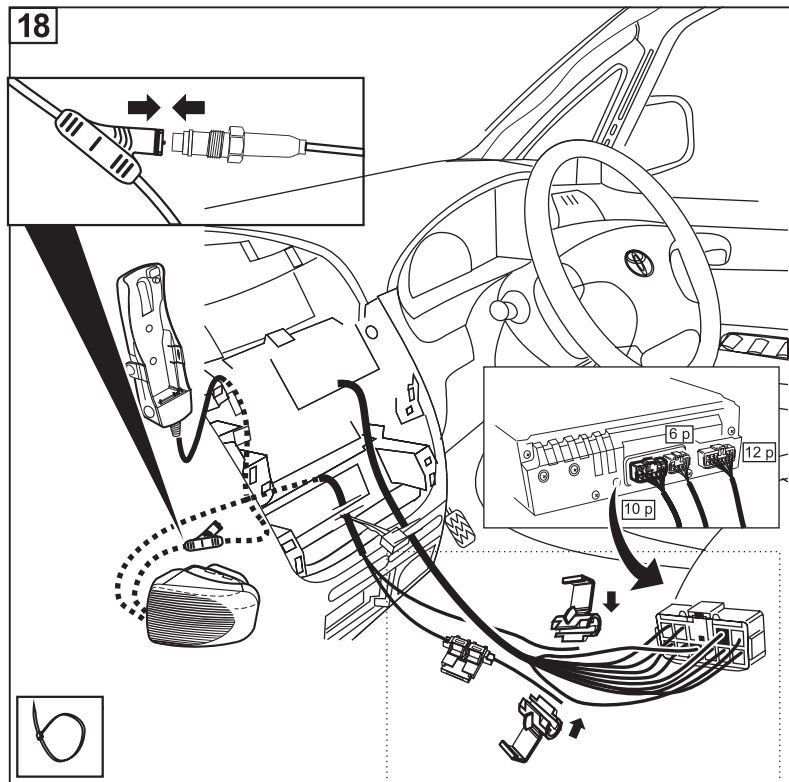


6

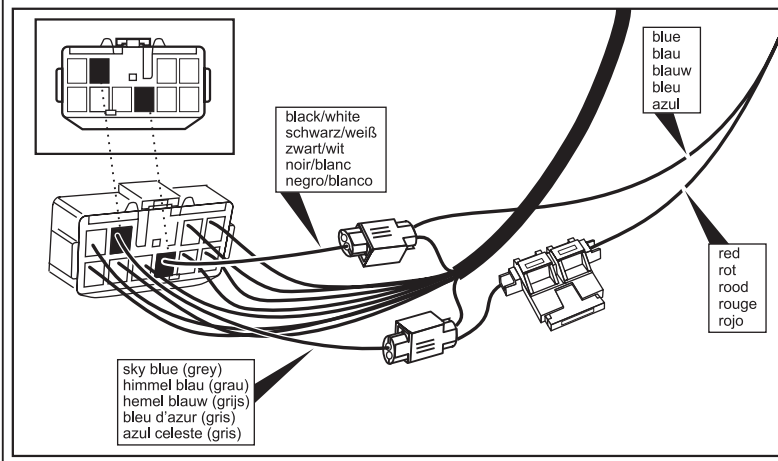


4

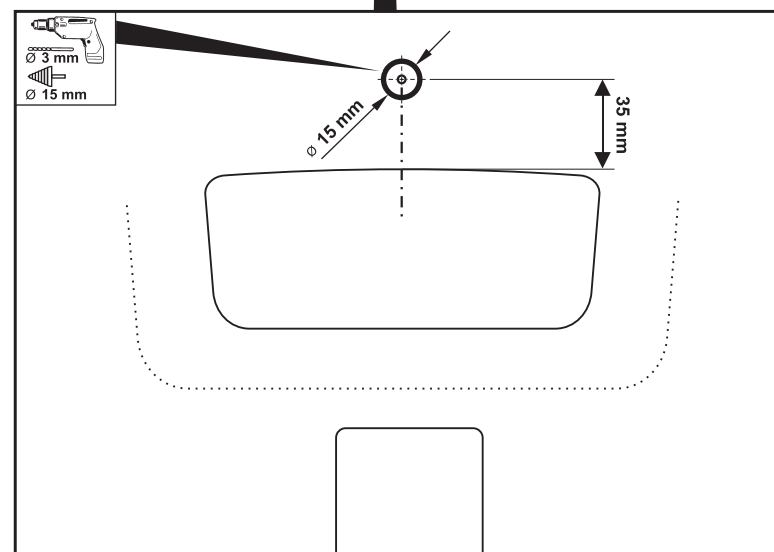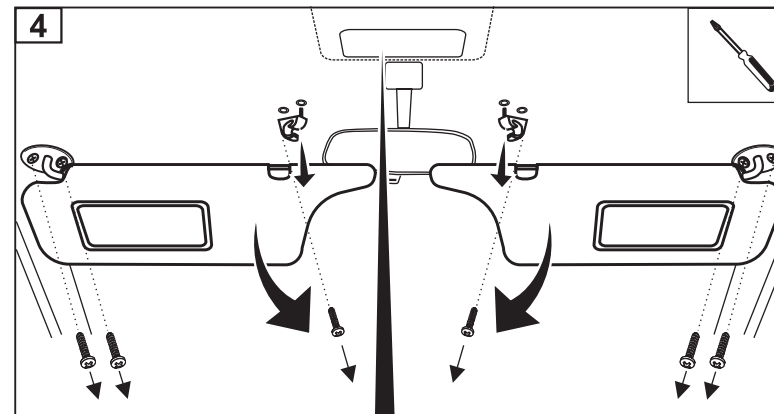



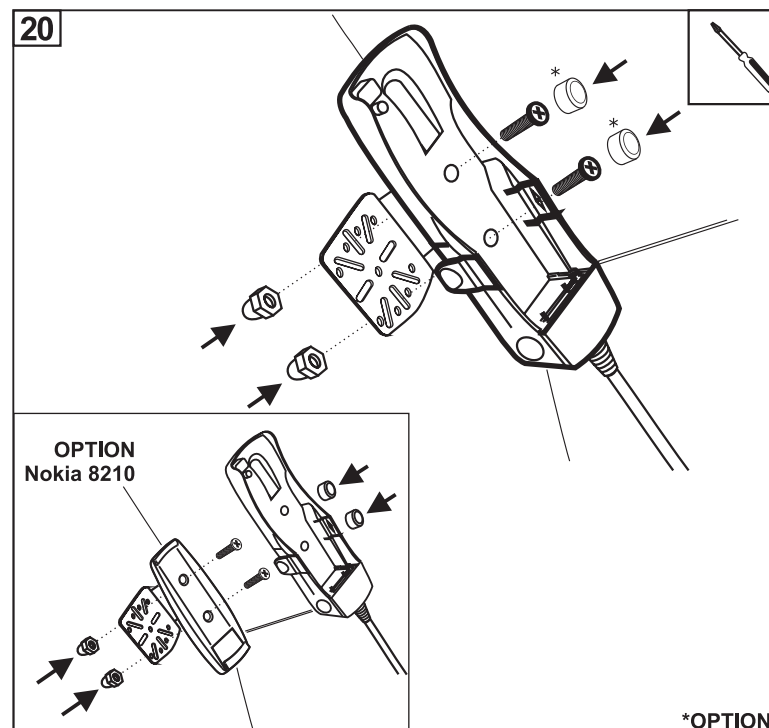
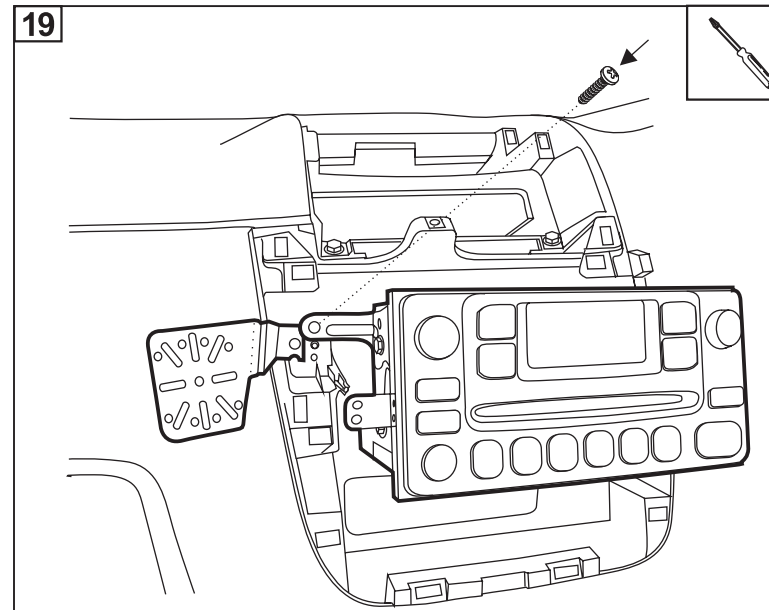
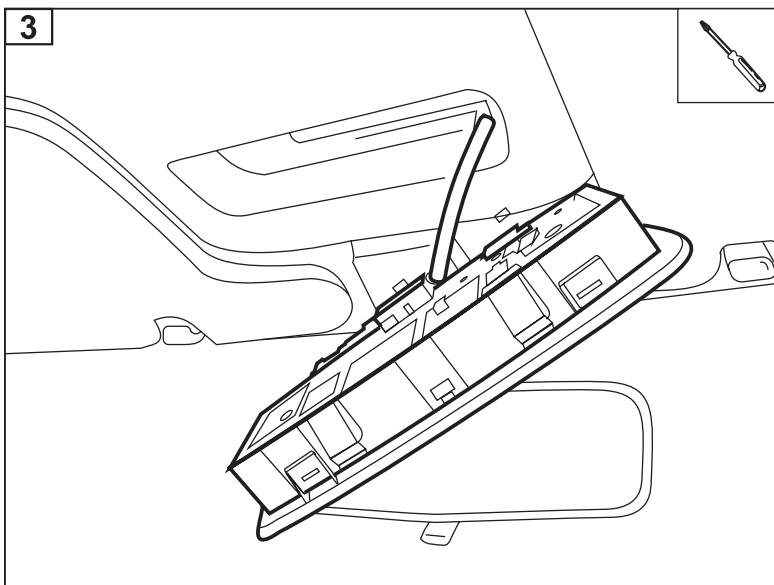
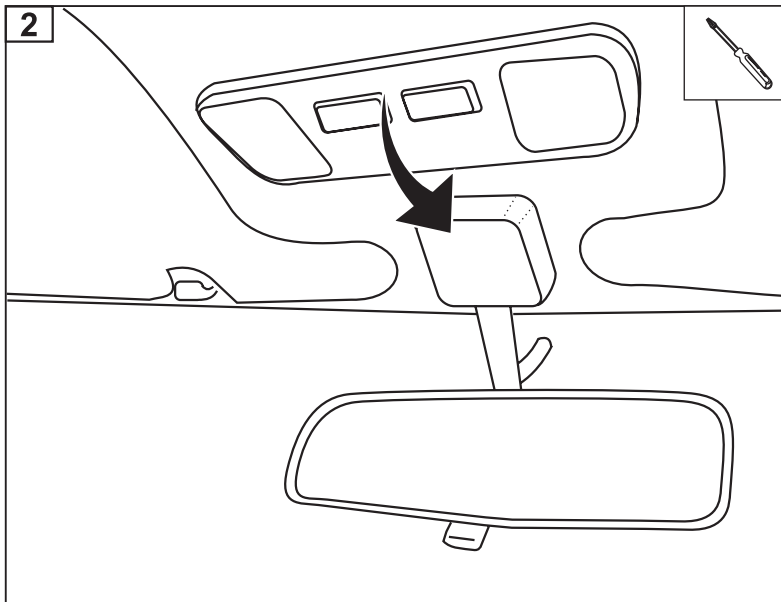


INFO

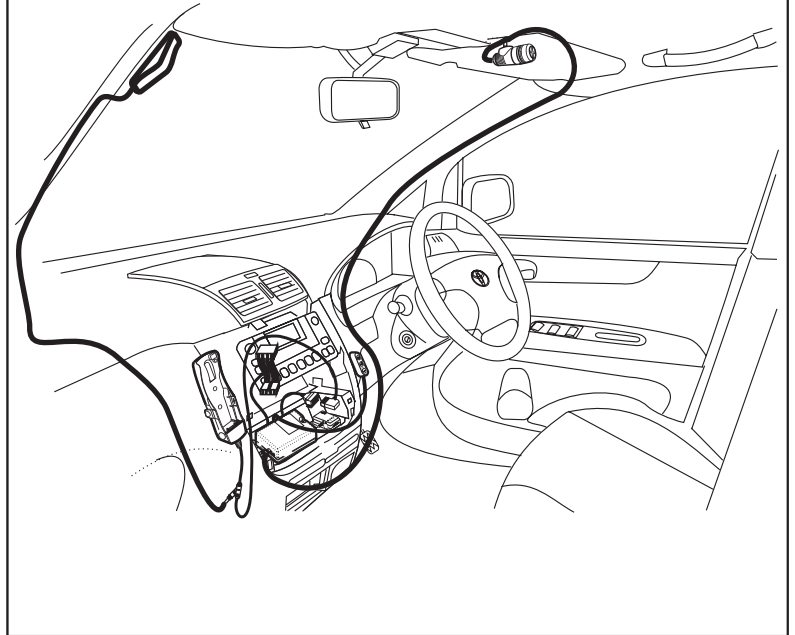

1

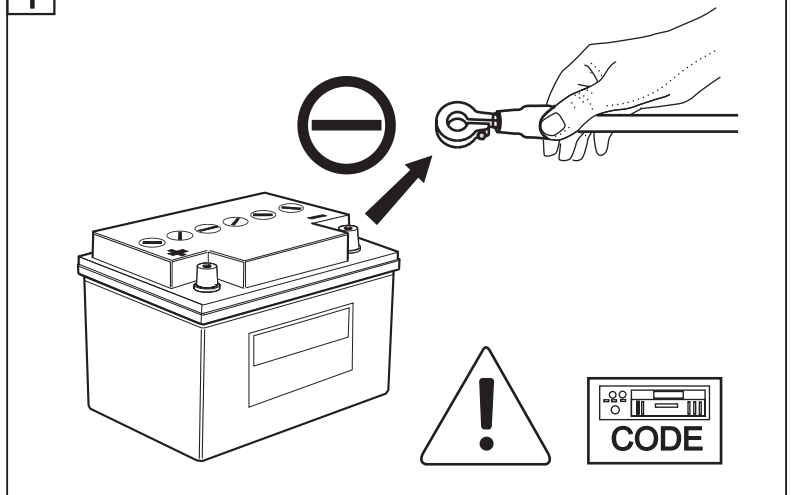

PARTNAME: HANDS-FREE CAR KIT		PARTNUMBER: THF30	
TOOLS/WERKZEUGE/OUTILS/WERKTUIGEN/HERRAMIENTAS			
MODEL CODE: **M20R-A***W			
😊		☹️	
VEHICLE OPTION/FAHRZEUG OPTION/OPTION VEHICULE/VOERTUIG OPTIE/OPCIÓN VEHÍCULO		VEHICLE OPTION/FAHRZEUG OPTION/OPTION VEHICULE/VOERTUIG OPTIE/OPCIÓN VEHÍCULO	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
10		10	
ACCESSORIES/ZUBEHÖR/ACCESORIOS/TOEBEHOREN/ACCESORIOS		ACCESSORIES/ZUBEHÖR/ACCESORIOS/TOEBEHOREN/ACCESORIOS	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
10		10	
SAFETY PRECAUTION/SICHERHEITSMASSNAHME/PRECAUTIONS DE SECURITE/VEILIGHEIDVOORZIENINGEN/MEDIDA DE SEGURIDAD			
	Step/Punkt/Point/Stap/Punto 4/21		Step/Punkt/Point/Stap/Punto
	Step/Punkt/Point/Stap/Punto		Step/Punkt/Point/Stap/Punto
TOOLS/WERKZEUGE/OUTILS/WERKTUIGEN/HERRAMIENTAS			
 Drill Bohrmaschine Perceuse Boormachine Taladradora	 Ø 3 mm Bits Ø 3 mm Bohrer Ø 3 mm Forets Ø 3 mm Boor Ø 3 mm Taladro	 Ø 15 mm Bits Ø 15 mm Bohrer Ø 15 mm Forets Ø 15 mm Boor Ø 15 mm Taladro	
 Philips 2	 PLASTIC CLEANER Cleaner Entfetter Dégrossiseur Onvetter Desengrasante	 10 mm	
 5,5 mm		 Pencil Stift Stylo pointé Potlood Lápiz	
 Gume tape Klebeband Ruban adhésif Kleefband Cinta adhesiva		 Ø 5 mm	
			

HANDS-FREE CAR KIT
KFZ FREISPRECHEINRICHTUNG
HANDENVRIJE CAR KIT
LE KIT MAINS-LIBRES
EQUIPO DE MANOS LIBRES

THF 20

**TOYOTA
AVENSIS VERSO**

INSTALLATION MANUAL-EINBAUANLEITUNG-MANUEL D'INSTALLATION-MONTAGE HANDLEIDING-EQUIPO DE MANOS LIBRES


RHD



AVENSIS VERSO


RHD

PARTNUMBER:THF 30

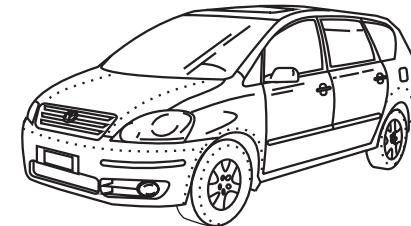

HANDS-FREE CAR KIT
KFZ FREISPRECHEINRICHTUNG
HANDENVRIJE CAR KIT
LE KIT MAINS-LIBRES
EQUIPO DE MANOS LIBRES

KIT CONTENT - STÜCKLISTE - CONTENU - KIT INHOUD - CONTENIDO

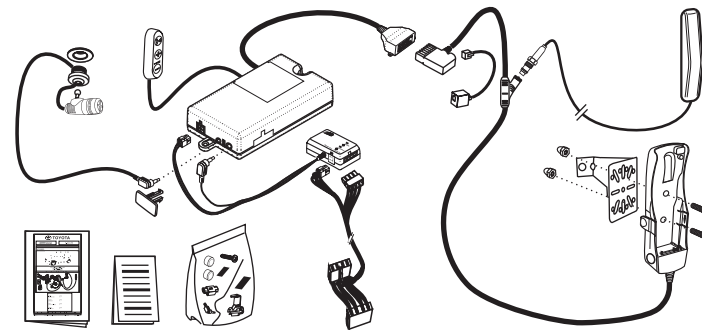

Weight: 0,75 kg
Installation time: 1,30 h

Gewicht: 0,75 kg
Einbauzeit: 1,30 h

Poids: 0,75 kg
Temps d'installation: 1,30 h

Gewicht: 0,75 kg
Installatie tijd: 1,30 h


INSTALLATION MANUAL-EINBAUANLEITUNG-MANUEL D'INSTALLATION-MONTAGE HANDLEIDING-EQUIPO DE MANOS LIBRES



AVENSIS VERSO


RHD

PARTNUMBER:THF 20

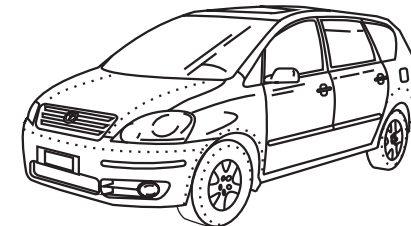

HANDS-FREE CAR KIT
KFZ FREISPRECHEINRICHTUNG
HANDENVRIJE CAR KIT
LE KIT MAINS-LIBRES
EQUIPO DE MANOS LIBRES

KIT CONTENT - STÜCKLISTE - CONTENU - KIT INHOUD - CONTENIDO

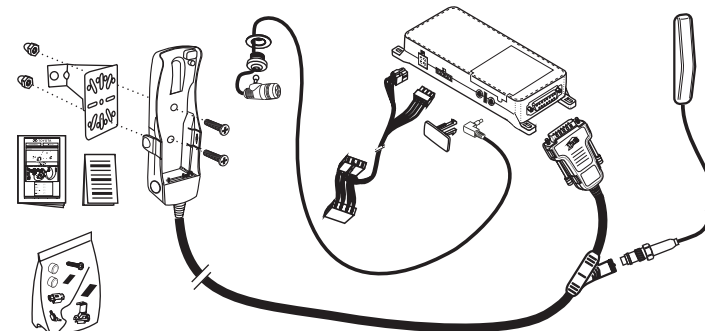







Weight: 0,82 kg
Installation time: 1,15 h

Gewicht: 0,82 kg
Einbauzeit: 1,15 h

Poids: 0,82 kg
Temps d'installation: 1,15 h

Gewicht: 0,82 kg
Installatie tijd: 1,15 h

INSTALLATION MANUAL-EINBAUANLEITUNG-MANUEL D'INSTALLATION-MONTAGE HANDLEIDING-EQUIPO DE MANOS LIBRES

PARTNAME: HANDS-FREE CAR KIT		PARTNUMBER: THF20	
TOOLS/WERKZEUGE/OUTILS/WERKTUIGEN/HERRAMIENTAS			
MODEL CODE: **M20R-A***W			
☺		☹	
VEHICLE OPTION/FAHRZEUG OPTION/OPTION VEHICLE/VOERTUIG OPTIE/OPCIÓN VEHÍCULO		VEHICLE OPTION/FAHRZEUG OPTION/OPTION VEHICLE/VOERTUIG OPTIE/OPCIÓN VEHÍCULO	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
10		10	
ACCESSORIES/ZUBEHÖR/ACCESOIRES/TOEBEHOREN/ACCESORIOS		ACCESSORIES/ZUBEHÖR/ACCESOIRES/TOEBEHOREN/ACCESORIOS	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
10		10	
SAFETY PRECAUTION/SICHERHEITSMASSNAHME/PRECAUTIONS DESECURITE/VEILIGHEIDVOORZIENINGEN/MEDIDA DE SEGURIDAD			
	Step/Punkt/Point/Stap/Punto 4/19		Step/Punkt/Point/Stap/Punto
	Step/Punkt/Point/Stap/Punto		Step/Punkt/Point/Stap/Punto
TOOLS/WERKZEUGE/OUTILS/WERKTUIGEN/HERRAMIENTAS			
 Drill Bohrmaschine Perceuse Boormachine Taladradora	 Ø 3 mm Bits Ø 3 mm Bohrer Ø 3 mm Forets Ø 3 mm Boor Ø 3 mm Taladro	 Ø 15 mm Bits Ø 15 mm Bohrer Ø 15 mm Forets Ø 15 mm Boor Ø 15 mm Taladro	
 Philips 2	 PLASTIC CLEANER	 Cleaner Entfetter Dégrossiseur Onvetter Desengrasante	 10 mm
 5,5 mm		 Pencil Stift Stylo pointé Potlood Lápiz	
 Gum tape Klebeband Ruban adhésif Kleefband Cinta adhesiva		 Ø 5 mm	
			

HANDS-FREE CAR KIT
KFZ FREISPRECHEINRICHTUNG
HANDENVRIJE CAR KIT
LE KIT MAINS-LIBRES
EQUIPO DE MANOS LIBRES


THF 30

**TOYOTA
AVENSIS VERSO**


INSTALLATION MANUAL-EINBAUANLEITUNG-MANUEL D'INSTALLATION-MONTAGE HANDLEIDING-EQUIPO DE MANOS LIBRES

RHD


19




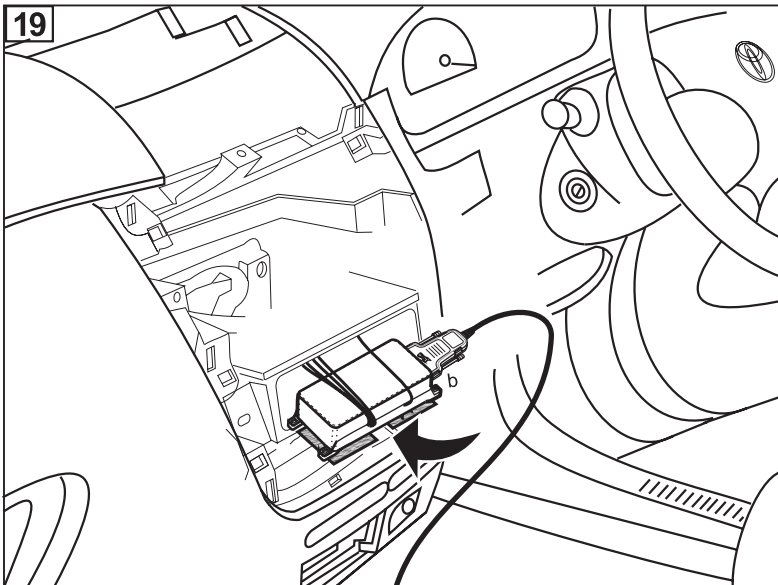


INFO

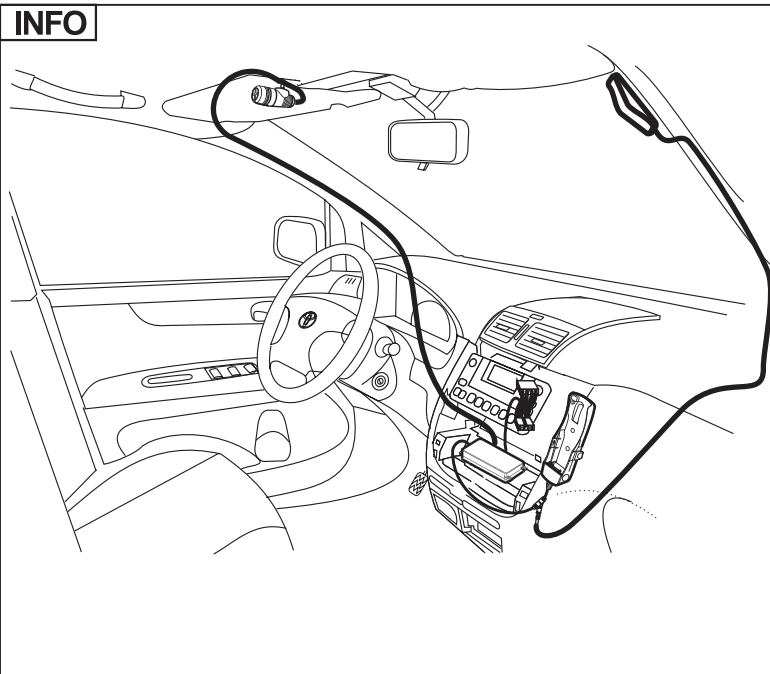


1

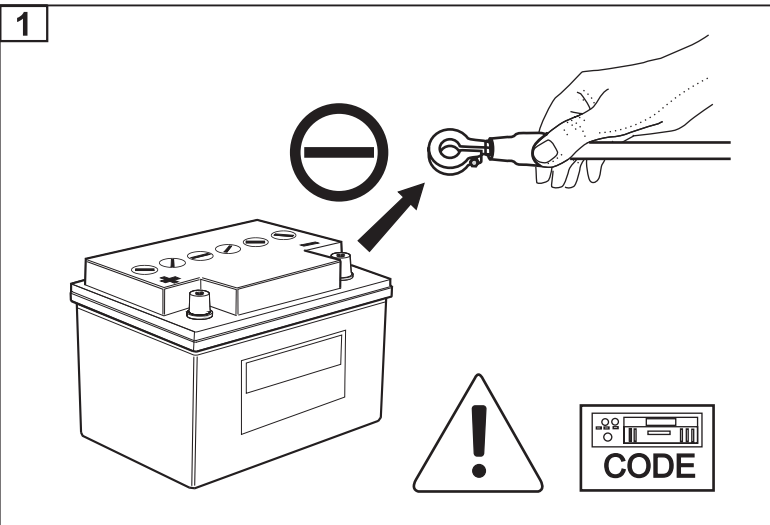

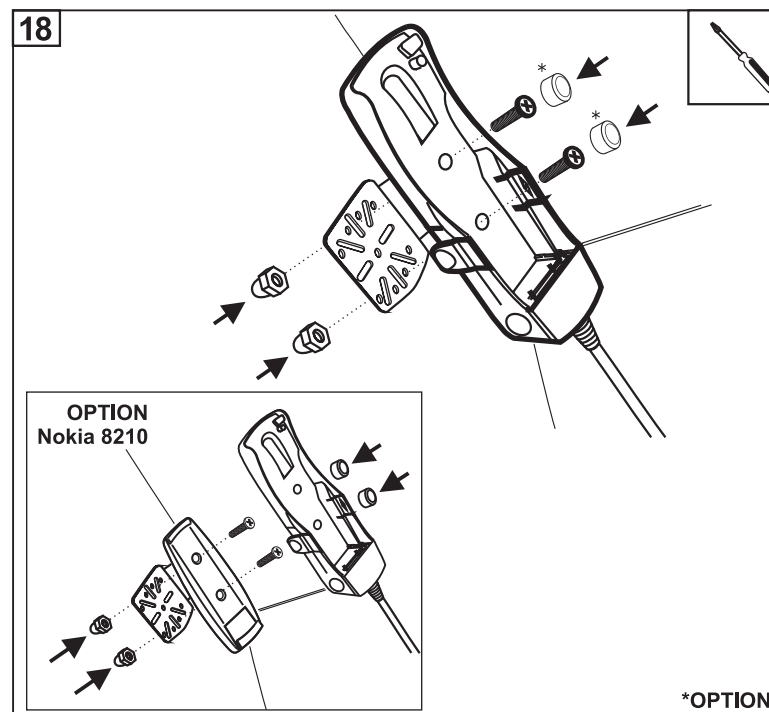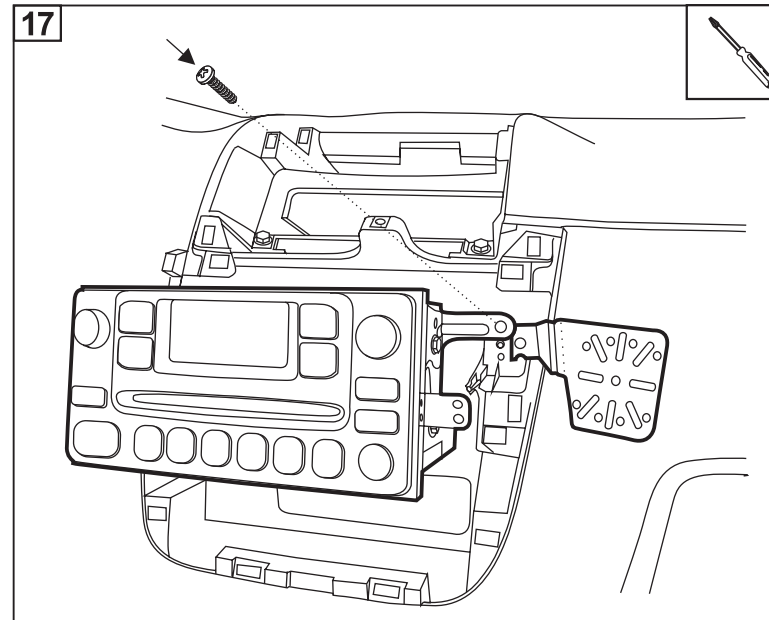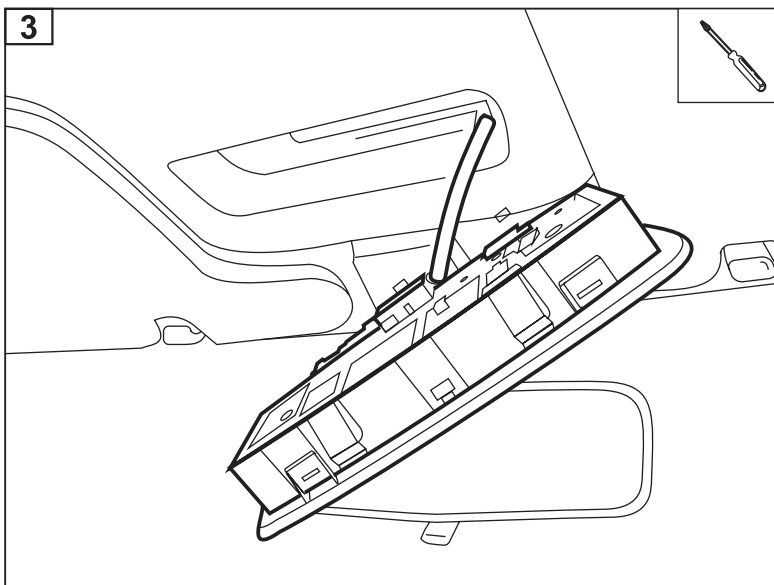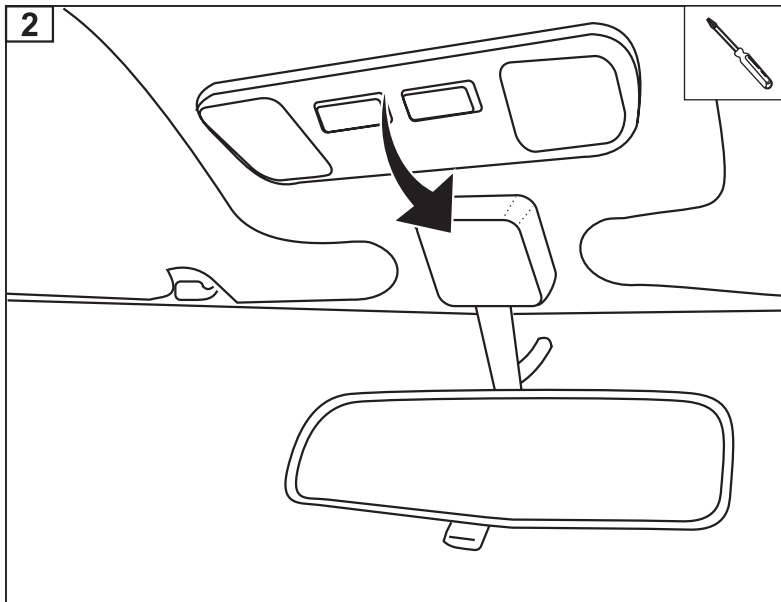


STANDARD AUDIO


16A

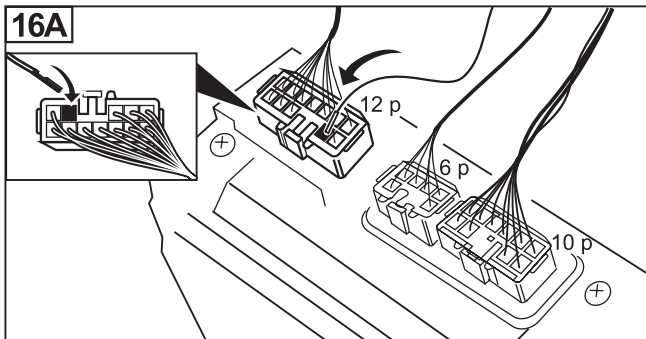


16B

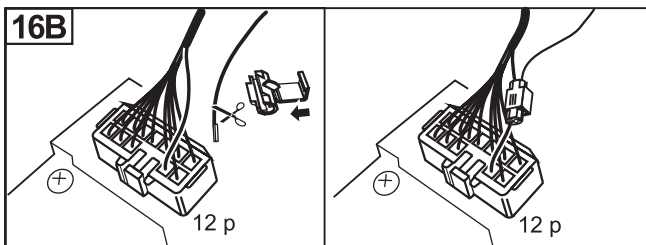

16C

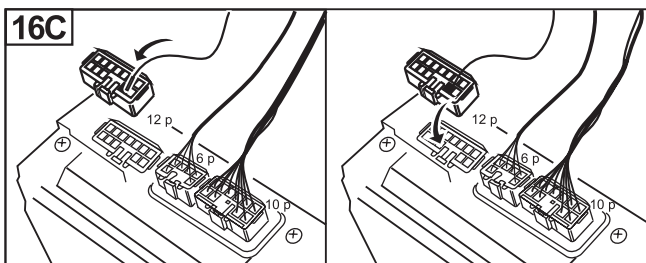



FULL MAP NAVI

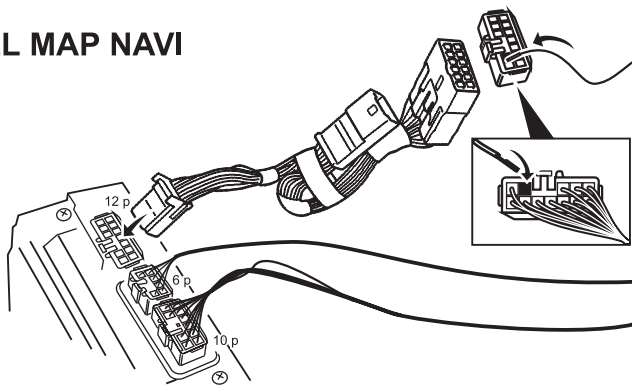

Page: 12/14

Date: 11.12.2003




4

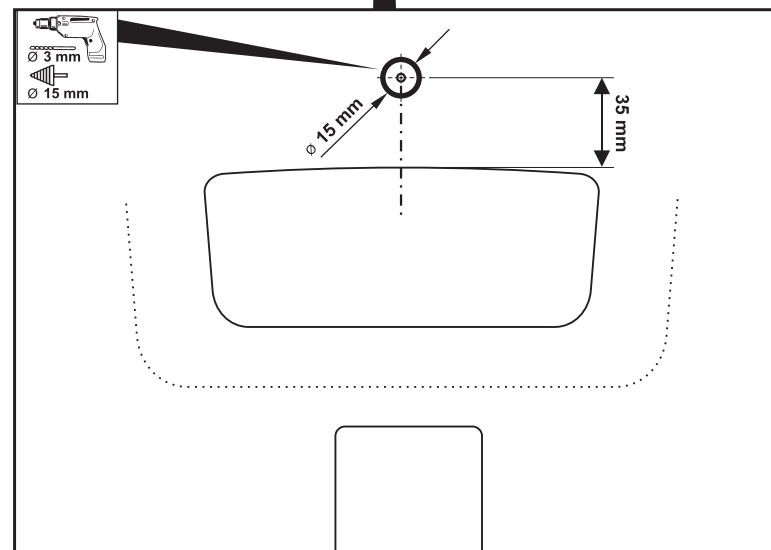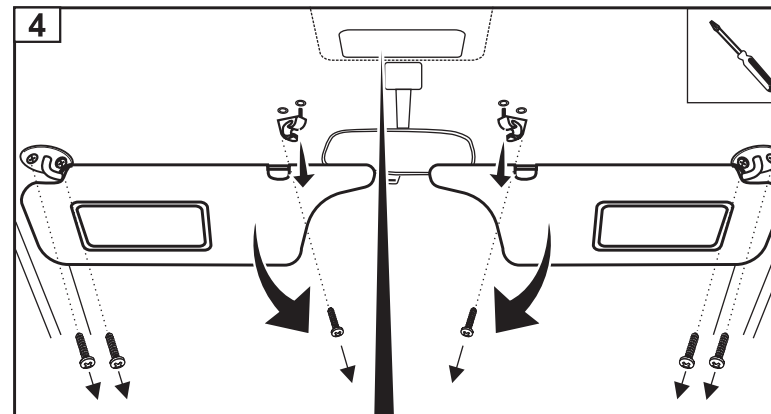


Page: 5/14

Date: 11.12.2003



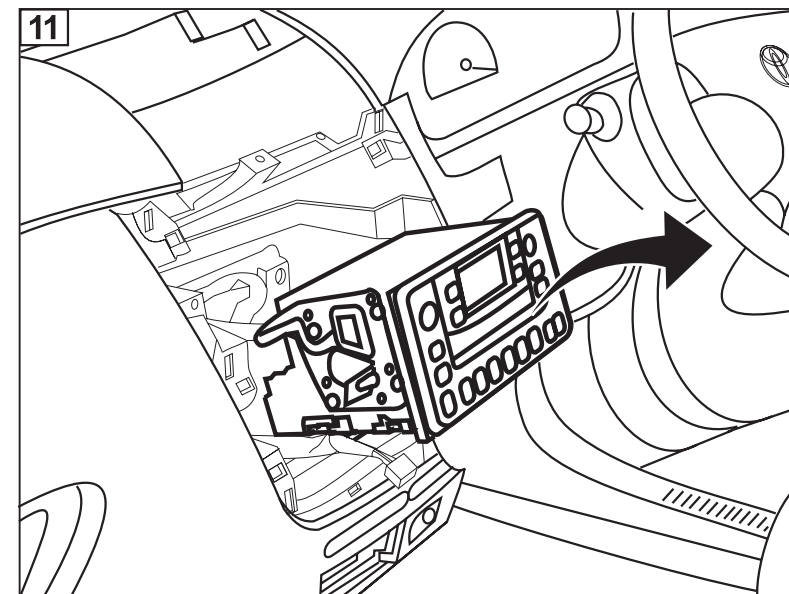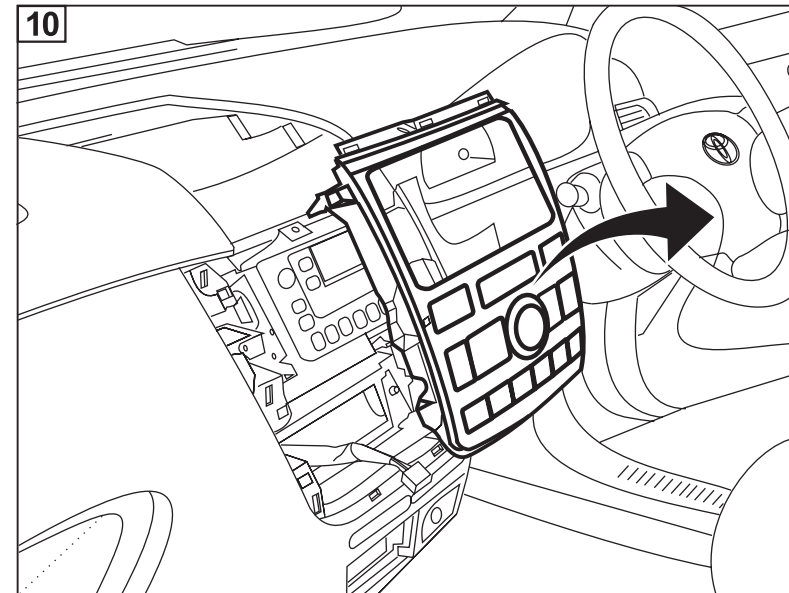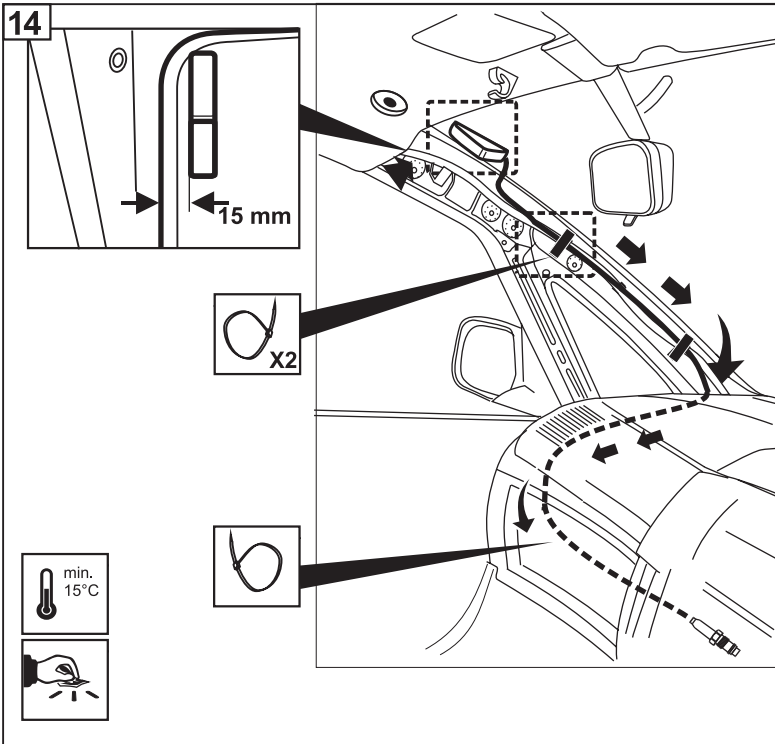

12

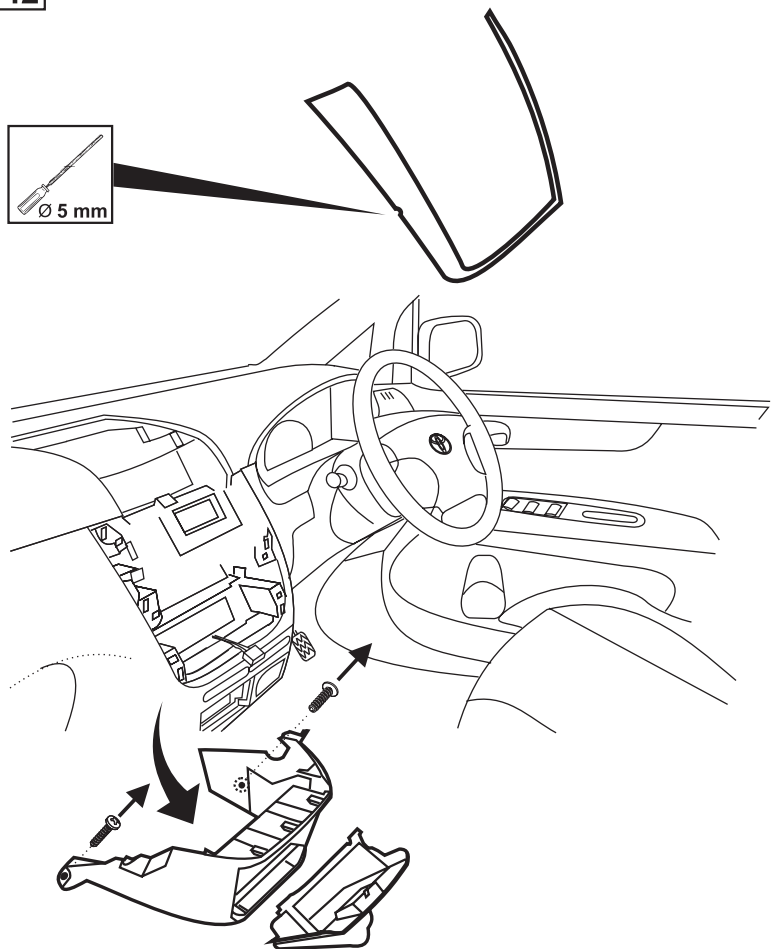

13

