



TOYOTA

ALWAYS A
BETTER WAY

Fortuner

Wind deflector

Installation instructions

Model year: as from 2015/04

Vehicle code: GUN156L-STT*XW
TGN156L-ST**KW






Part number: PC162-0K00H

Manual reference number: AIM 003 864 - 1

Revision Record


Rev. No.	Date	Page	Step	Remarks
	09.03.20	1		Model year updated & vehicle code added
	09.03.20	2		Kit & tools updated
	09.03.20	3-5, 7-11	1-6, 9-15	Info & steps updated
	09.03.20	6, 10	7, 8, 16	Steps added
	09.03.20	19	C/S	CheckSheet updated

PC162-0K00H

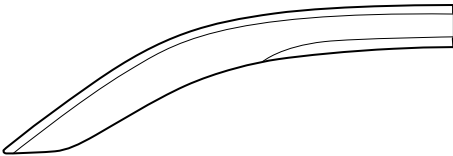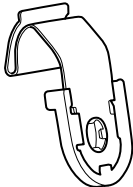
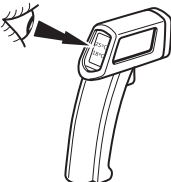

A  1x	B  1x		
C  1x	D  1x		
E  8x			
			
 ? °C	 + °C	PZ415-00000-00  3M adhesion promoter 4298 UV	  AIM 003-516-*







Material Safety Data Sheet

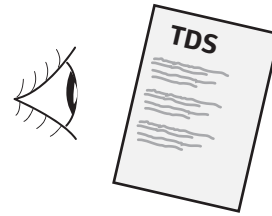

Technical Data Sheet

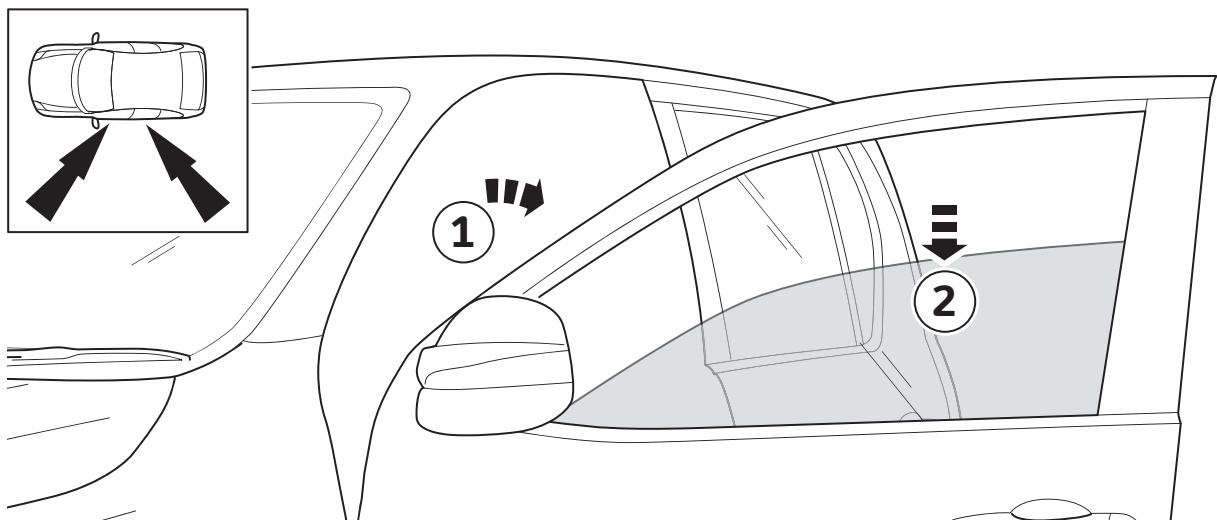
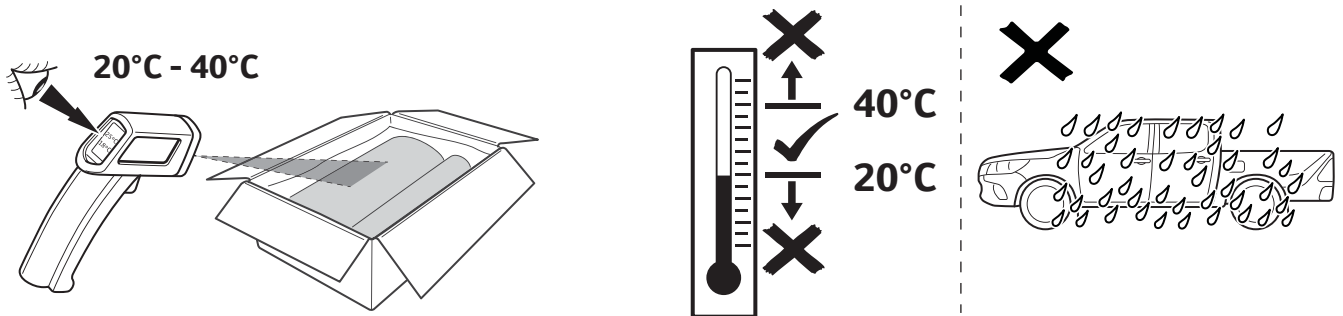
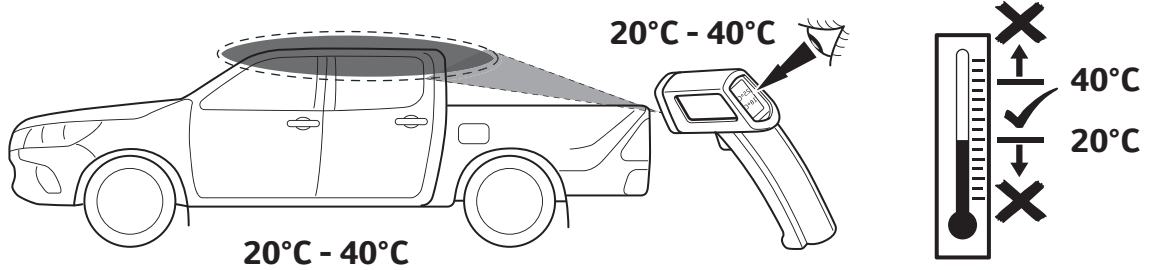


1

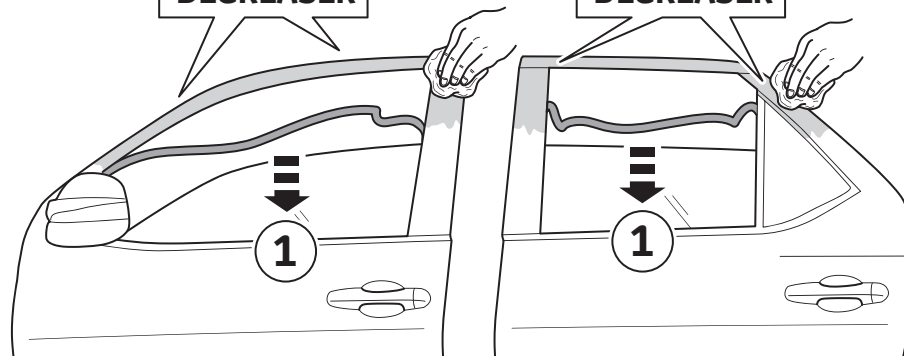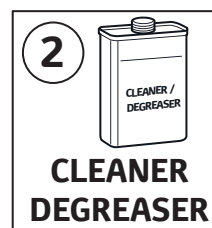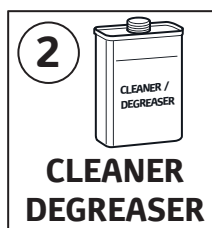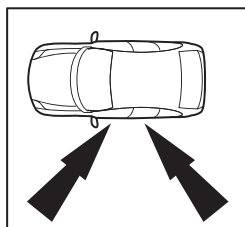




2

1

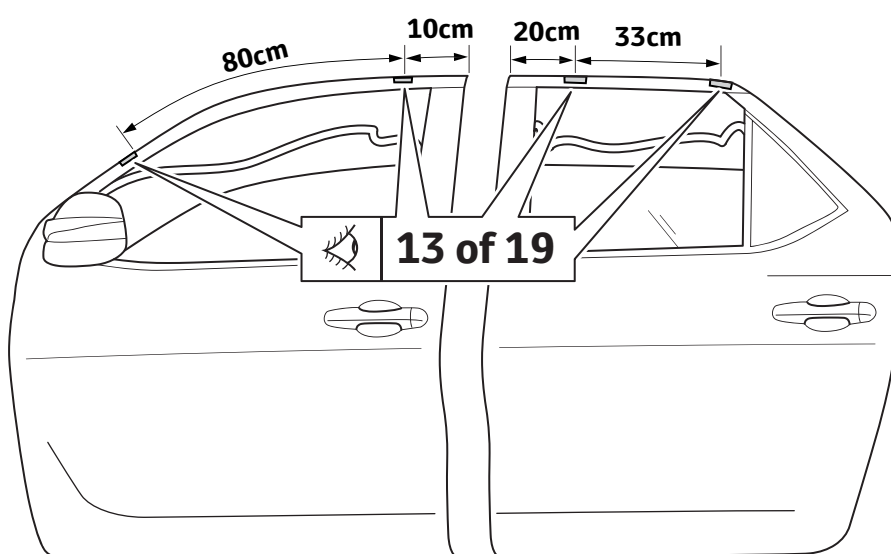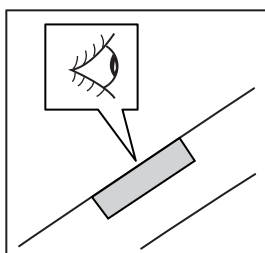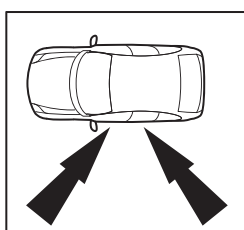


3


1

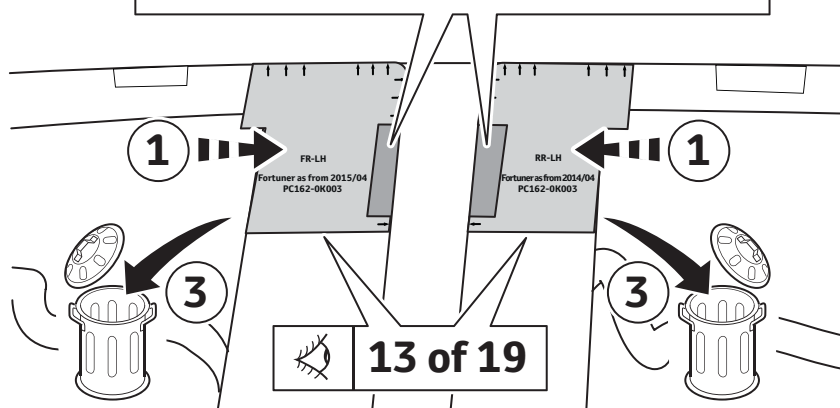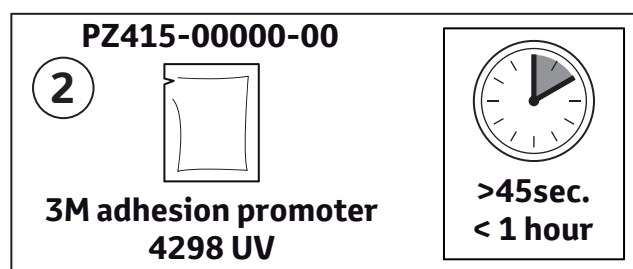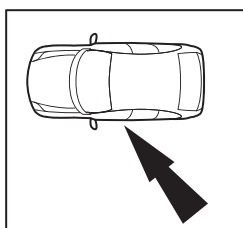


4

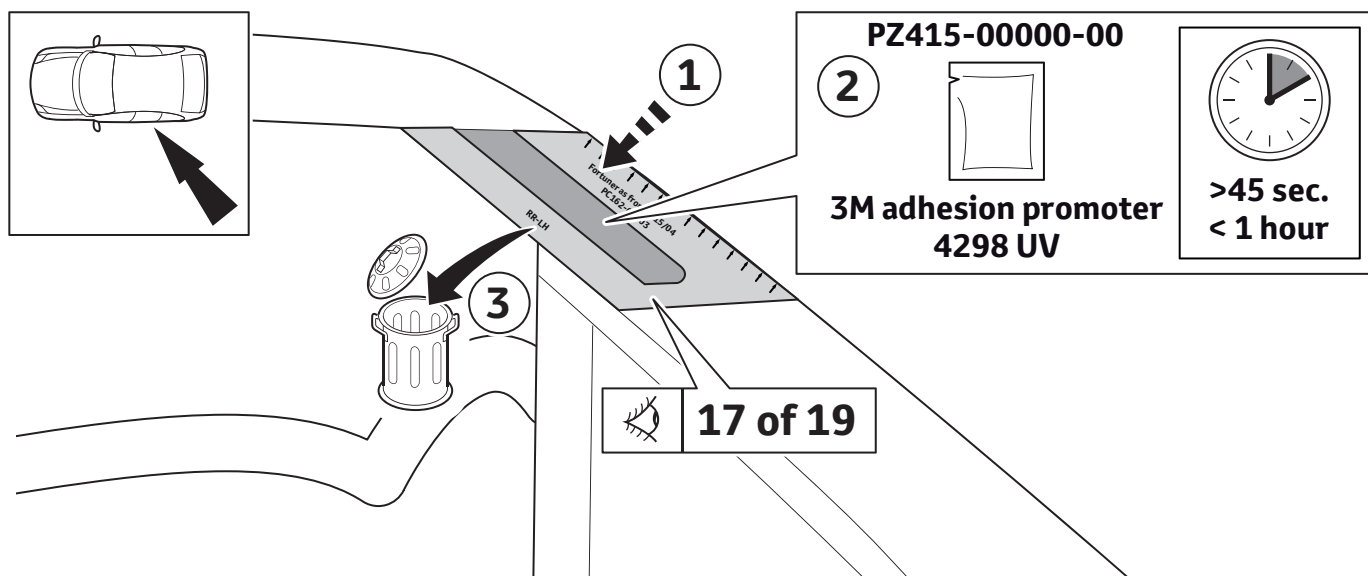

5

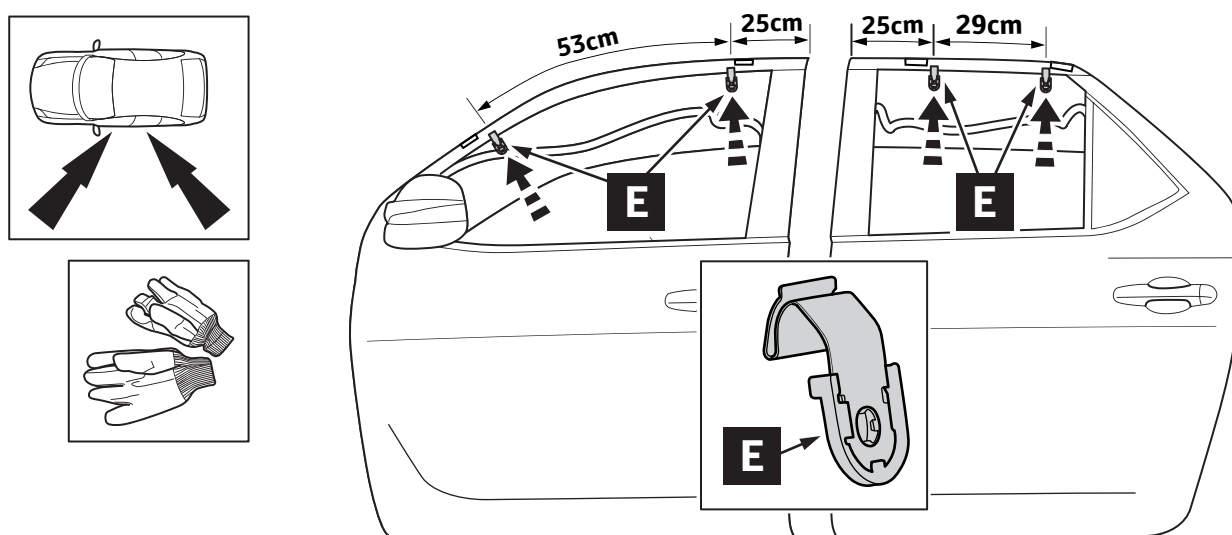


6

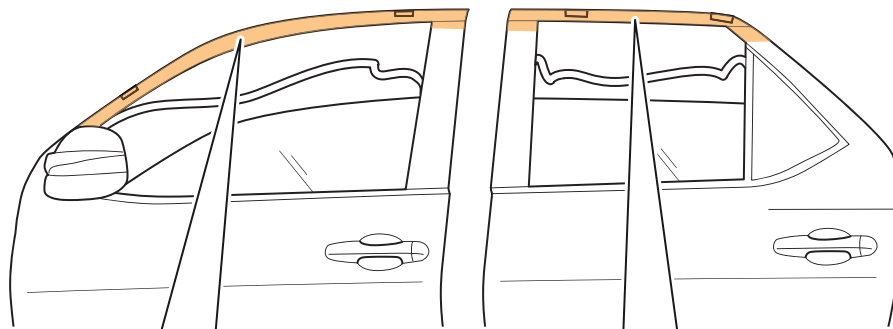




①	< 20°C ➡ ② 20°C - 40°C ➡ 8	②
③	20°C - 40°C ➡ 8	INFO 7 ➡ 15 ✓ ✗

7




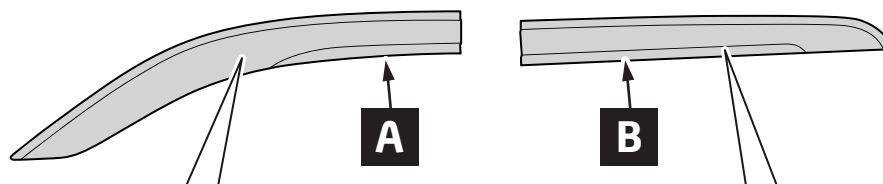


①	< 20°C ➡ ② 20°C - 40°C ➡ 9	②
③	20°C - 40°C ➡ 9	INFO 8 ➡ 15 ✓ ✗



8

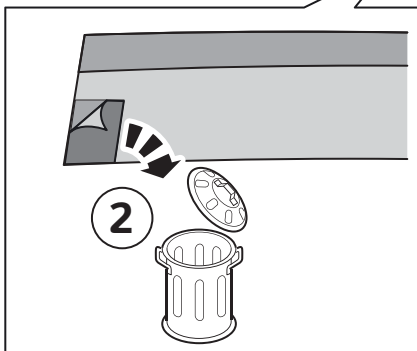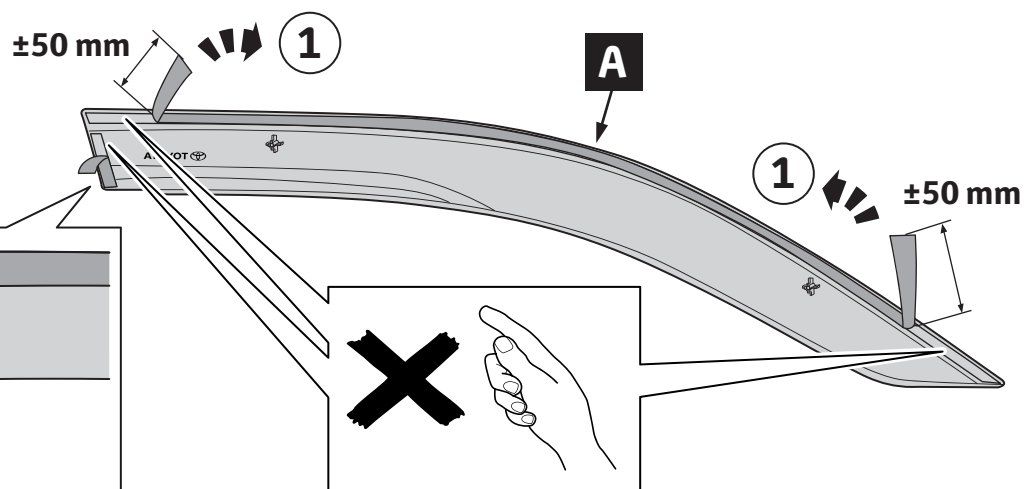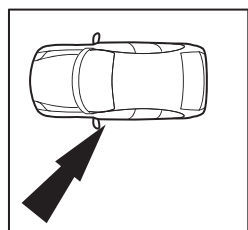



9

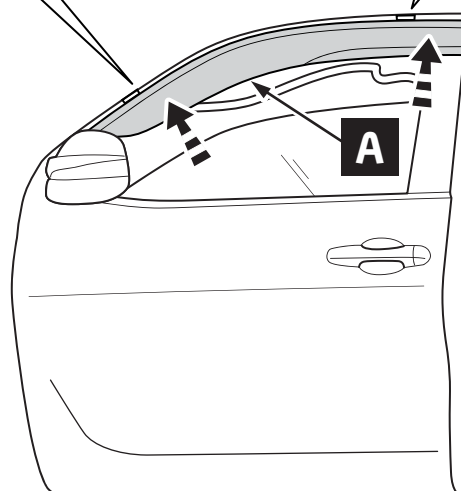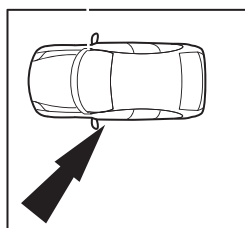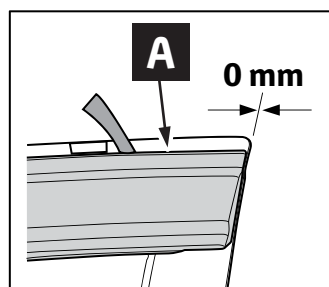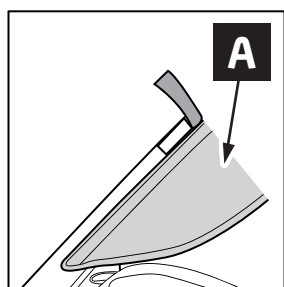




10

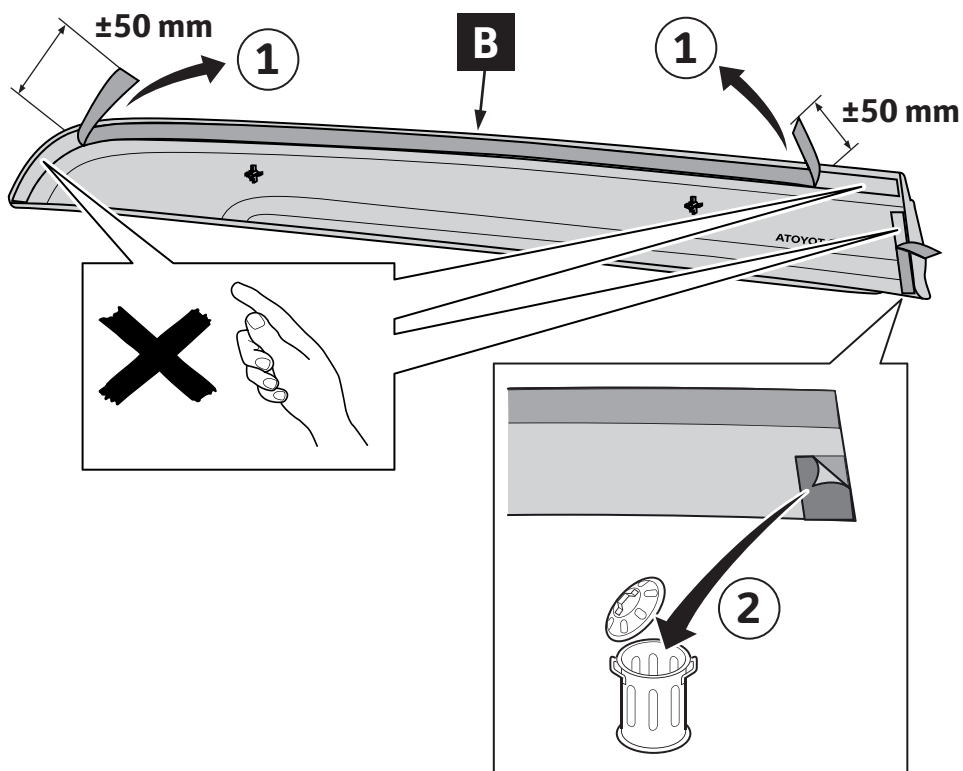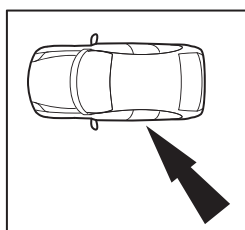



11

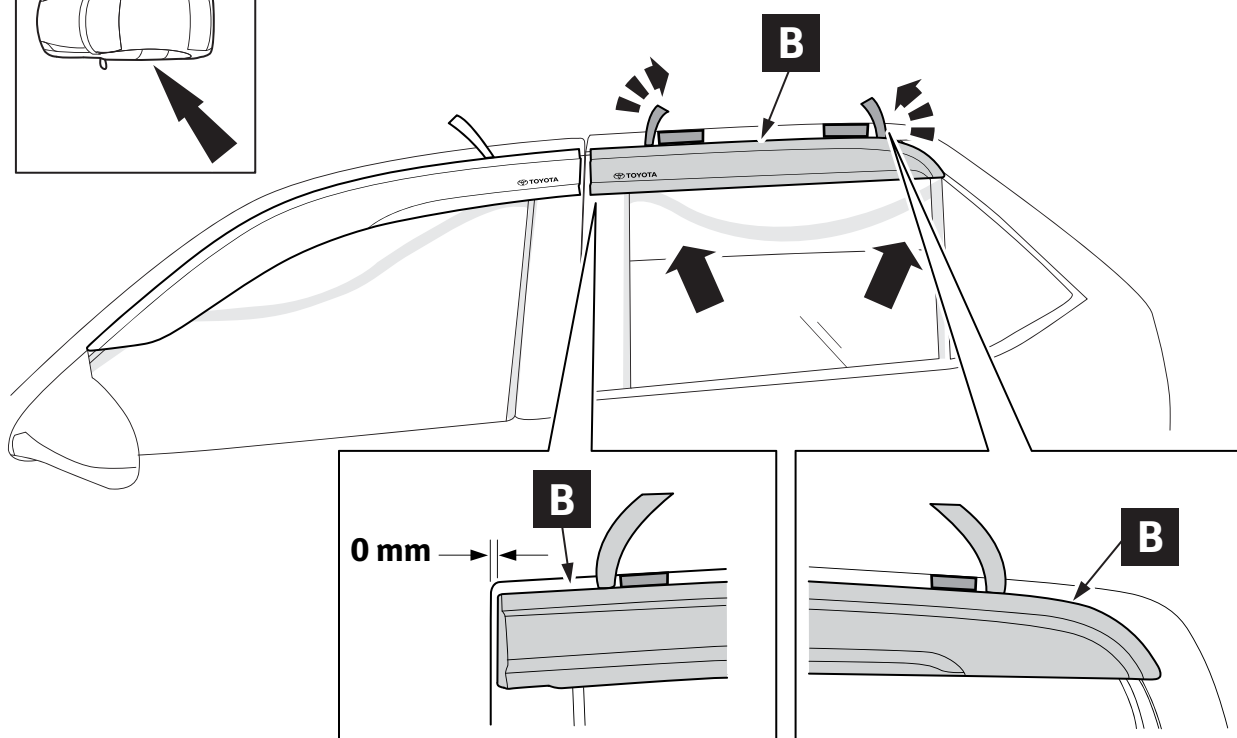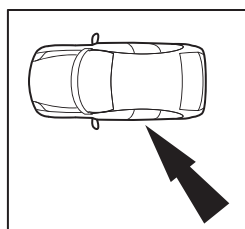




12

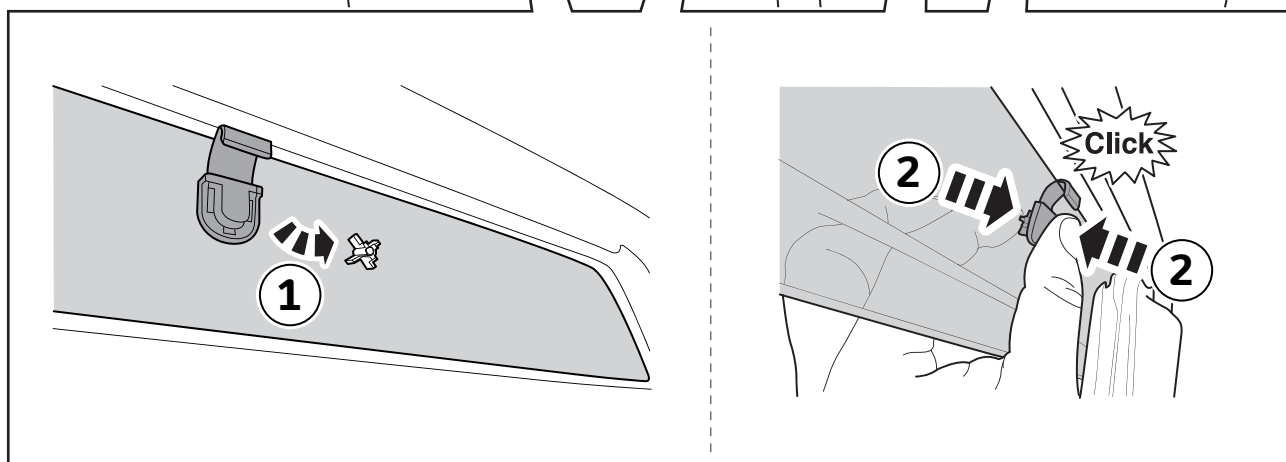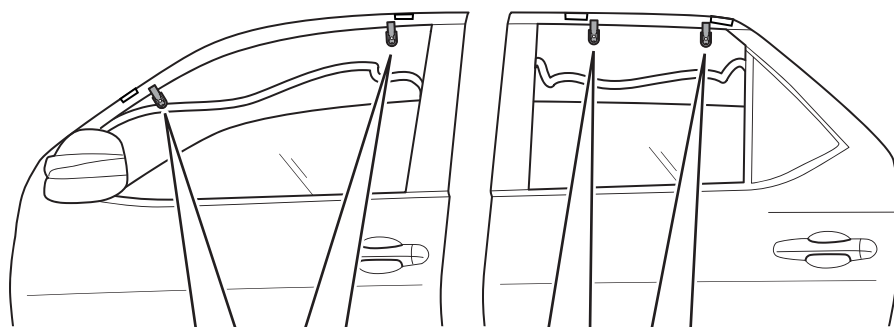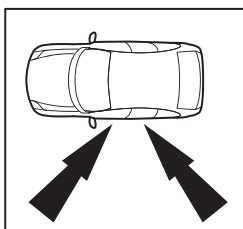


13

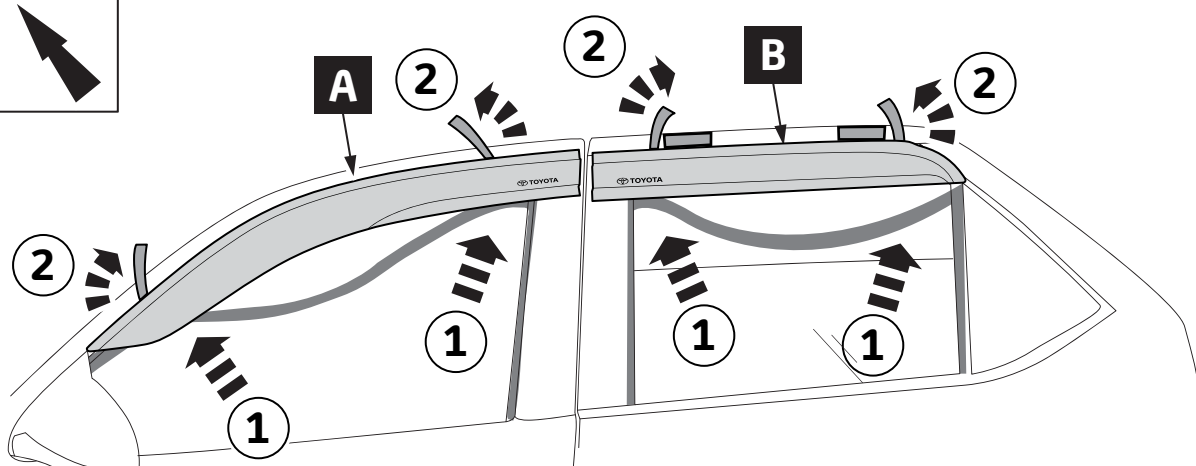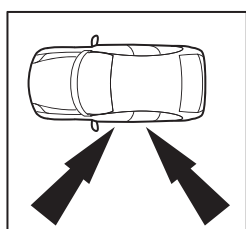

14

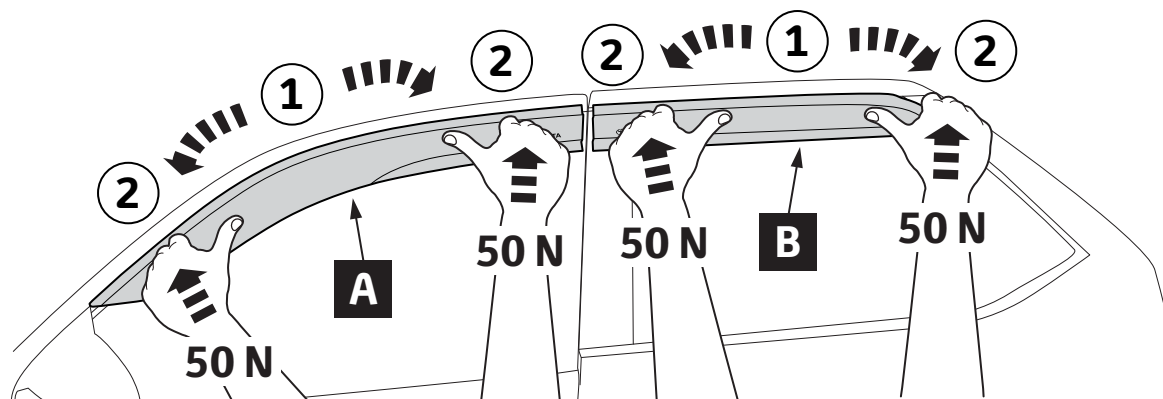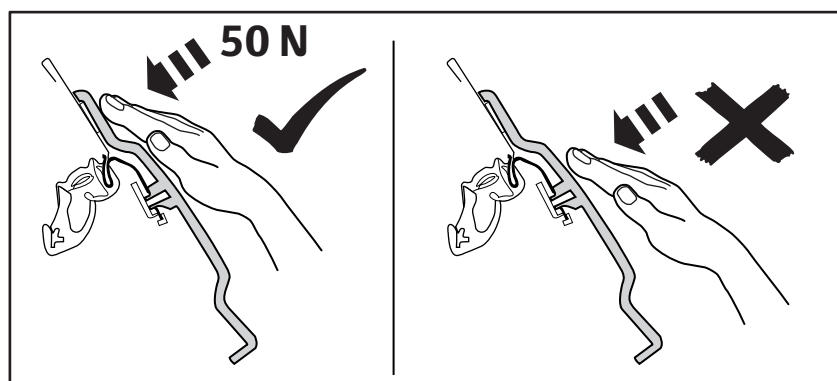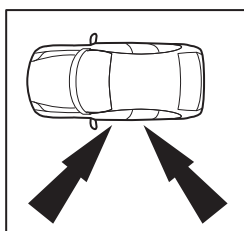

15


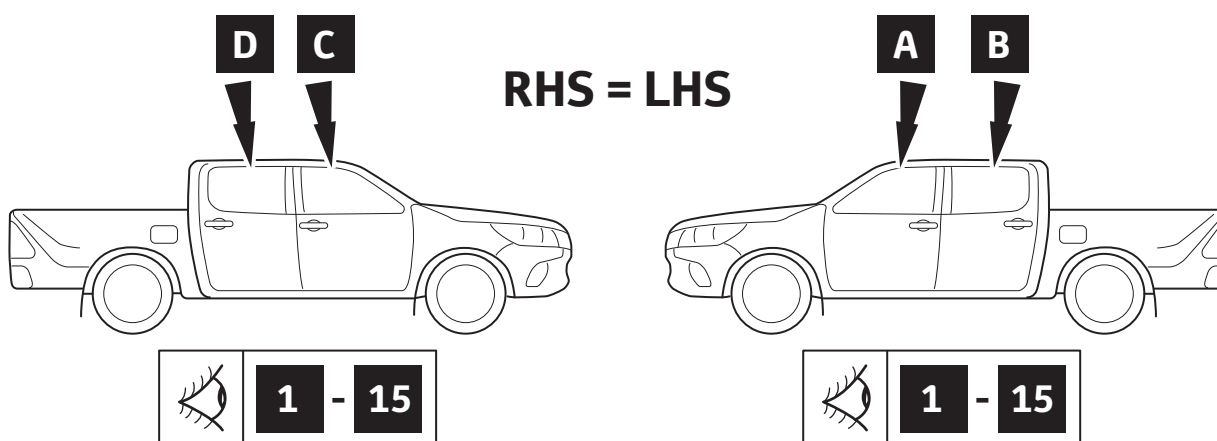


16



24 h




24 h

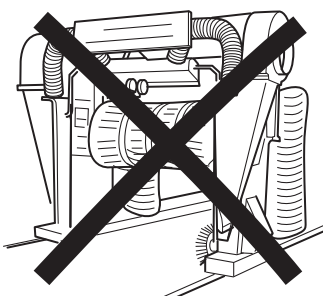


24 h









Max. 90 Km/h

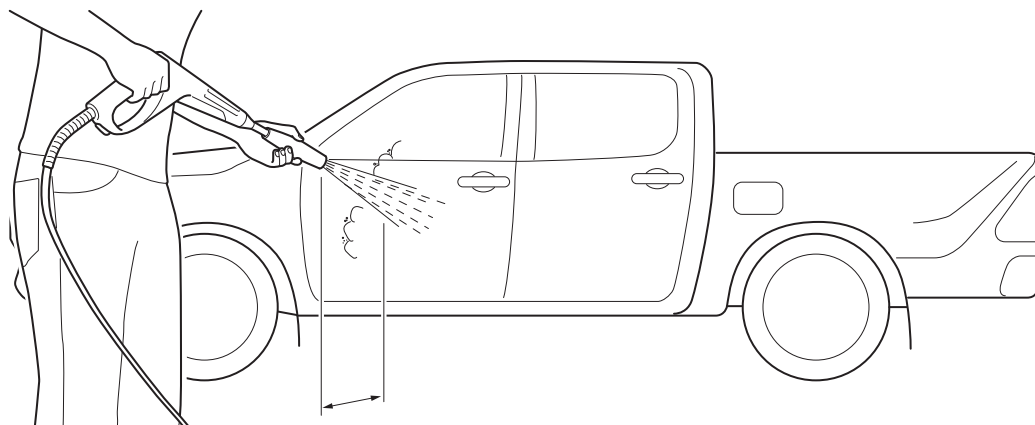


**Minimum
50cm.**

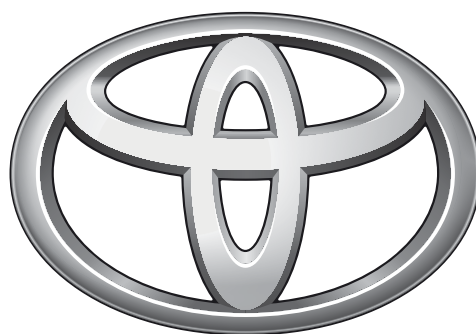


TOYOTA

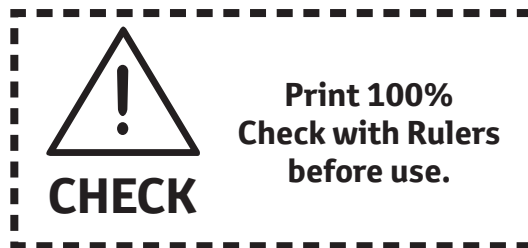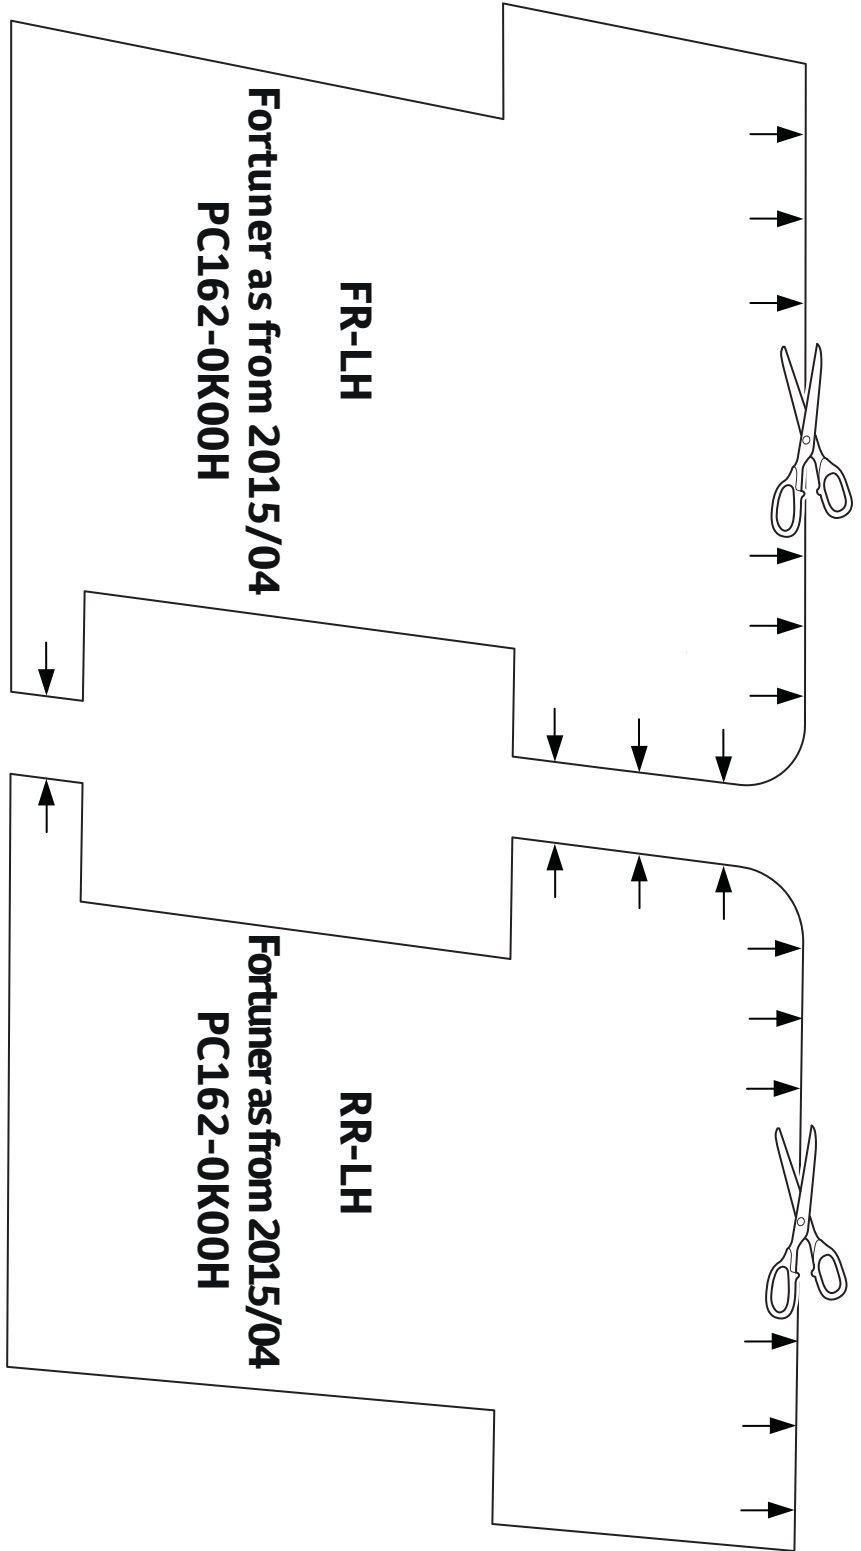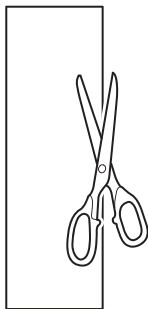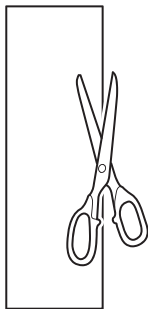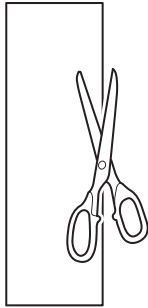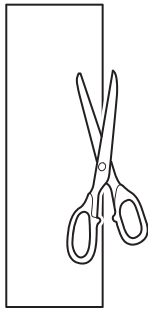

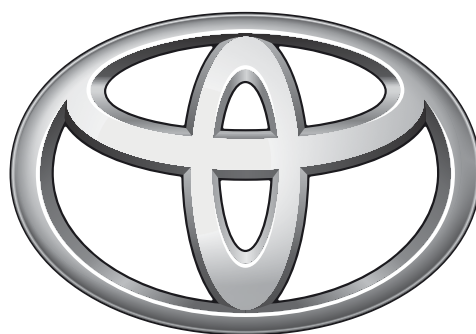



TOYOTA

0 10 20 30 40 50 60 70 80 90 100



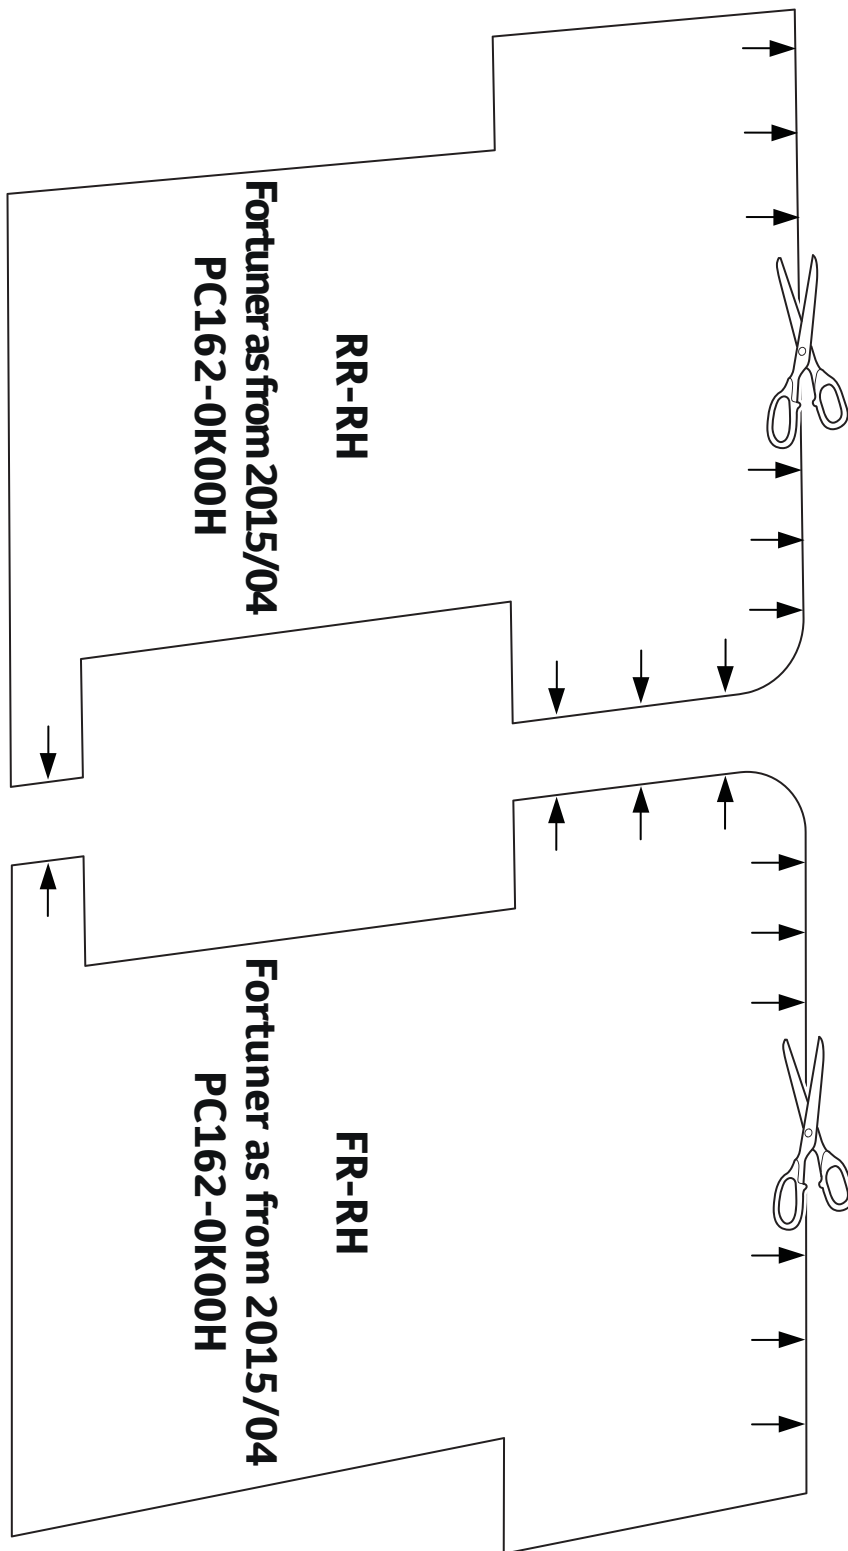



100 96 90 80 70 60 50 40 30 20 10 0

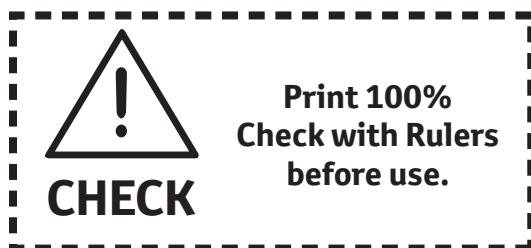

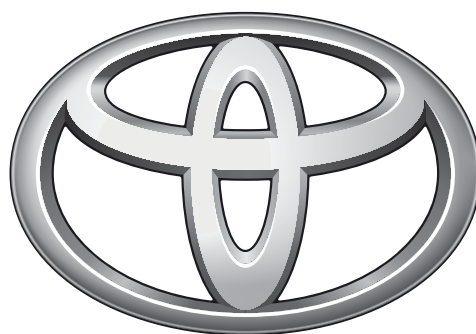

TOYOTA

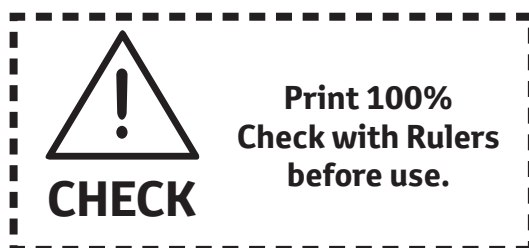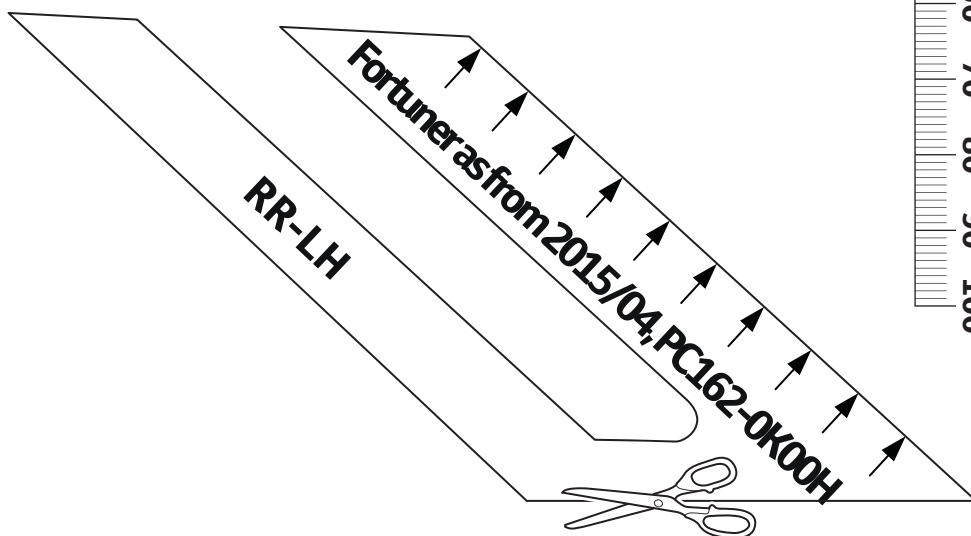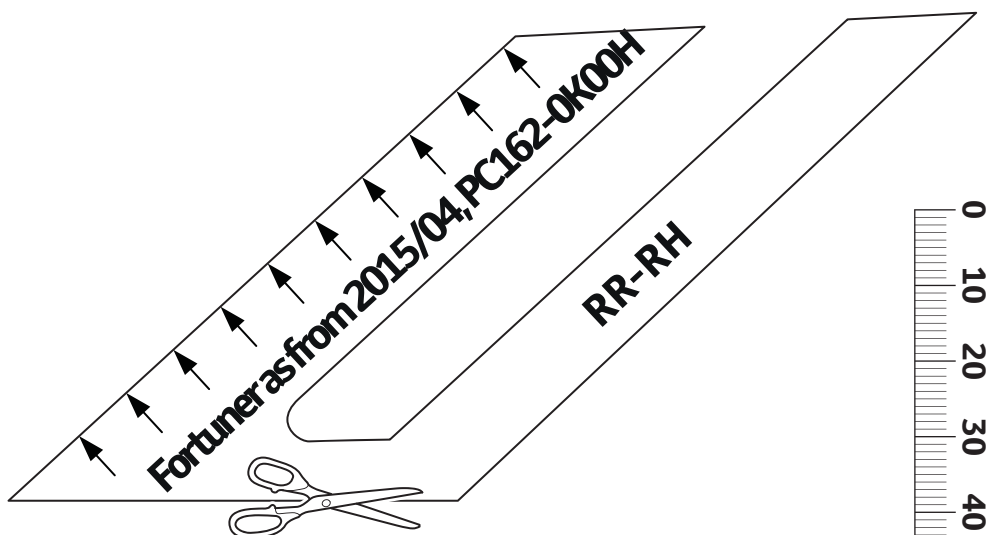

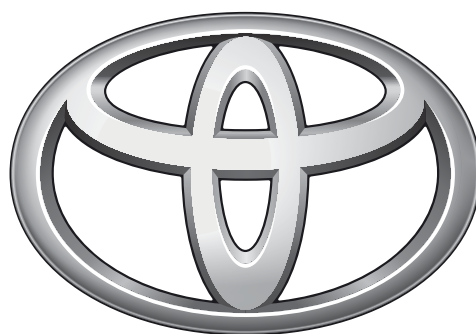

TOYOTA



TOYOTA


Model / Year Fortuner
as from 2015/04

Wind deflectors

VIN n°


ALWAYS A
BETTER WAY

DURING INSTALLATION

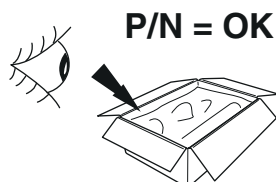


1


AFTER INSTALLATION

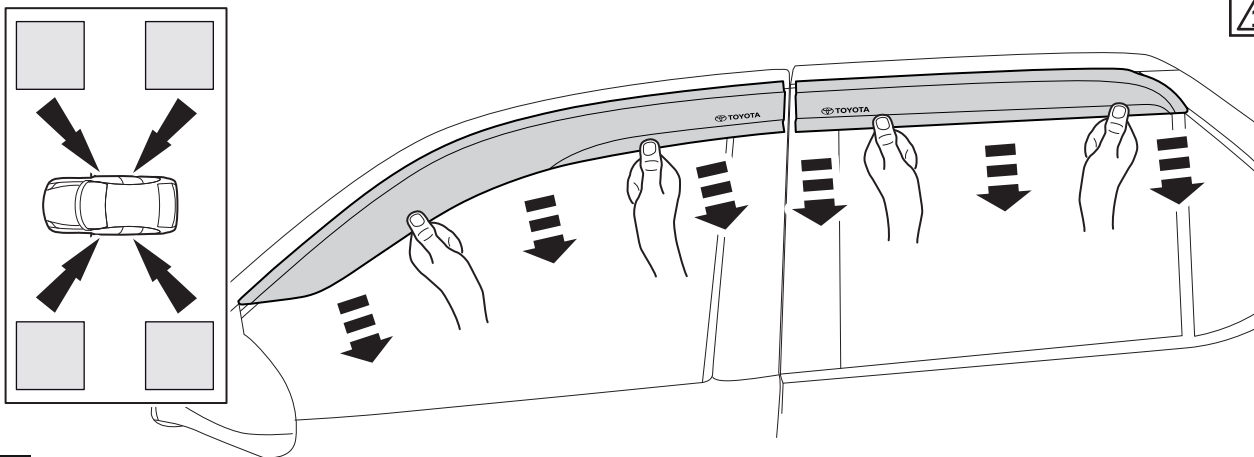

1

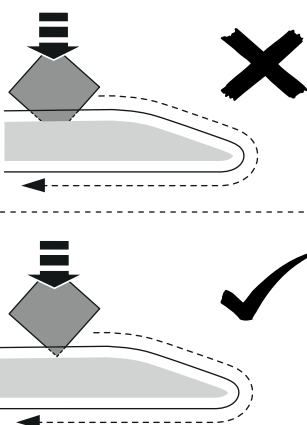

2

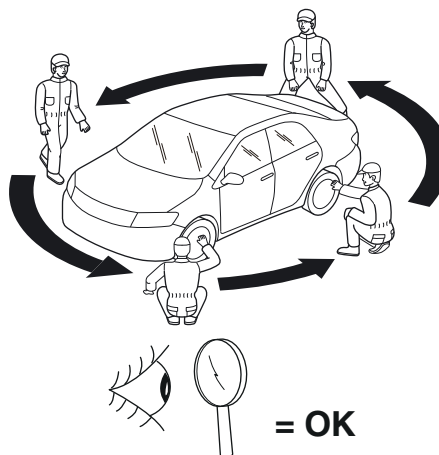

3

Installation Date:

.. / .. / ..

Technician Name & Signature:

Stamp: