




Part Number


L0010LS000

Installation Instructions for: BED COVER KIT

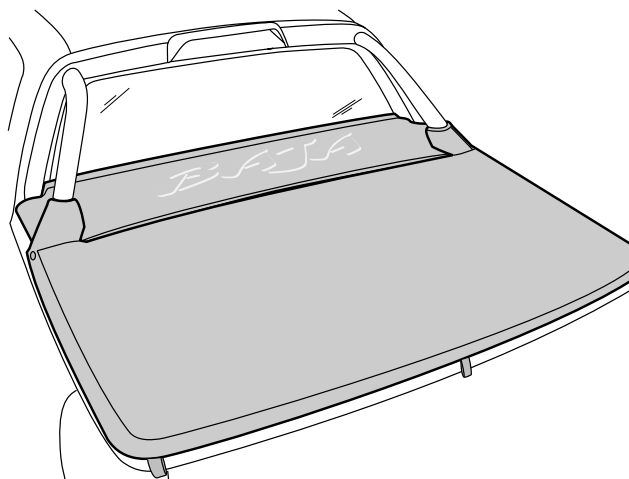

Kit Components:

Item No.	Qty.	Description
1	(1)	Hard Cover
2	(1)	Soft Cover
3	(1)	Side Rail - Driver's Side (L)
4	(1)	Side Rail - Passenger's Side (R)
5	(1)	Tailgate Rail
6	(1)	Window Mount Bracket
7	(5)	M6 Bolt
8	(4)	M5 Washer
9	(10)	M5 Bolt
10	(1)	Plastic Push Pin
11	(8)	10mm Spacer - White
12	(7)	15mm Spacer - Black
13	(1)	Template - Side Rail - Driver's Side (L)
14	(1)	Template - Side Rail - Passenger's Side (R)
15	(1)	Template - Hard Cover - Driver's Side (L)
16	(1)	Template - Hard Cover - Passenger's Side (R)
17	(1)	Template - Window Mount Bracket

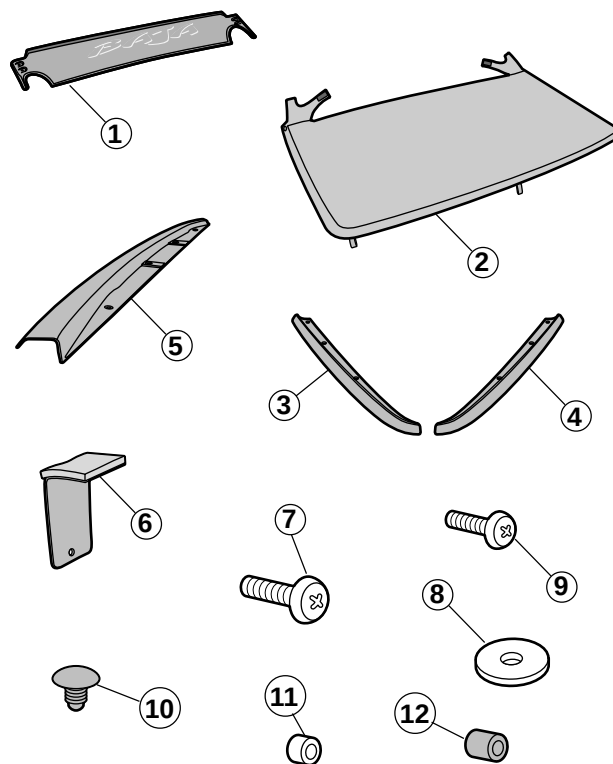

Tools required:

#1 Phillips Head Screwdriver
#2 Phillips Head Screwdriver
#25 Torx Wrench
Hammer

Center Punch/Awl
Drill
Drill Stop
1/4 and 1/2" Hole Saw or Drill Bit

Pen or Felt Tipped Marker
Masking Tape
Torque Wrench

Part Number
L0010LS000

Date
8/13/02

Subaru of America


Page
1 / 4




Meaning of Characters:




Hardware Installation

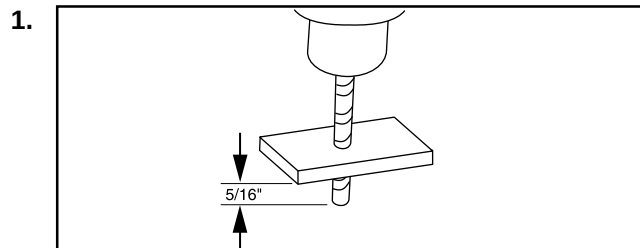


Before beginning the installation, install a drill stop on your drill. It should be set to limit the depth of the hole to 5/16".

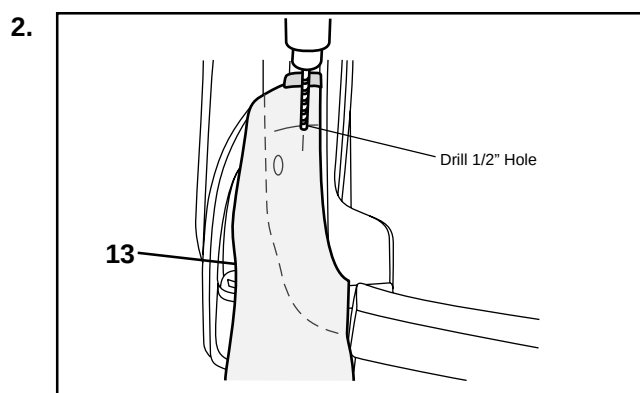

Place the Side Rail Template (13) with the edge flush against the inside vertical surface of the trim cover. Secure it with masking tape. Mark, center punch and drill a 1/2" hole at the location marked on the template.

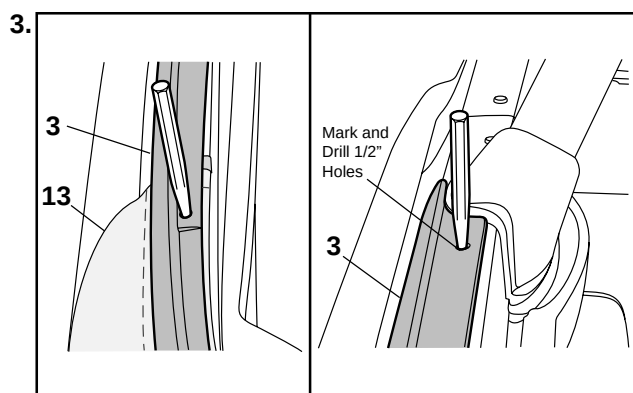


Place the Side Rail (3) over the template (13) with the threaded hole at the rear in the hole drilled in Step 1. Place the rail so that it lays flat and rests against the sport bar cover and does not ride up on the cover. Mark, center punch and drill 1/2" holes in the remaining two locations. Remove the Side Rail and template from the vehicle.

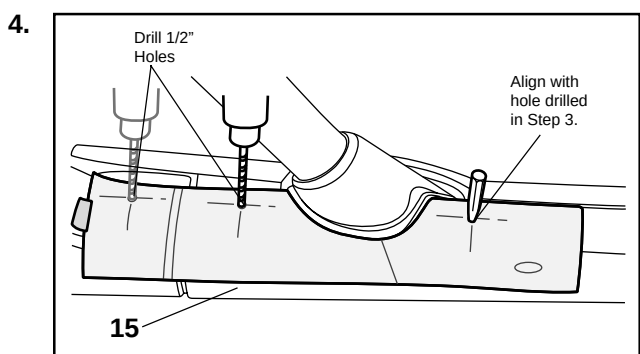


Place the Hard Cover Template (15) with the rear hole aligned with the front hole for the Side Rail and with the edge flush with the inside vertical edge of the cap. Secure it with masking tape. Mark, center punch and drill two 1/2" holes at the locations marked on the template.

Repeat Steps 1-3 on the Passenger side of the Vehicle.

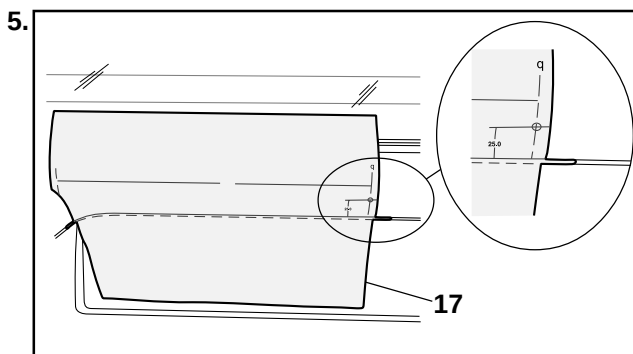


Place the Window Mount Bracket template (17) under the rear window of the vehicle so that the points on the template line up with the groove in the plastic molding under the window. Secure it with masking tape. Mark, center punch and drill a 1/2" hole at the location marked on the template.


Part Number L0010LS000	Date 8/13/02	Subaru of America	Page 2 / 4
---------------------------	-----------------	-------------------	---------------

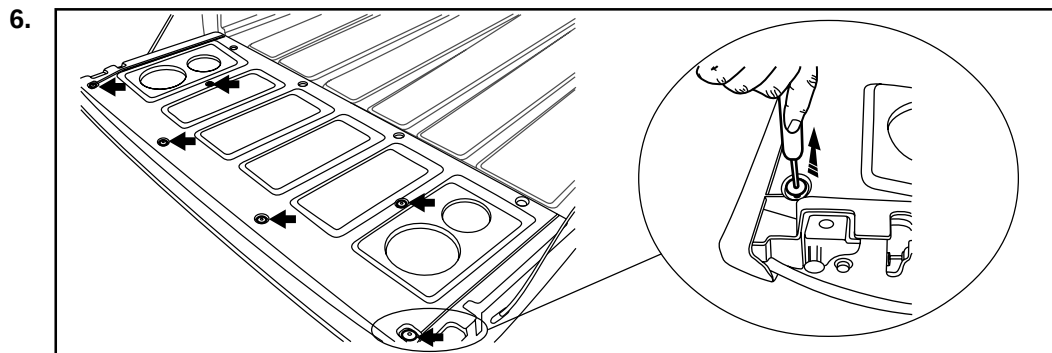


Use a #25 Torx to remove the six screws in the top and middle rows that secure the inside cover of the tailgate.

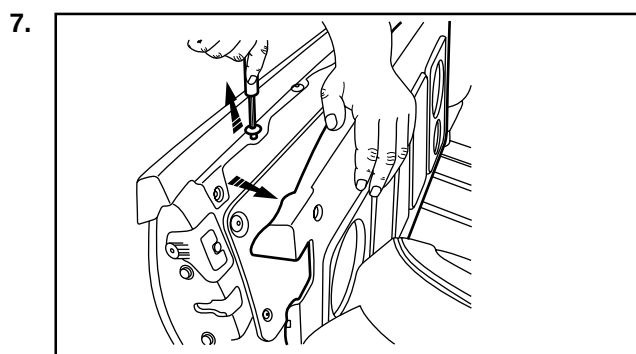


Gently pull the inside tailgate cover away to expose the screws that secure the plastic cap to the tailgate. Start at either end and remove every other screw for a total of four screws. The screws are not required for re-installation.

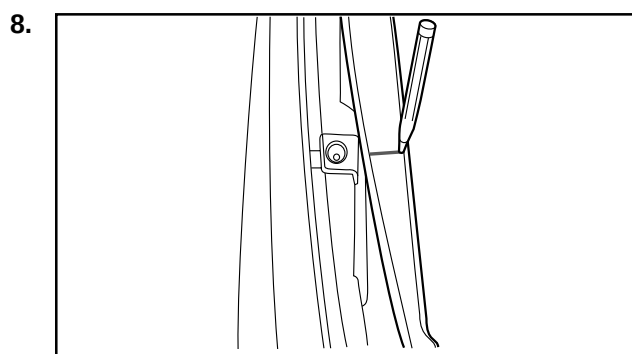

Use a pen or felt tipped marker to mark the locations of the four holes on the top of the tailgate cover.

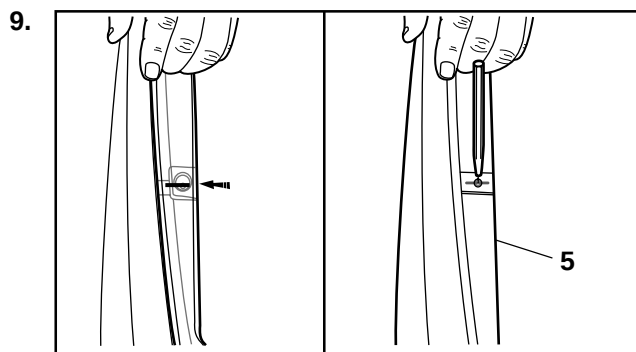


Place the tailgate cover back into position so that the lines mark the holes underneath. Place the Tailgate Rail over the cap on the tailgate so that the holes in the rail line up with the lines on the tailgate cover. Center punch and drill a 1/2" hole through the tailgate cover at each of the four locations. Set the Tailgate Rail aside.

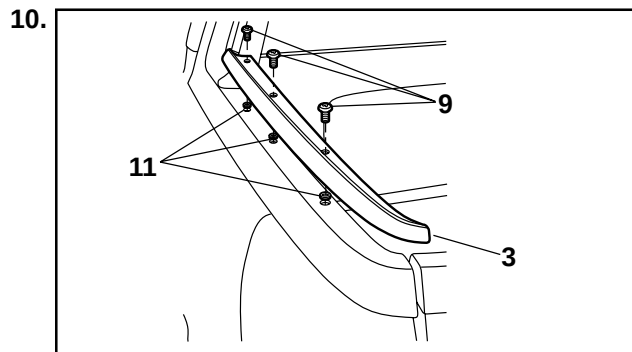


Place a white 10mm Spacer (11) into each of the three holes for the Side Rail. Place the Side Rail (3) on top of the spacers and install three M5 Bolts (9). Tighten the bolts to 39 +/- 13 in. lbs.


Repeat this procedure for the other Side Rail.

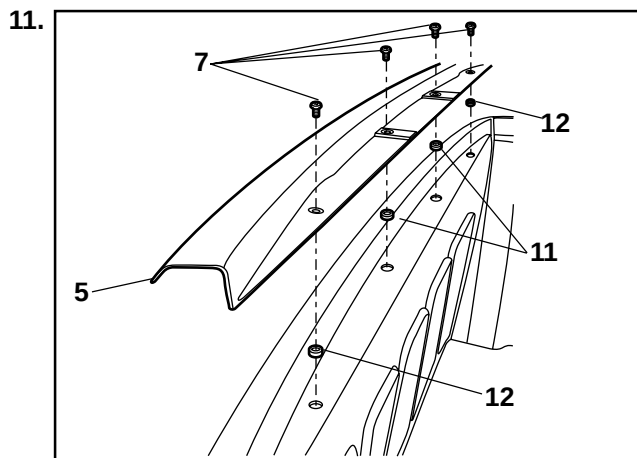


Place a white 10mm Spacer (11) into the two center holes for the Tailgate Rail and a black 15mm Spacer (12) in each of the two outside holes. Make sure that the spacers are flush with the sheet metal of the tailgate. Place the Tailgate Rail (5) on top of the spacers and install four M6 Bolts. Tighten the bolts to 65 +/- 17 in. lbs.

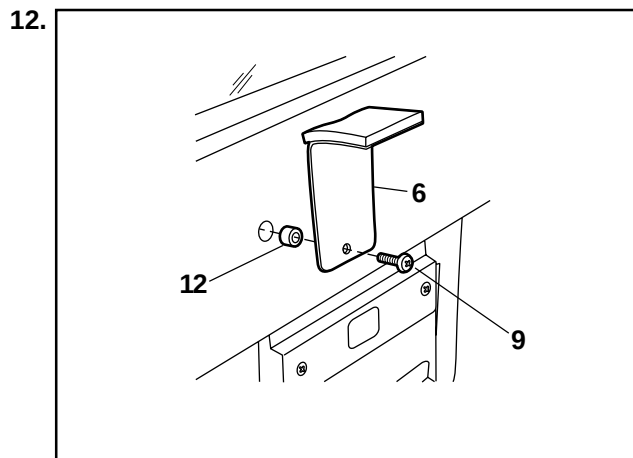


Place a black 15mm Spacer (12) into the hole drilled under the rear window. Place the Window Mount Bracket (6) on top of the spacer and install an M5 Bolt (9). Tighten the bolt to 39 +/- 13 in. lbs.

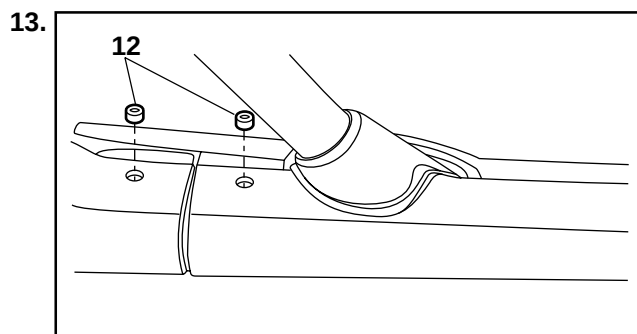


Place two black 15mm Spacers (12) in the two holes for the Hard Cover on each side of the vehicle.

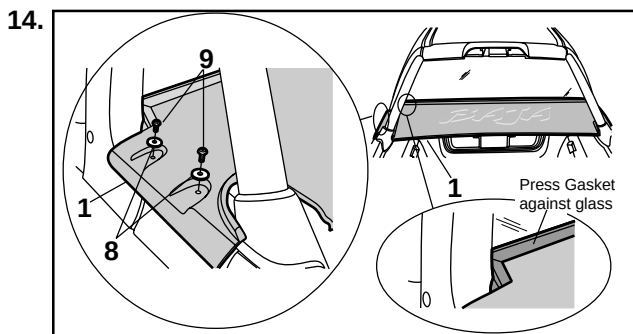


Place the Hard Cover (1) on top of the spacers. Be careful not to damage the seal on the front edge of the panel while positioning the panel. The seal should press up against the glass to create a water-resistant barrier. The ends of the seal should go under the panel and rest on top of the foam pads. Install an M5 Bolt (9) and M5 Washer (8) in each of the four holes in the Hard Cover. Tighten the bolts to 39 +/- 13 in. lbs.

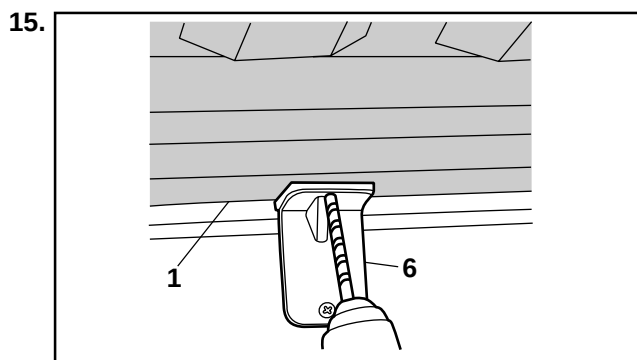

Use the Window Bracket (6) as a template to drill a 1/4" hole in the Hard Cover (1). Use a drill stop so that you only drill through the first layer of plastic.

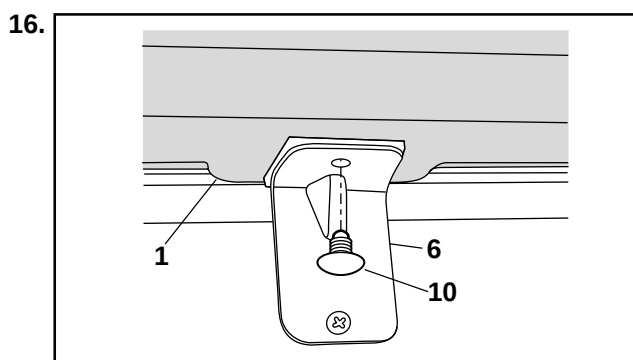


Install a Plastic Push Pin (10) to secure the Hard Cover (1) to the Window Bracket (6).

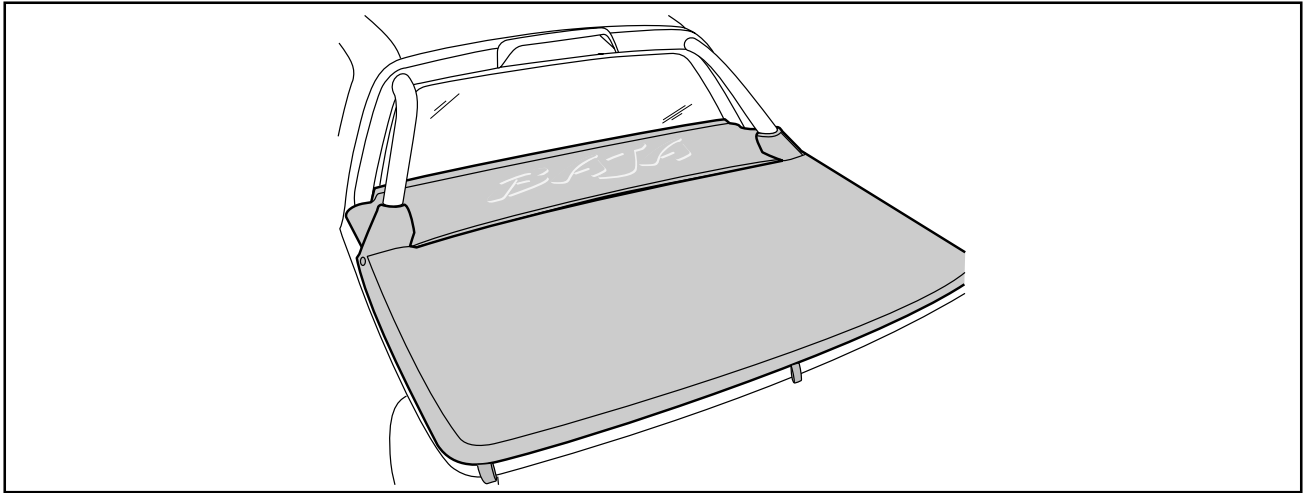


Installing the Soft Cover

1.

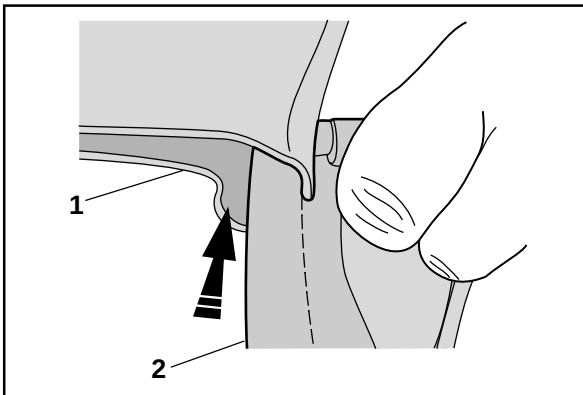


Orient the Soft Cover (2) with the vinyl side up and the reinforced edge toward the front of the vehicle. Start at one end and slide the reinforced edge of the cover into the channel in the Hard Cover (1). If this is difficult, apply a soap and water solution to the edge of the Soft Cover.

2.

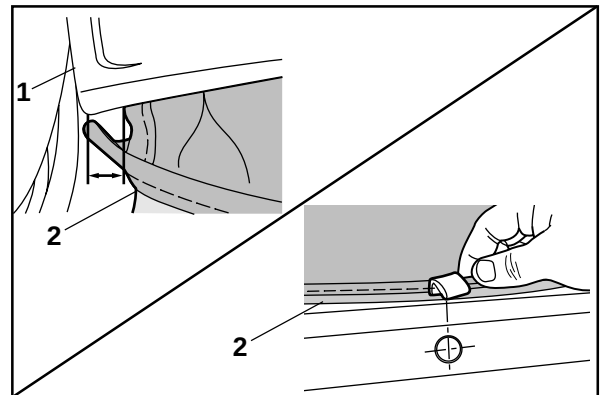


Center the Soft Cover (2) on the vehicle. The front edge of the cover should be an equal distance from the end of the channel in the Hard Cover (1) on each side of the vehicle. The middle loop sewn to the rear of the cover should line up directly above the screw cap cover in the center of the tailgate.


3.

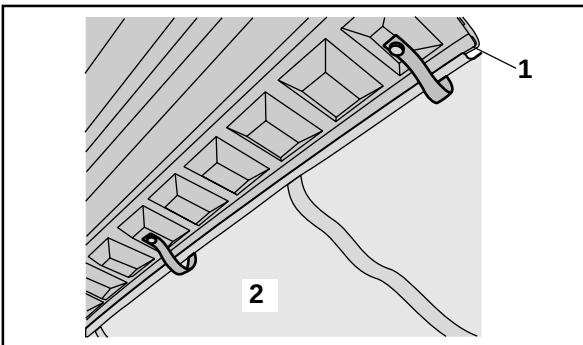

Locate the three straps sewn to the underside of the Soft Cover (2). Snap them to the Hard Cover (1).

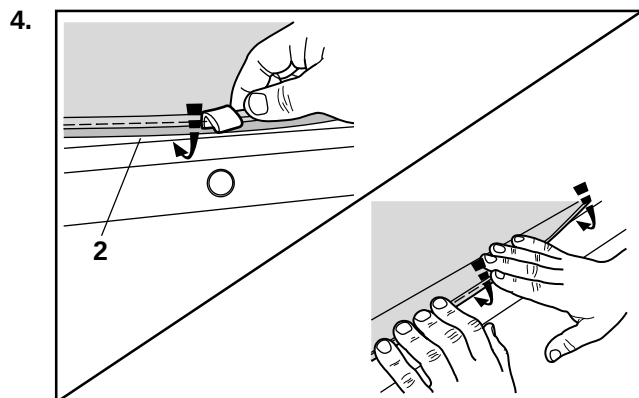


Start from the rear of the vehicle and slip the plastic strip sewn into the sides and rear of the Soft Cover (2) into the space between the Tailgate Rail (5) and Side Rails (3 and 4) and the cap on the vehicle.

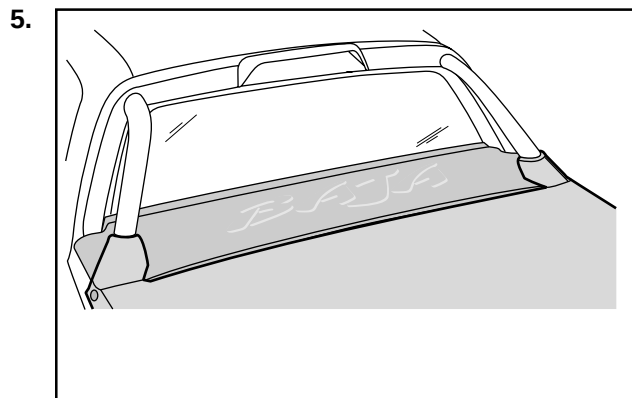


Once the sides and rear of the cover are secure, snap the cover to the Side Rail on each side of the vehicle. Then wrap the collars on the cover around the sport bars and fasten the hook and loop strips to each other.

Rolling the Soft Cover

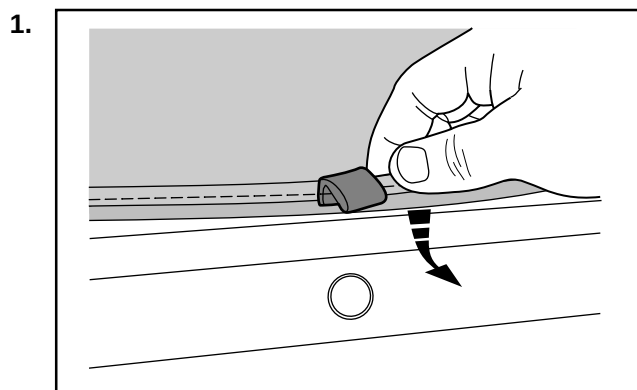

Pull down and out on the loops sewn to the rear corners and the rear of the cover to release the plastic strip from the rails. Then work toward the front of the vehicle, pulling the strip out of the rails.

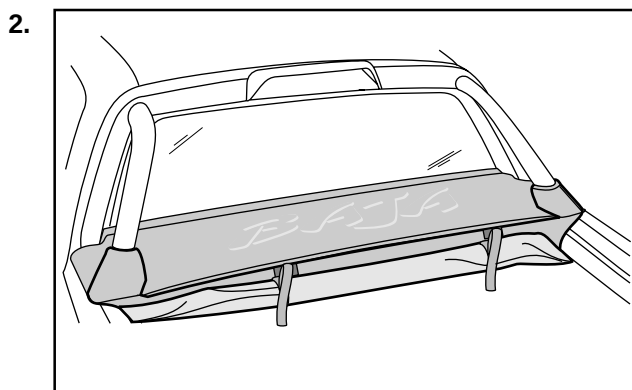

Release the hook and loop strips to open the collar around each sport bar. Roll the fabric from the back to the front of the vehicle. Roll it as small as you can and secure it with the straps attached to the cover.

Care and Maintenance

- To keep your Bed Cover Kit in good condition clean it regularly with soap, warm water and a soft bristle brush. Rinse with clear water to remove all traces of soap.
- Keep snaps cleaned and lubricated with silicone. If a snap becomes stuck to a stud, use a screwdriver to GENTLY pry it apart to prevent damage to the snap or the fabric.
- Warmth will make the fabric more pliable and allow it to stretch slightly for a tighter smoother fit. If the cover temperature is cold and the cover is difficult to secure, the cover can be warmed to 70° F (21°C) or higher.
- Additional bed cover information is noted in the Baja Owner's Manual.
- The bed cover is designed to cover the cargo area of the bed. The bed cover is water resistant, but not waterproof.

CAUTION

- Do Not place cargo on top of the bed cover.
- Do Not use the hard cover portion of the bed cover as a step.
- Do Not use the bed cover to secure cargo.
- The soft cover portion of the bed cover should be removed or stowed for automated car washing.