

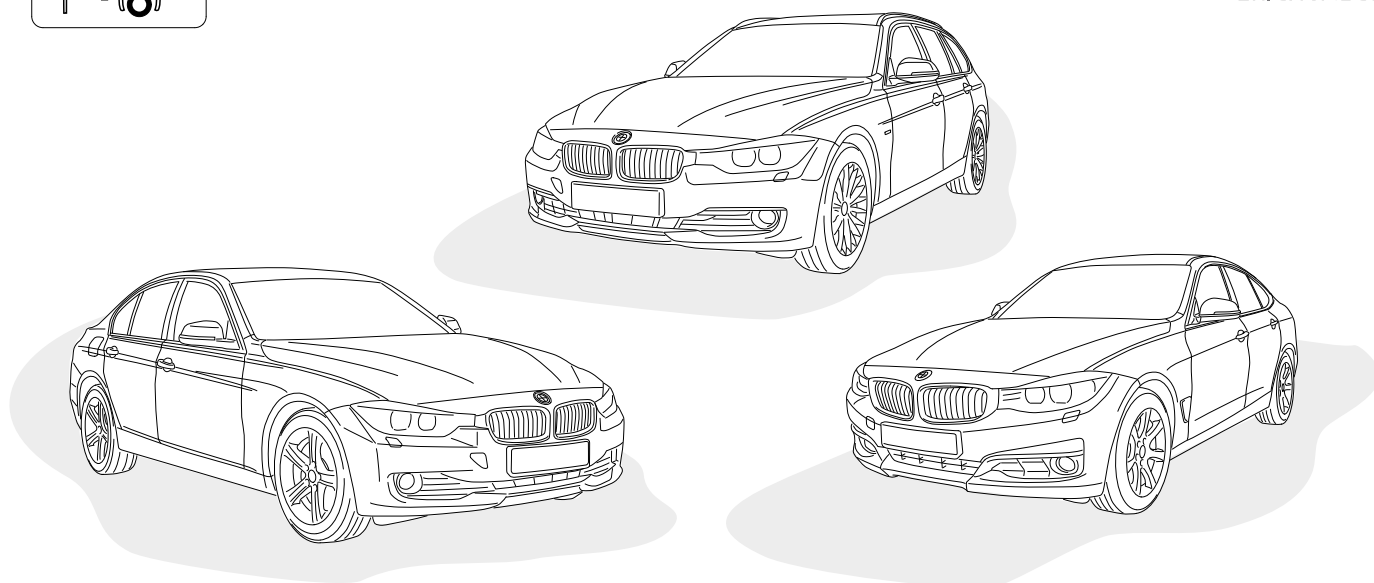


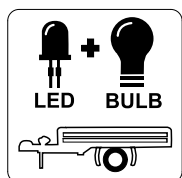

BMW 3-Serie Limousine	F30	03/14 >>
BMW 3-Serie Touring	F31	03/14 >>
BMW 3-Serie Gran Turismo	F34	03/14 >>

750061

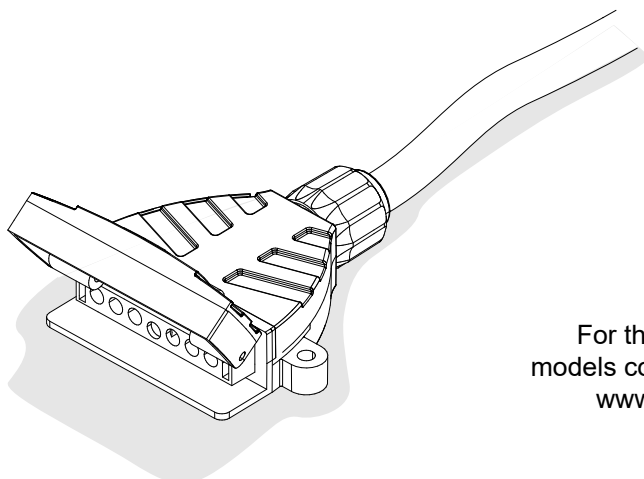

For the fitment instructions for other models covered by this part go to <http://www.erich-jaeger.co.nz/Solutions/Solutions-BMW.html>

or
Scan this QR code

Installation instructions


Reference:

The following information must be reviewed before beginning the assembly:




The installation instructions are to be thoroughly read.
The installation should be carried out by qualified personnel with the relevant technical knowledge.
The vehicle manufacturers' current technical notices and information on retrofitting must be followed.
The removal and replacement instructions found in the current repair manuals must be followed.
It must be ensured that the vehicle is technically suitable for the installation of a trailer hitch.

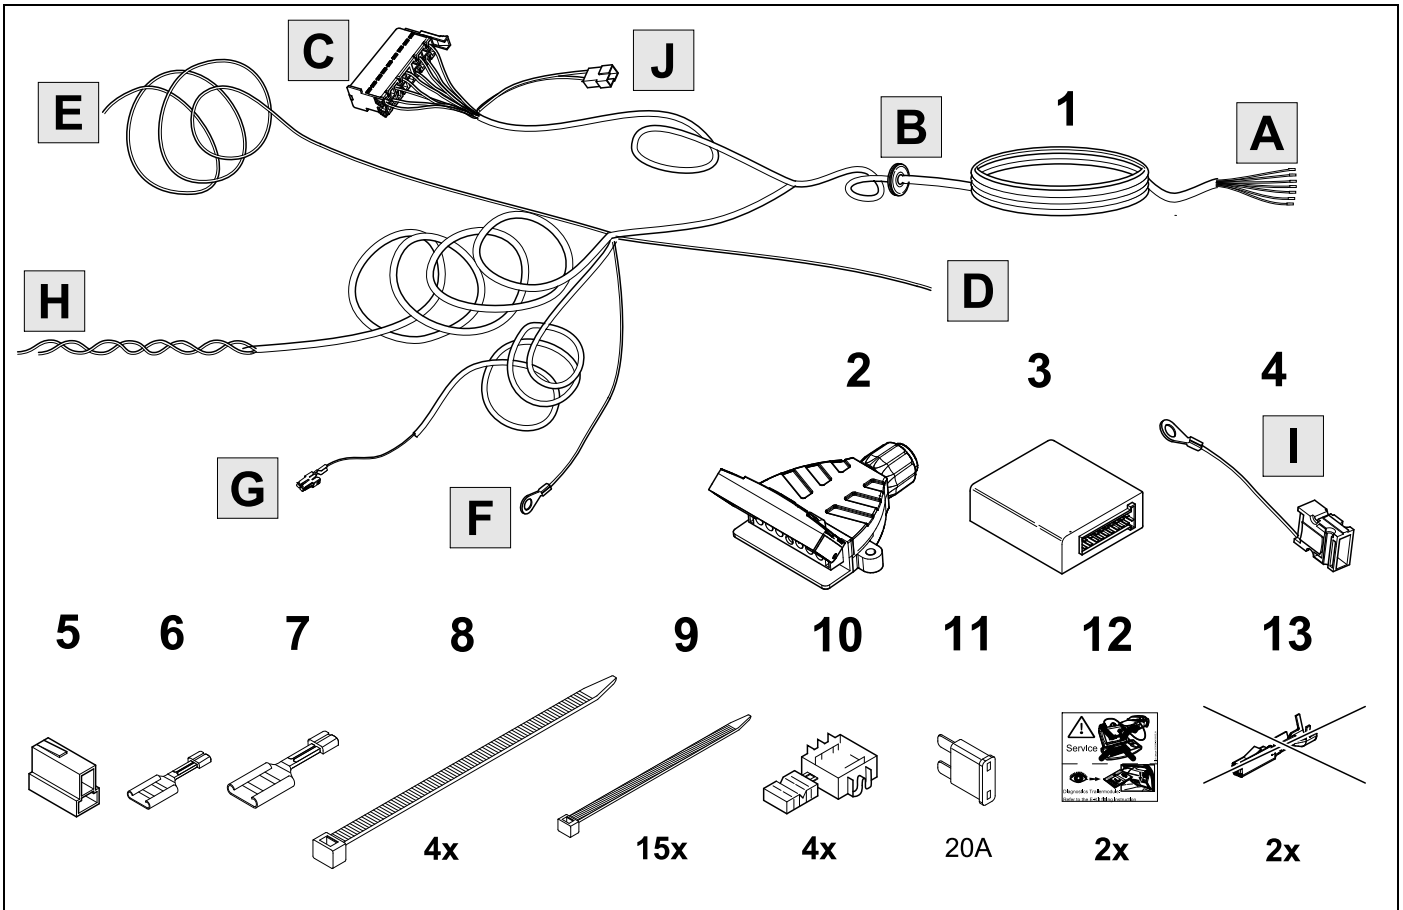


KIT

TOOLS

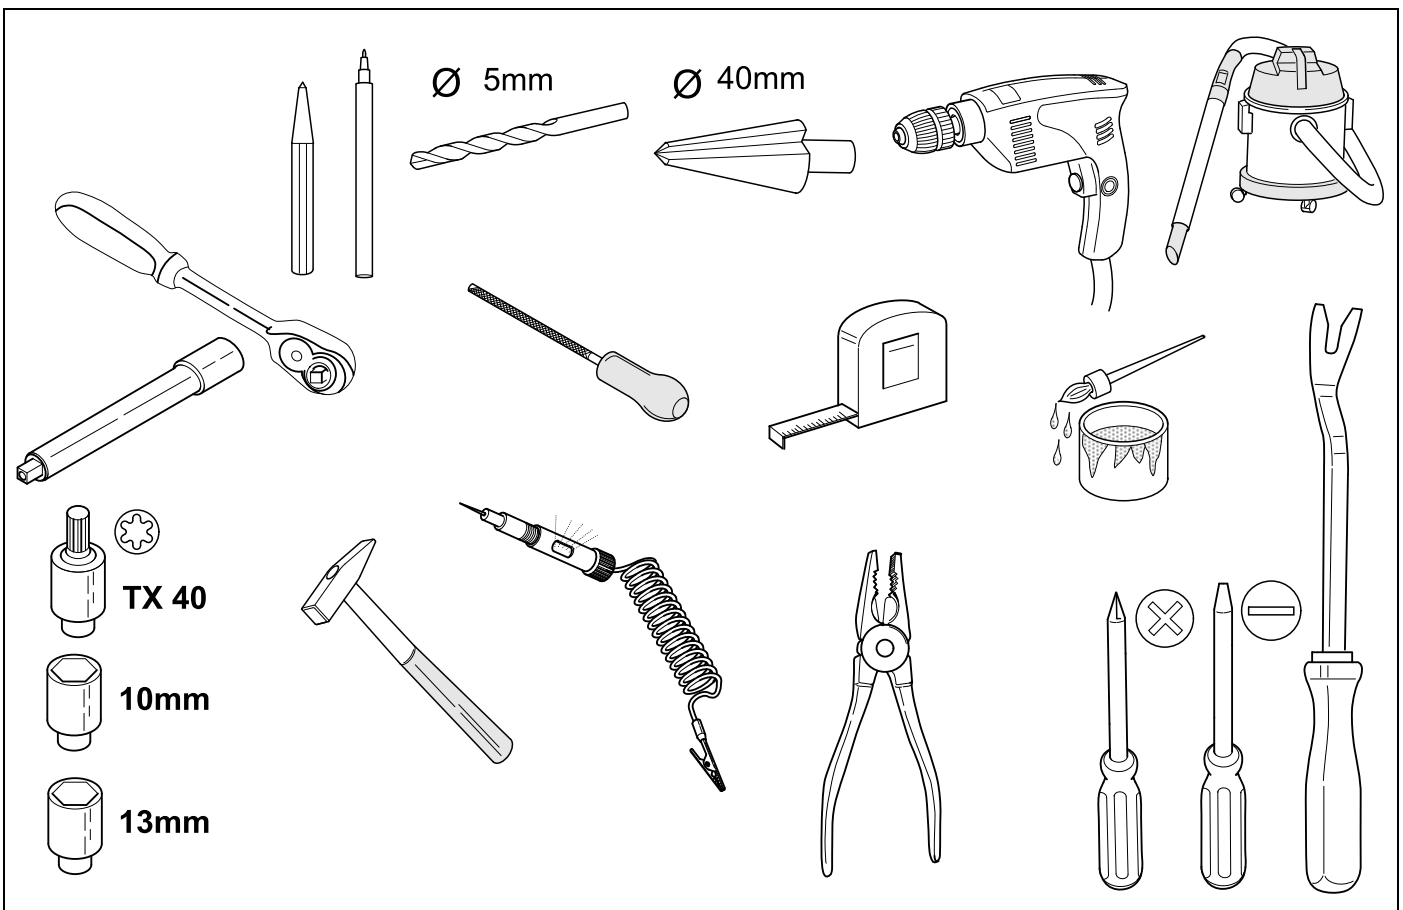


OVERVIEW

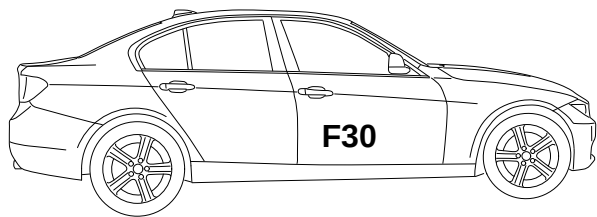

$$\boxed{1} - \boxed{9}$$


$$\boxed{24} - \boxed{45}$$

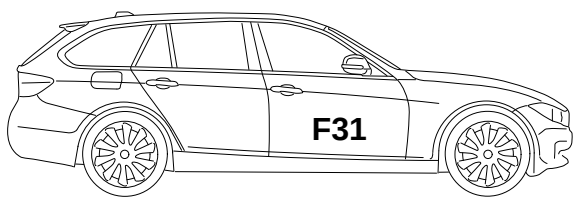

$$\boxed{1} + \boxed{2}$$


$$\boxed{10} - \boxed{16}$$

$$\boxed{24} - \boxed{45}$$

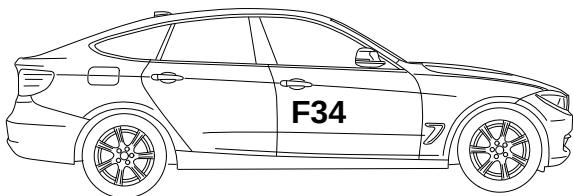


$$\boxed{1} + \boxed{2}$$


$$\boxed{17} - \boxed{45}$$

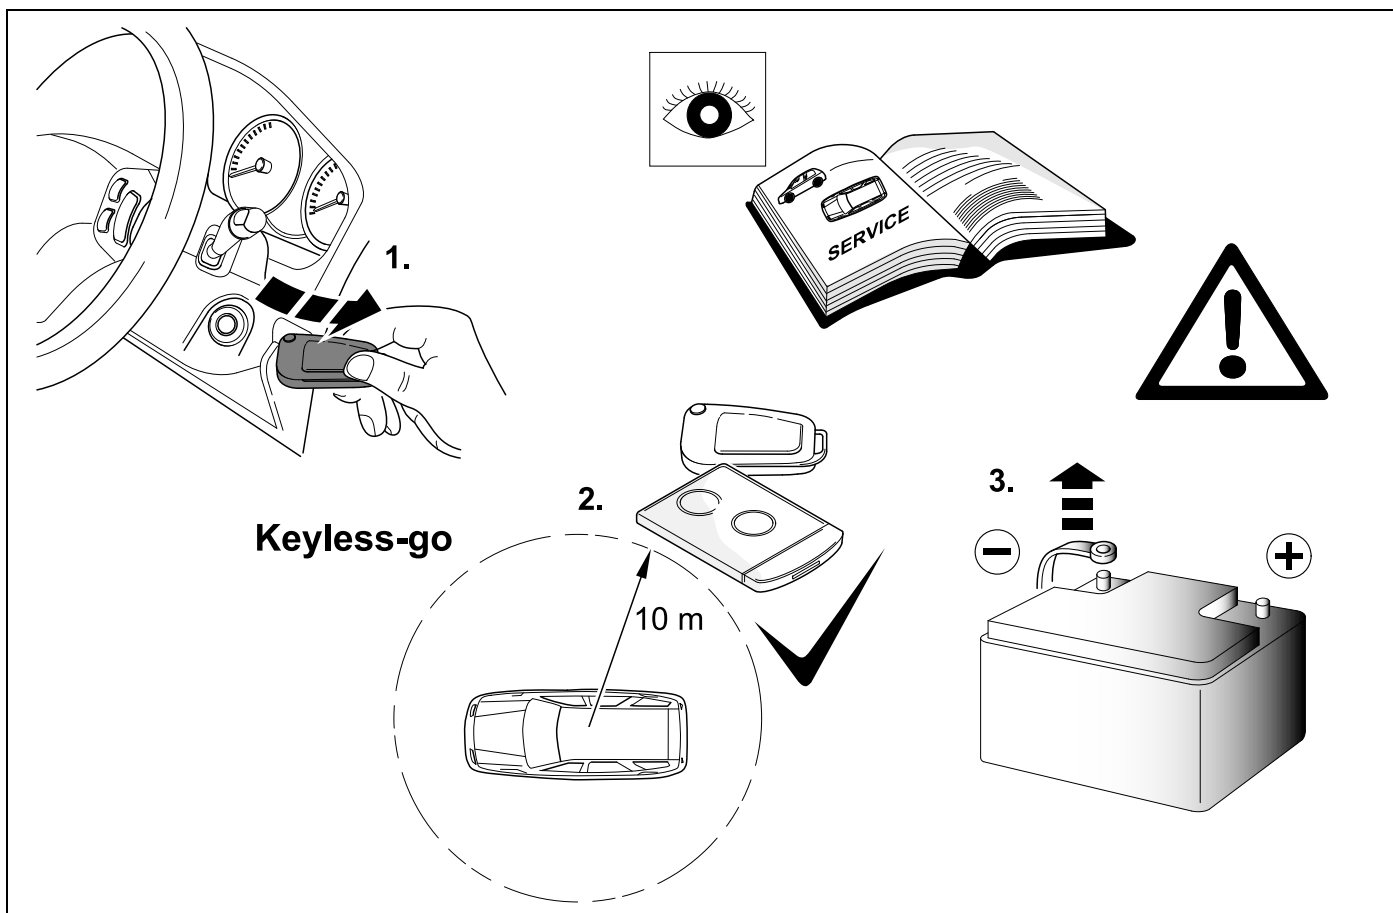









OPTION B

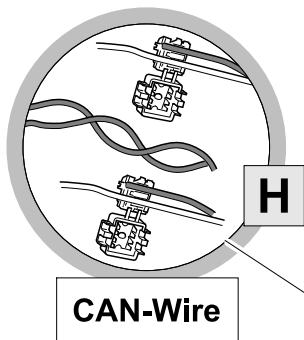




OPTION 2

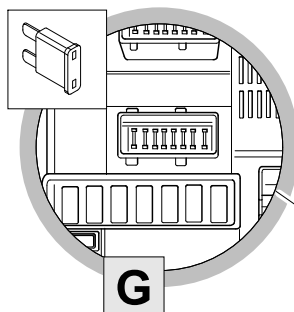


OPTION 1

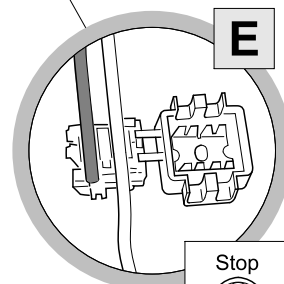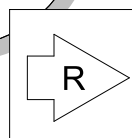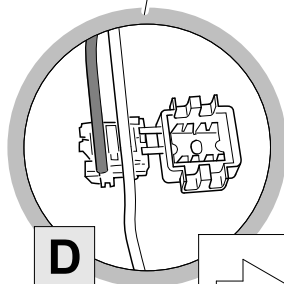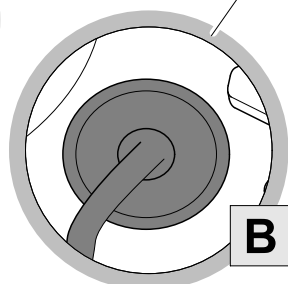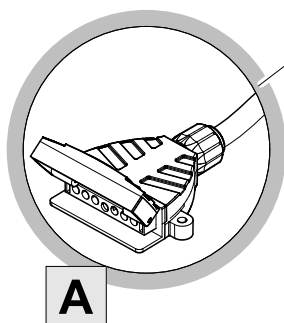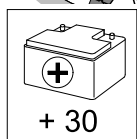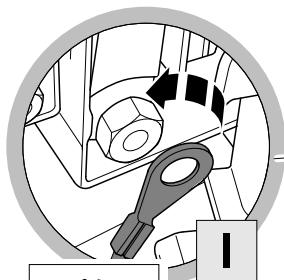


OPTION A

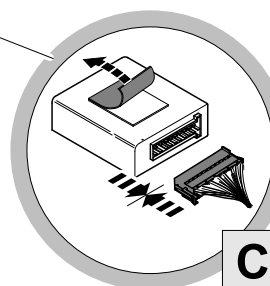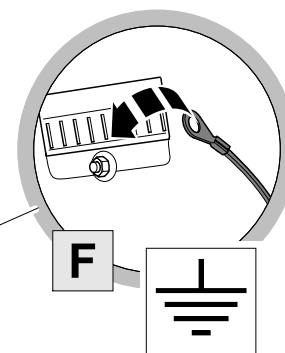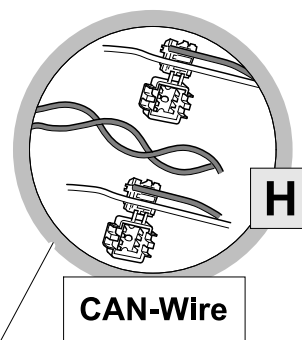

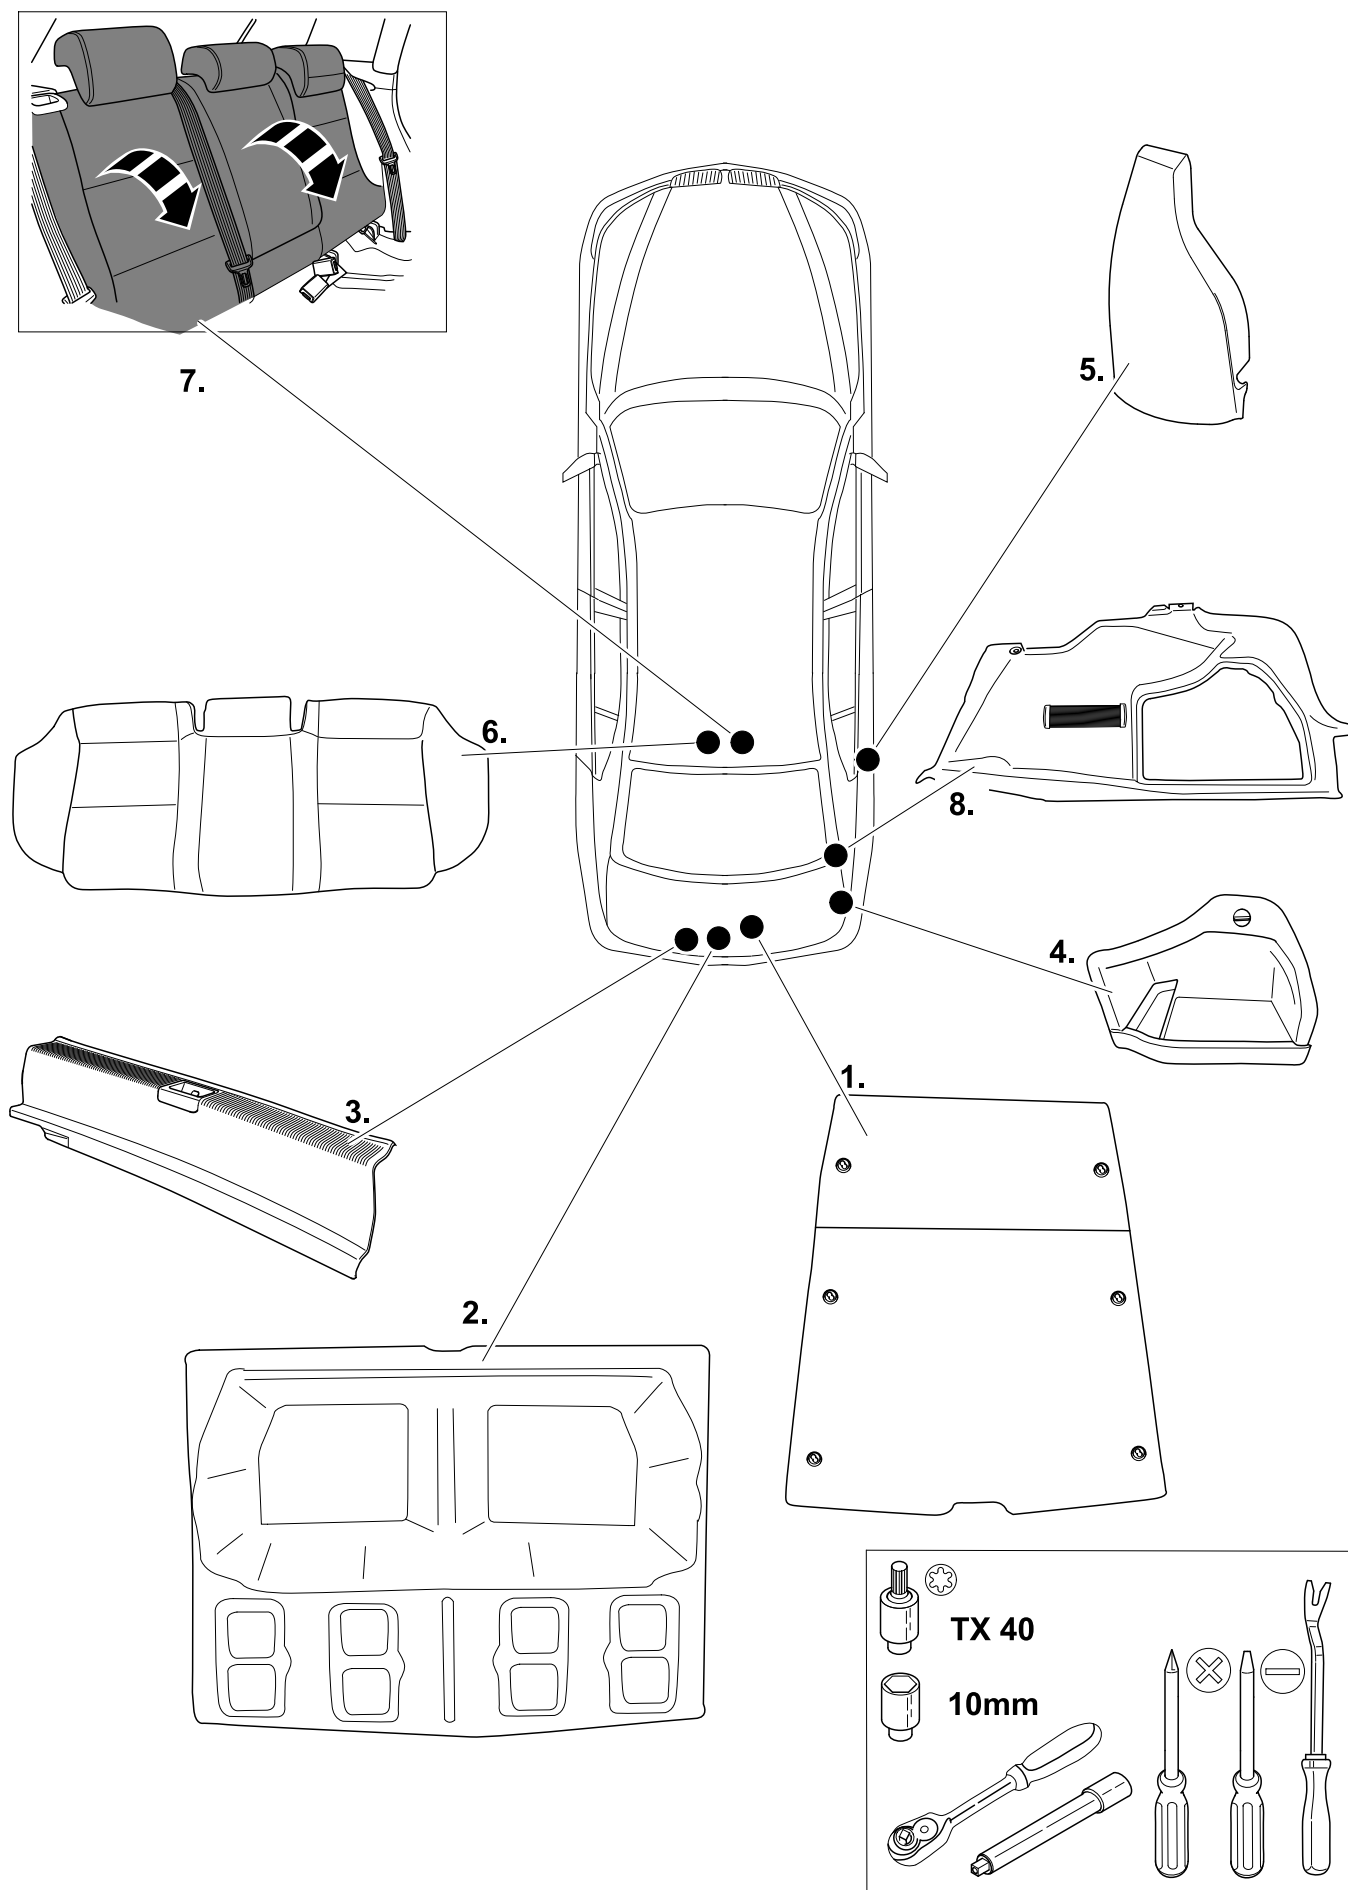


4



F30


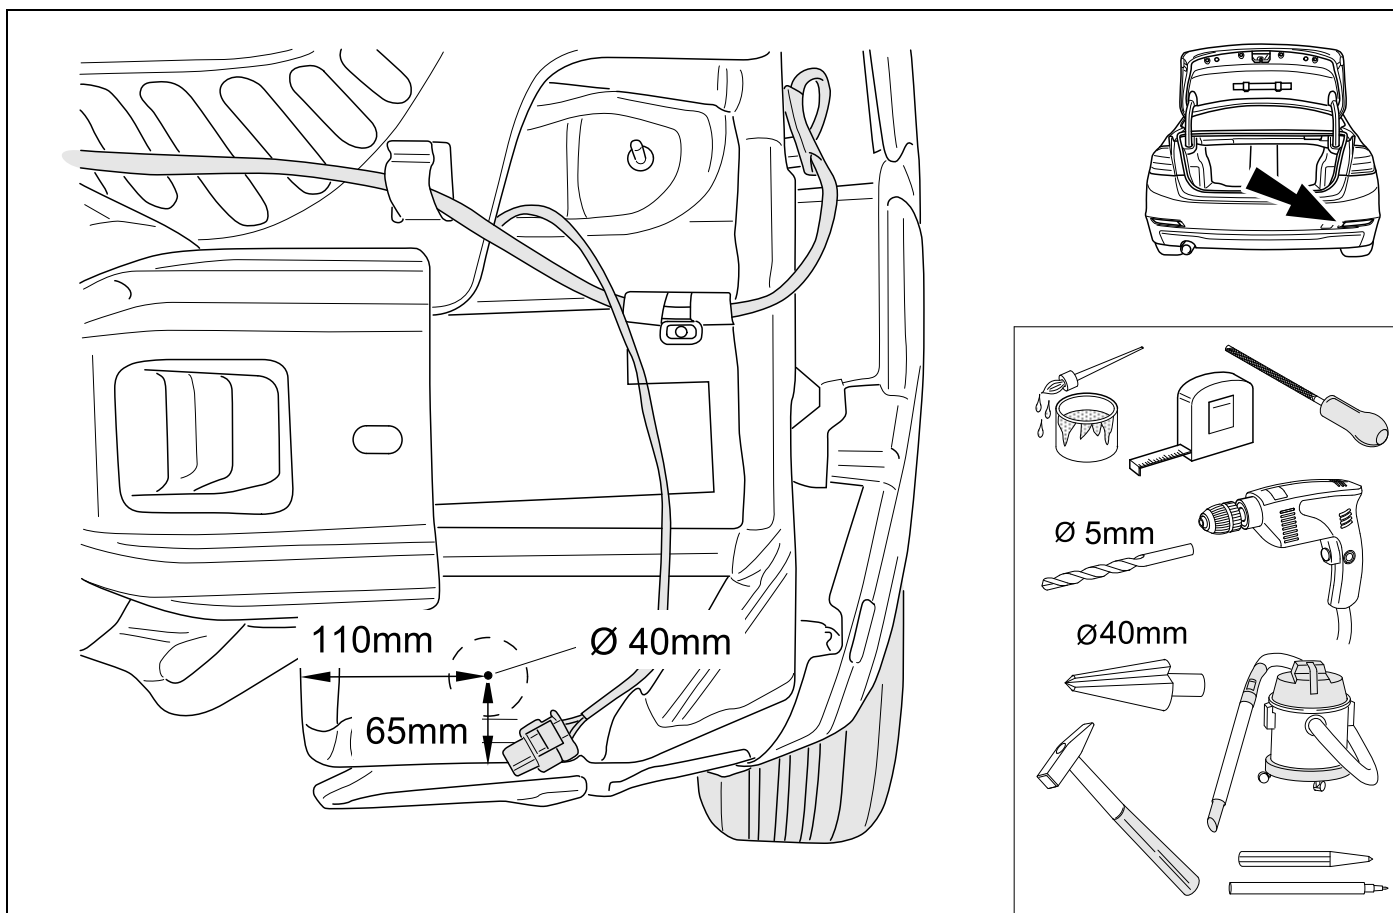



5

F30

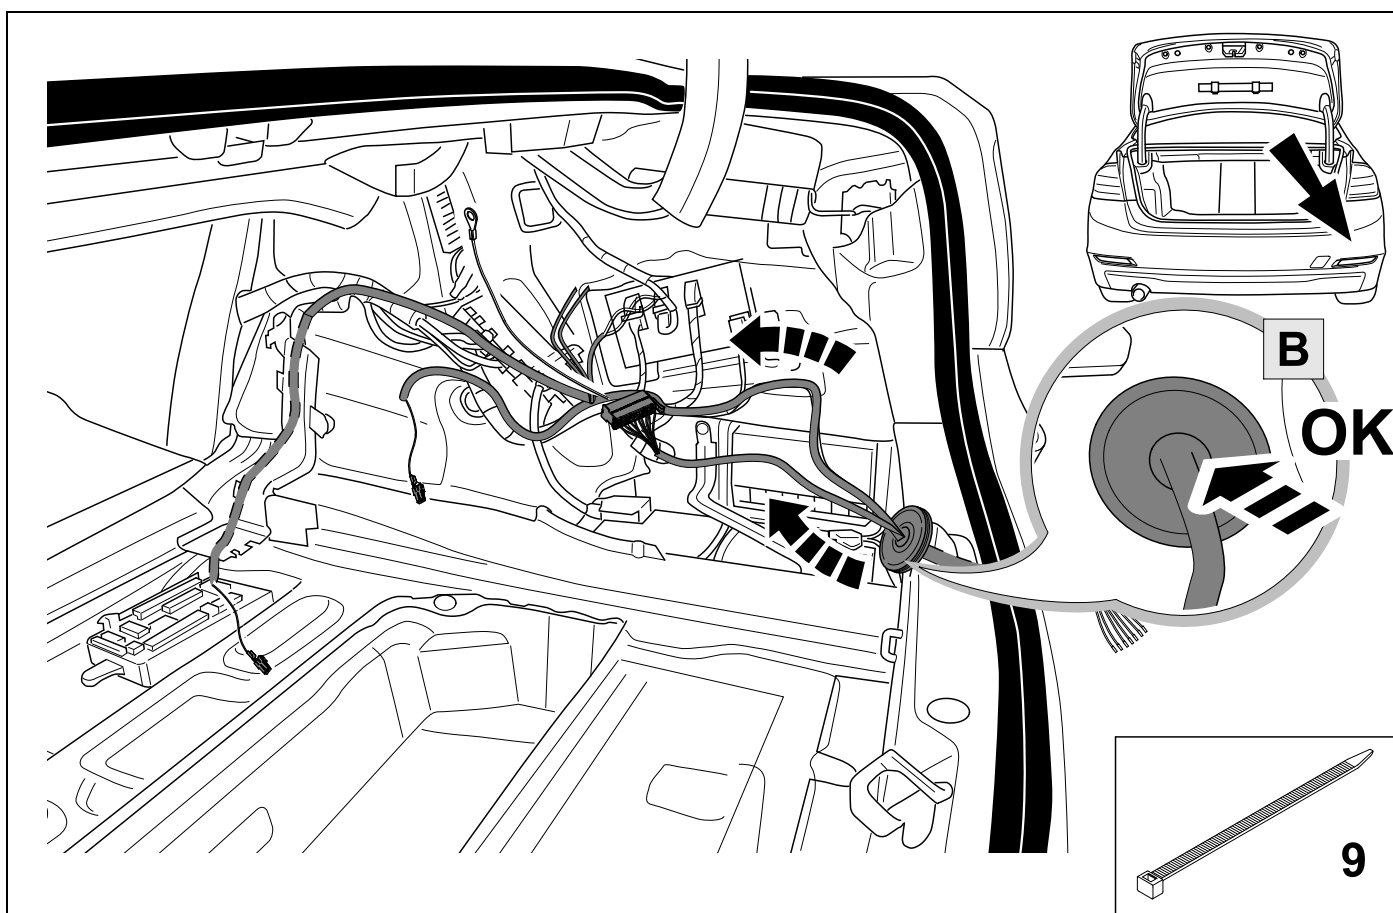

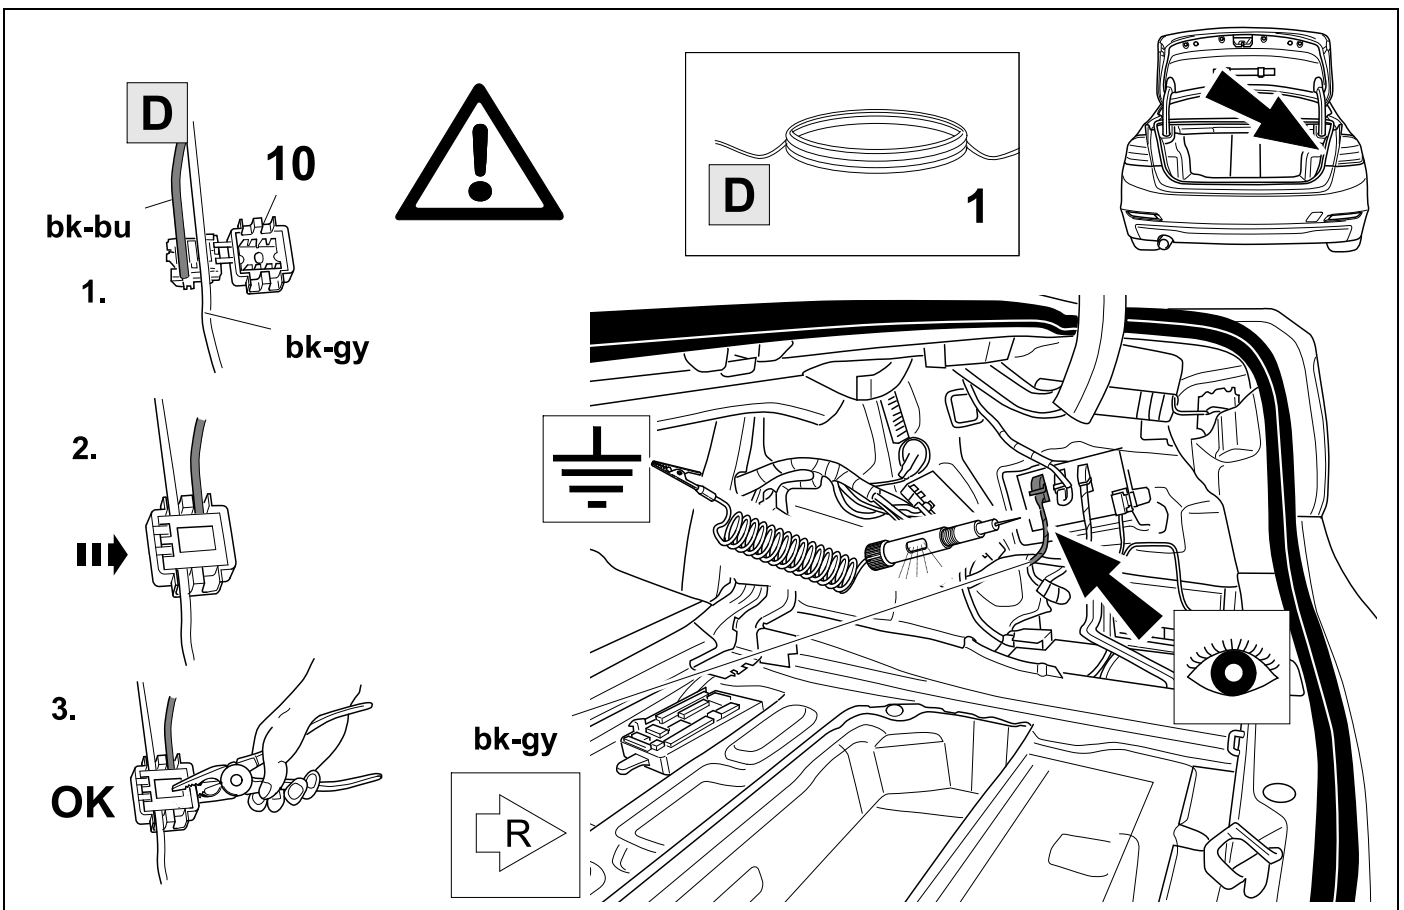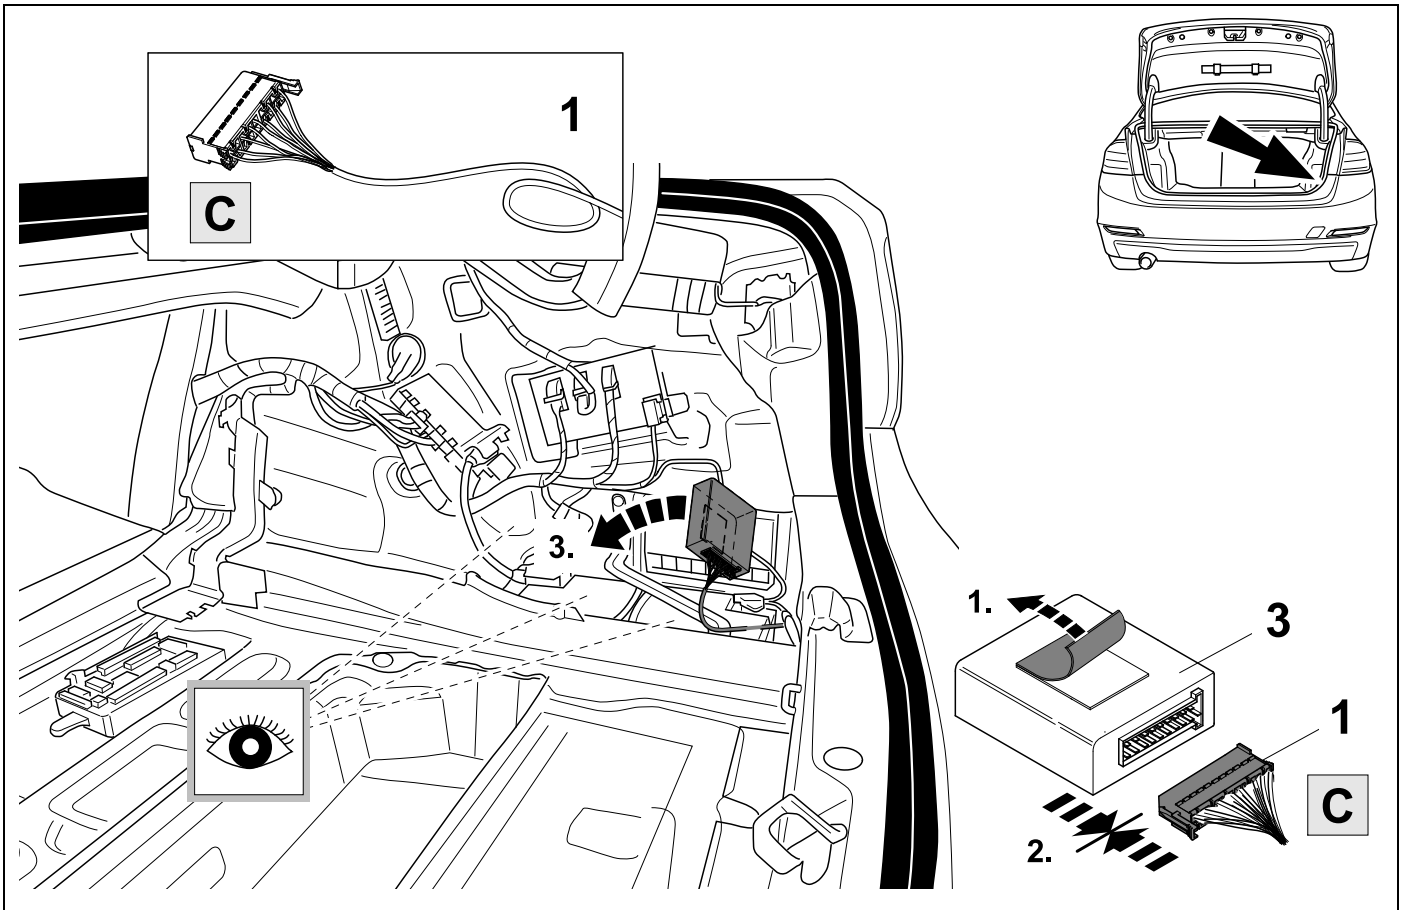


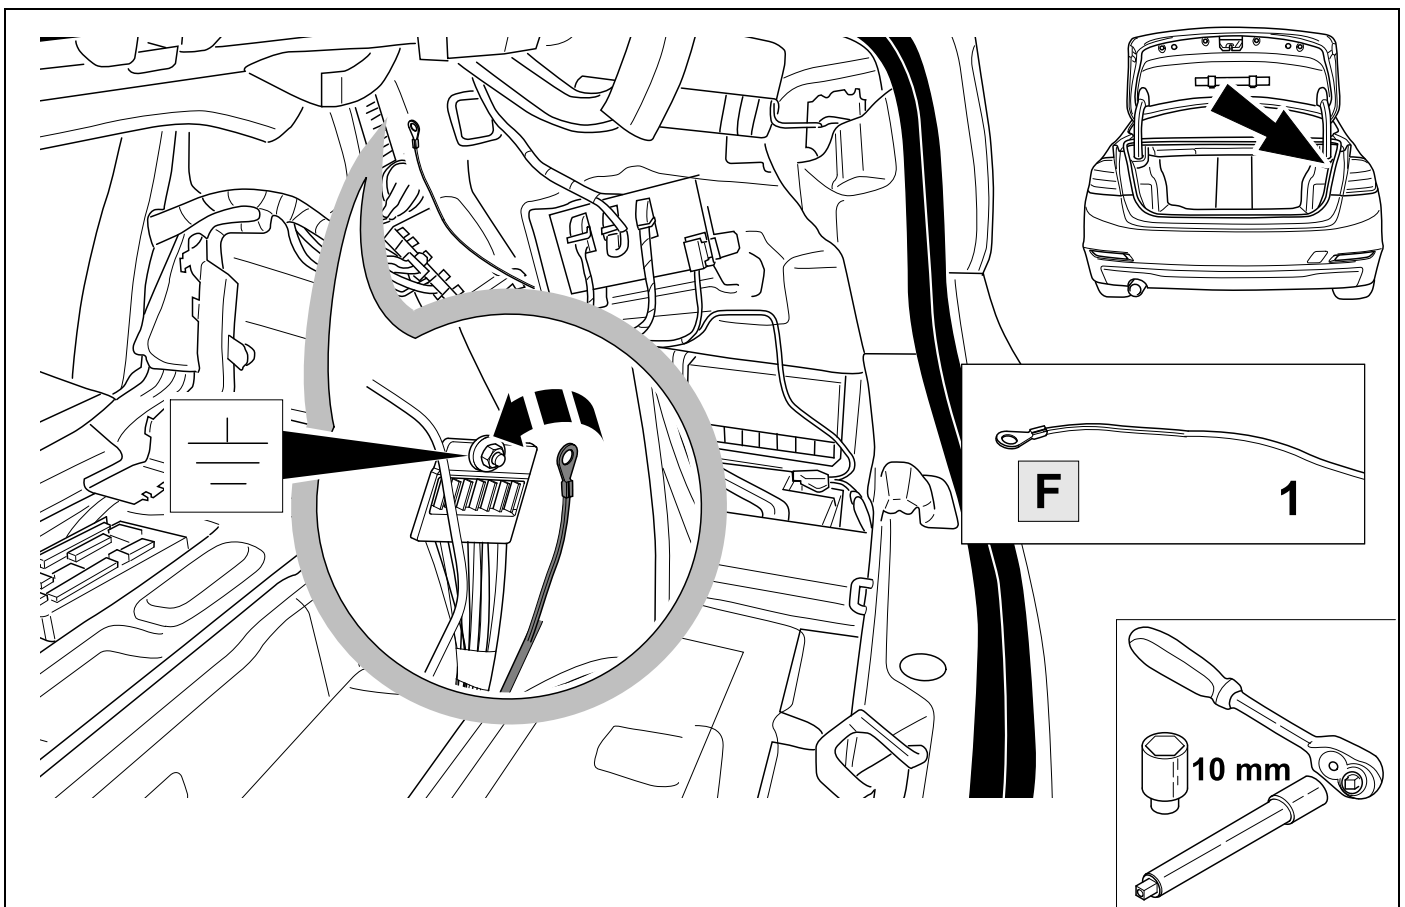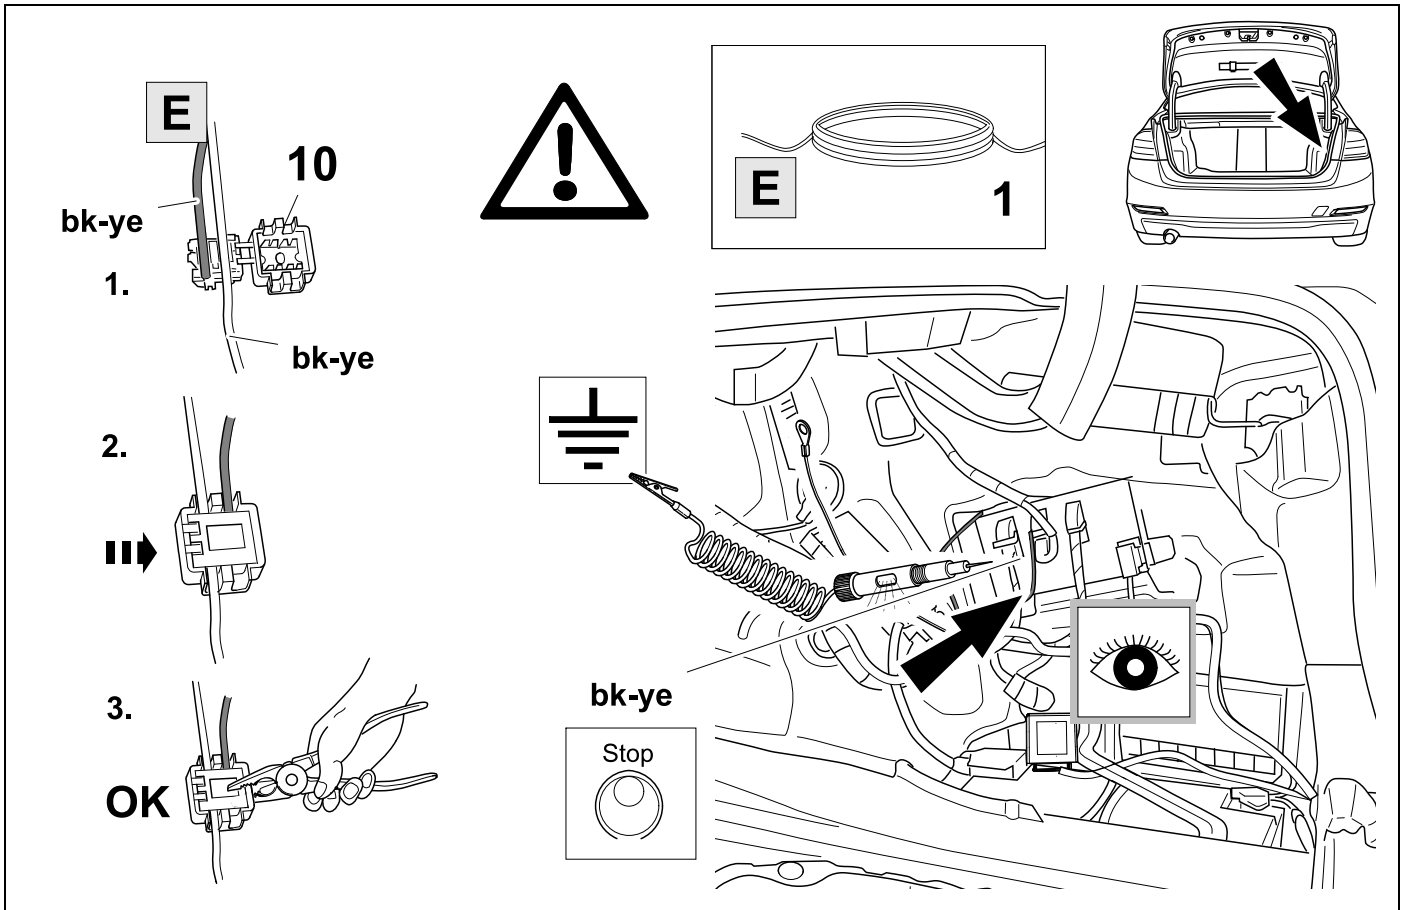

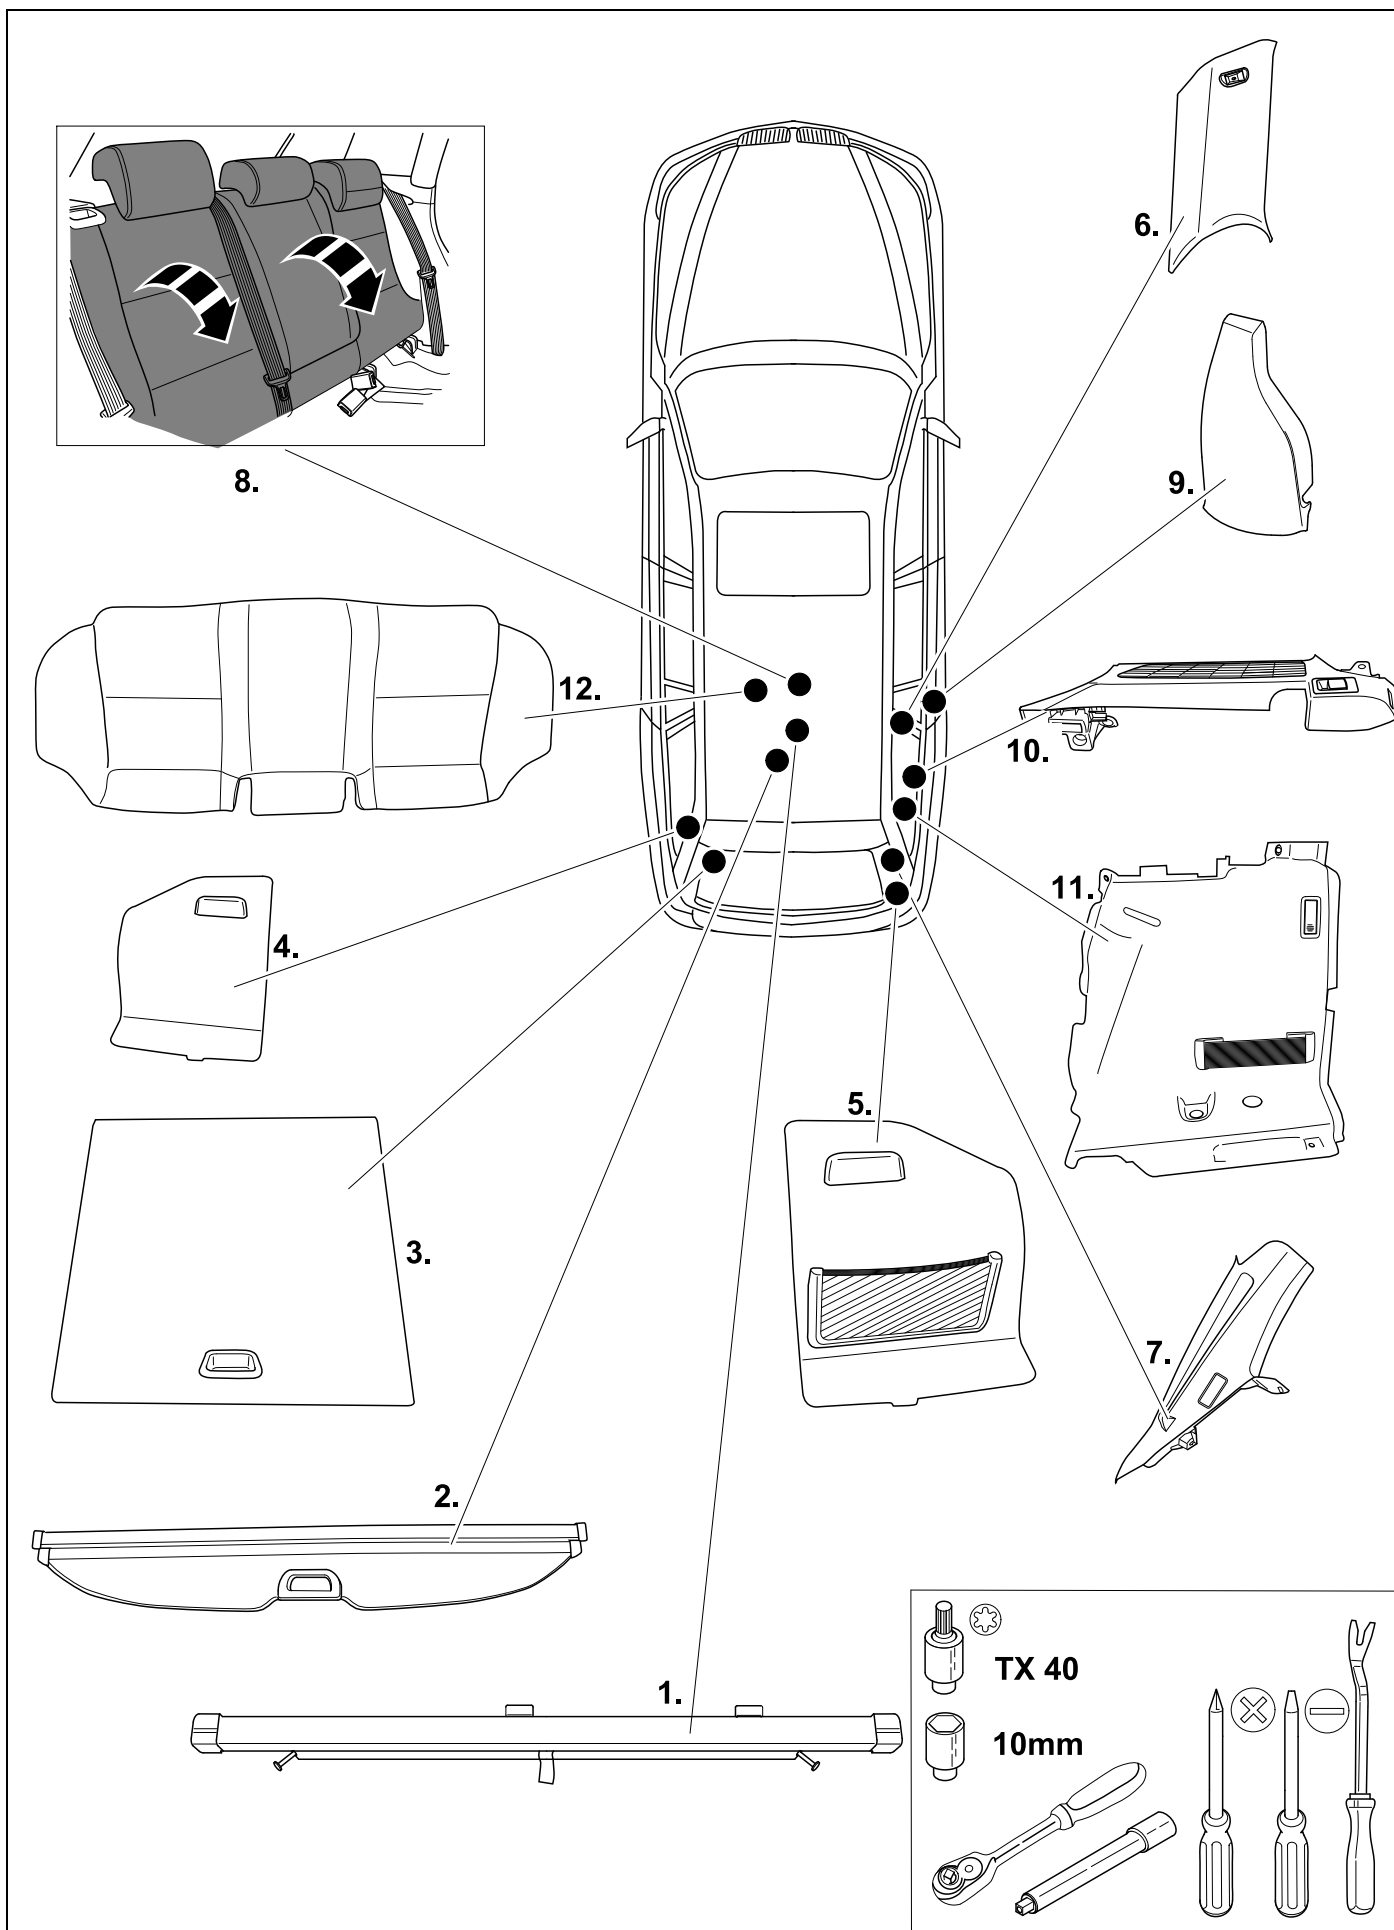


11

F31

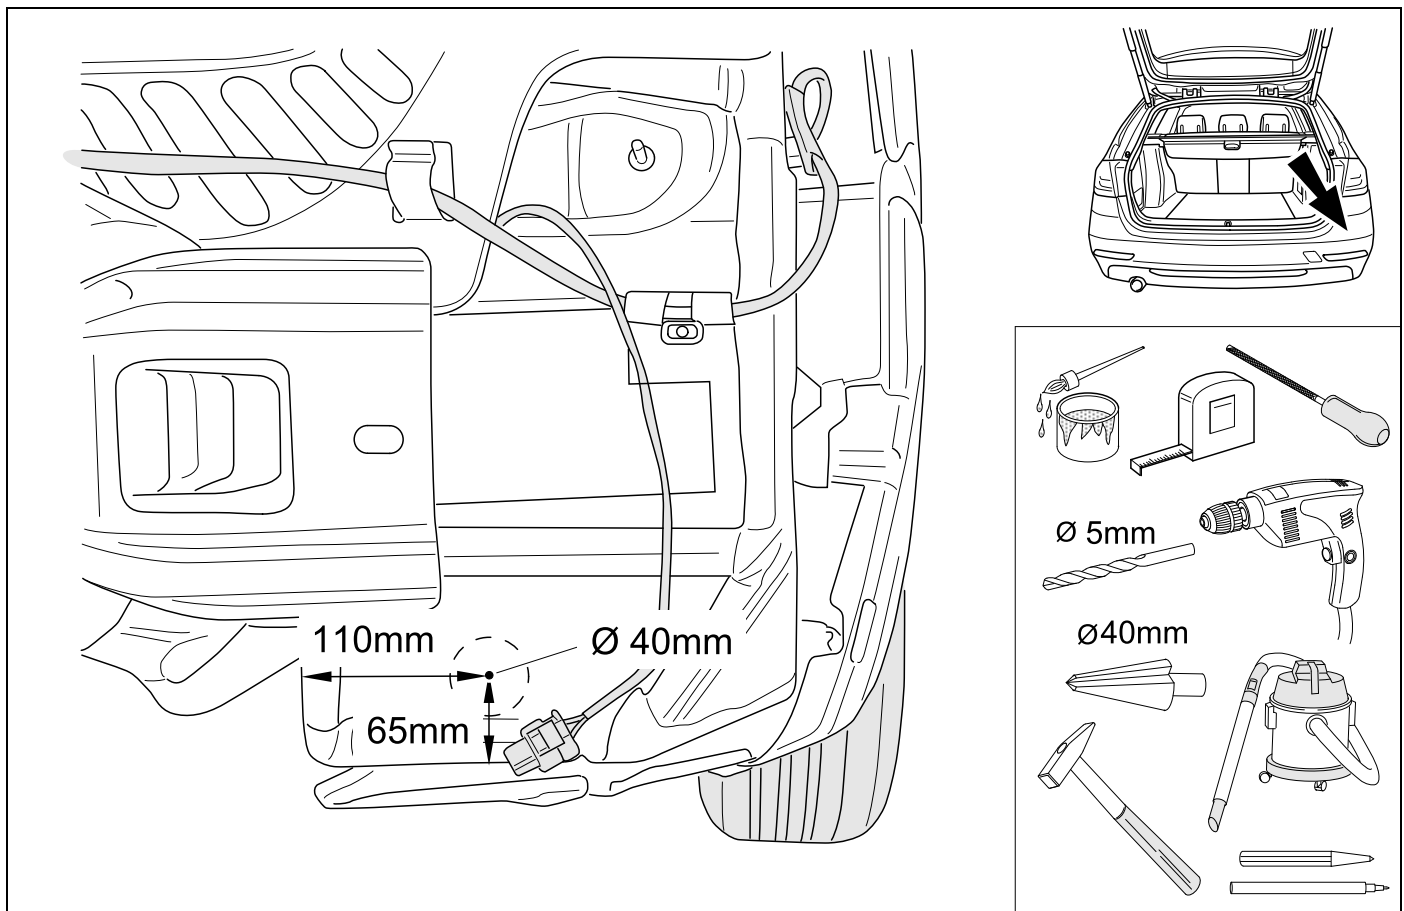


12

F31

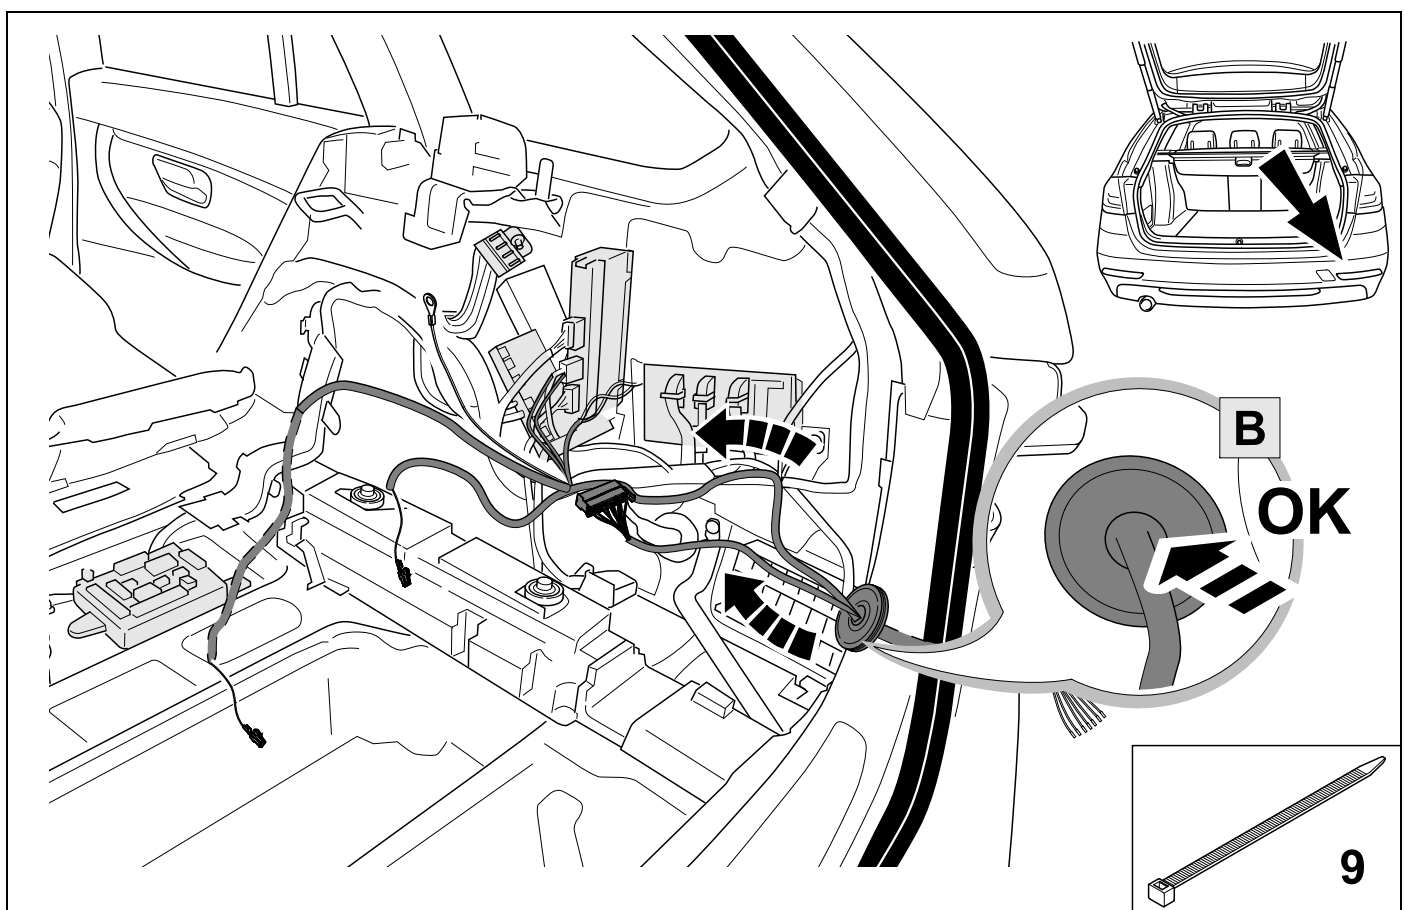

13

F31

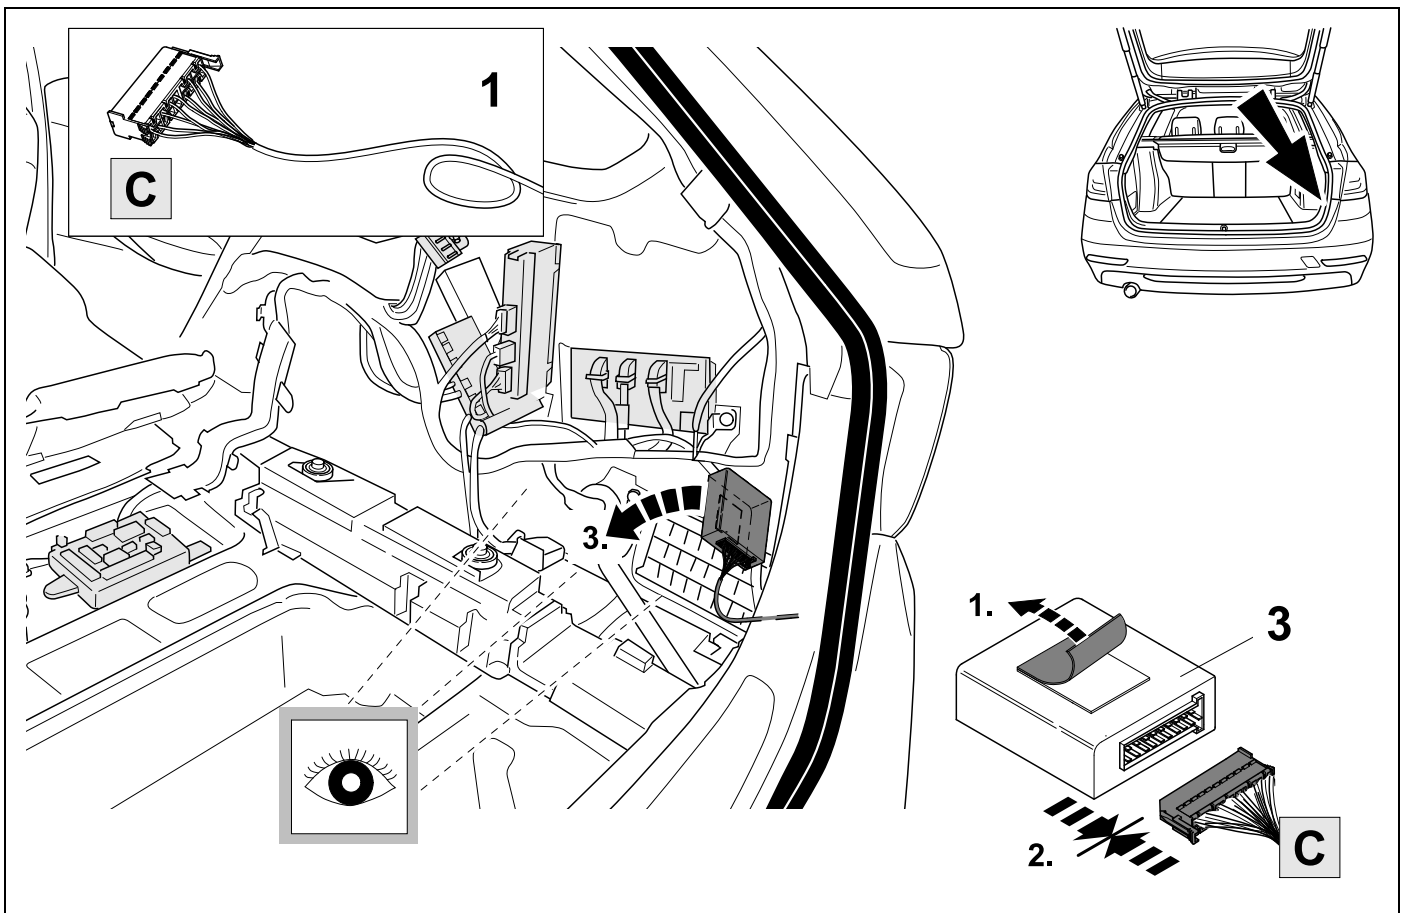




14






37



F31

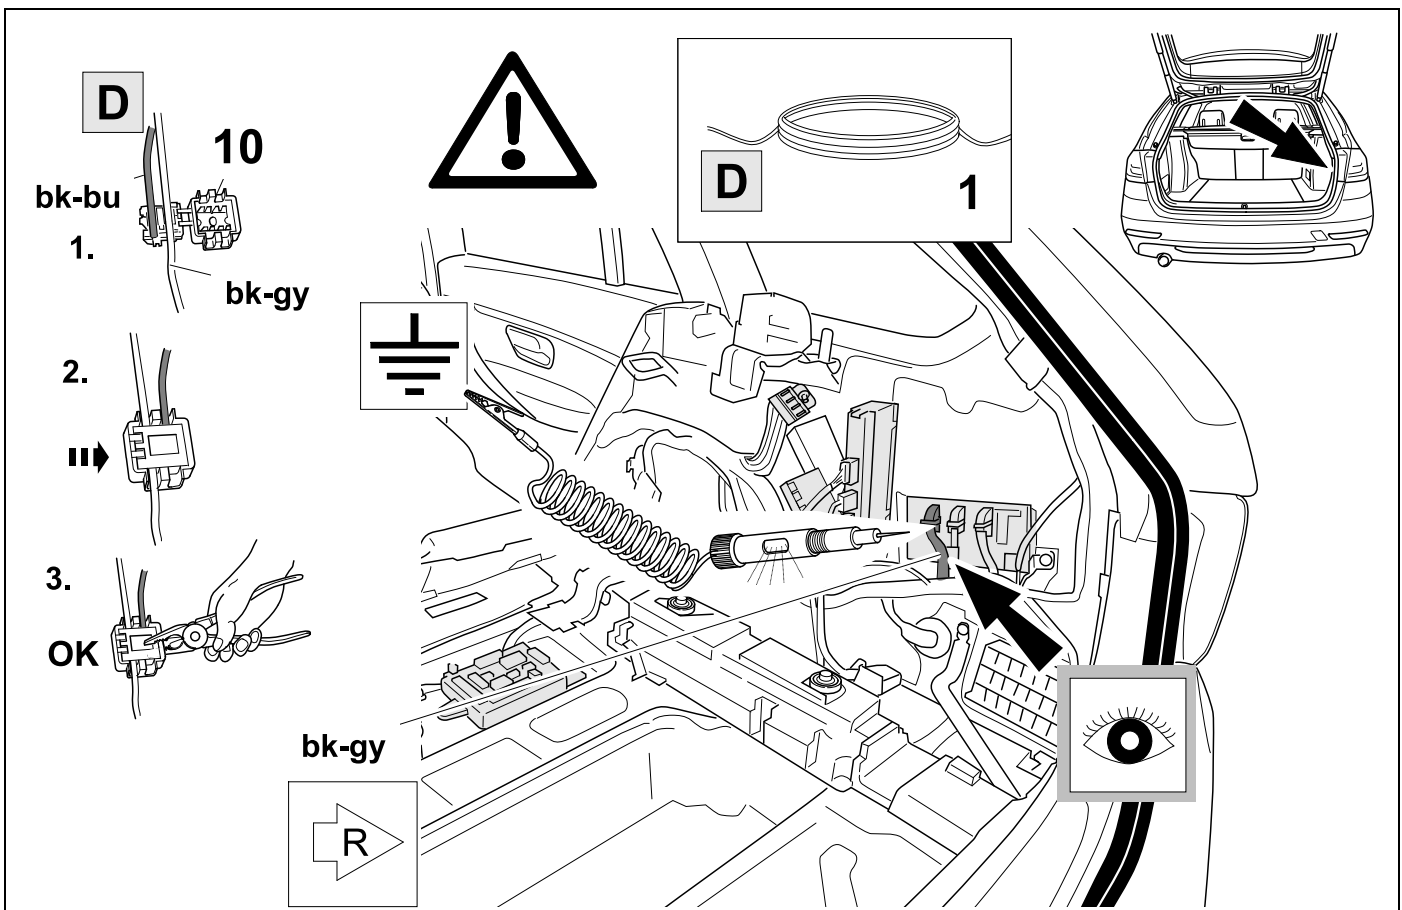


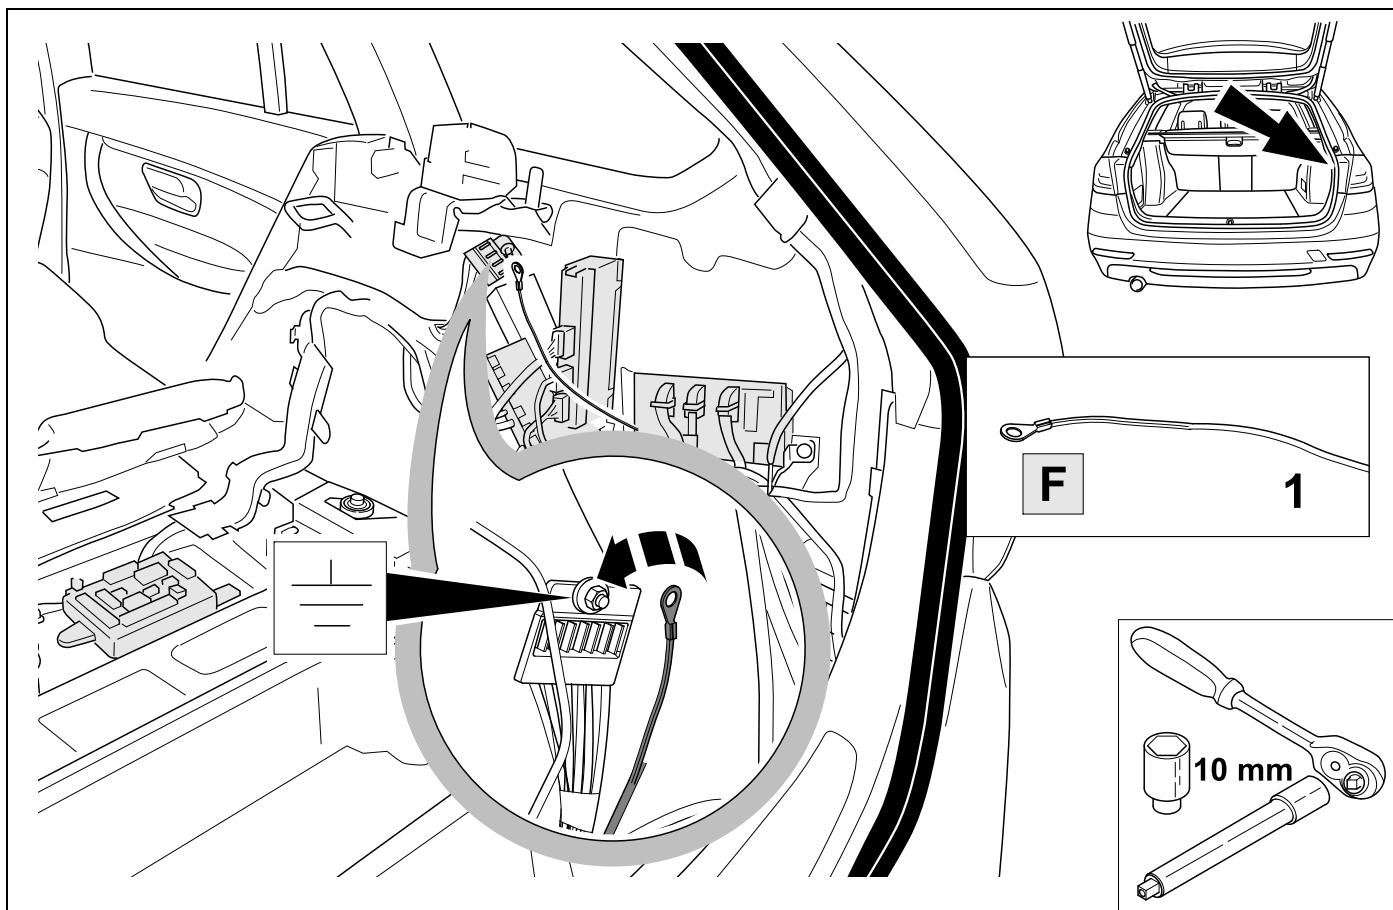
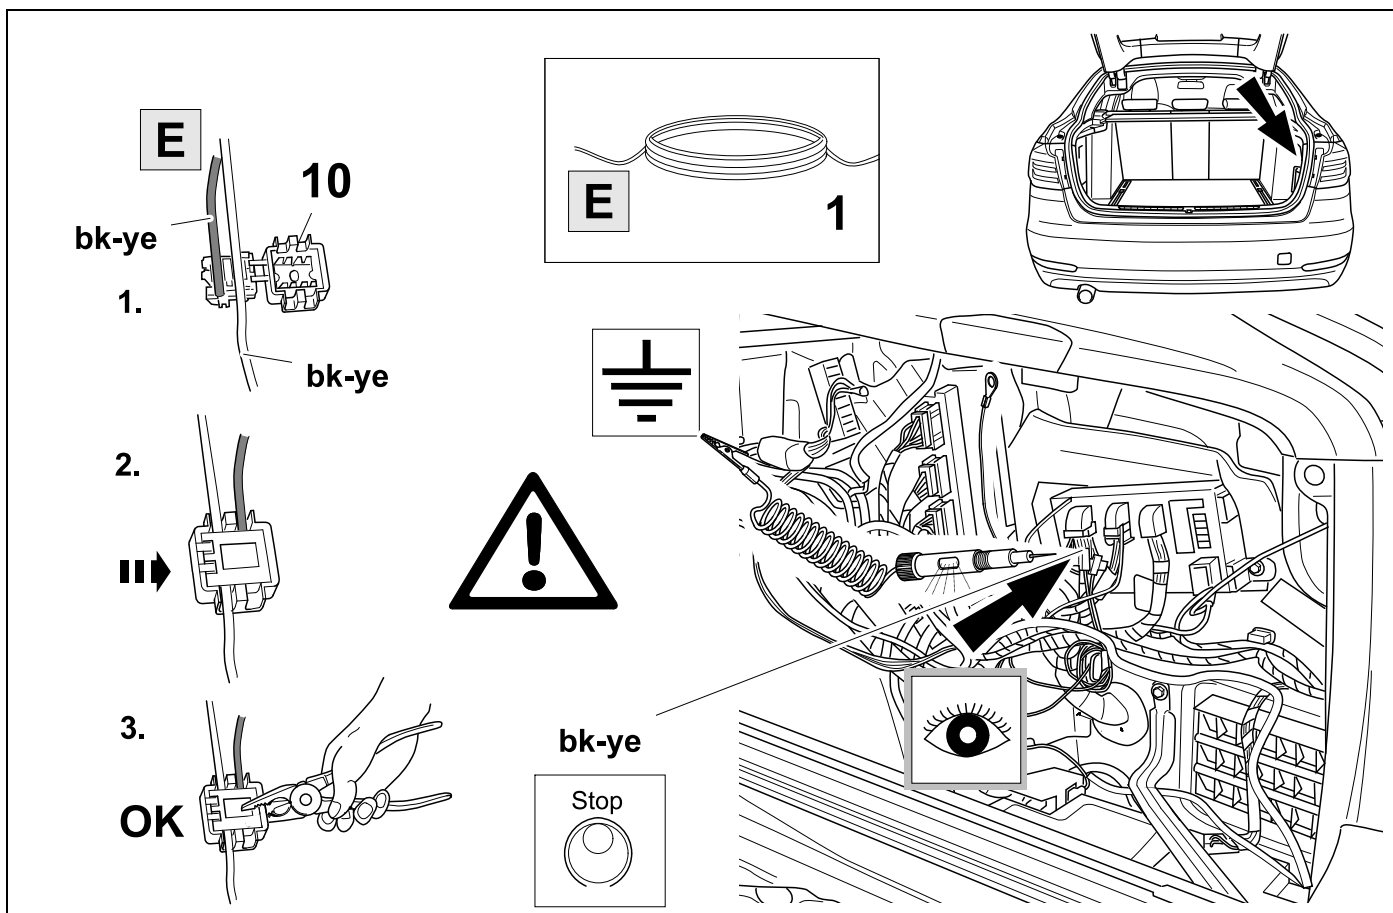


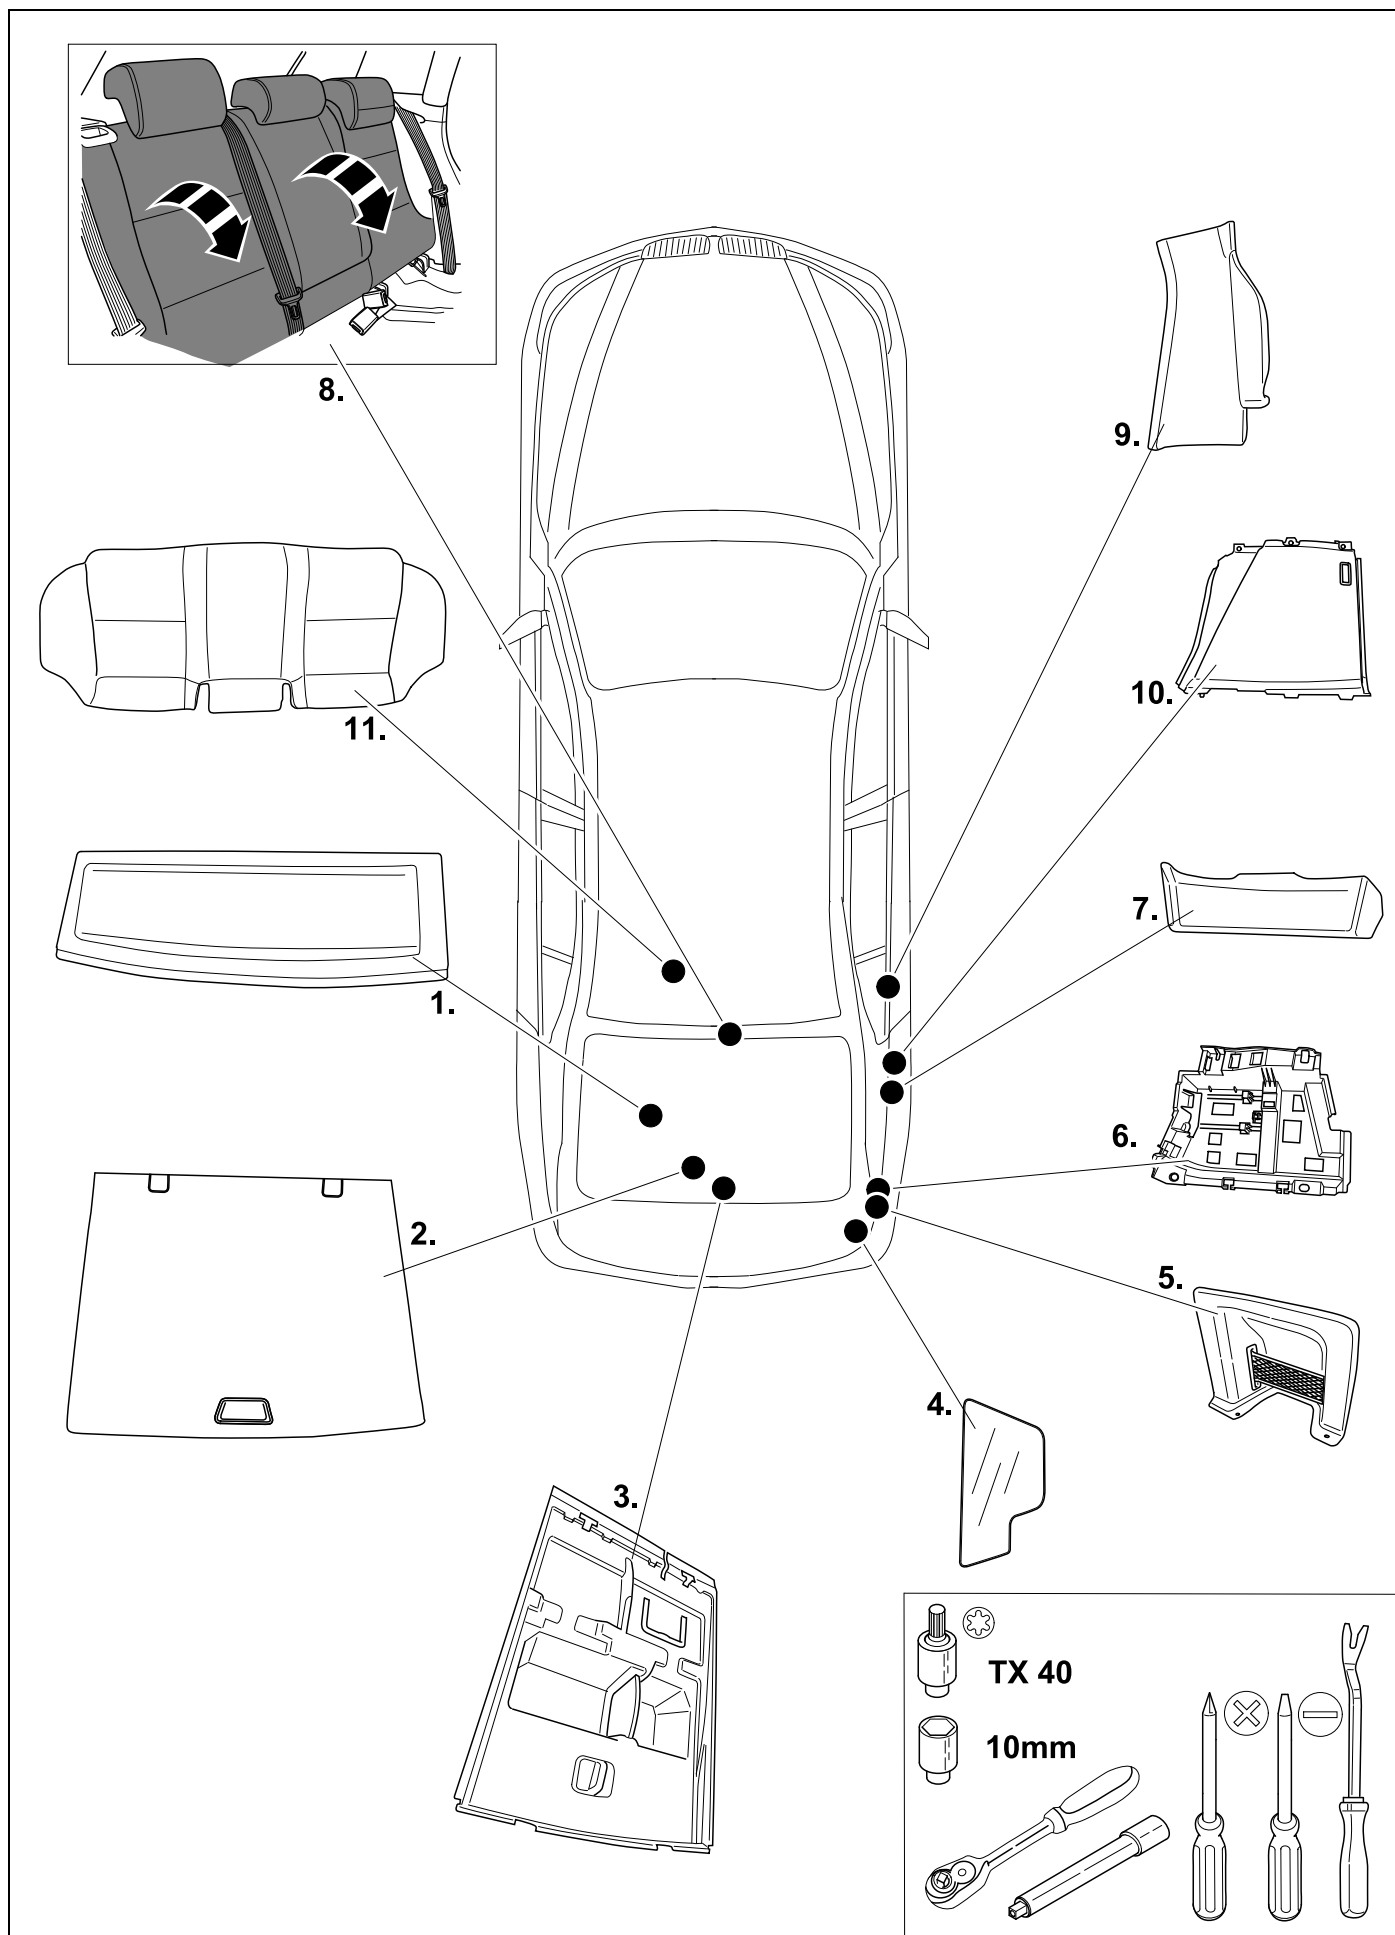



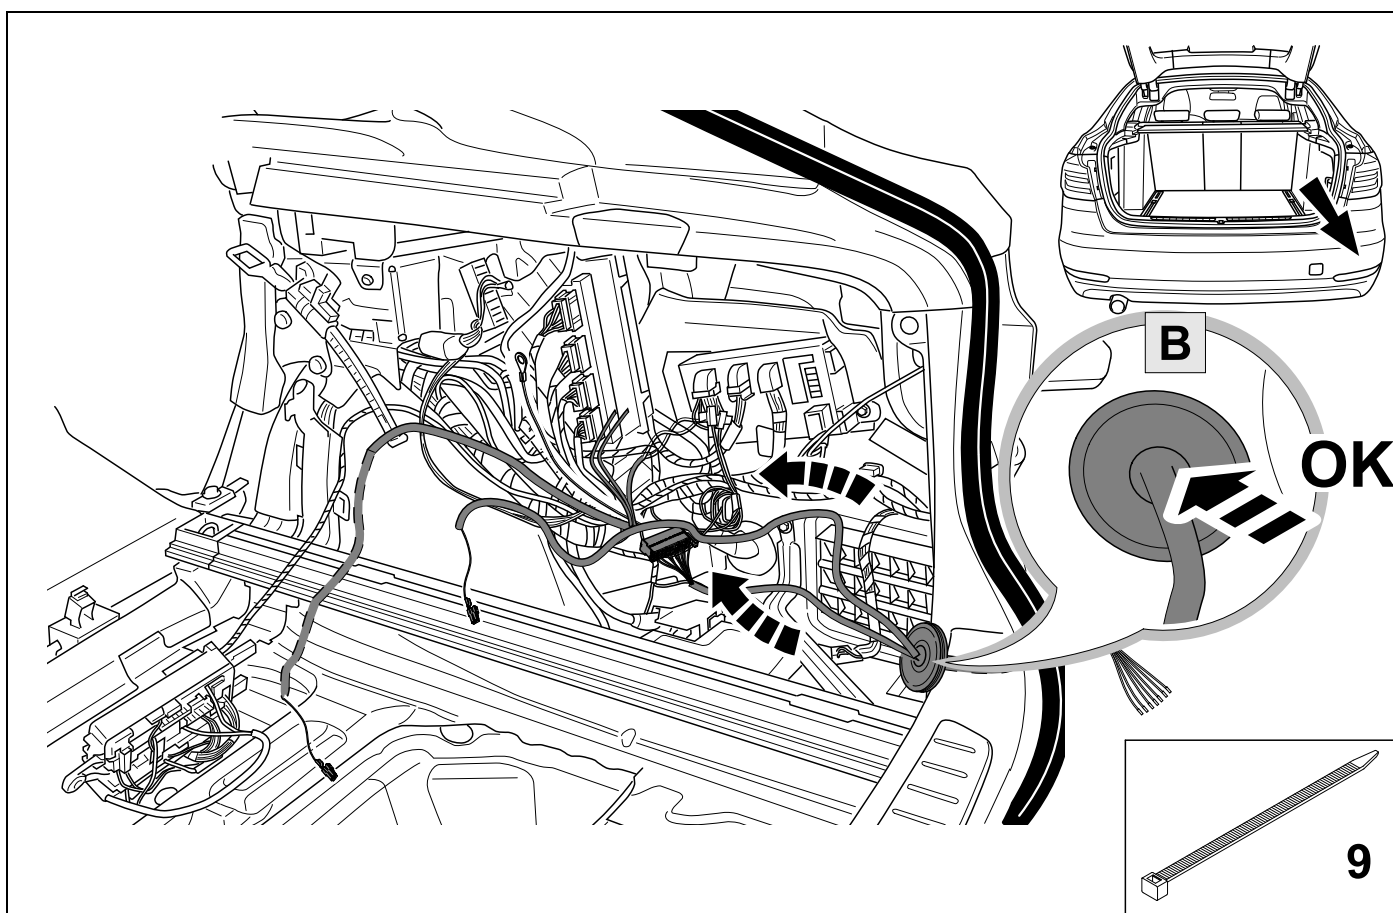
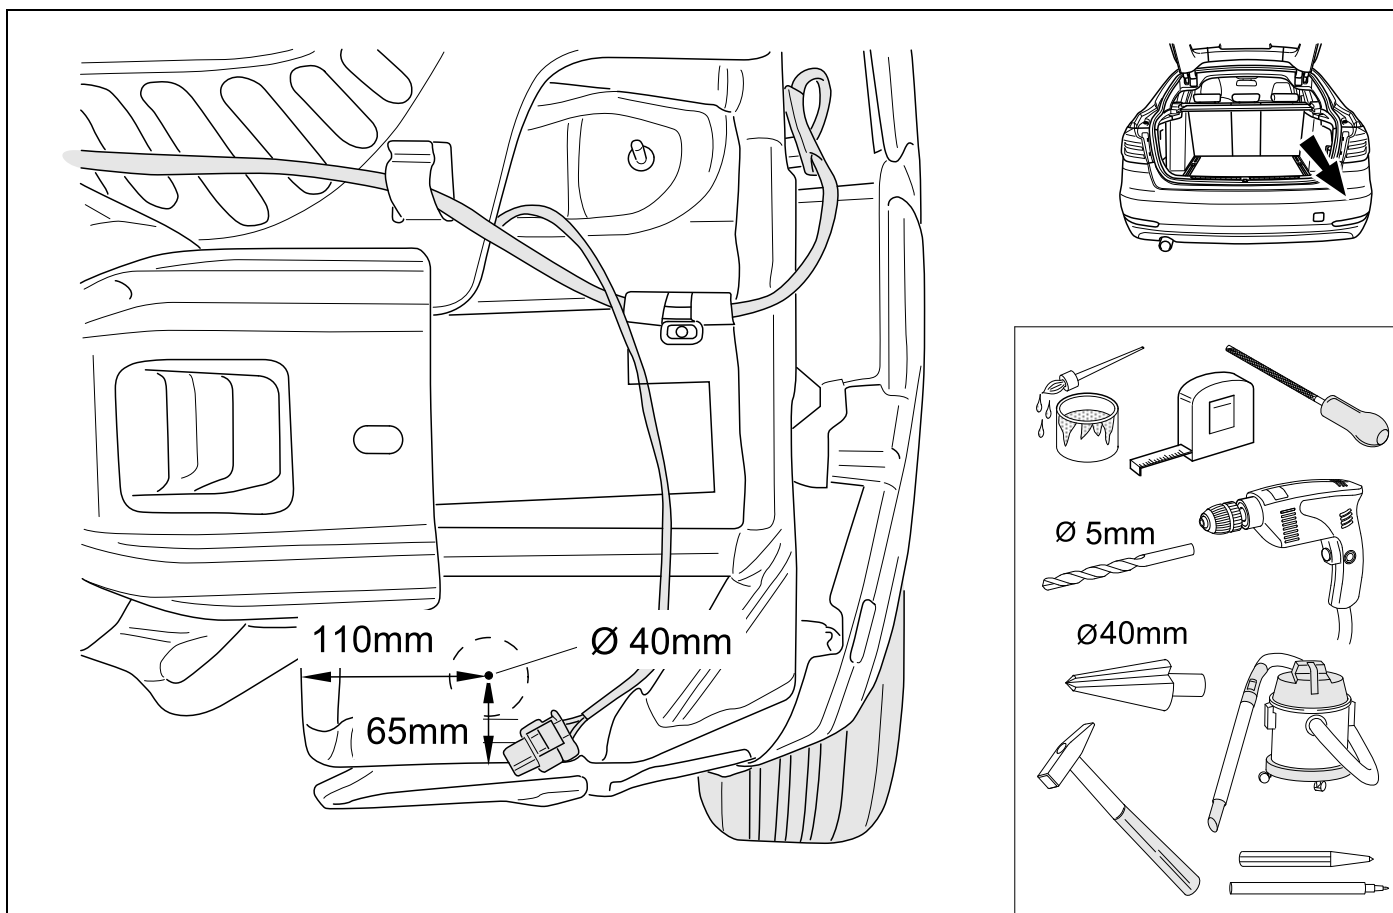


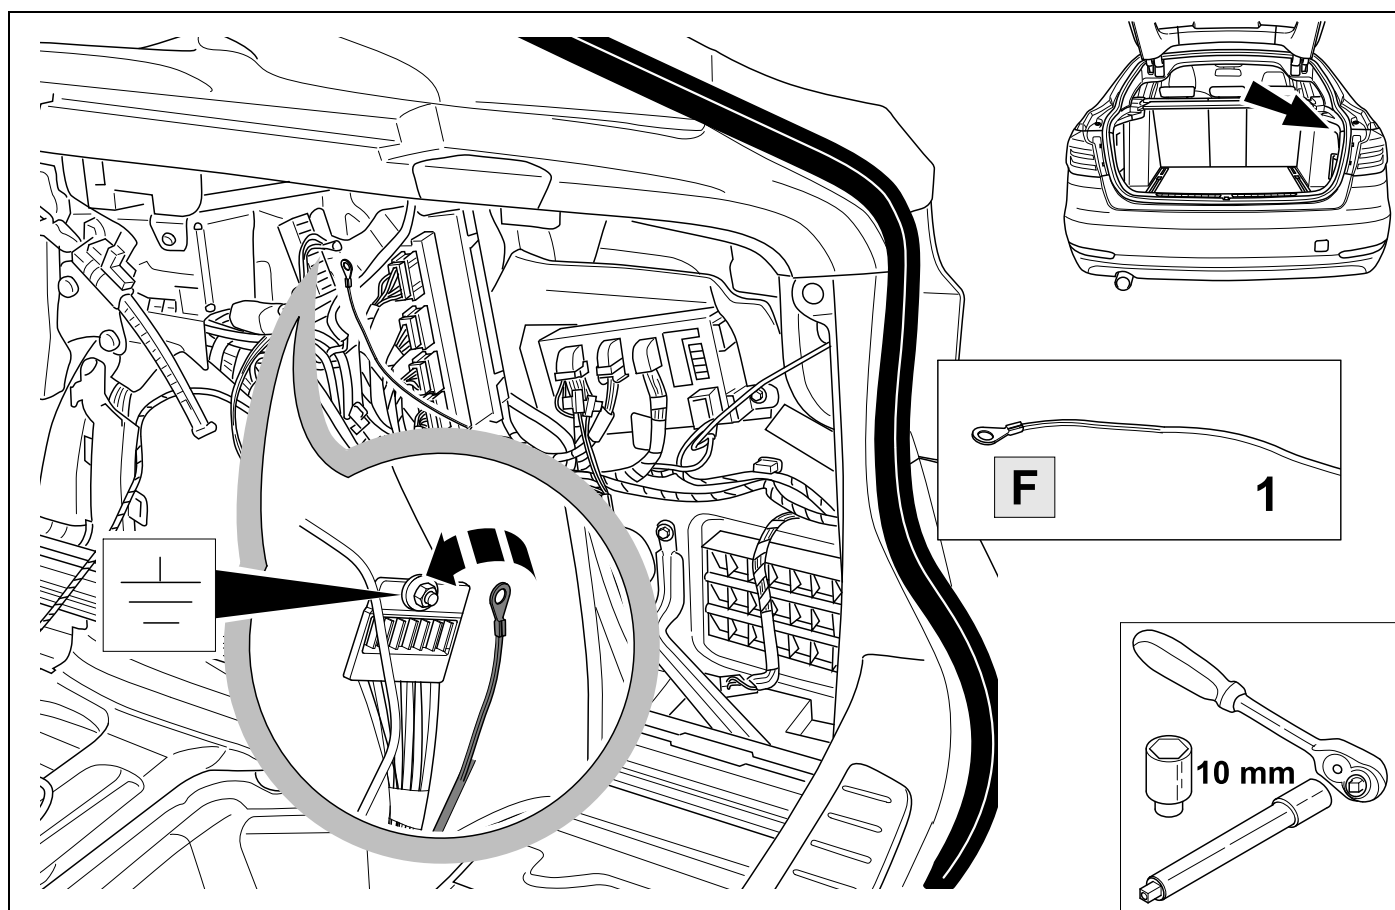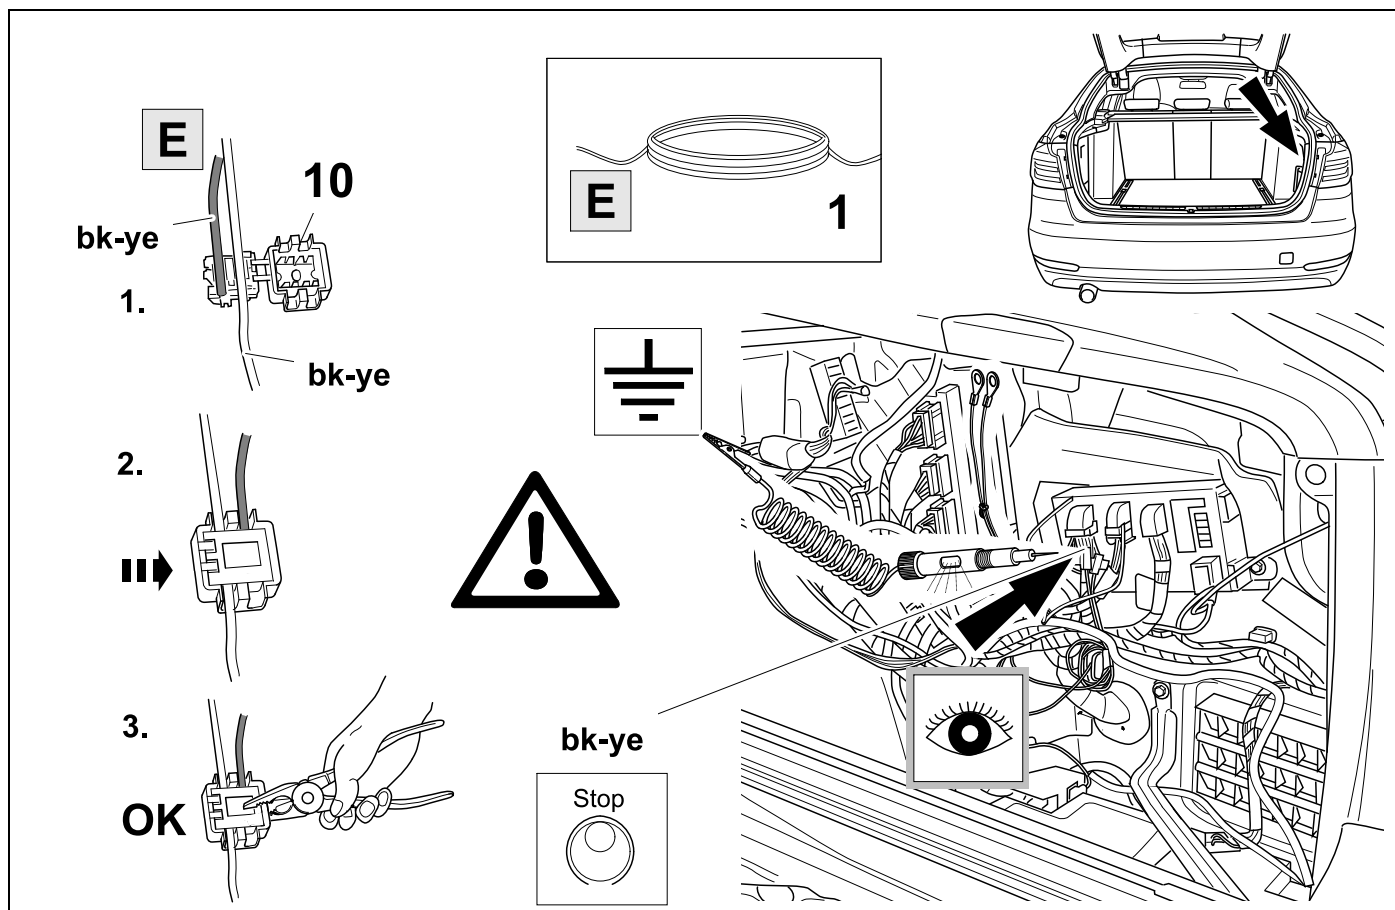

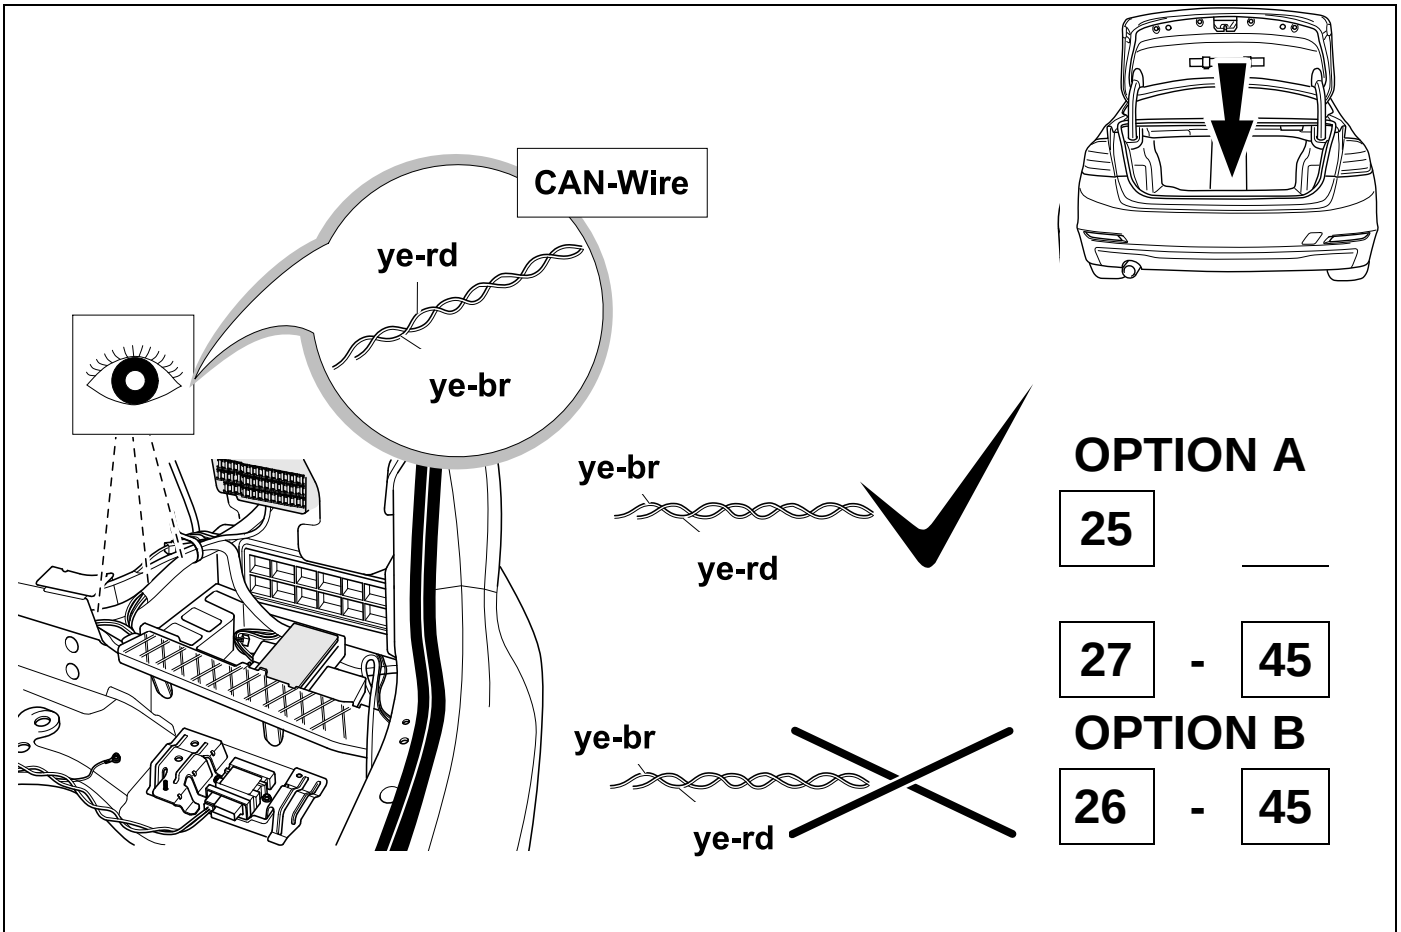

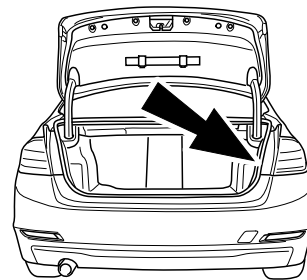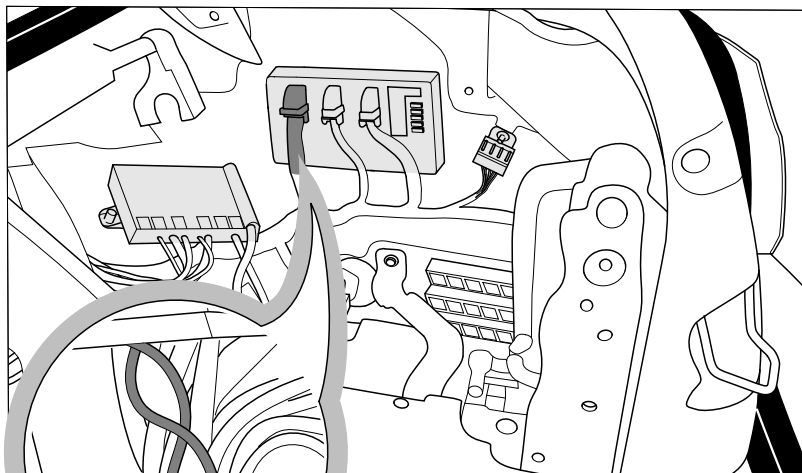








ye-rd
CAN-Wire
ye-bn

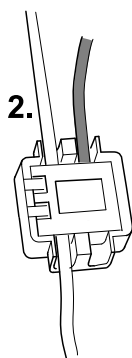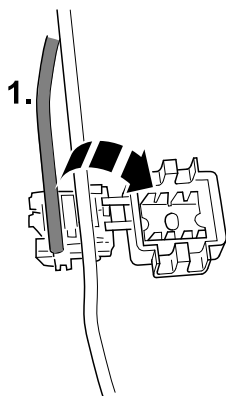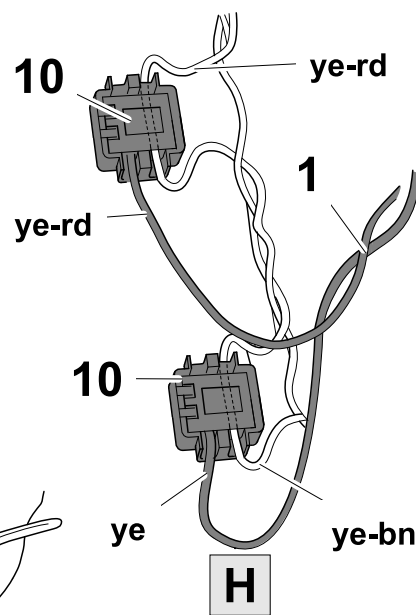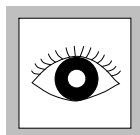


3.

OK

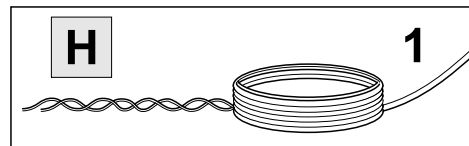

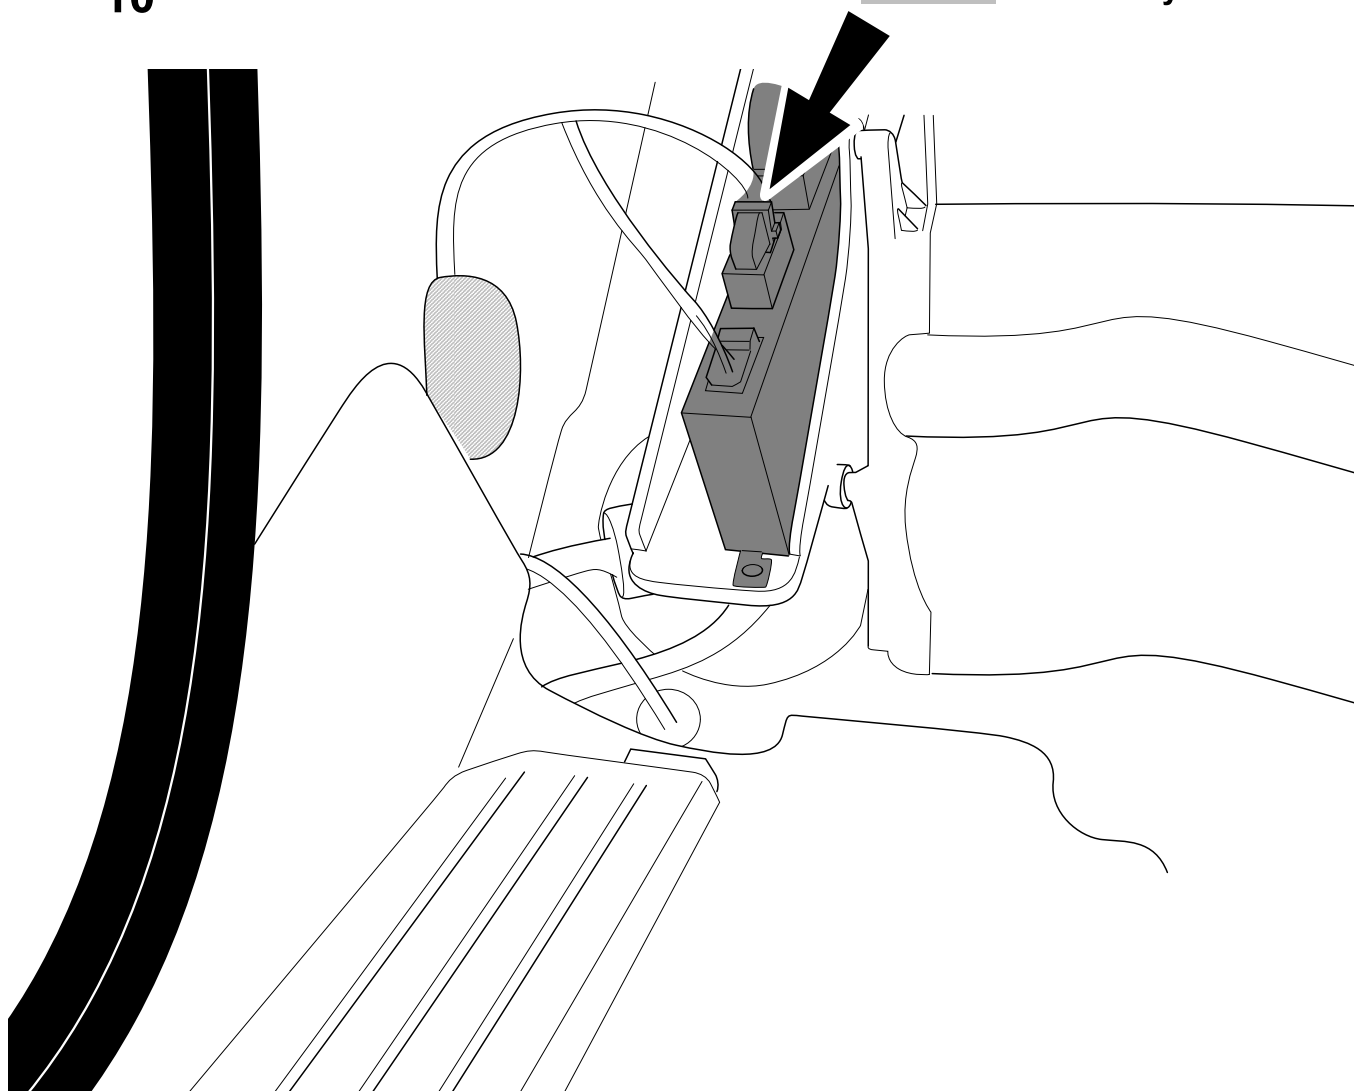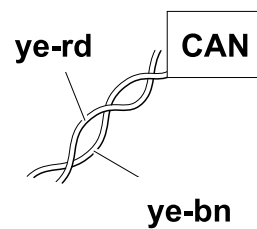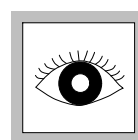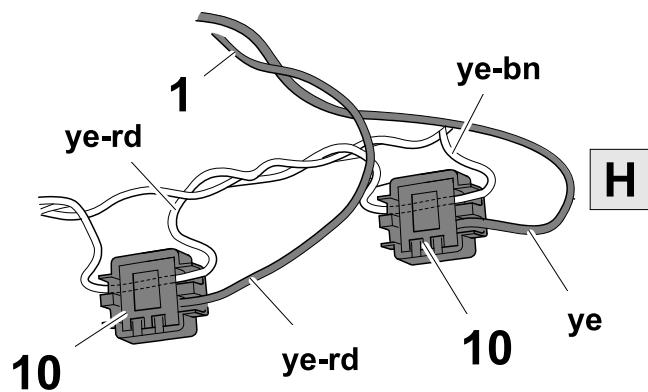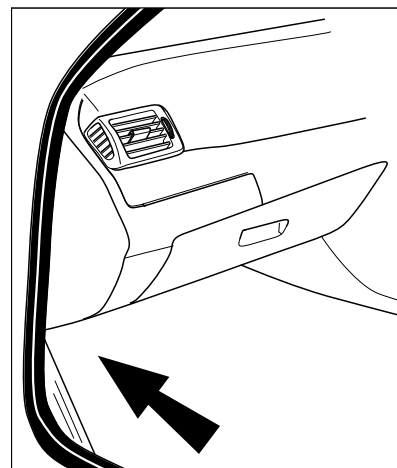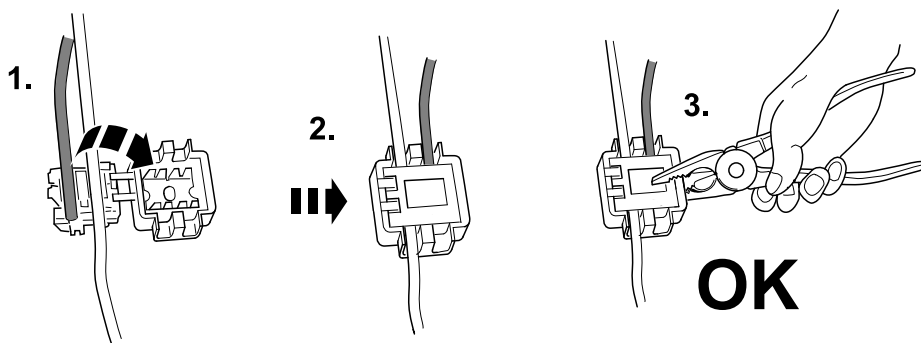

27


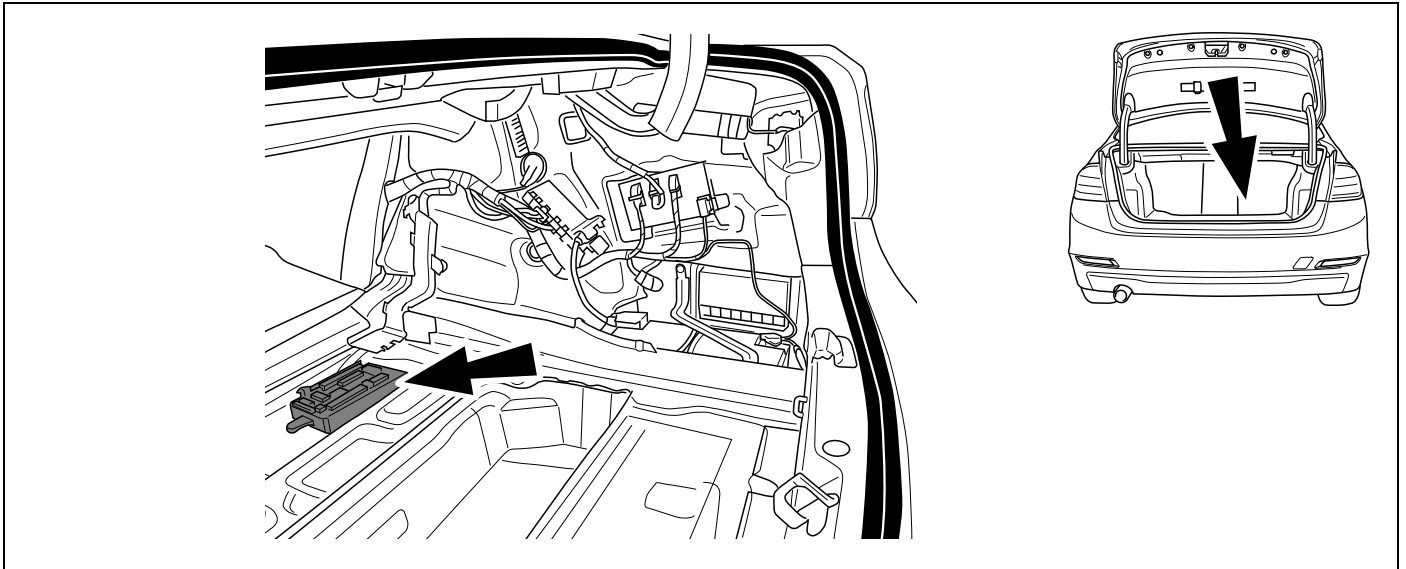




28

F30

F31


F34

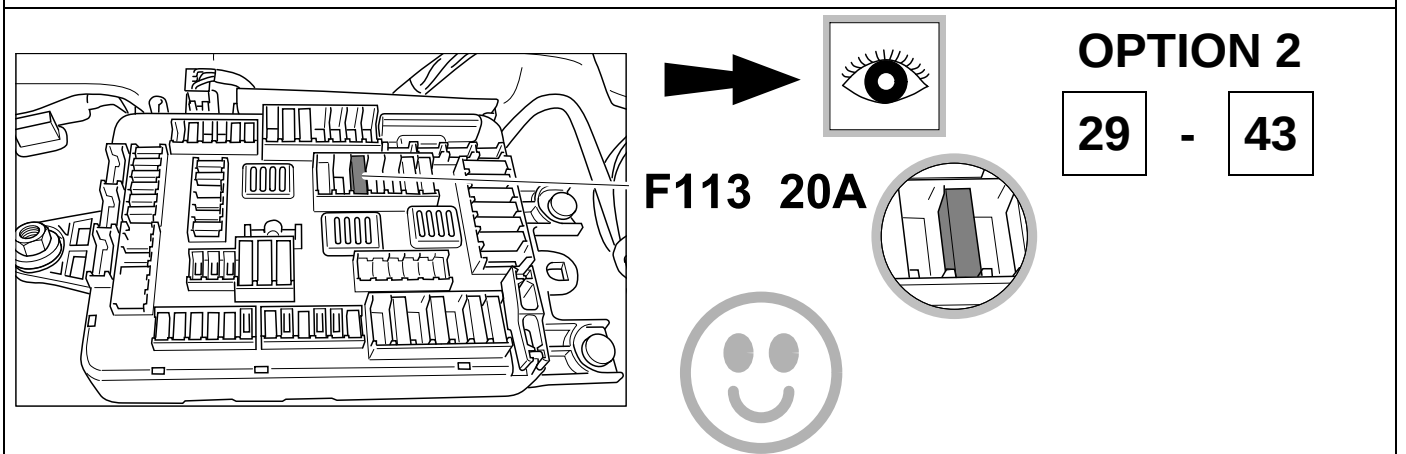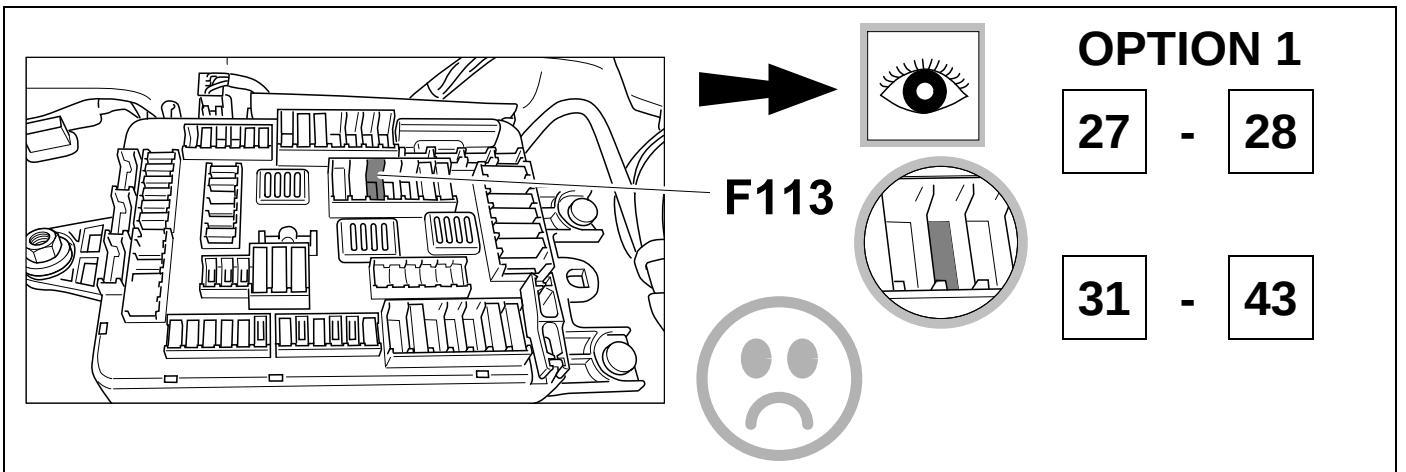

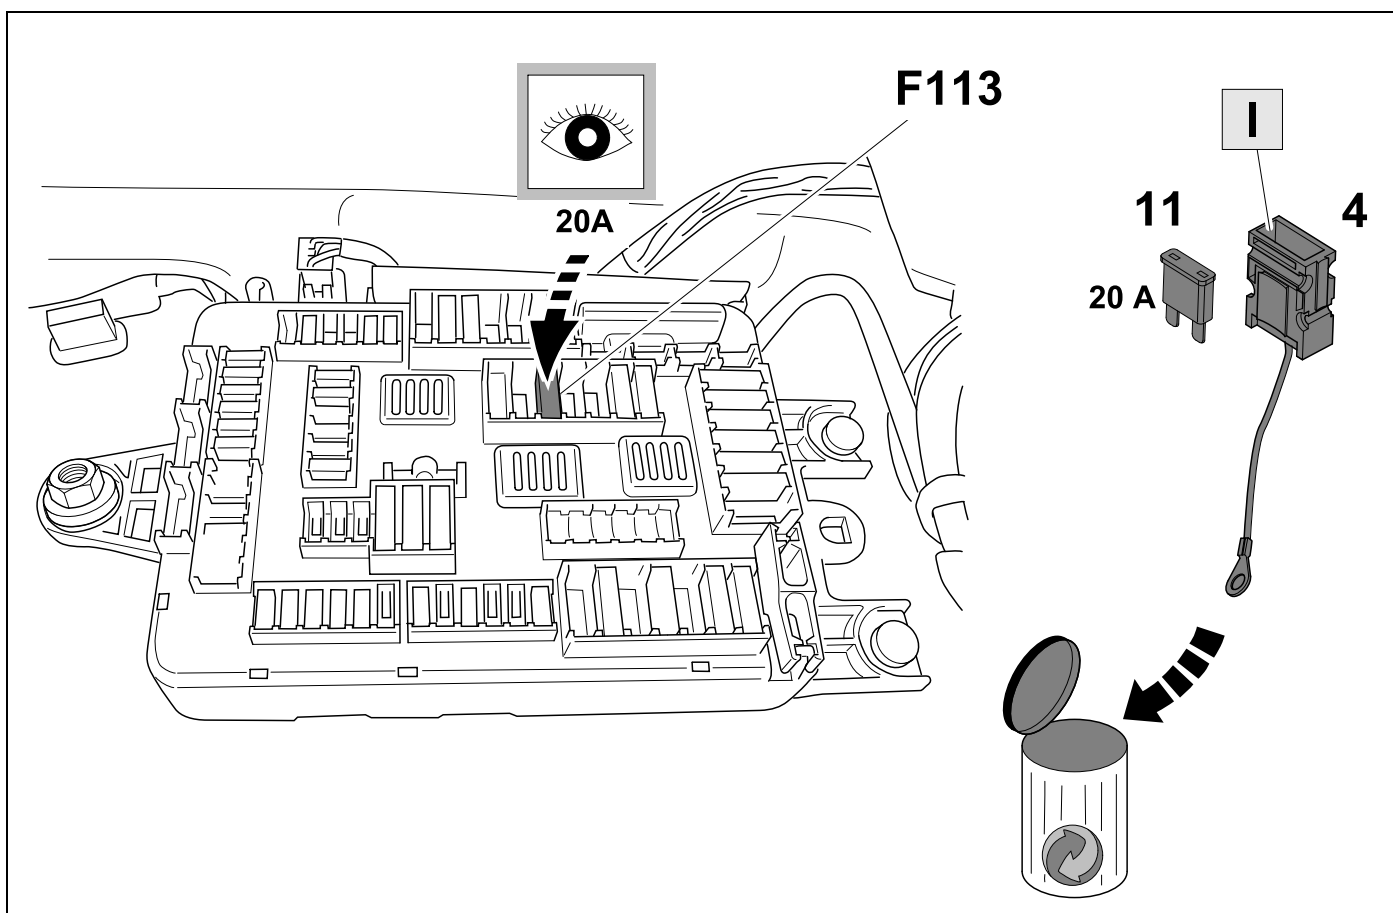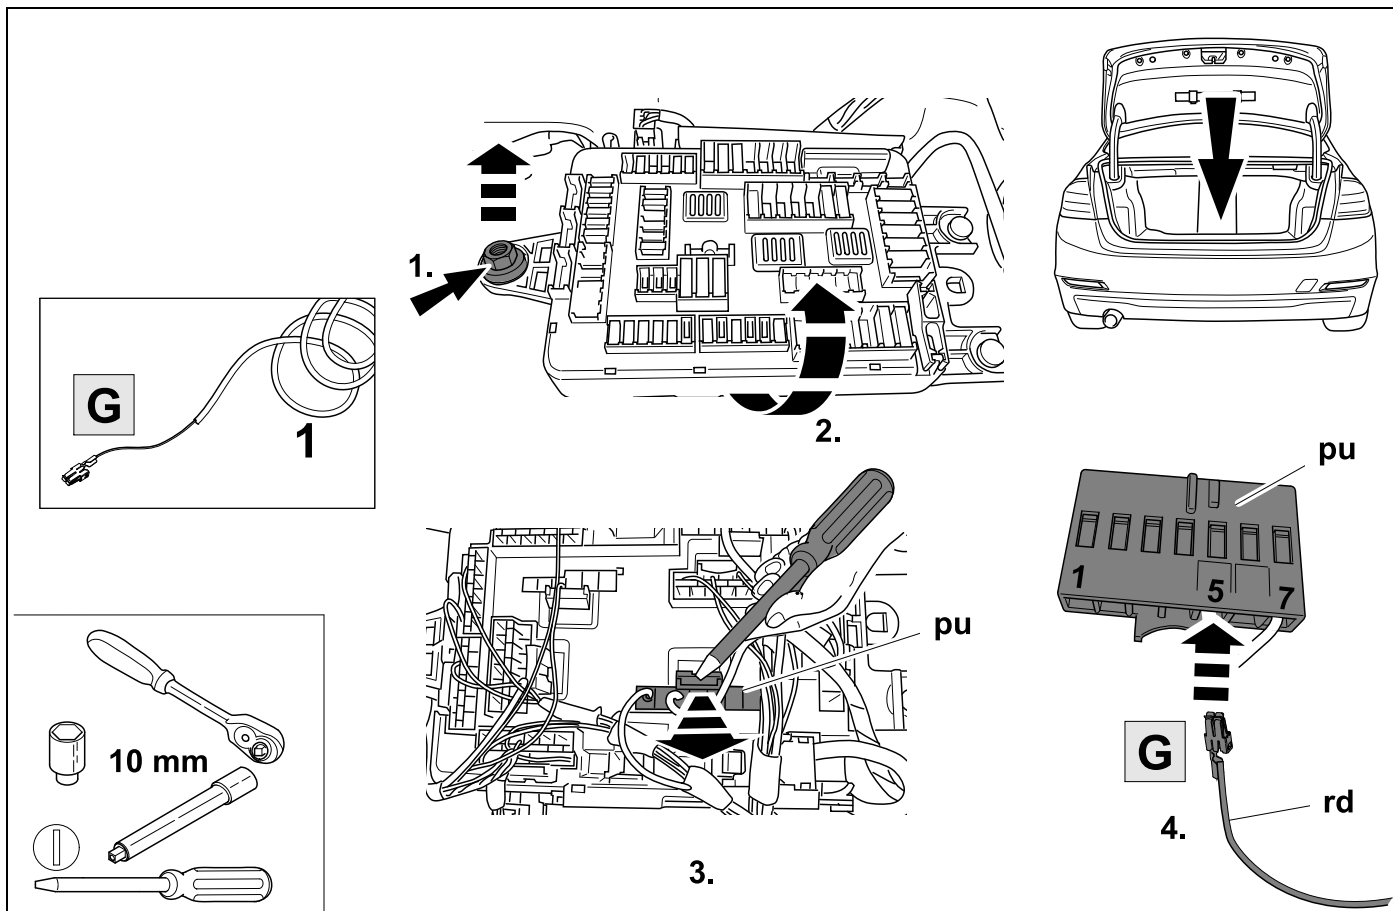

31

OPTION 2

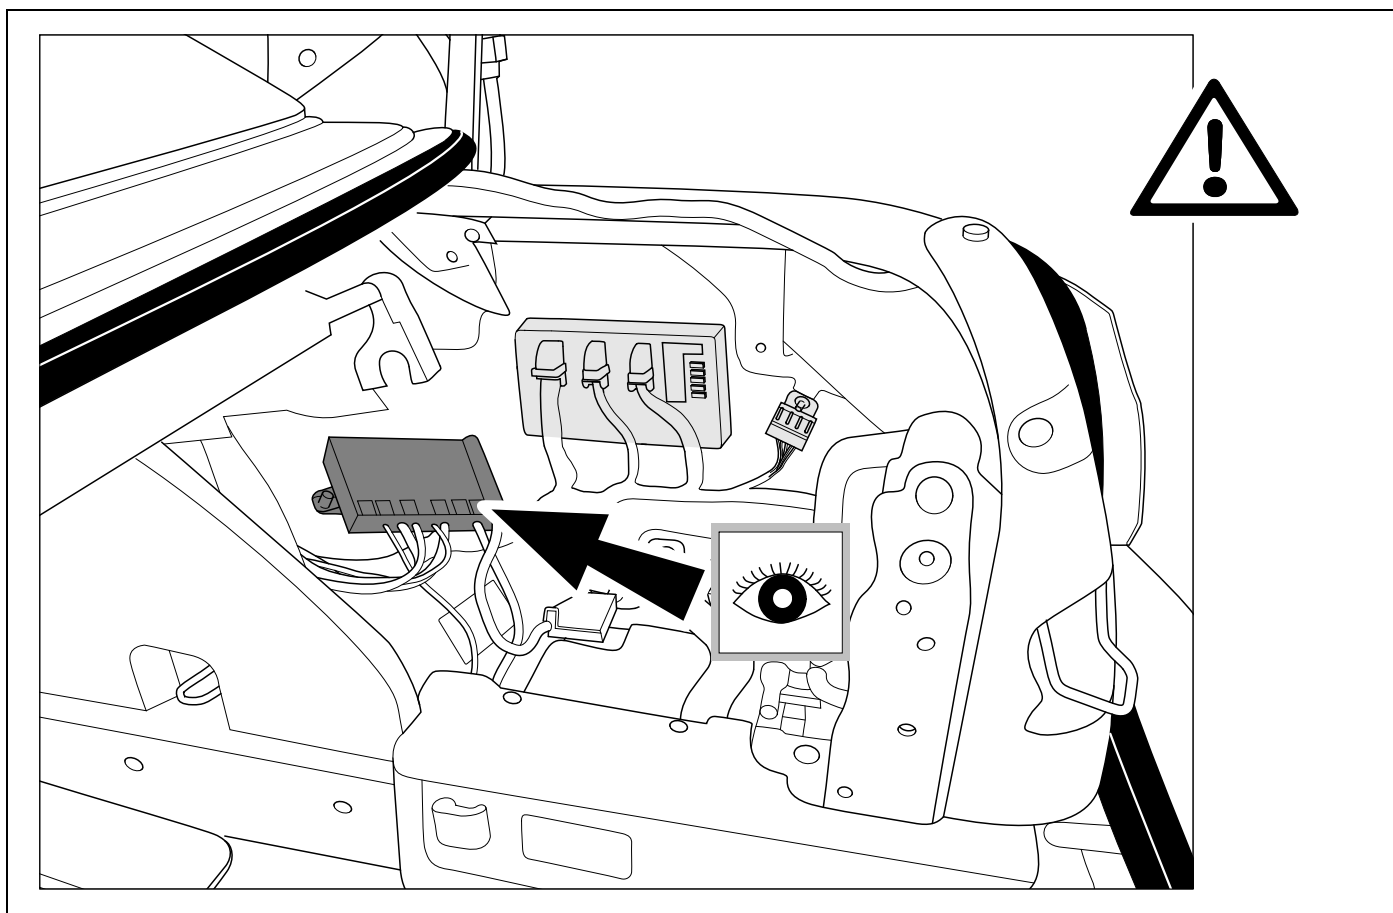





32

OPTION 2







42

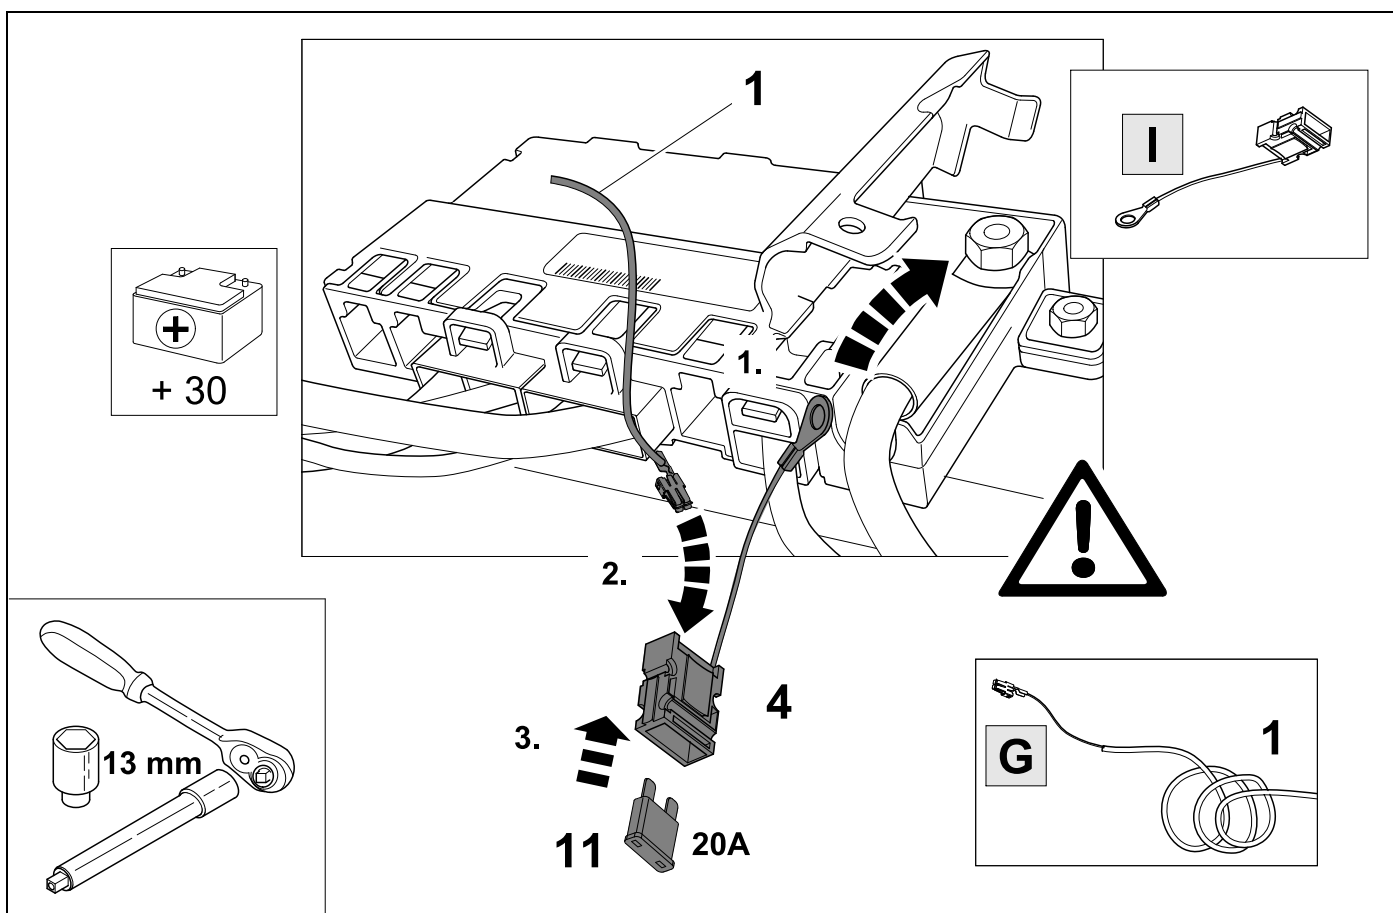

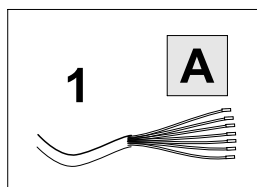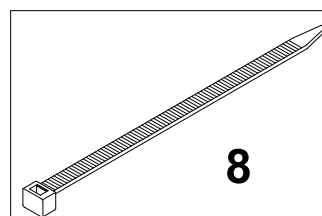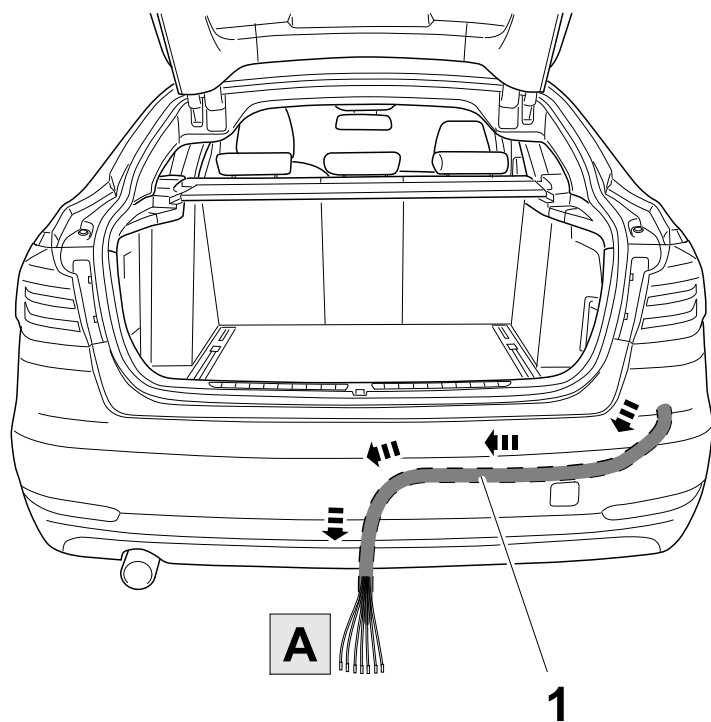



gn	4	
bn	7	
bk	2	
wh	3	
bu	5	
rd	6	
ye	1	

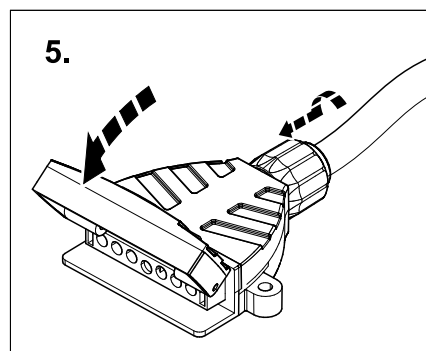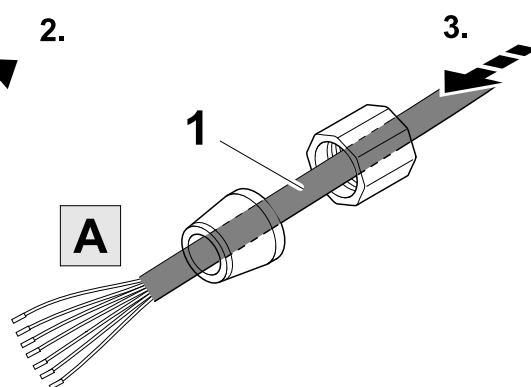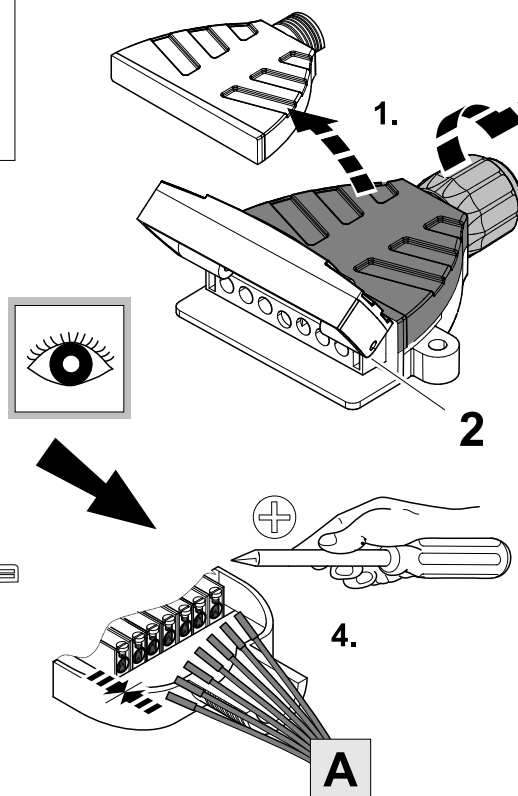


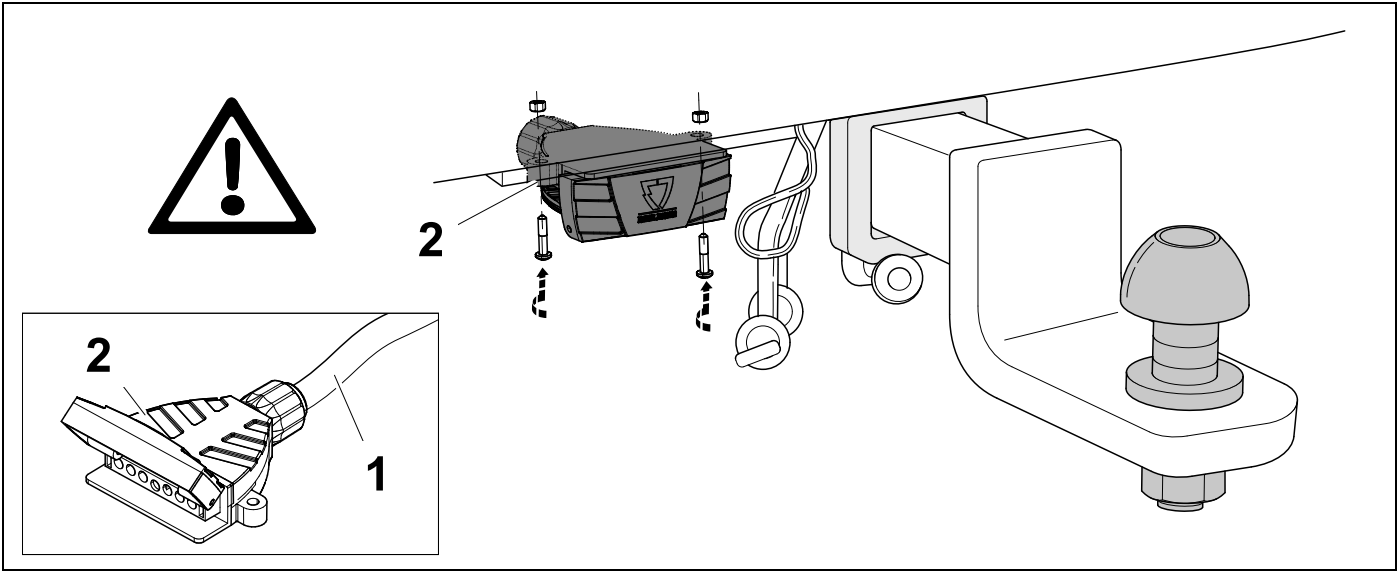




1	ye	
2	bk	
3	wh	
4	gn	
5	bu	
6	rd	
7	bn	

37	bk	wh	gy	gn	rd	bu	ye	bn	pu	or	no
	black	white	grey	green	red	blue	yellow	brown	purple	orange	not occupied

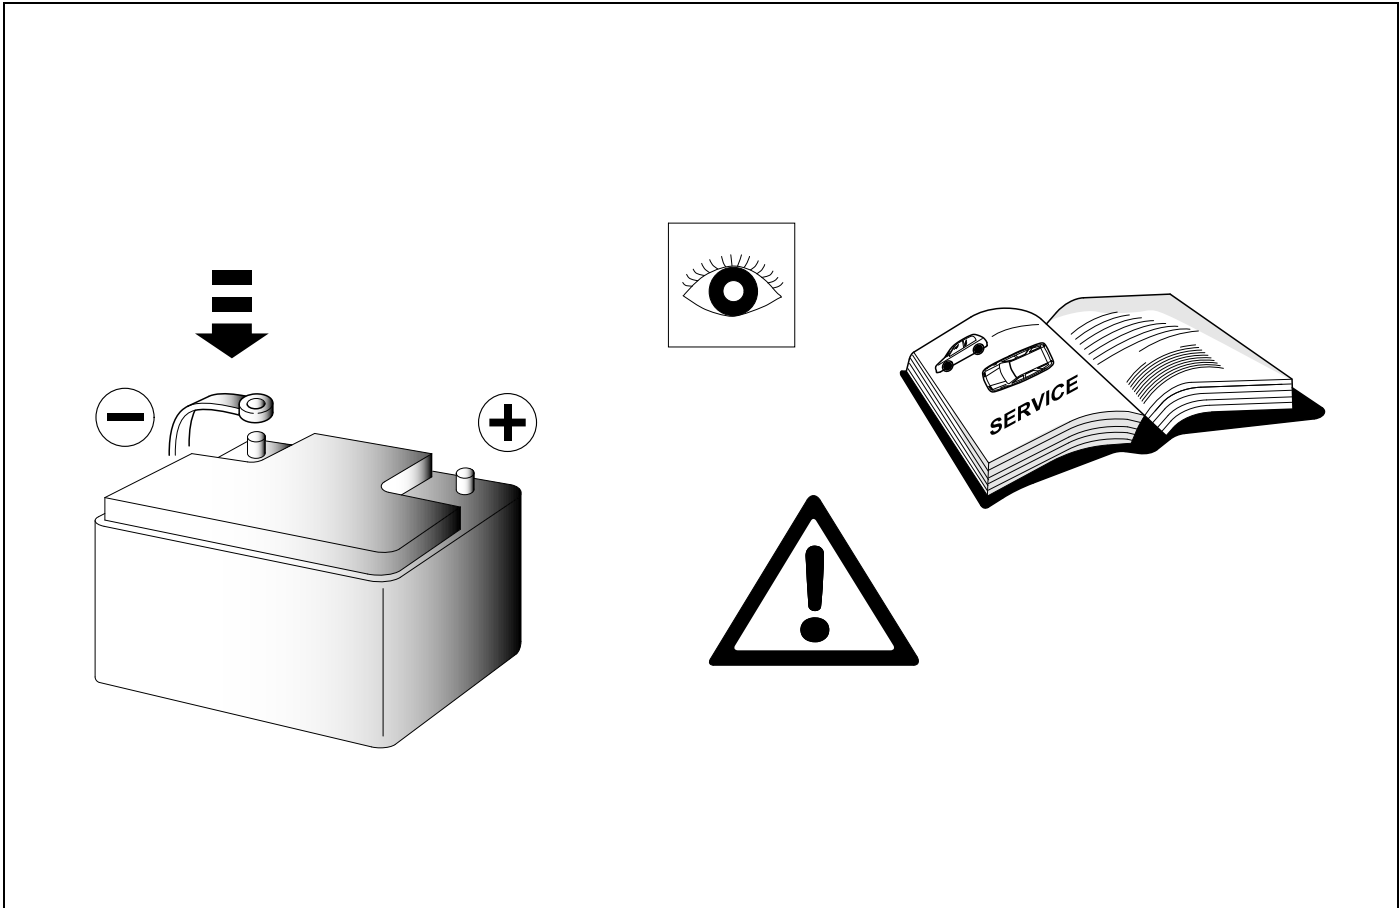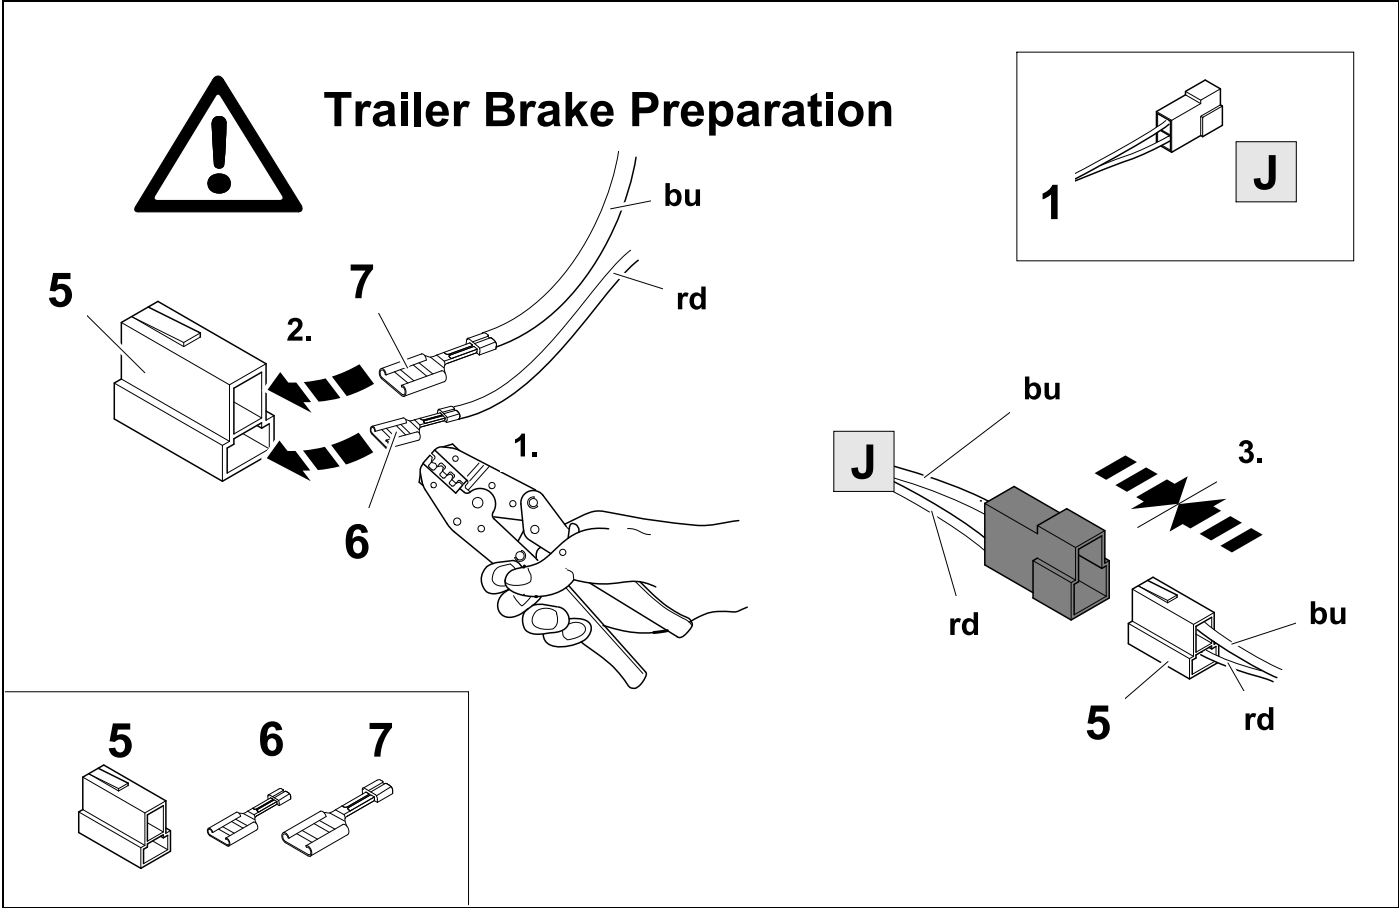

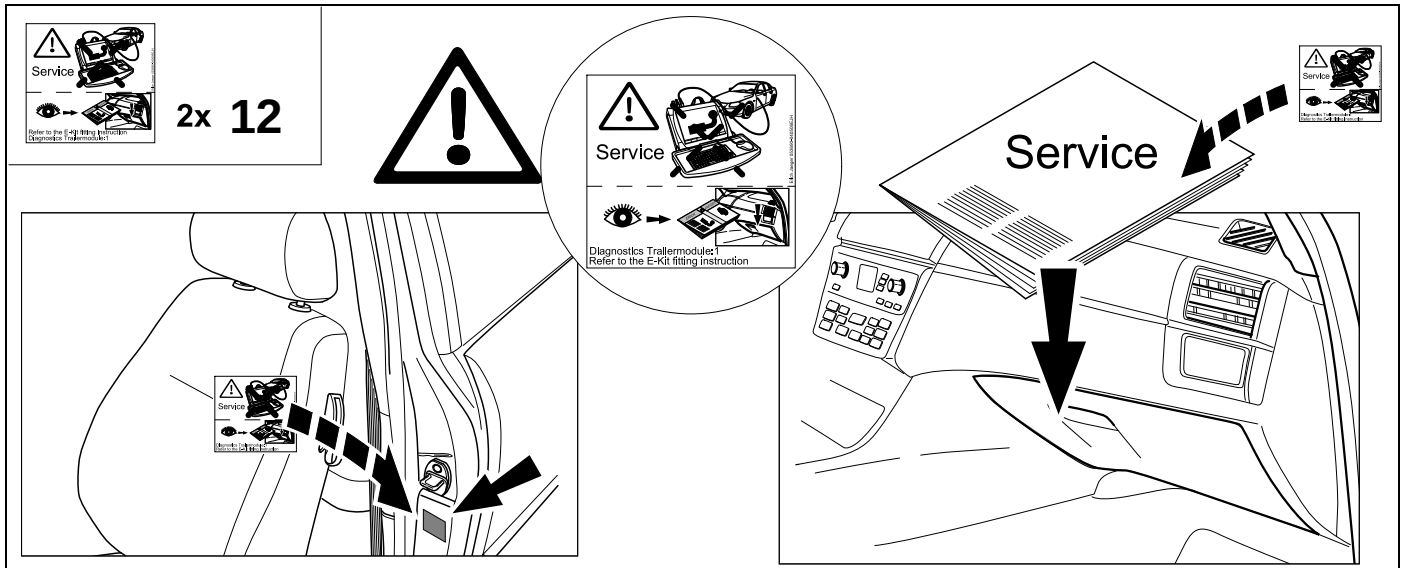


If the PDC does not automatically deactivate, coding and initialization of the module might be required.

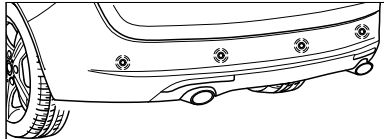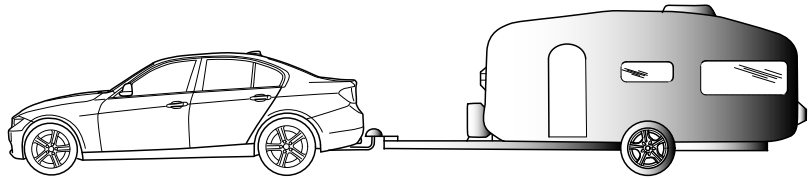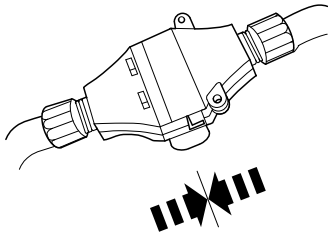


OPTION 1




No Coding

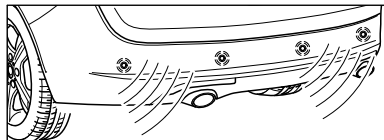


OPTION 2

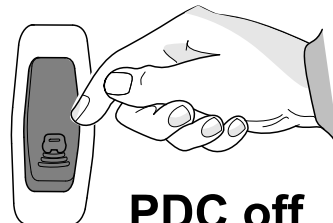


PDC off

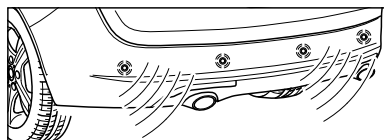


OPTION 3

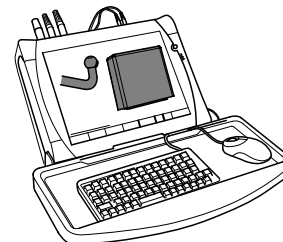

**BMW Service ISTA/P
Initialize Trailer Module**



45

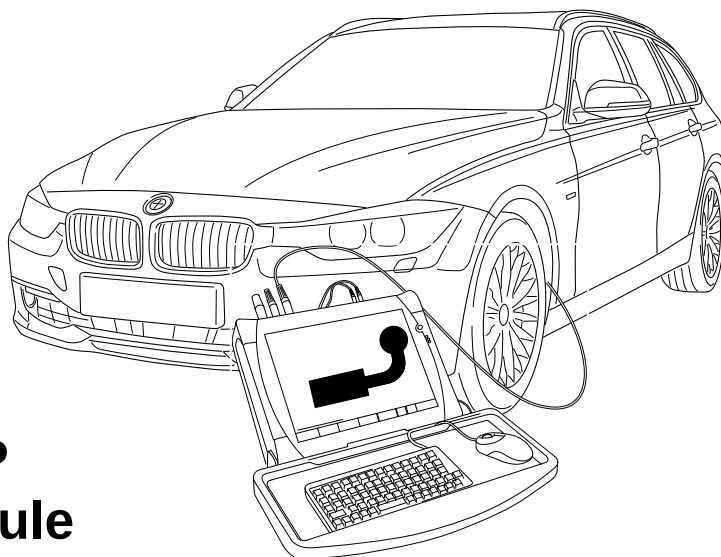



BMW Service ISTA/P Initialize Trailer Module



Please effect coding as follows:

- Connect computer to vehicle
- Start ISTA/P
- Click "Modification / Upgrades"
- Scan Action plan
- Click „Coding (Ethernet)“
- Scan Action program follow-up
- Final report checking

After the effected connection, the rear park assist system will also automatically be deactivated in trailer operation!

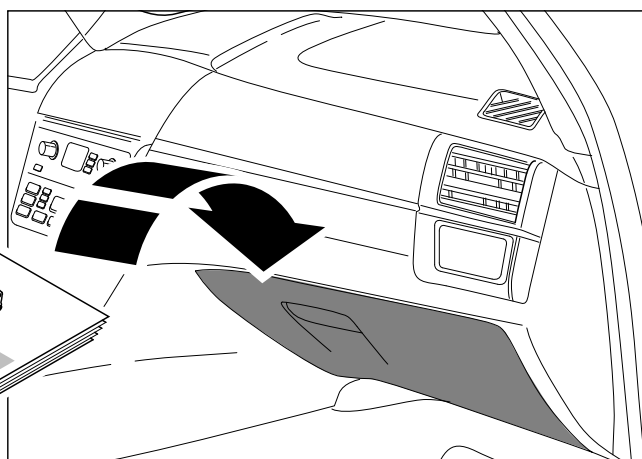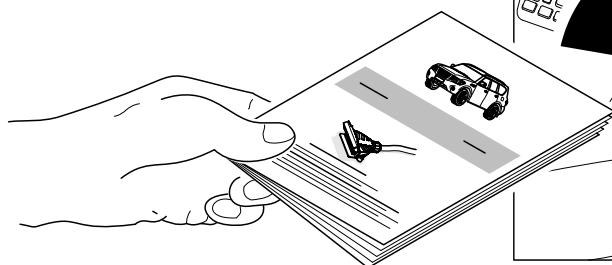

Subject to change in terms of construction, equipment and colour, and may contain errors.
The information and illustrations are non-binding.