



TOYOTA

ALWAYS A
BETTER WAY

Fortuner

Hood deflector

Installation instructions


Model year:	As from 2017/08
Vehicle code:	GUN156L-STTSXW TGN156L-STMLKW TGN156L-STTSKW
Part number:	PZQ15-89360

Manual reference number: AIM 005 050 - 0

Revision Record

Rev. No.	Date	Page	Step	Remarks


PZQ15-89360

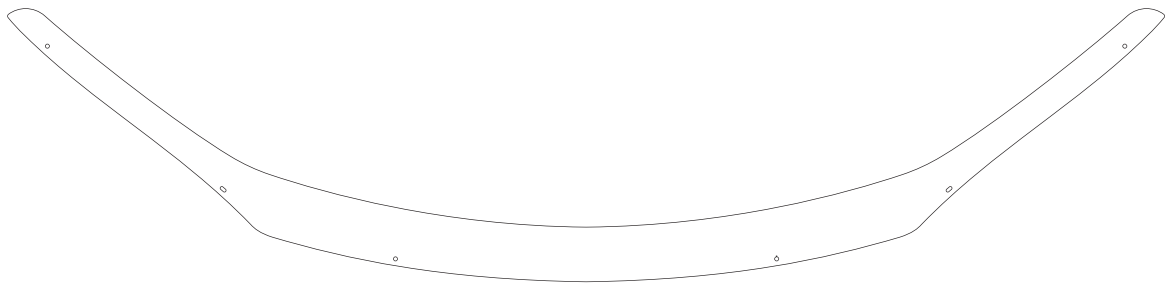

A


1x

PZQ15-8912A

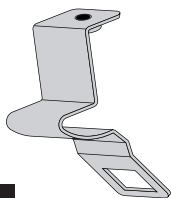

B

2x

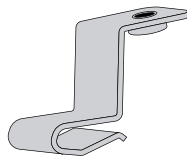

C

4x



D

2x



E

6x




F

2x



G

6x



H

6x



J

1x

NOTICE


DO NOT DROP BONNET FROM ANY HEIGHTS GREATER THAN 300mm, DAMAGE TO THE VEHICLE MAY OCCUR.


K

1x



AIM 003-516-*

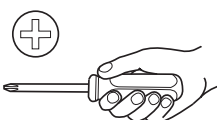

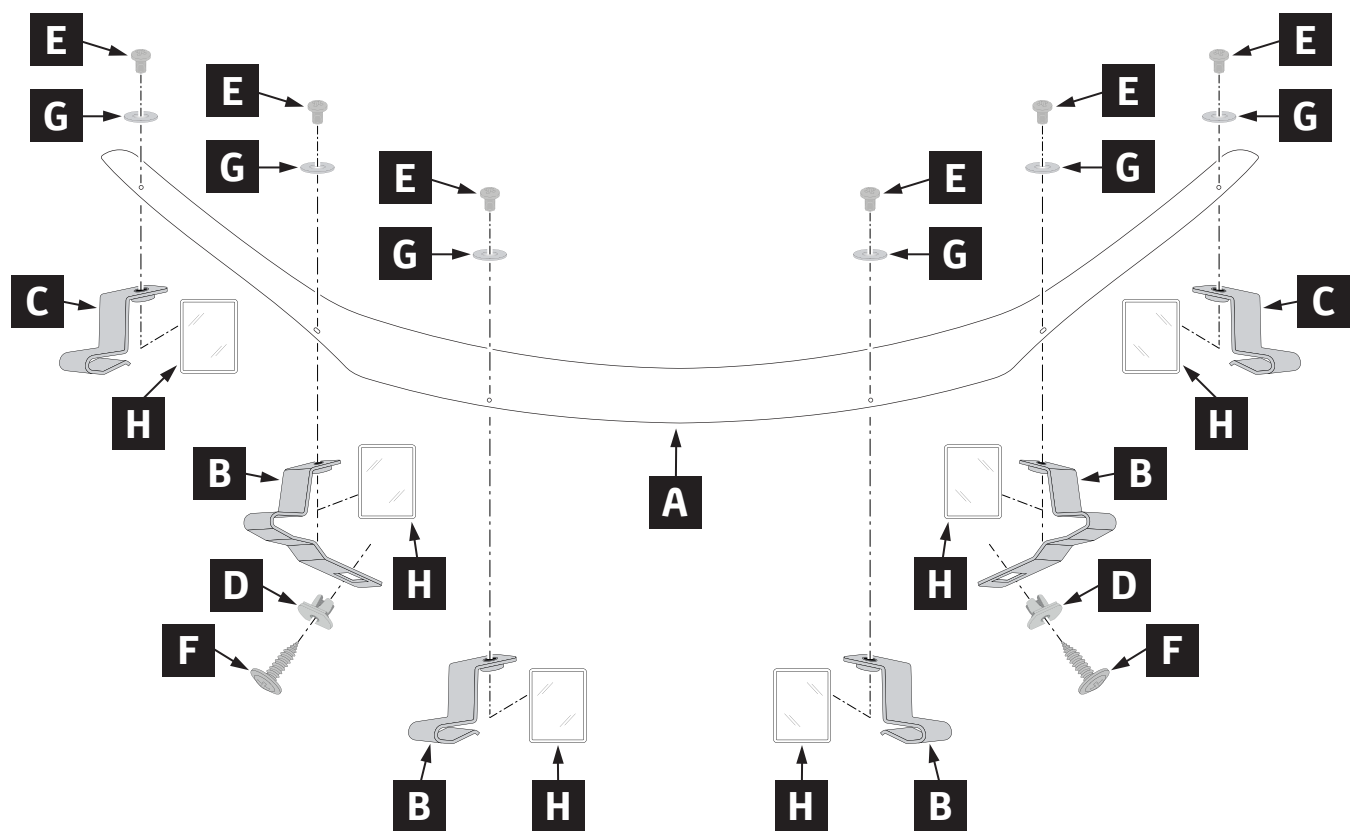

INFO


Material Safety Data Sheet





Technical Data Sheet

40°C


20°C

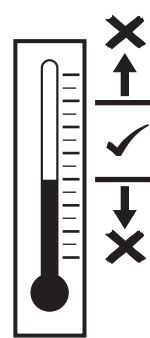


1

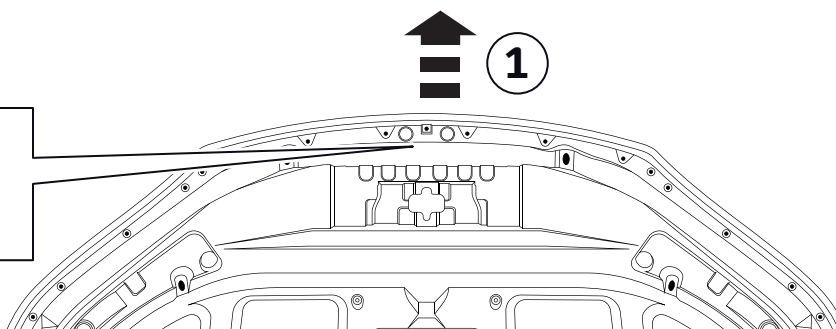
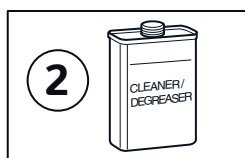


2


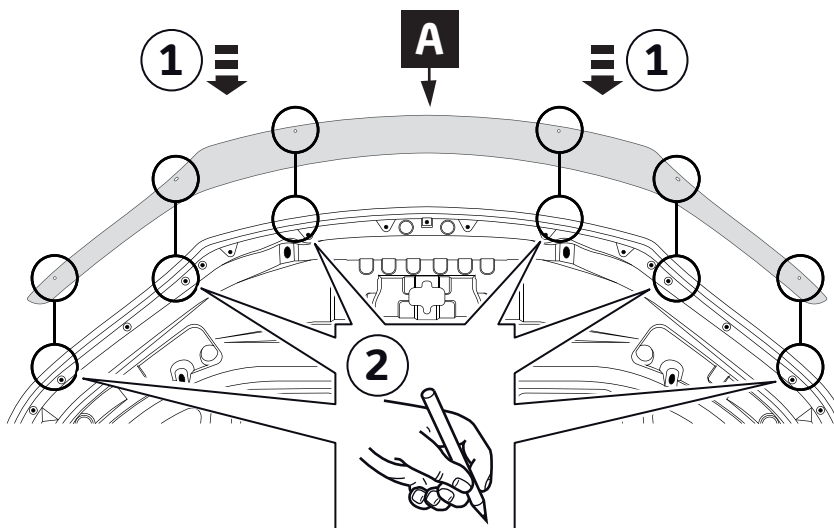


3


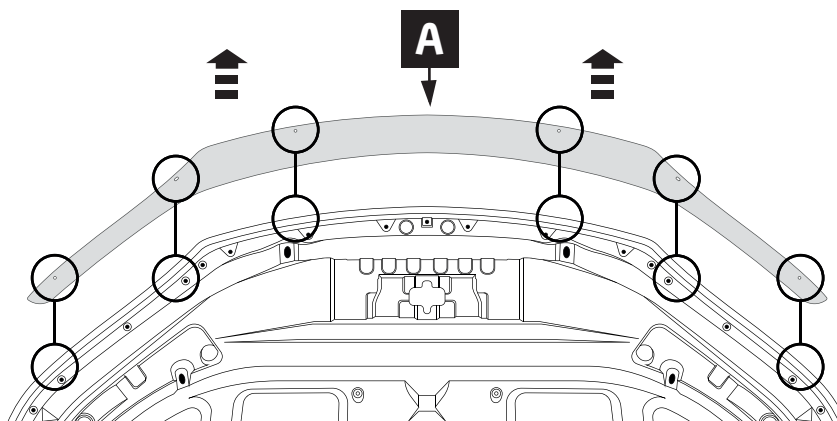


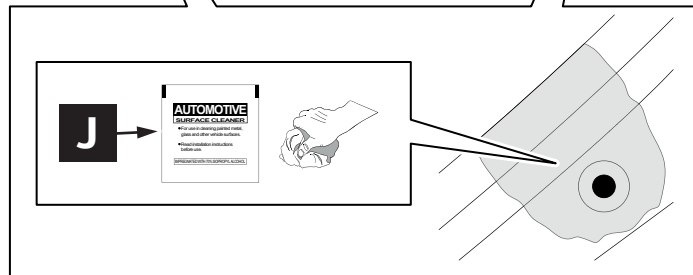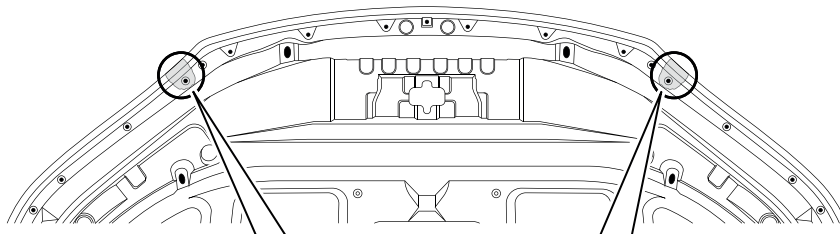


4

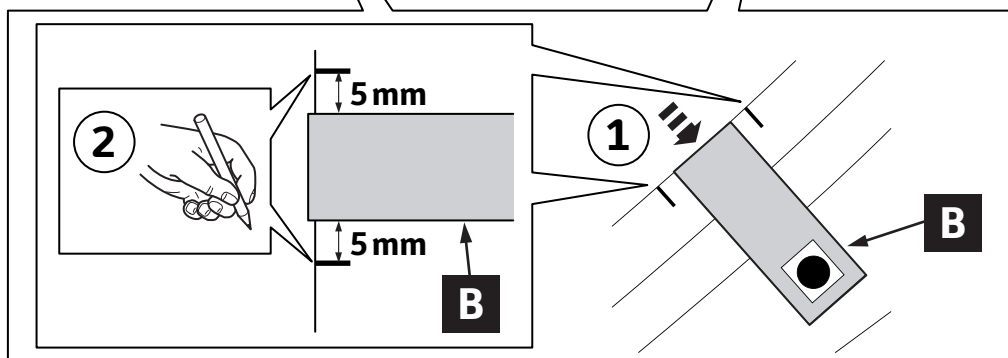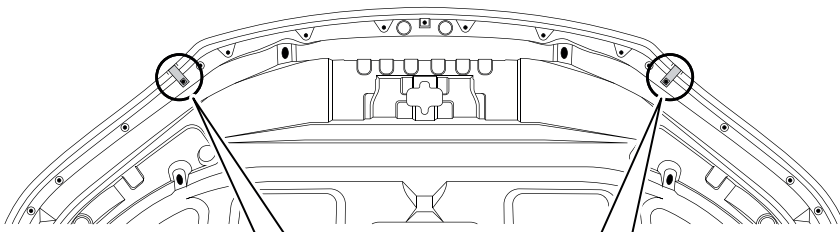


5

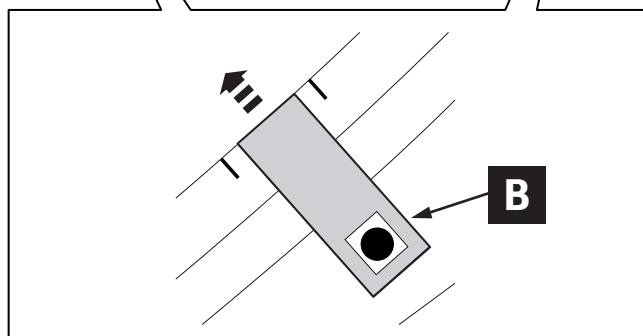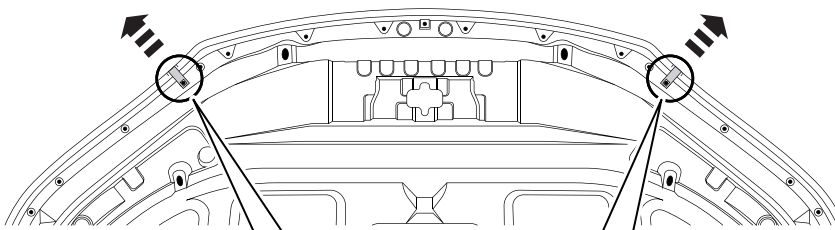


6

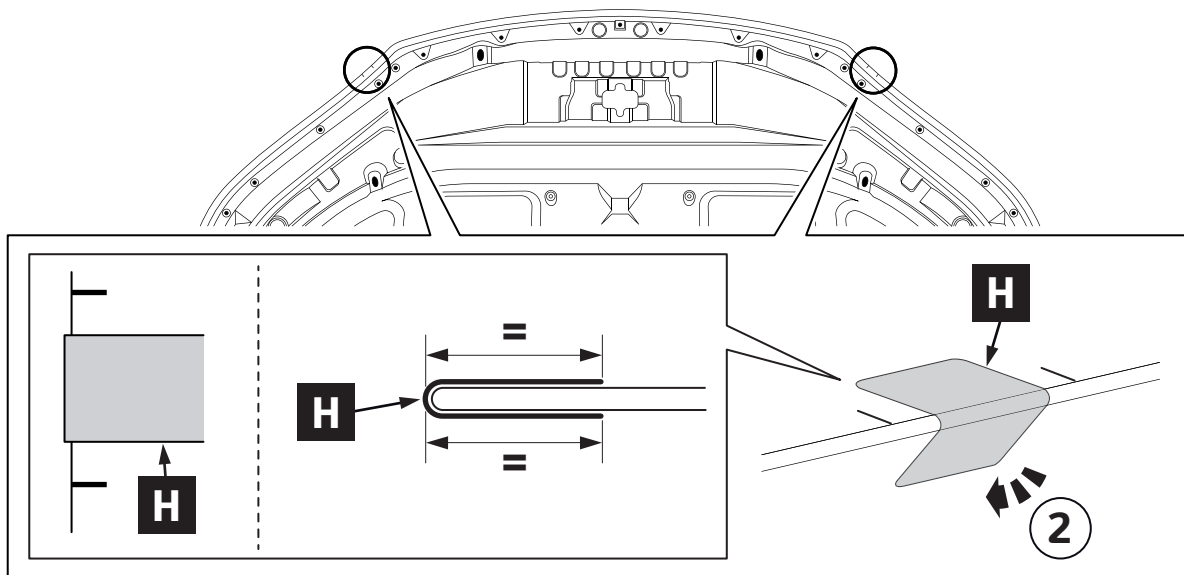

7

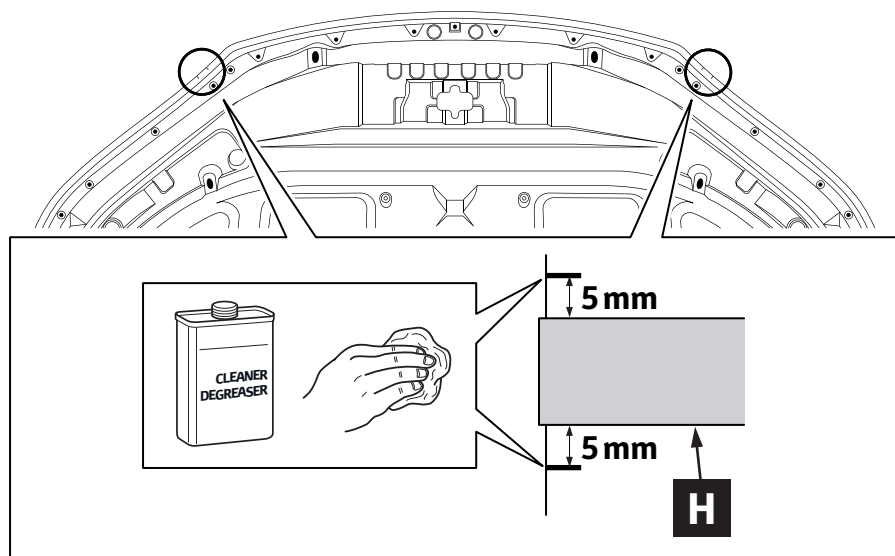


8

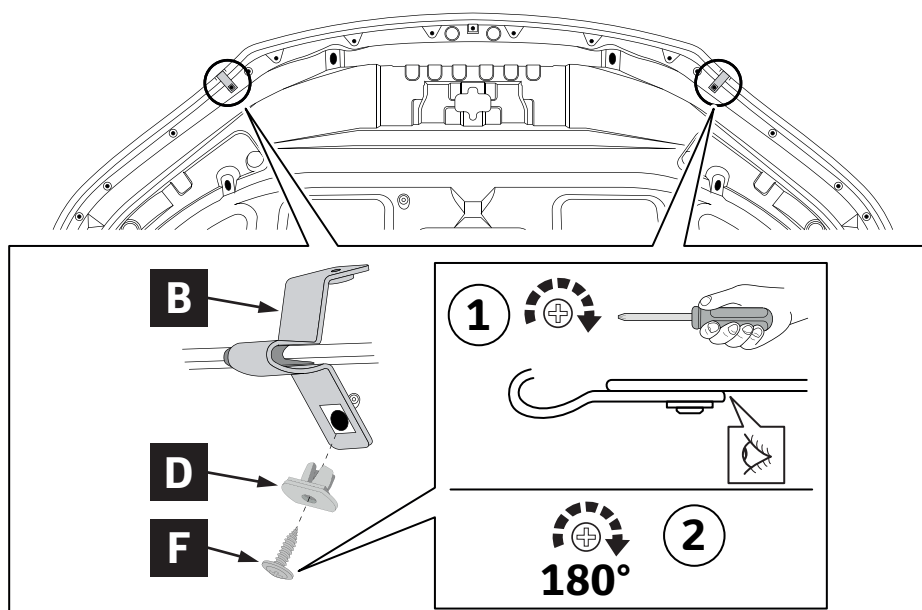


9


10

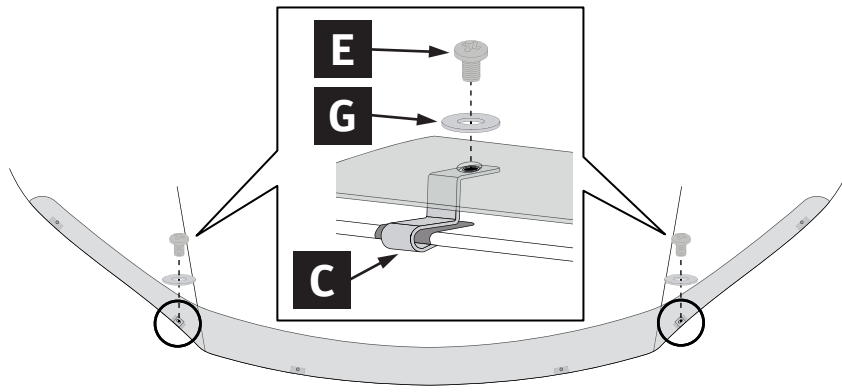


11

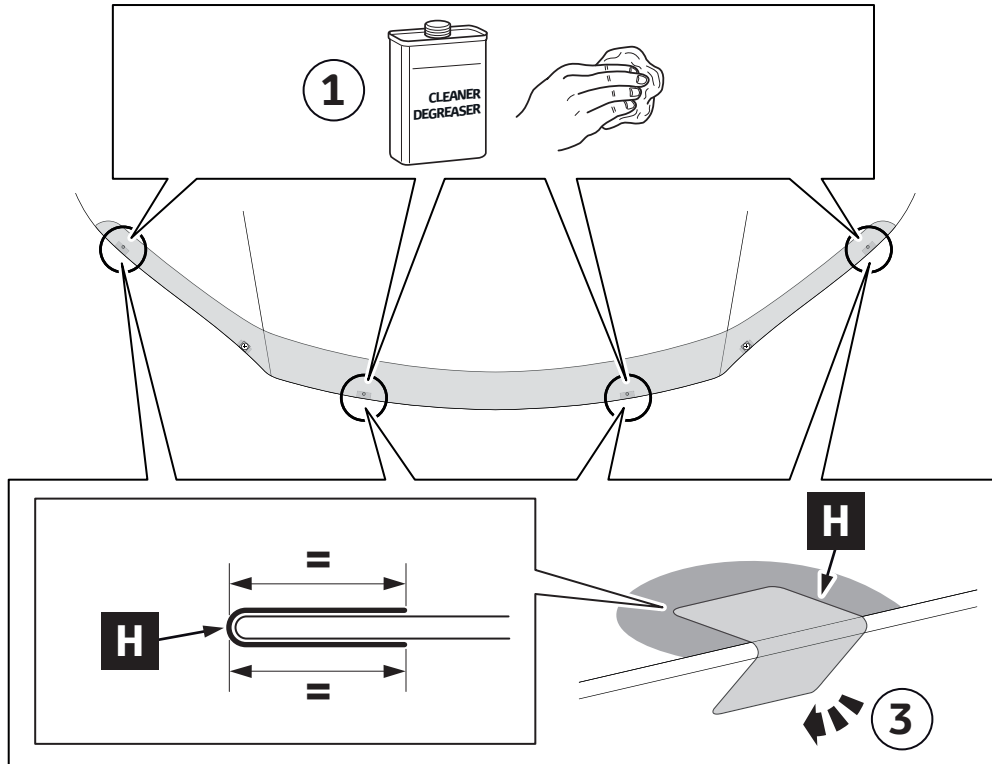


12

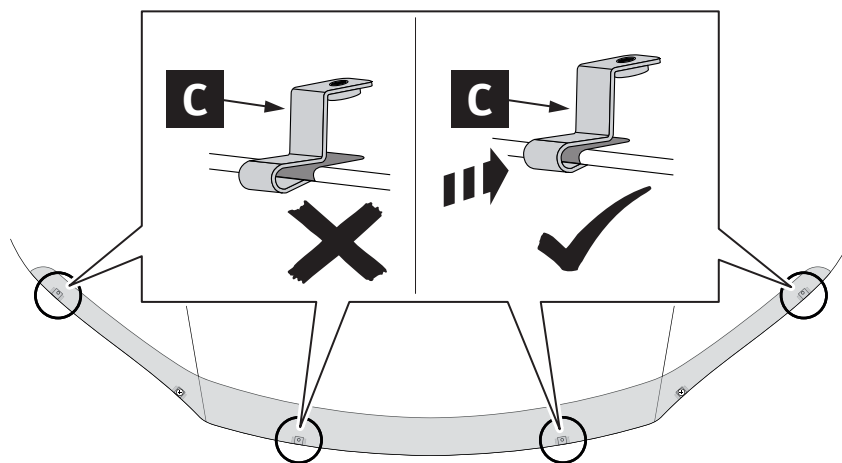



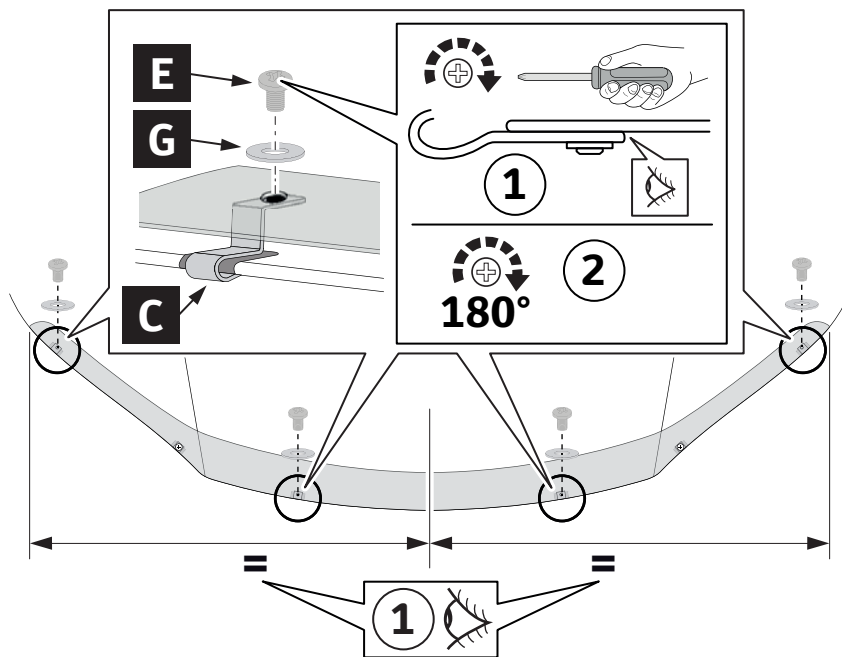


13

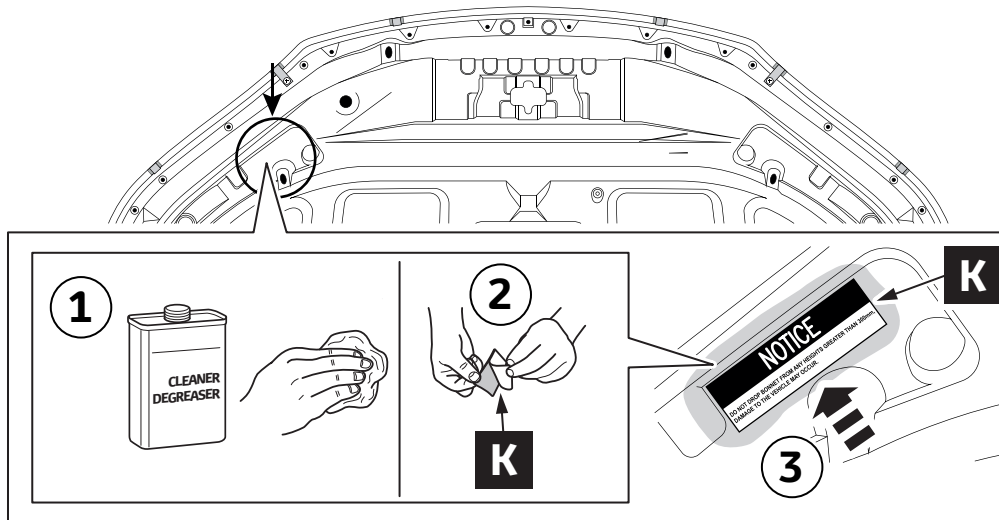


14

INFO

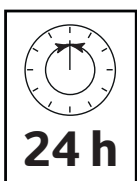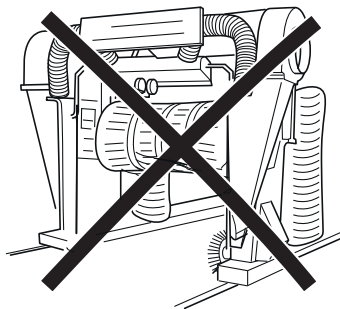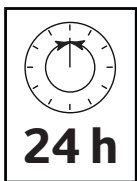

Max. 90km/h

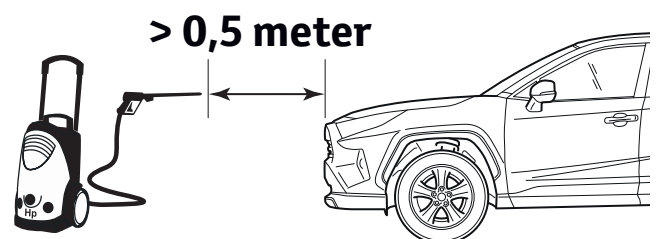

> 0,5 meter



TOYOTA

Model / Year

Fortuner


Hood Deflector

As from 2017/08

VIN n°

ALWAYS A
BETTER WAY


DURING INSTALLATION

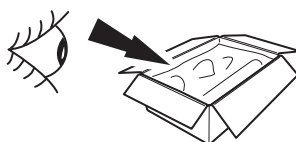


P/N = OK

1

AFTER INSTALLATION

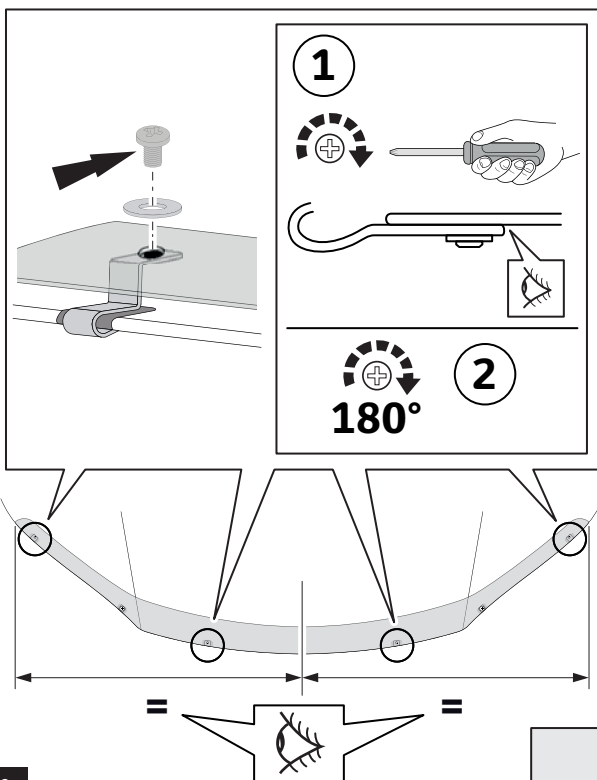


1

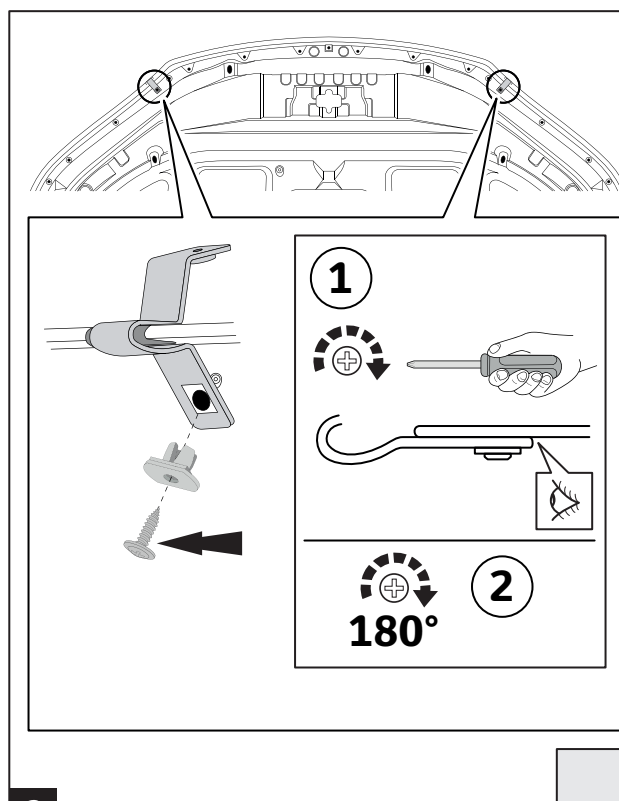

2



= OK

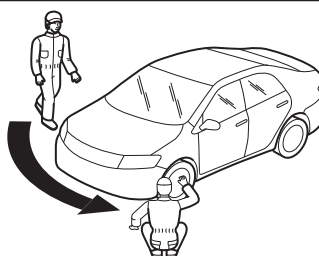

3

Installation Date:

... / ... / ...

Technician Name & Signature:

Stamp: