



**SUBARU BED EXTENDER
INSTALLATION INSTRUCTION**

1. DESCRIPTION: BED EXTENDER
(Illustration of Completed Installation)

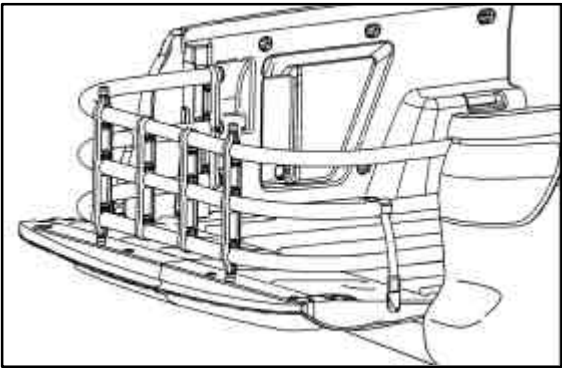

2. KIT CONTENTS


No.	Part Name	QTY
1	RIGHT CURVED TUBE ASSEMBLY	1
2	LEFT CURVED TUBE ASSEMBLY	1
3	CENTER TUBES	3
4	BOLT ON BRACKET	2
5	LONG SPACERS FOR BOLT ON BRACKET	2
6	SHORT SPACERS FOR BOLT ON BRACKET	2
7	PT SCREWS	6
8	WEDGES	6
9	M6 x 25 HEX HEAD BOLT	4
10	M6 FLAT WASHER	4
11	INSTALLATION INSTRUCTION	1

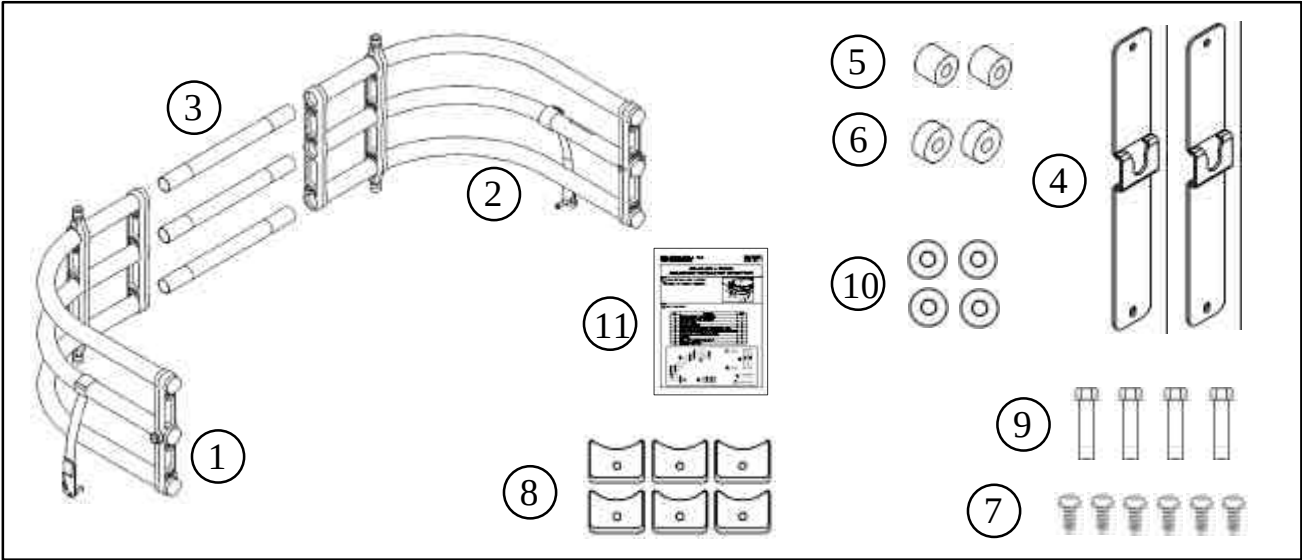


3. TOOLS REQUIRED

Date: 07/15/02

Page: 2 of 4

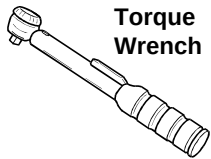

Torque Wrench




T-20 and
T-30 Torx
Wrench
Socket



10mm
Wrench
Socket



Rubber
Mallet

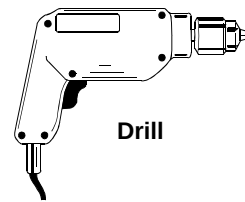

Drill



1/2" (13mm)
Drill Bit

4. MEANING OF CHARACTERS



Dispose



Remove



Install







Pull



Tightening
torque


5. BRACKET INSTALLATION

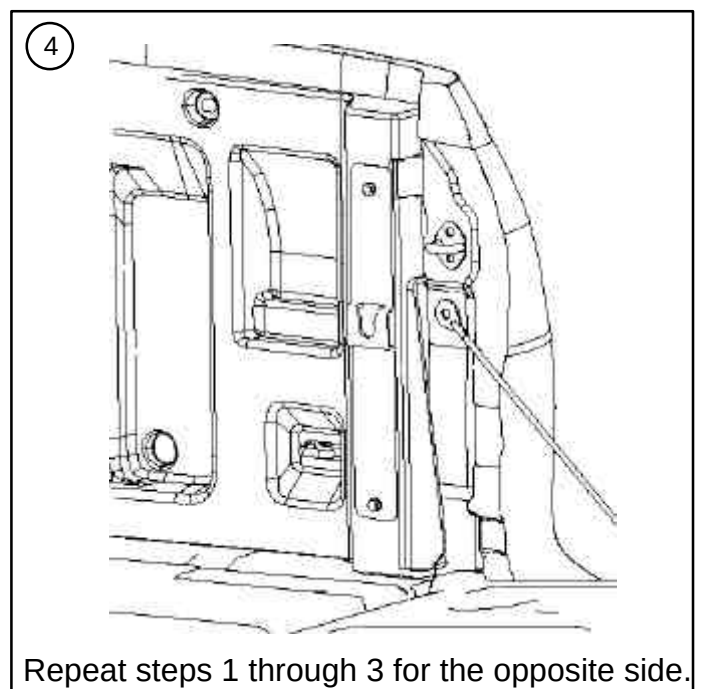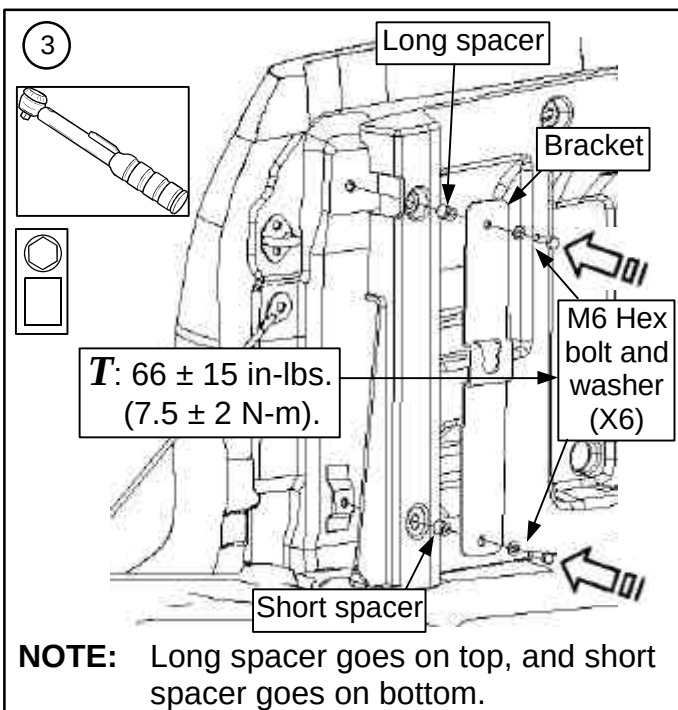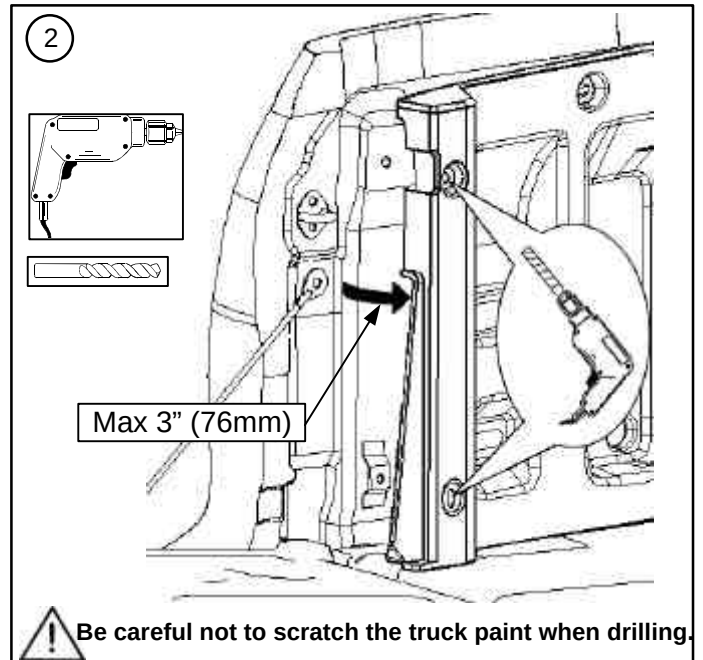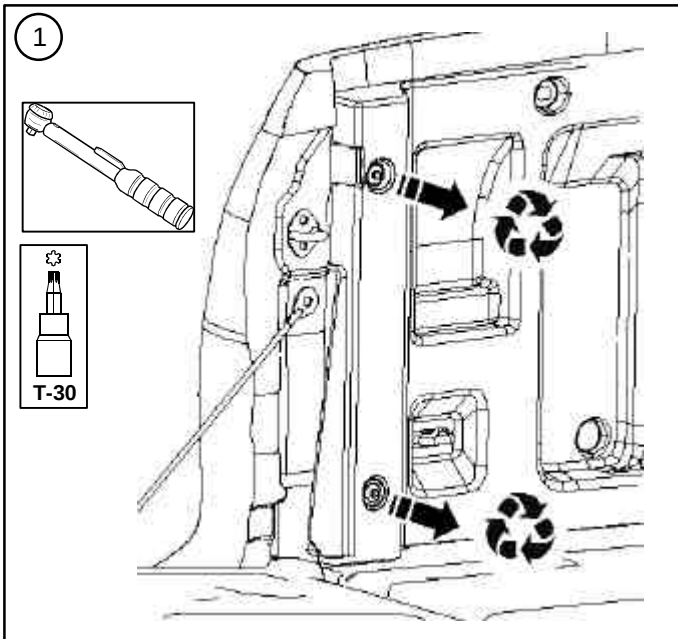




6. EXTENDER ASSEMBLY / INSTALLATION

Date: 07/15/02


Page: 3 of 4

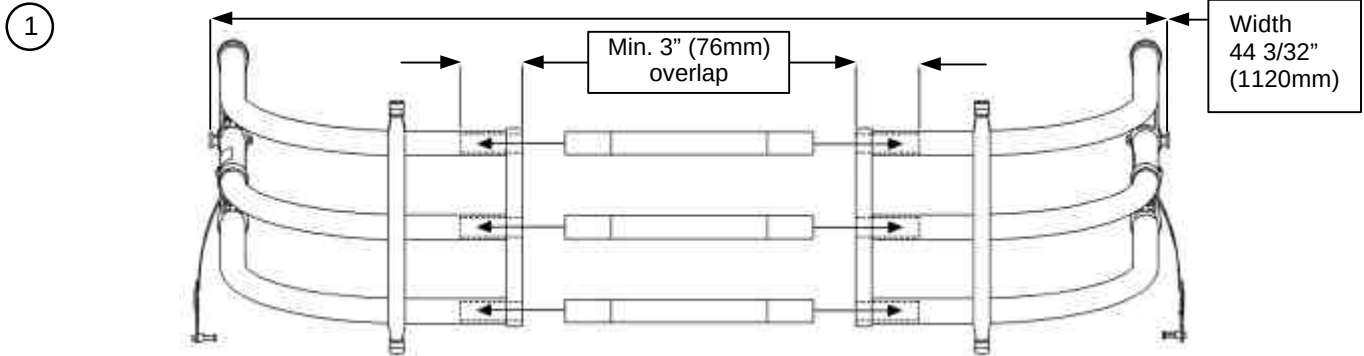

NOTE: Make sure there is a minimum of 3" (76mm) overlap between the center tubes and the curved tubes.

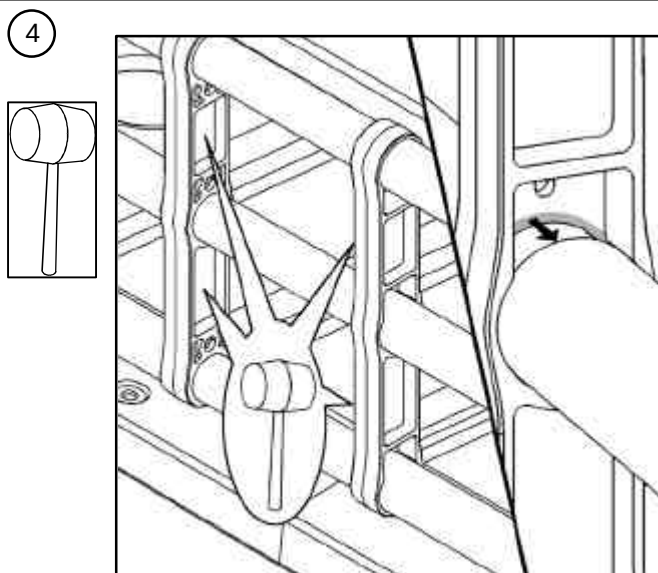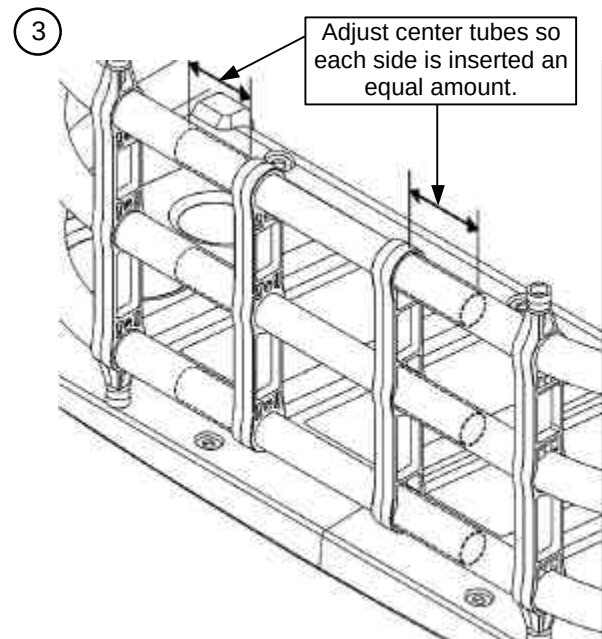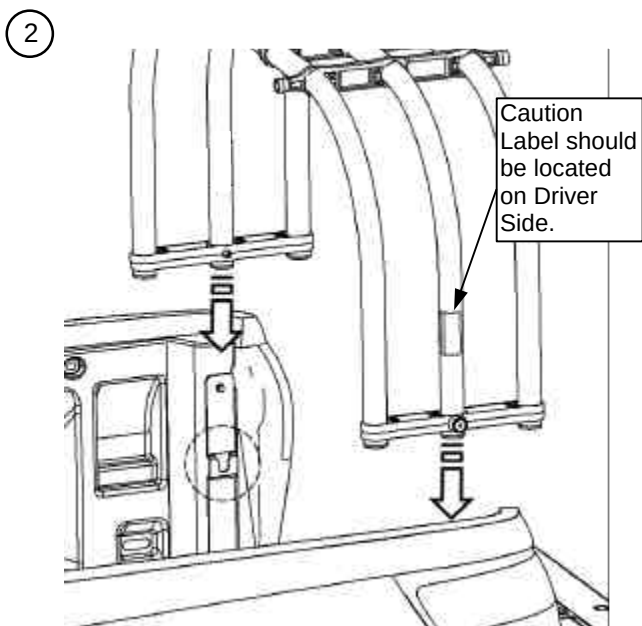


Tap with rubber mallet in the outward direction if need it.

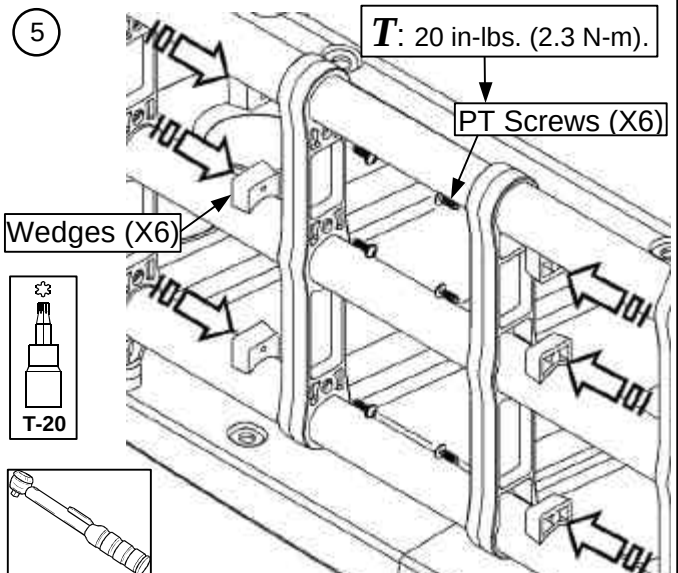


NOTE: Install wedges into wedge pockets one complete upright at a time.

6

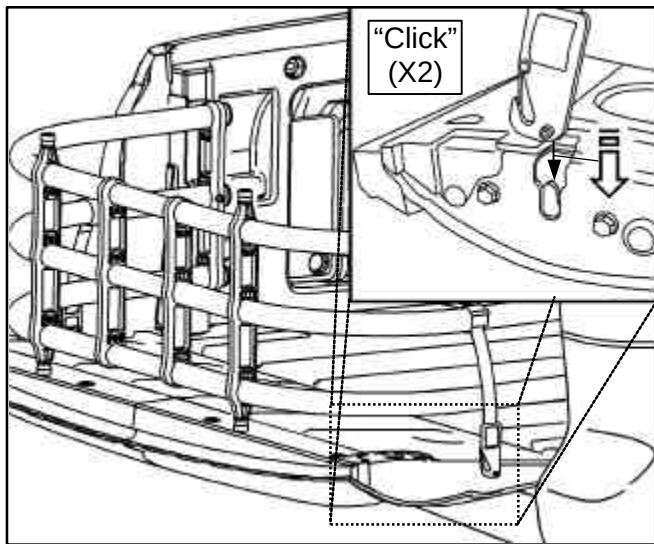

NOTE: Pull the tailgate release handle to disengage the tethers.

7

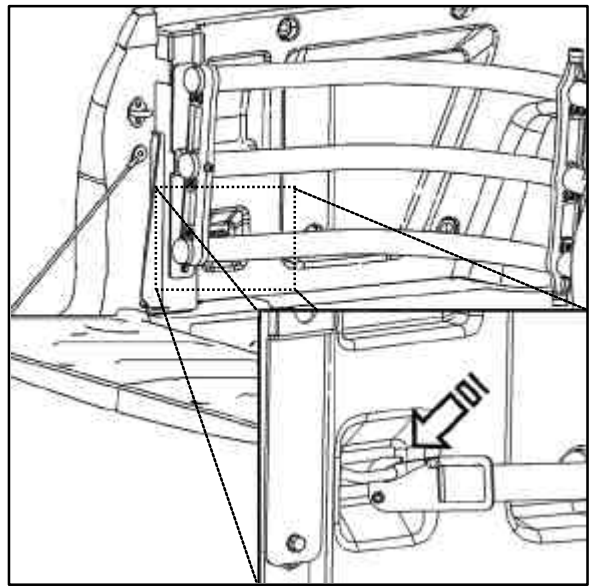

NOTE: Depress the latch pin to disengage the tethers.