




Guide Rails/Cable Assembly Replacement

CAUTION: Put on gloves to protect your hands.

1. Remove the frame (see page [20-36](#)).
2. Disconnect the connectors, detach the harness clips, and remove the adhesive tapes from the frame.

▷: Clip locations

▨ : Adhesive tape locations

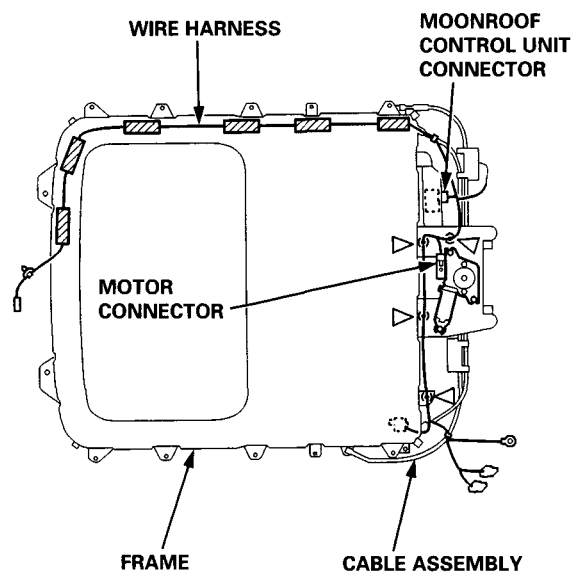

3. Remove the motor, glass bracket, and sunshade (see page [20-34](#)).

(cont'd)

Moonroof


Guide Rails/Cable Assembly Replacement (cont'd)

4. Remove the nuts, lift off each guide rail, then remove the cable assembly with the sliders attached.

NOTE: Take care not to bend the cable tubes and guide rails.

►: Bolt, screw locations

A ►, 2



6 x 1.0 mm
9.8 N-m (1.0 kgf-m,
7.2 lbf-ft)

B ►, 2



●: Nut locations

A ●, 3




6 x 1.0 mm
9.8 N-m (1.0 kgf-m,
7.2 lbf-ft)

B ●, 2



6 x 1.0 mm
9 N-m (0.9 kgf-m,
7 lbf-ft)

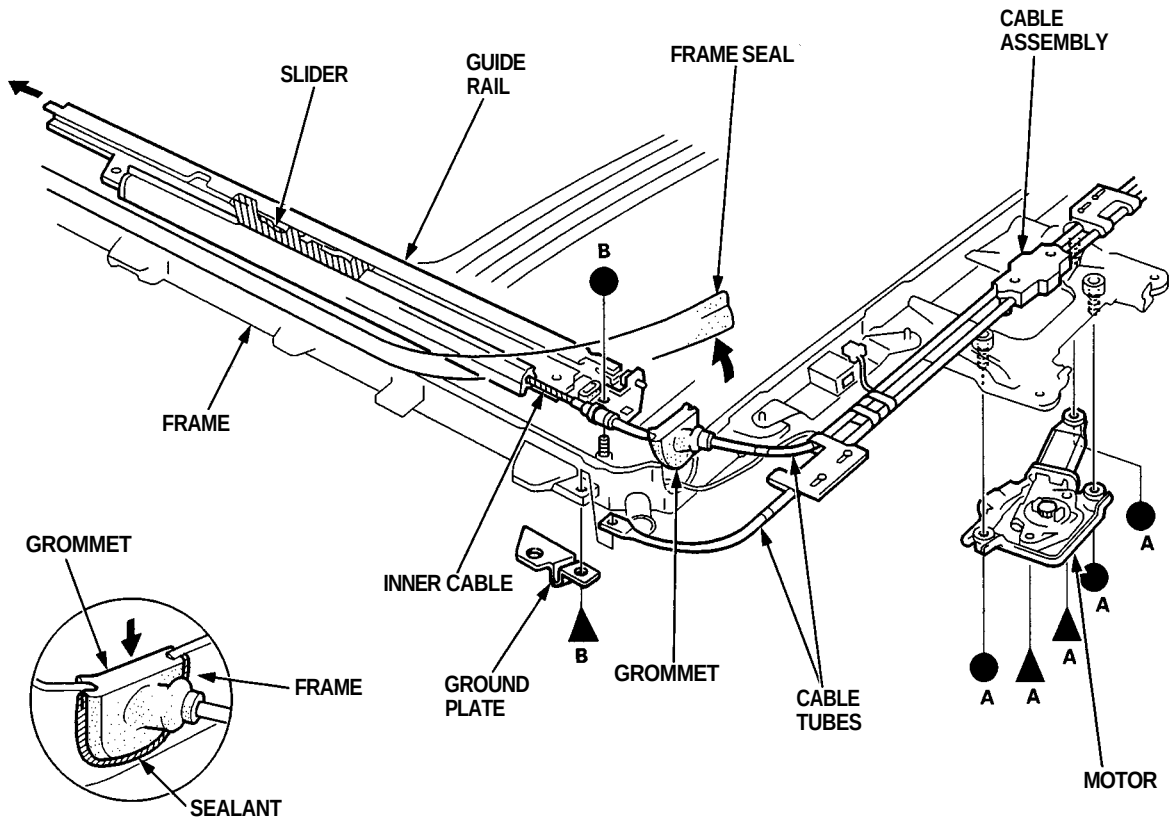

5. Installation is the reverse of the removal procedure.

NOTE:

- Damaged parts should be replaced.
- Grease the sliding portion with Super High Temp Urea Grease, P/N 08758 - 9002.
- Fill the groove in each grommet with sealant.
- Install the frame seal securely.
- Before installing the motor, make sure both sliders are parallel.
- Before installing the motor, install the frame and glass, then check the opening drag (see page [20-41](#)).