


SUBARU

INSTALLATION INSTRUCTIONS

HOOD DEFLECTOR LEGACY E2310LS100


Kit Contents

- 1 x Deflector
- 2 x Nylon Screwplugs
- 2 x Nylon "W" Clips
- 2 x Mild Steel Screws (15.0mm)
- 2 x Shoulder Washers
- 7 x Anti-abrasive Tape Squares (30.0 x 17.0mm)
- 1 x Alcohol Wipe
- 3 x Spare Anti-abrasive Tape Squares (30.0 x 17.0mm)
- 3 x Spare Bump-ons (clear) (5.0mm)
- 1 x Spare Bump-ons (clear) (8.0mm)

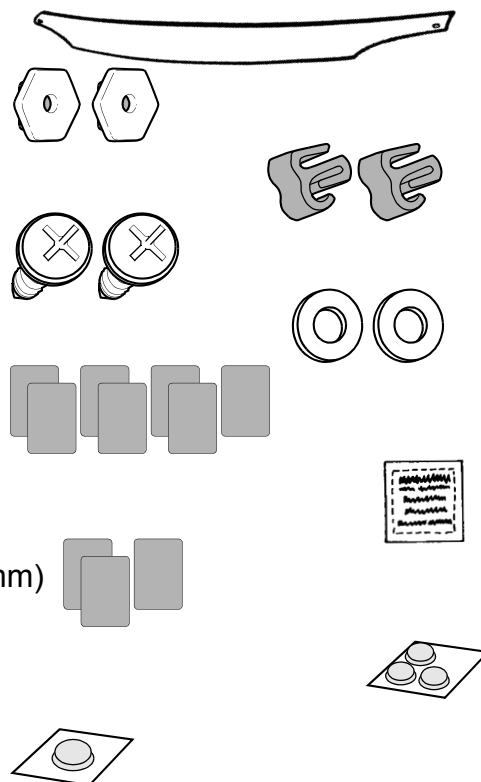



Tools Required











Phillips head screwdriver










IMPORTANT NOTES

- DO NOT USE SOLVENT BASED CLEANERS ON HOOD DEFLECTOR.
- DO NOT USE LOCTITE ON DEFLECTOR ATTACHING SCREWS.
- USE SOAP AND WATER ONLY TO CLEAN HOOD DEFLECTOR.


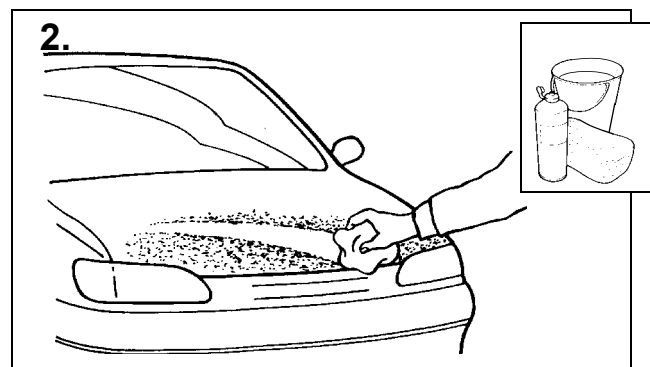
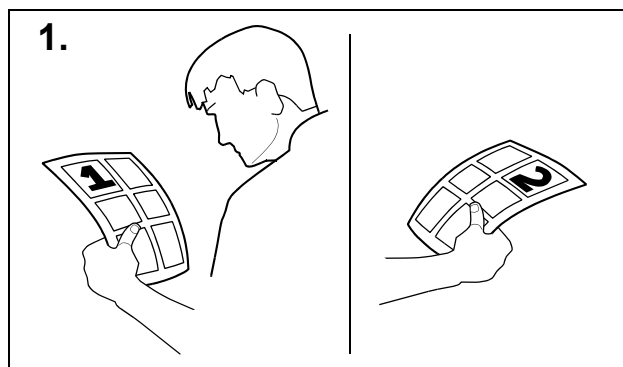


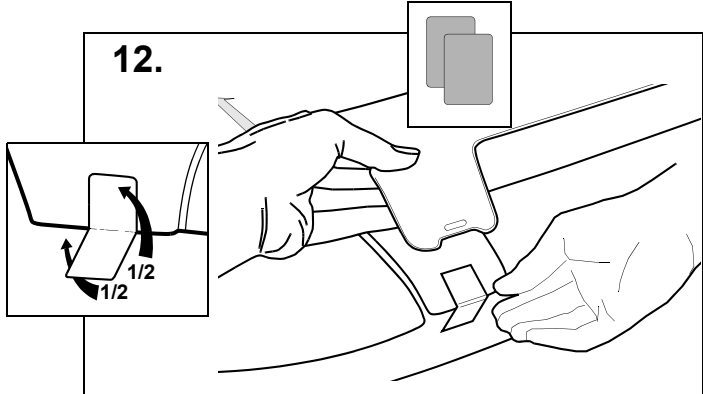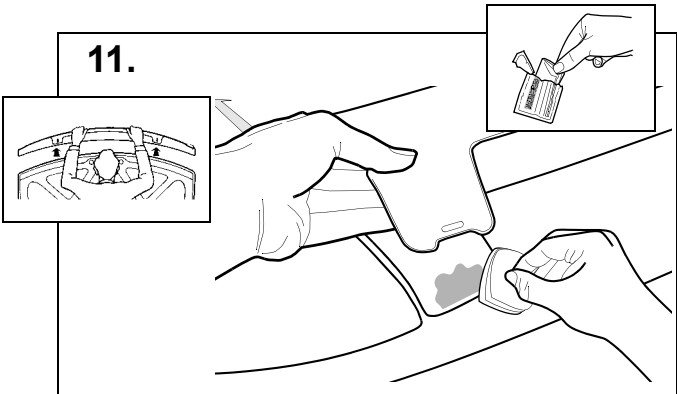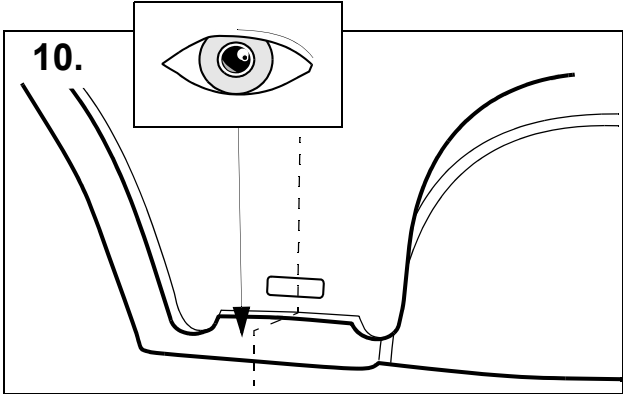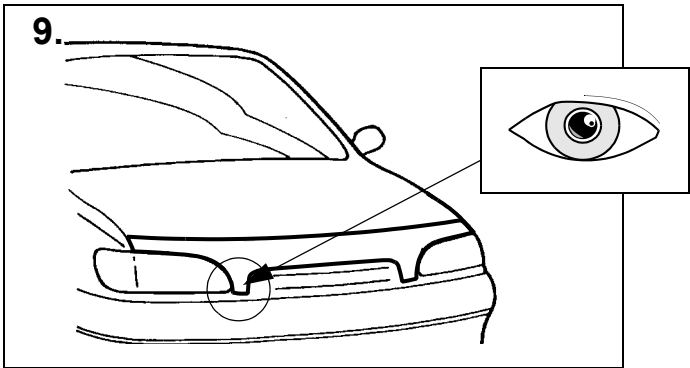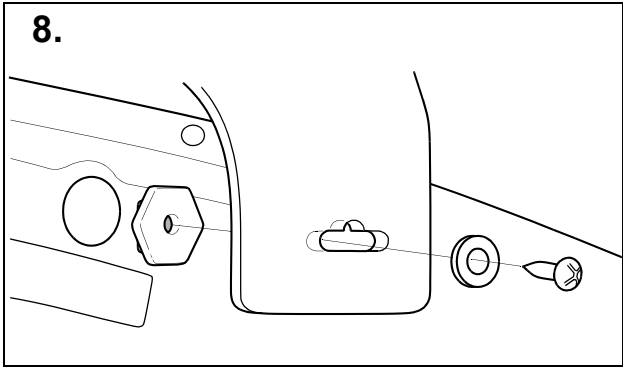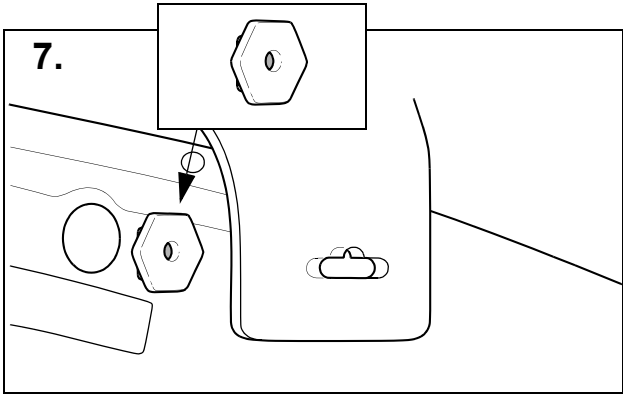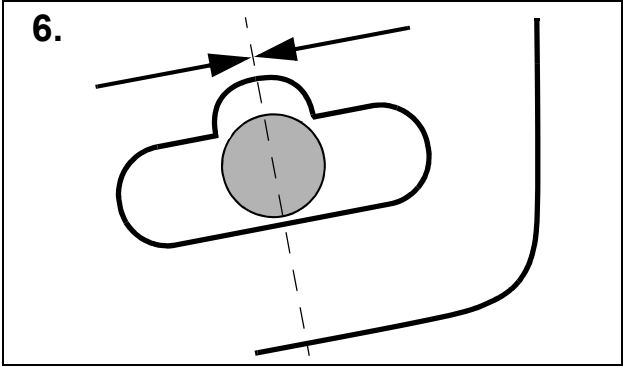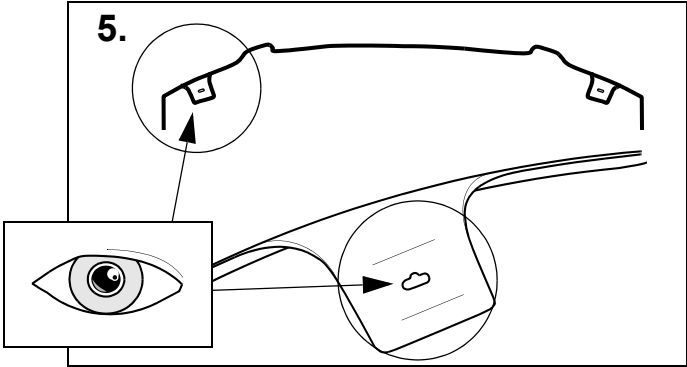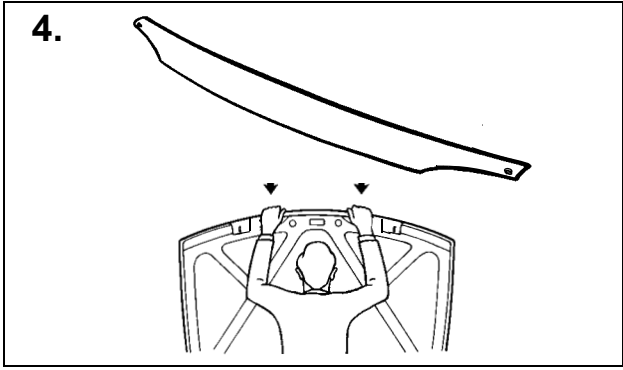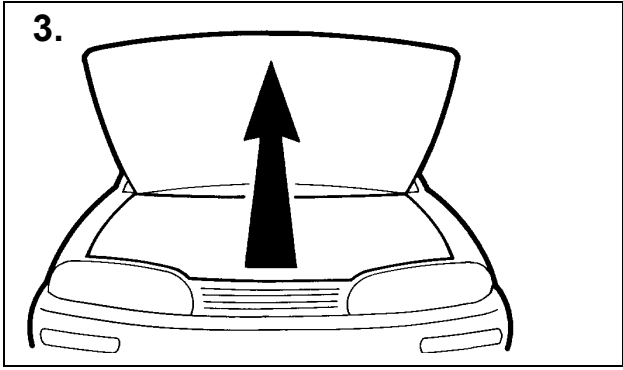

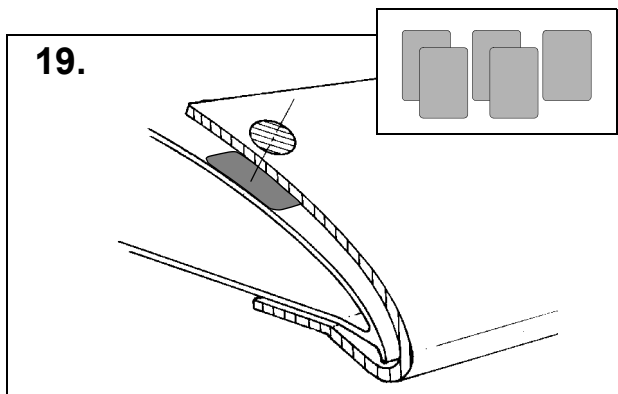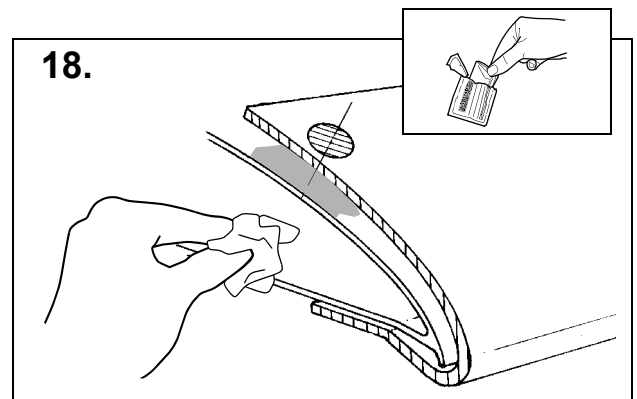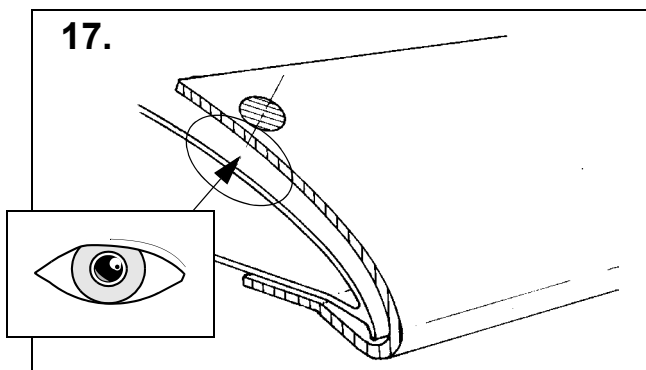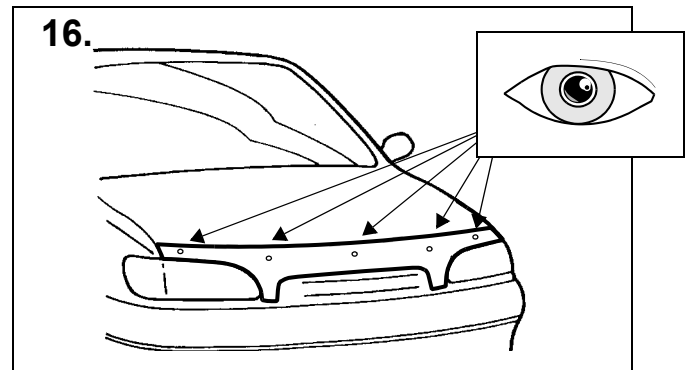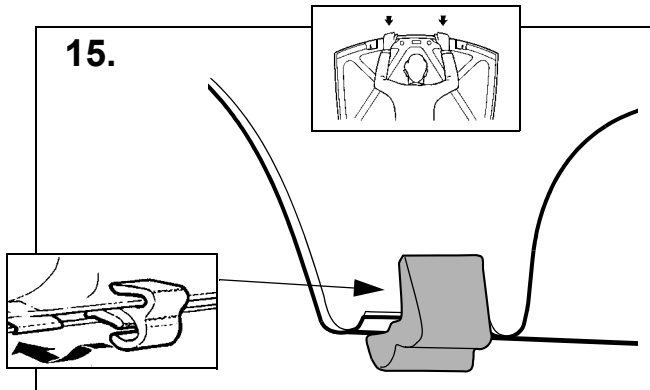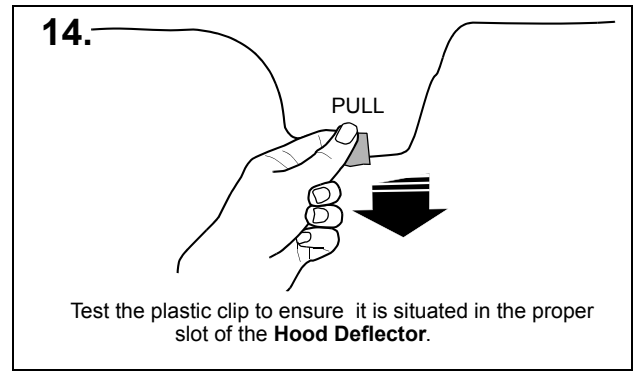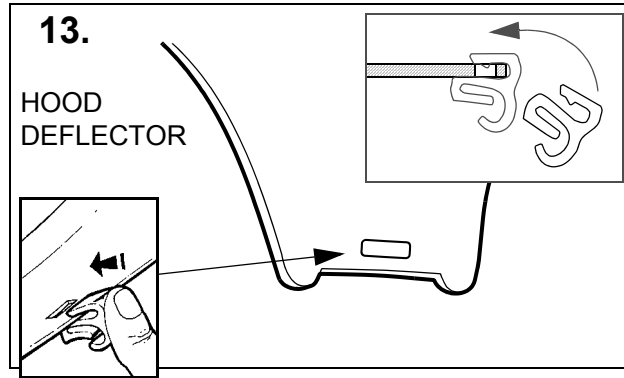

DO NOT USE solvent based cleaners on hood deflector.

USE soap and water only to clean hood deflector.

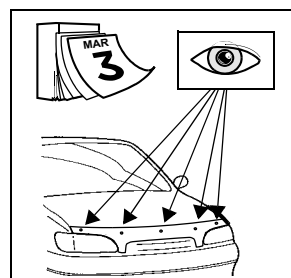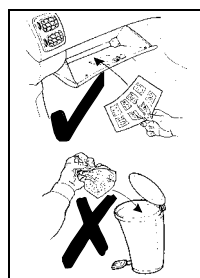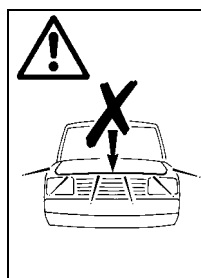

! It is recommended that this product be installed by trained Subaru Technician at your local Subaru dealer. If you intend to install this product and you feel that additional detailed instructions might be of benefit to you, please contact your local Subaru dealer for more detailed installation instructions.