


FRONT FENDER WHEEL OPENING MOULDING LH

COMPONENTS

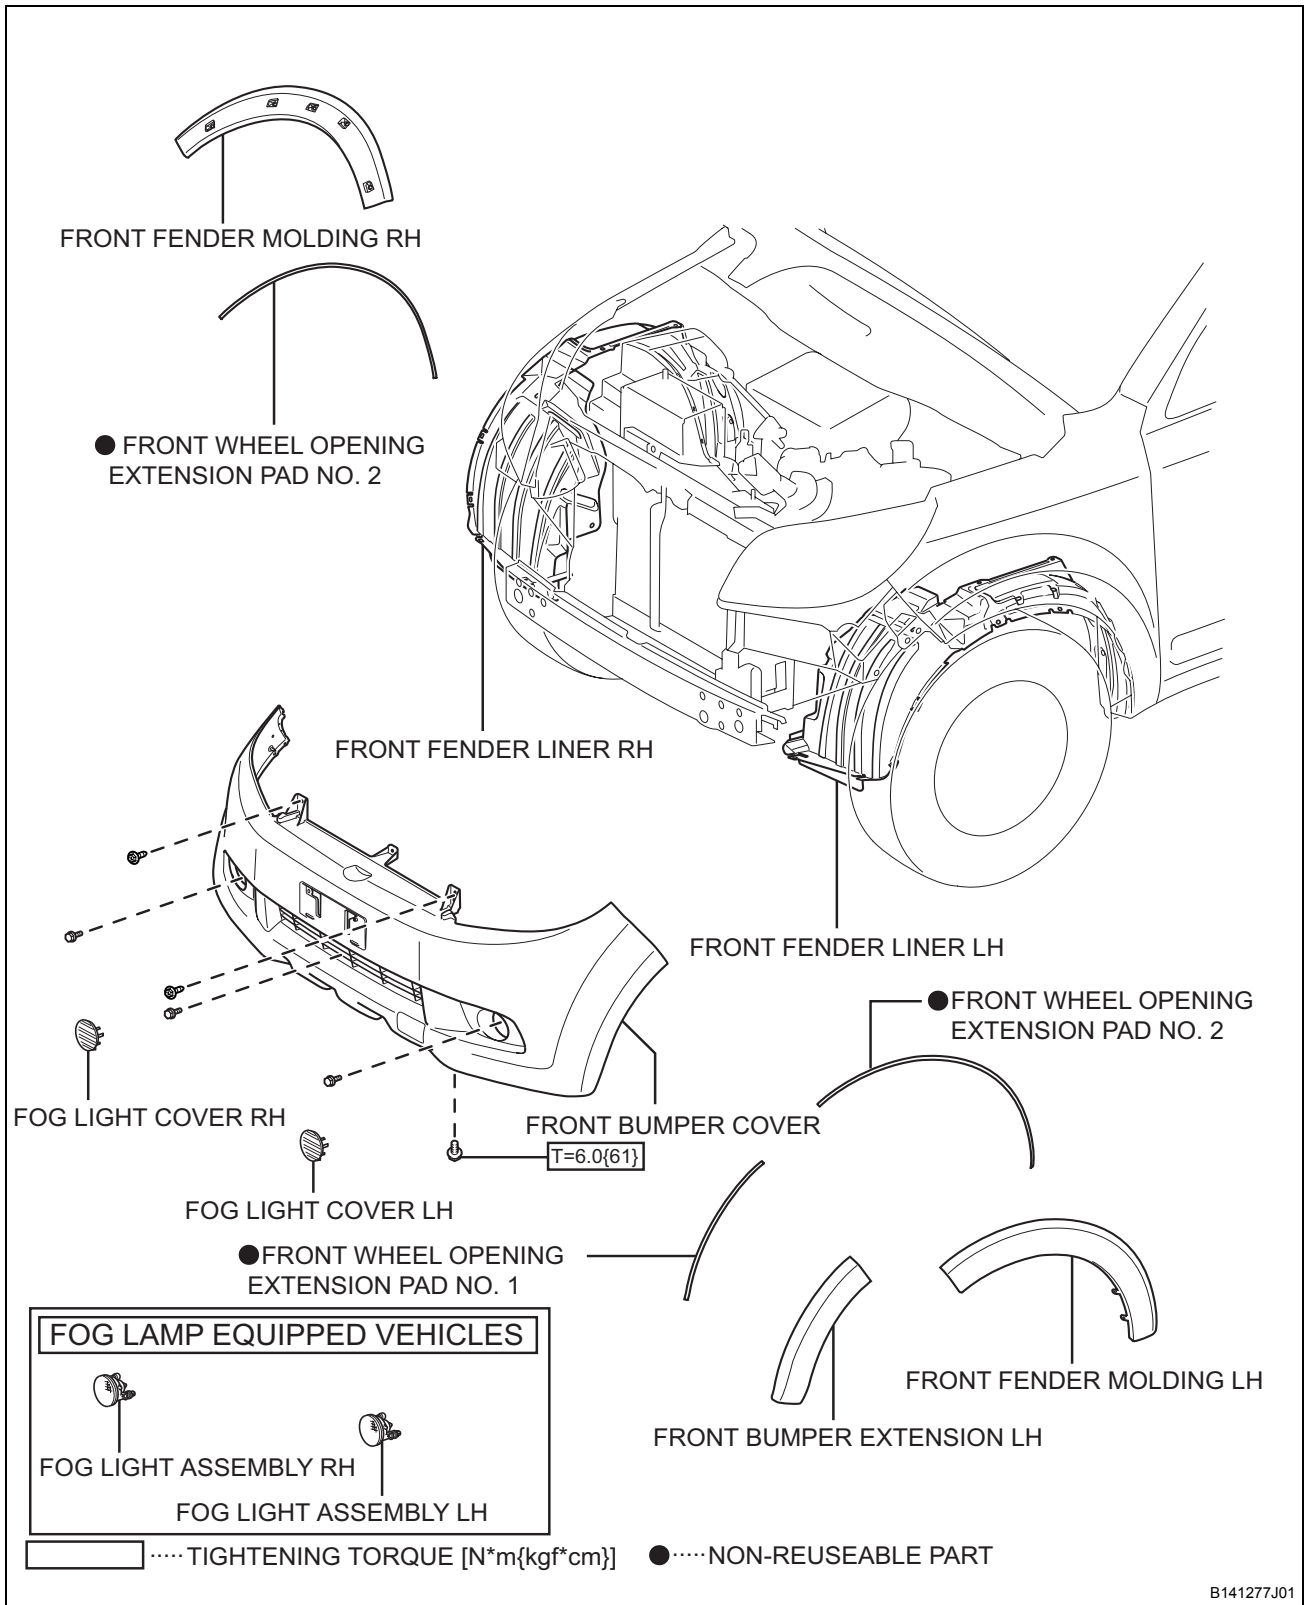



REMOVAL

1. REMOVE FRONT FENDER MOULDING LH

- Apply protective tape, as shown in the illustration.
- Remove the 3 clips and the screw.
- Using a heat gun, heat the front fender moulding LH (double sided adhesive area).

HINT:

Heat the front bumper extension for 3 to 5 minutes at a temperature between 40 and 60°C.

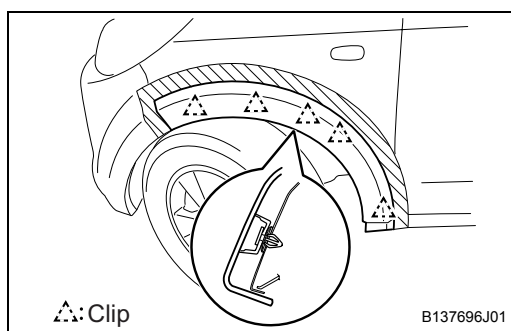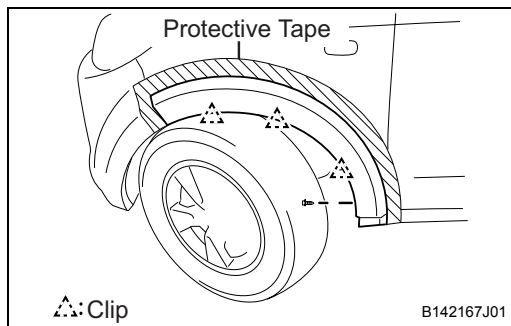

- Disengage the 5 claws and remove the front fender moulding LH.

2. REMOVE FRONT FENDER MOULDING RH

3. REMOVE FRONT WHEEL OPENING EXTENSION PAD NO. 2

- Remove the front wheel opening extension pad No. 2 from the front fender moulding.

4. REMOVE FRONT FENDER LINER LH (See page ET-2)

5. REMOVE FRONT FENDER LINER RH

6. REMOVE FOG LIGHT ASSEMBLY LH (WITH FOG LIGHT)

7. REMOVE FOG LIGHT ASSEMBLY RH (WITH FOG LIGHT)

8. REMOVE FOG LIGHT COVER LH (WITHOUT FOG LIGHT) (See page ET-2)

9. REMOVE FOG LIGHT COVER RH (WITHOUT FOG LIGHT)

10. REMOVE FRONT BUMPER COVER (See page ET-2)

11. REMOVE FRONT BUMPER EXTENSION LH

- Using a heat gun, heat the front bumper extension LH (double sided adhesive area).


HINT:

Heat the front bumper extension for 3 to 5 minutes at a temperature between 40 and 60°C.

- Remove the 2 clips and the 3 nuts, then remove the front bumper extension LH.

12. REMOVE FRONT WHEEL OPENING EXTENSION PAD NO. 1

- Remove front wheel opening extension pad No. 1 from the front bumper extension.

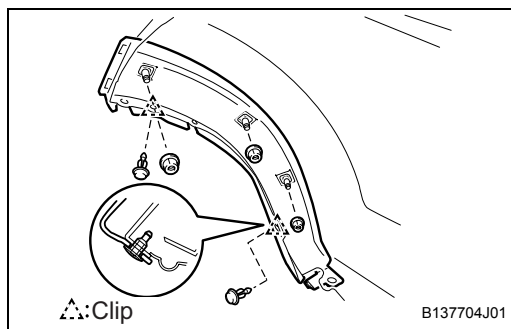

INSTALLATION

1. CLEAN INSTALLATION SURFACE

- Heat the double-sided tape on the body using a heat gun. Then wipe off the tape using a rag or piece of cloth.
- Clean the surface with a solvent.

2. CLEAN FRONT BUMPER EXTENSION AND FRONT FENDER MOULDING (WHEN REUSING)

(a) CLEAN DOUBLE SIDED TAPE INSTALLATION SURFACE

- (1) Heat the double sided tape on the front bumper extension and the front fender moulding using a heat gun.
- (2) While heating the tape with the heat gun, use a rag or piece of cloth to wipe off the double sided tape remaining on the front bumper extension and the front fender moulding.

NOTICE:

- Remove as much of the double sided tape as possible. Any tape that remains may cause attachment failure when the front bumper extension and front fender moulding are installed.
- Use a waste cloth to scrub off, because it may cause damage and attachment failure if using a driver.



- (3) Clean the surface with a solvent.

3. INSTALL FRONT WHEEL OPENING EXTENSION PAD NO. 1

- (a) Install the front wheel opening extension pad No. 1 to the front bumper extension LH with double sided tape.

4. INSTALL FRONT BUMPER EXTENSION LH

- (a) Using a heat gun, heat the front bumper extension LH and the bumper cover surface.

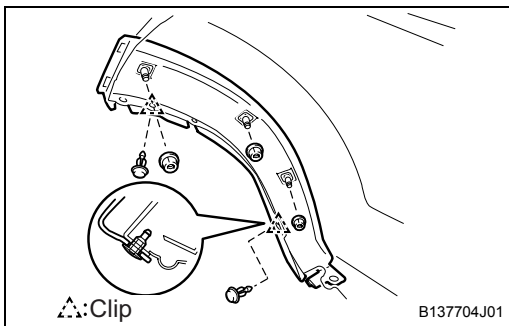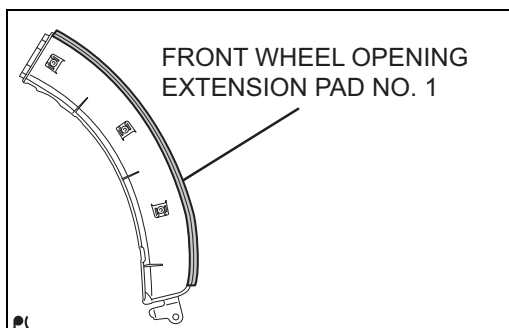

- (b) Install the front bumper extension LH to the front bumper cover with the 2 clips and 3 nuts.

- (c) Firmly press the front fender moulding LH to the vehicle body.

NOTICE:

Be careful not to touch the adhesive surface with your fingers when removing the exfoliate paper from the double sided tape.

5. INSTALL FRONT BUMPER COVER (See page ET-5)

6. REMOVE FOG LIGHT ASSEMBLY LH (WITH FOG LIGHT)


7. REMOVE FOG LIGHT ASSEMBLY RH (WITH FOG LIGHT)

8. REMOVE FOG LIGHT COVER LH (WITHOUT FOG LIGHT) (See page ET-6)

9. INSTALL FOG LIGHT COVER RH (WITHOUT FOG LIGHT)

10. INSTALL FRONT FENDER LINER LH (See page ET-6)

11. INSTALL FRONT FENDER LINER RH

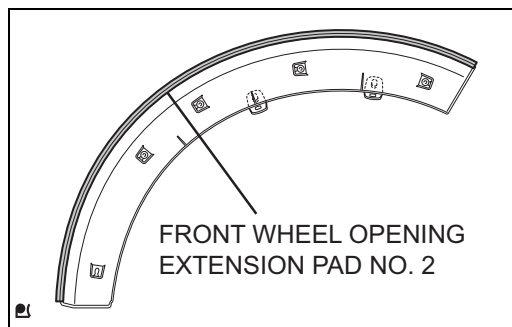


12. INSTALL FRONT WHEEL OPENING EXTENSION PAD NO. 2


- (a) Install the front wheel opening extension pad No. 2 to the front fender moulding using double sided tape.

13. INSTALL FRONT FENDER MOULDING LH

- (a) Using a heat gun, heat the front fender moulding LH and the surface of the vehicle body.

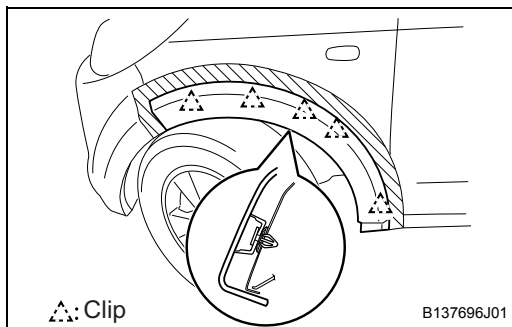

- (b) Engage the 5 claws and temporarily install the front fender moulding LH.

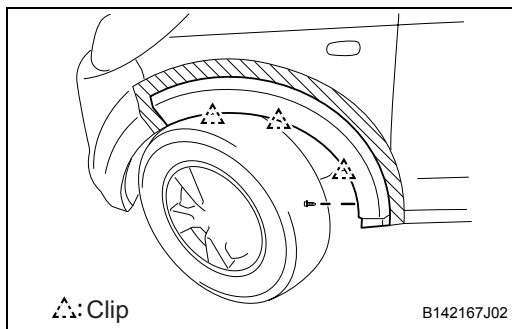

- (c) Install the front fender moulding LH with the 3 clips and the screw.

- (d) Firmly press the front fender moulding LH to the vehicle body.

NOTICE:

Be careful not to touch the adhesive surface with your fingers when removing the exfoliate paper from the double sided tape.

- (e) Remove the protective tape.

14. INSTALL FRONT FENDER MOULDING RH

