



TOYOTA

ALWAYS A
BETTER WAY

Toyota C-HR

Protection film kit

Installation Instruction

Model year: As from 2019/10

Vehicle code: NGX*0L-AHX*XW
ZYX1**-AHX*BW
MAXH10*-AHX*BW

Part number:	PW174-10000	Door edge protection film
	PW178-10003	Front bumper protection film
	PW175-10000	Hood protection film
	PW169-10000	Mirror cover protection film
	PW17A-10000	Roof protection film

Manual reference number: AIM 005 160 - 0



Revision Record

Rev. No.	Date	Page	Step	Remarks


PW174-10000 - Door edge protection film

A	LHS		1x
	RHS		
B	LHS		1x
	RHS		





PW178-10003 - Front bumper protection film

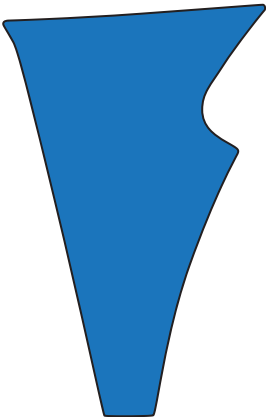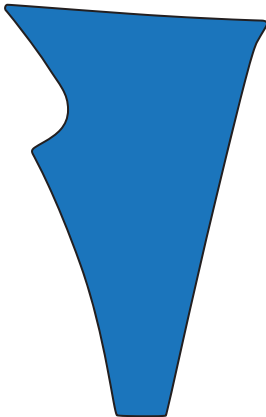C		LHS	RHS		1x

PW175-10000 - Hood protection film

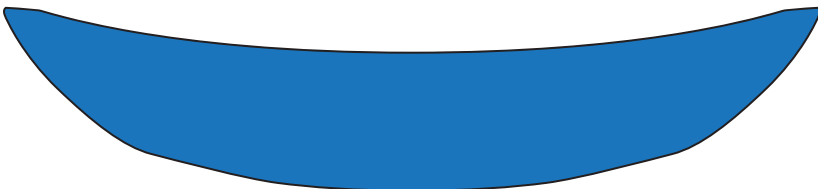D		1x

PW169-10000 - Mirror cover protection film

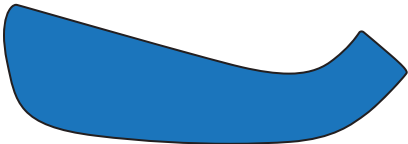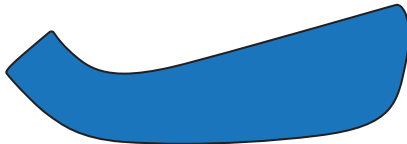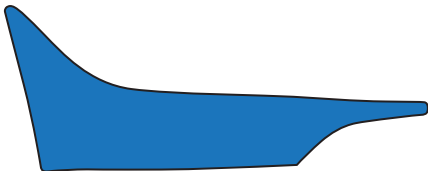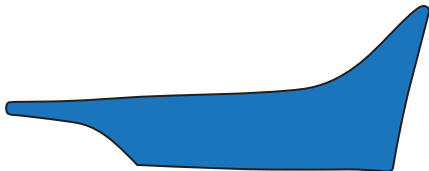E		LHS	RHS		1x
F		LHS	RHS		1x

PW17A-10000 - Roof protection film






G

1x

PZ438-00030-90




3M Gold squeegee + Low friction sleeve
NOT INCLUDED

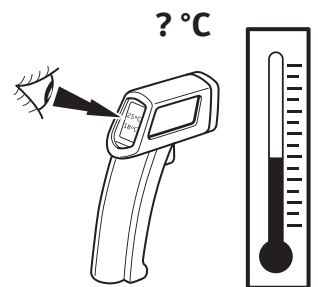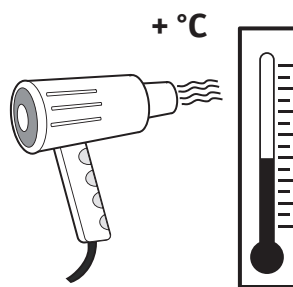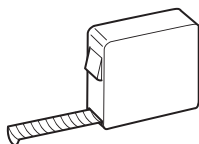

Sprayer

or

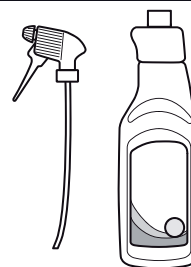

Sott Right-on
PW18A-0H000



INFO











Material Safety Data Sheet



Technical Data Sheet

LHS=RHS

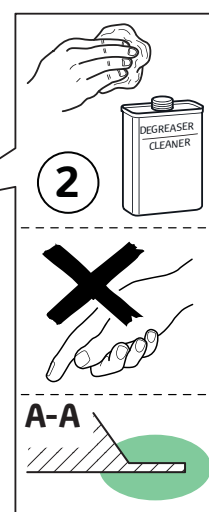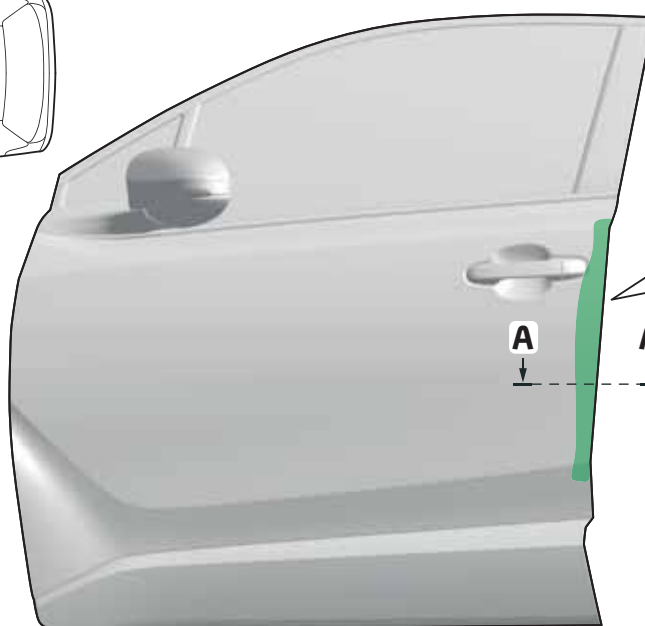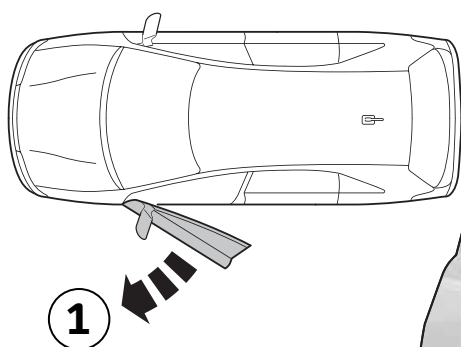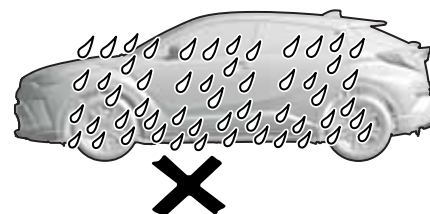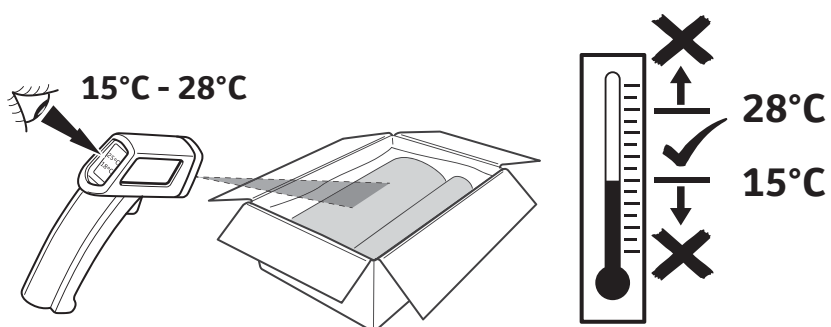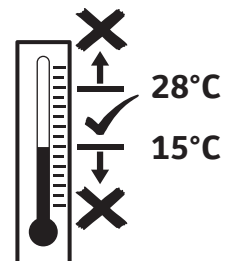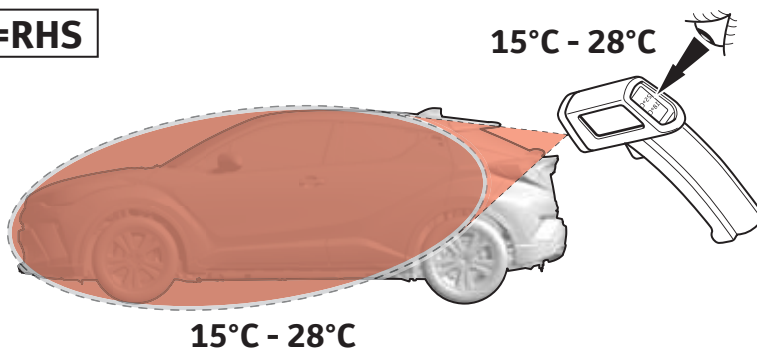

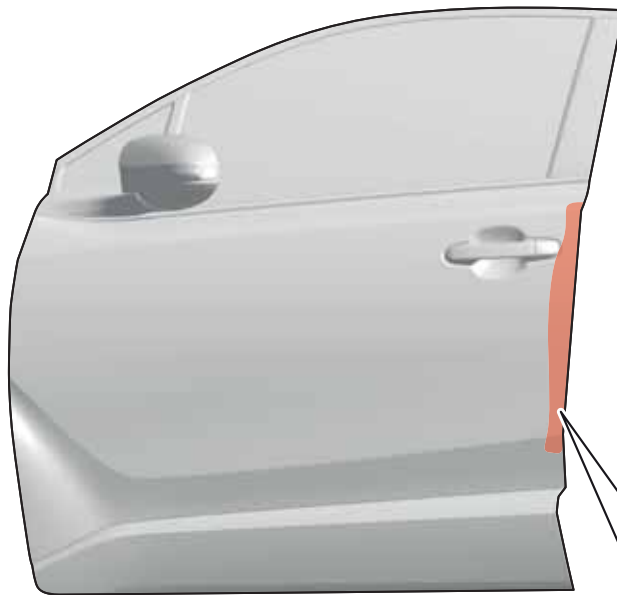


①	< 15°C ➡ ② 15°C - 28°C ➡ ③	②
③	15°C - 28°C ➡ ③	INFO

2




①	< 15°C ➡ ② 15°C - 28°C ➡ ④	②
③	15°C - 28°C ➡ ④	INFO


3

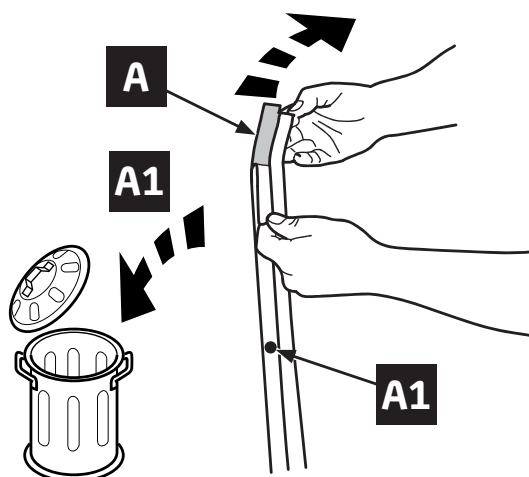


4

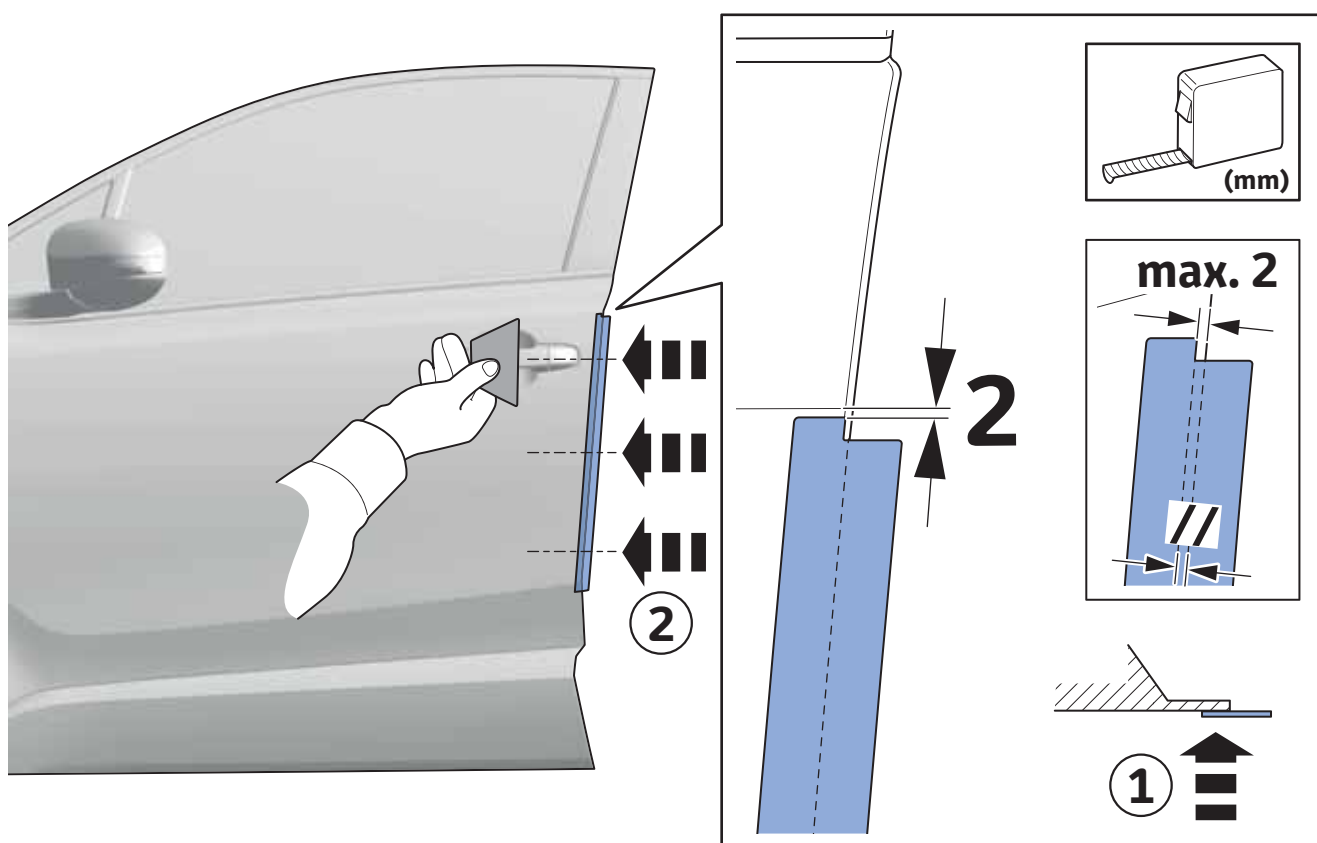

5

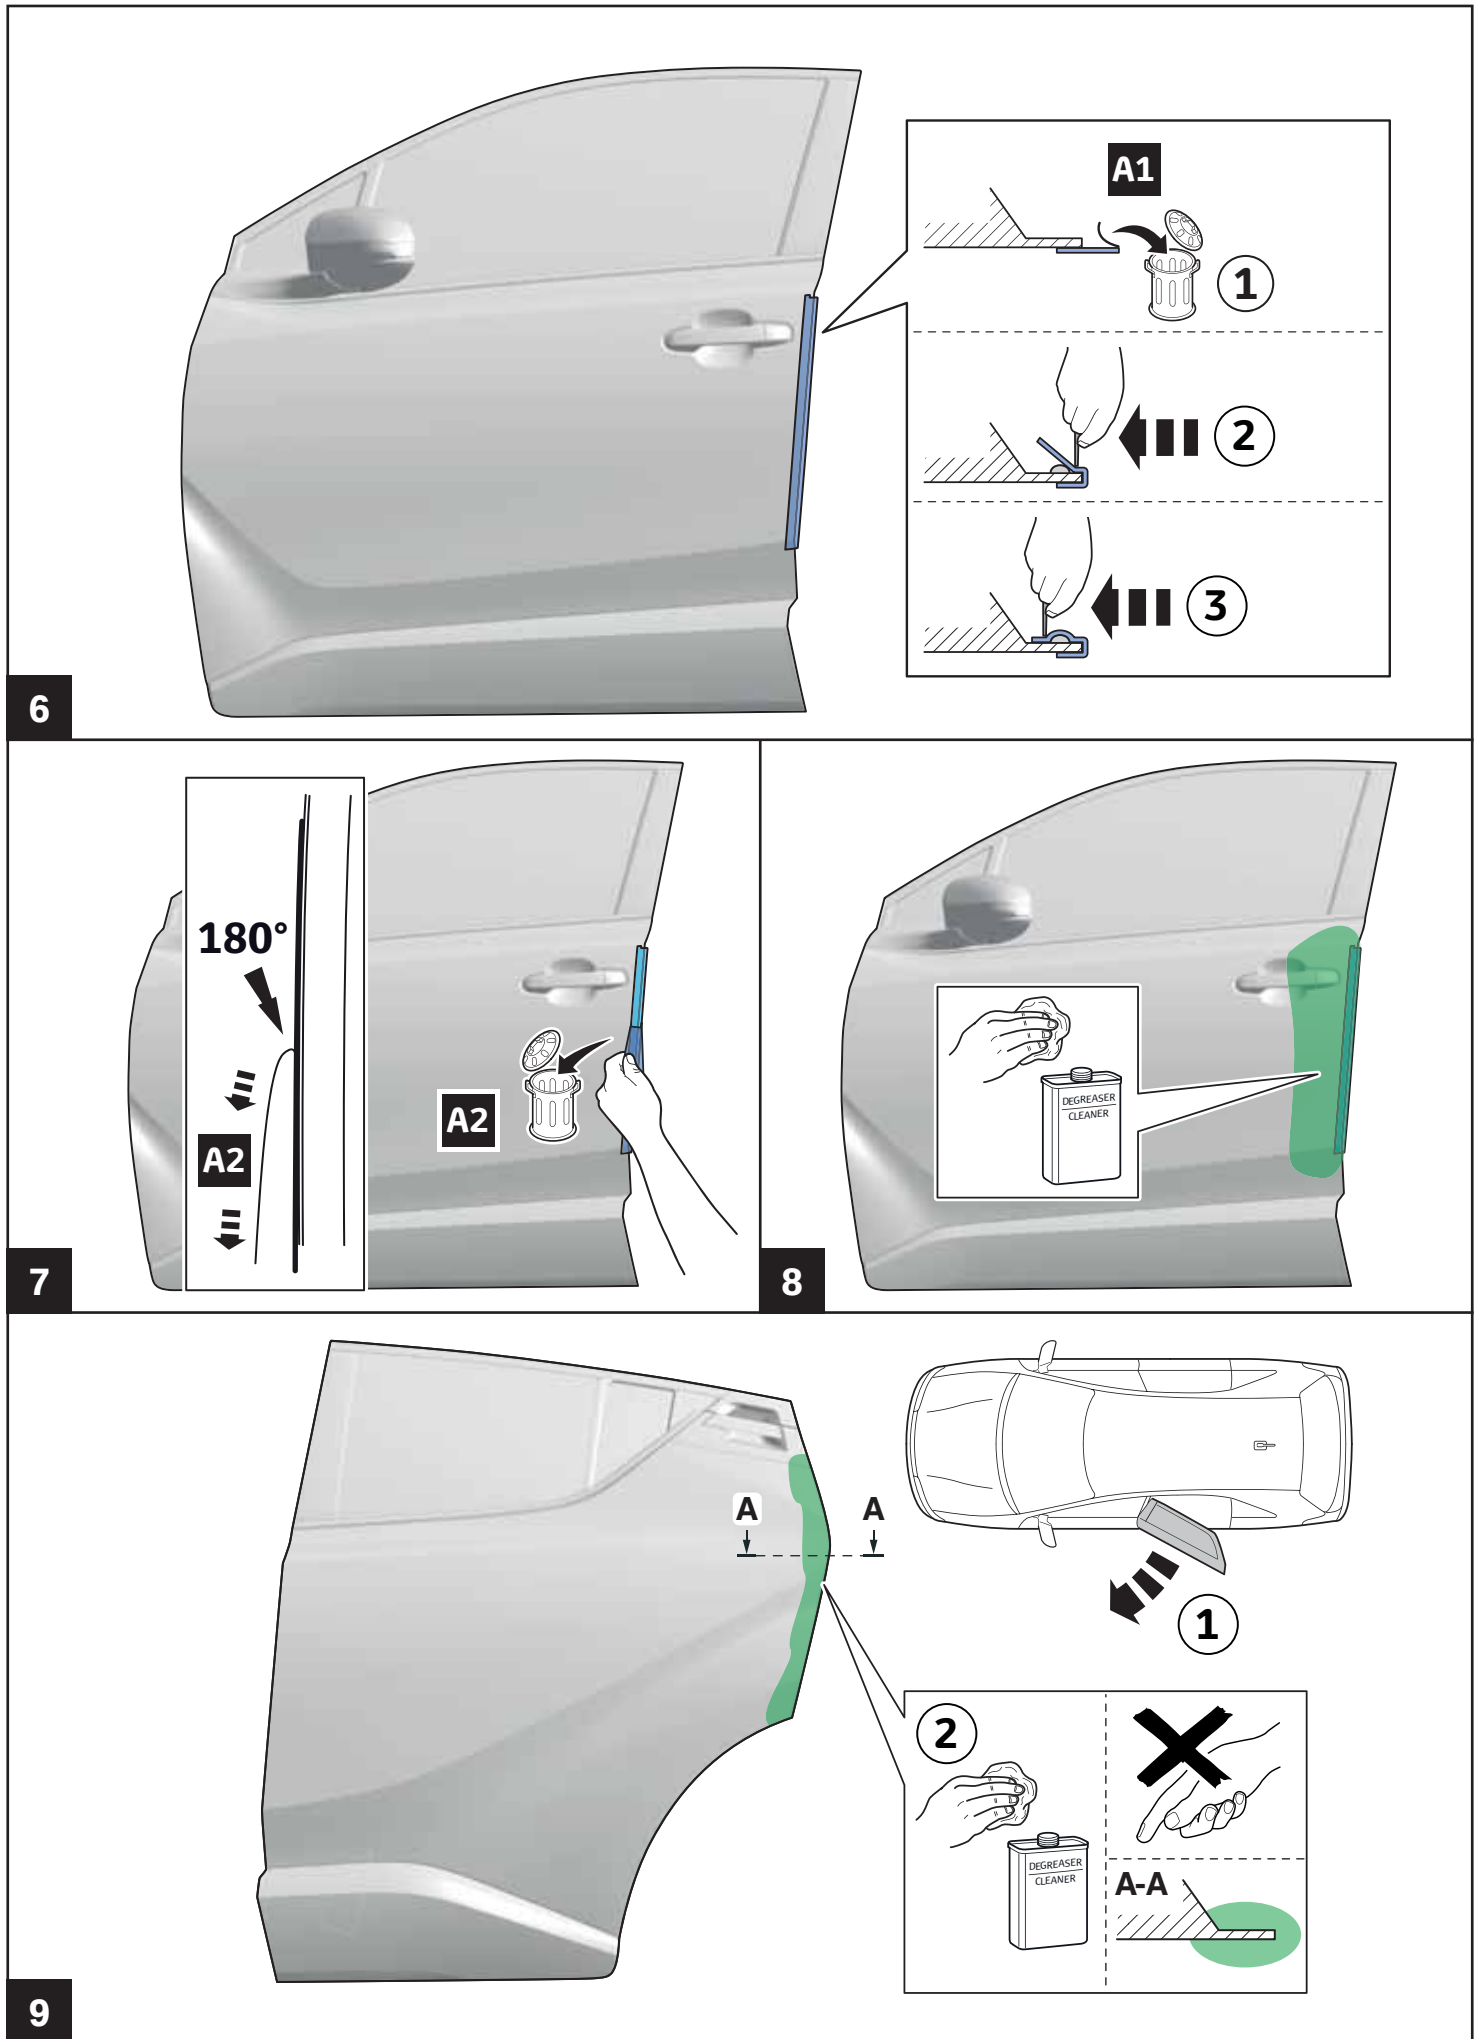

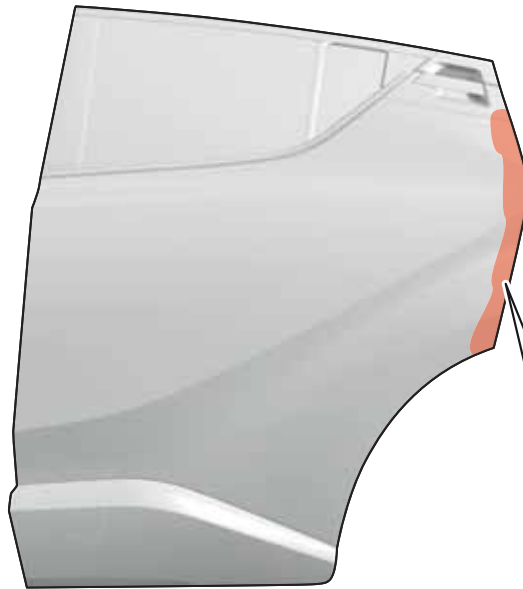


①	< 15°C ➡ ② 15°C - 28°C ➡ 11	②
③	15°C - 28°C ➡ 11	INFO 10 ➡ 13 ✓ ✗

10




①	< 15°C ➡ ② 15°C - 28°C ➡ 12	②
③	15°C - 28°C ➡ 12	INFO 11 ➡ 13 ✓ ✗


11

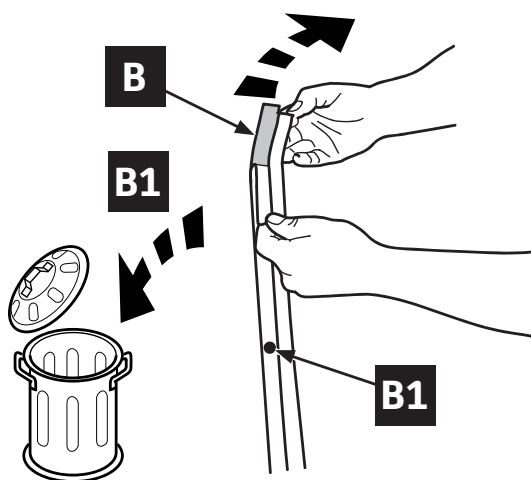


12

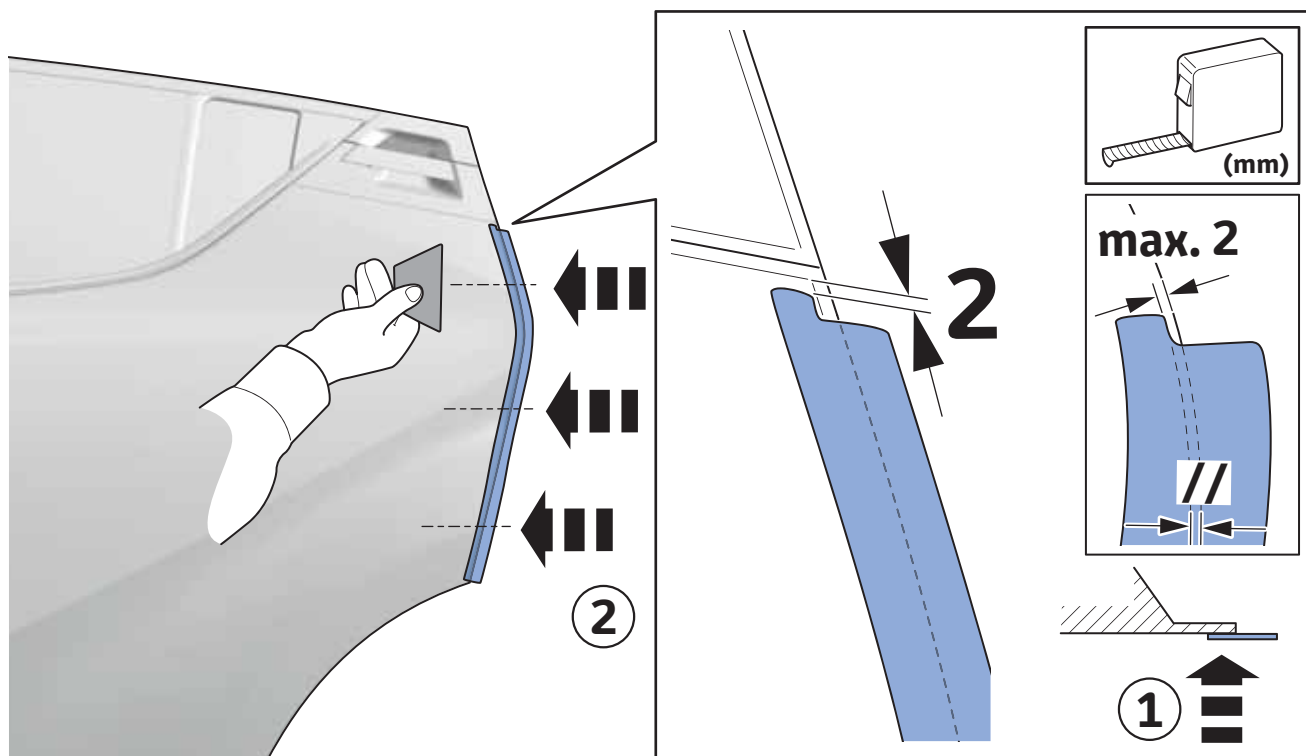


13

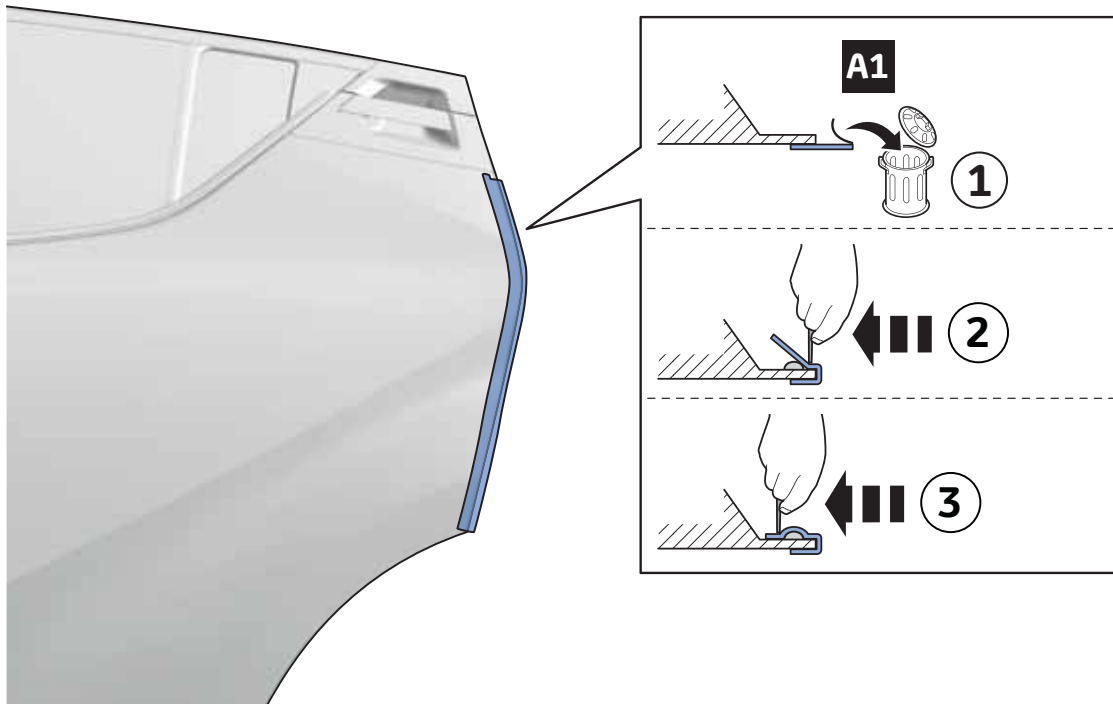

14

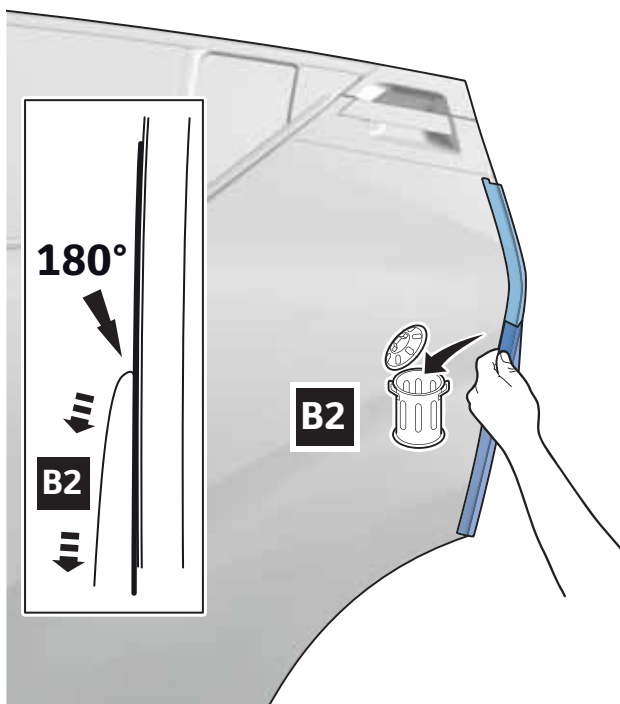

15

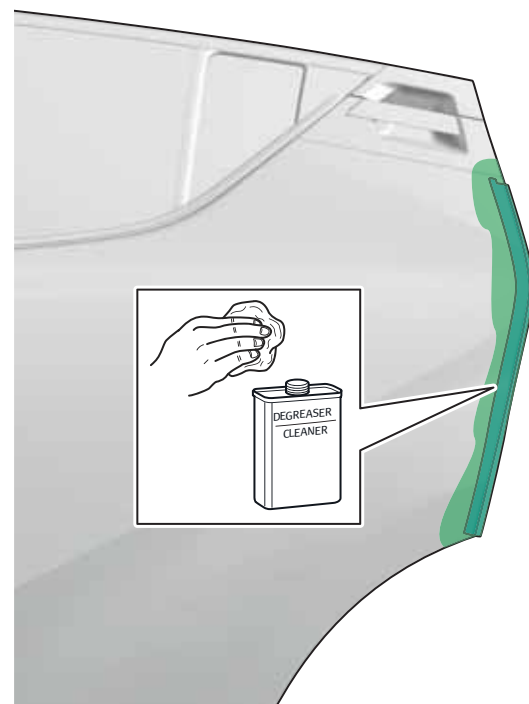


16


RHS = LHS

1 — 16

17

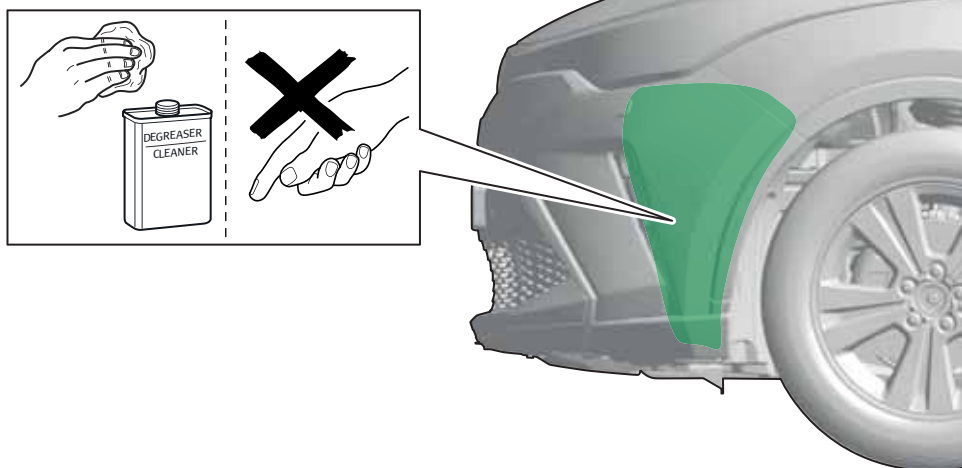


18

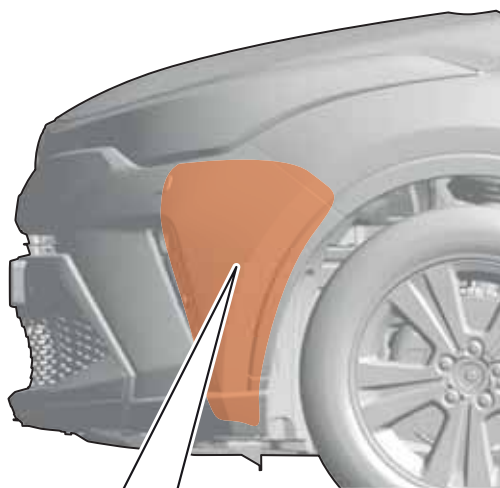




①	< 15°C ➔ ② 15°C - 28°C ➔ 20	②
③	15°C - 28°C ➔ 20	INFO 19 ➔ 23

19

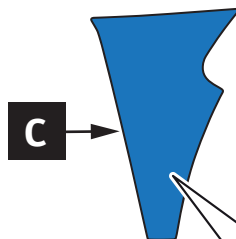


①	$< 15^{\circ}\text{C}$ → ② $15^{\circ}\text{C} - 28^{\circ}\text{C}$ → 21	②
③	$15^{\circ}\text{C} - 28^{\circ}\text{C}$ → 21	INFO 20 → 23


20

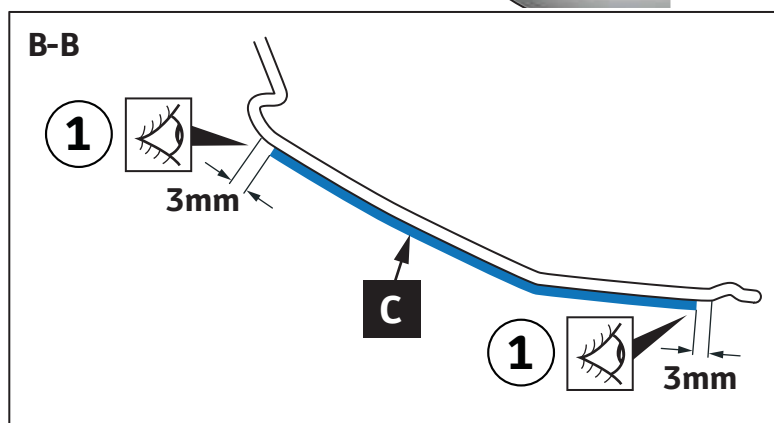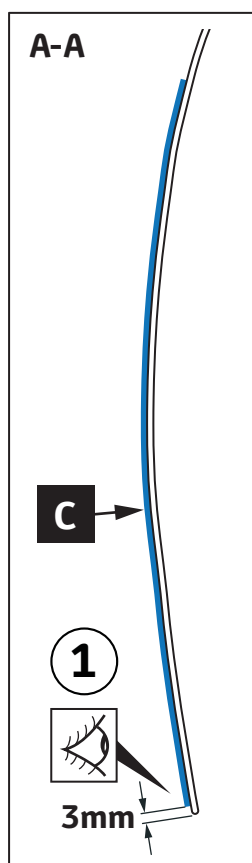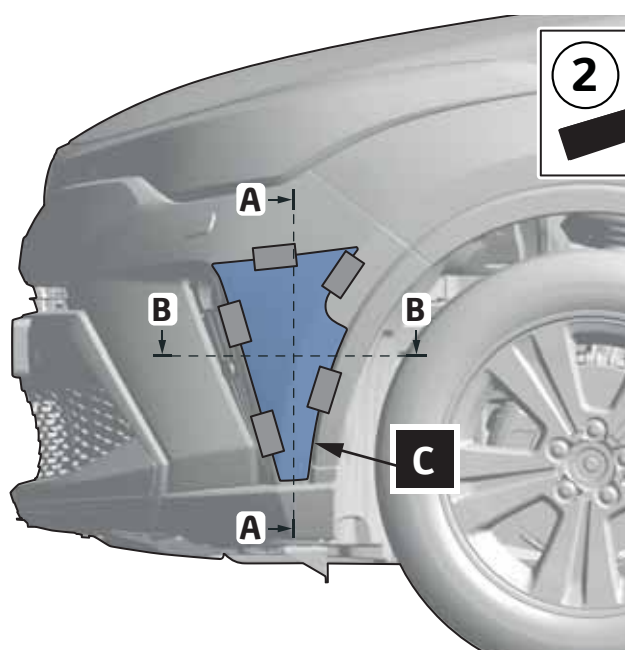


21

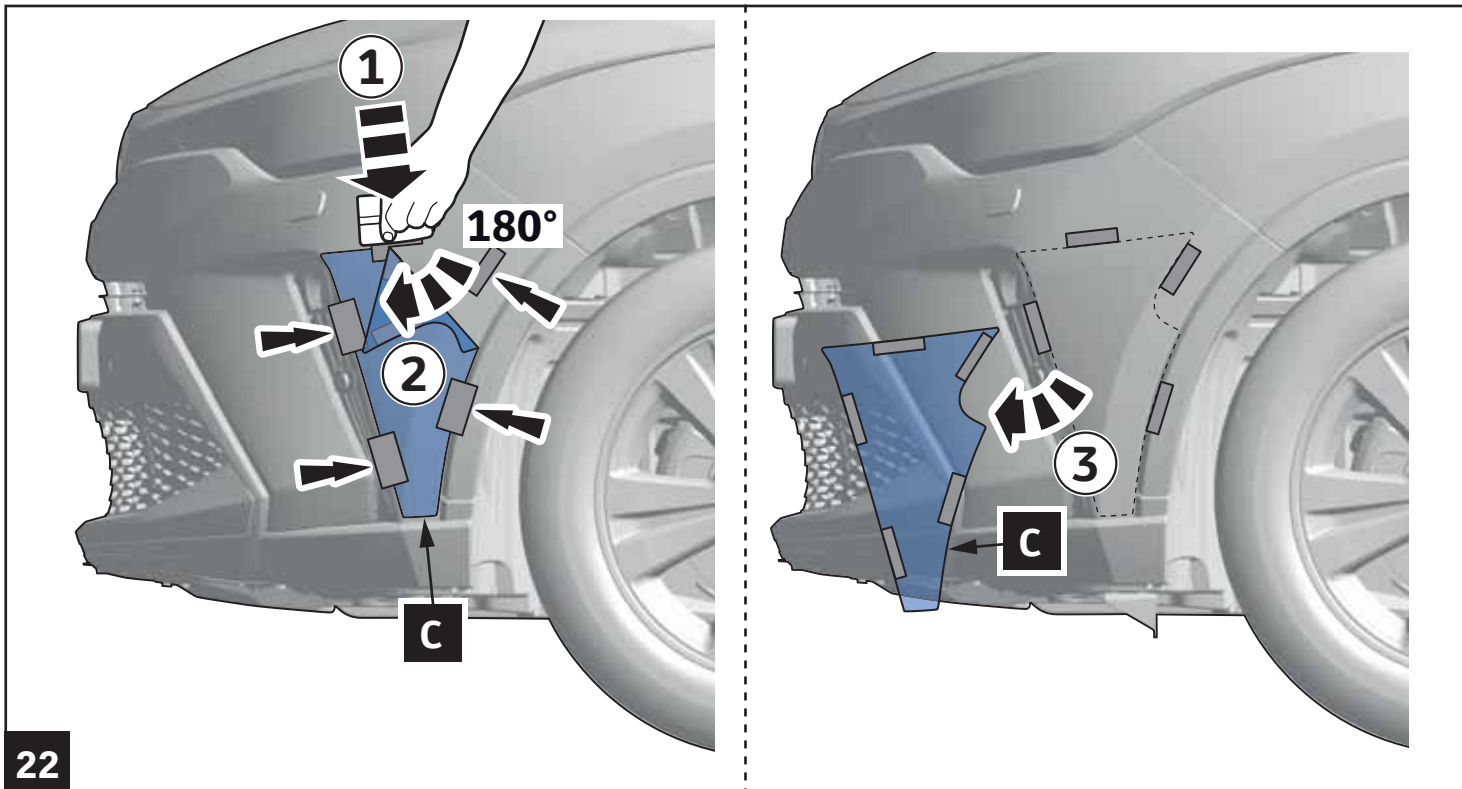


22

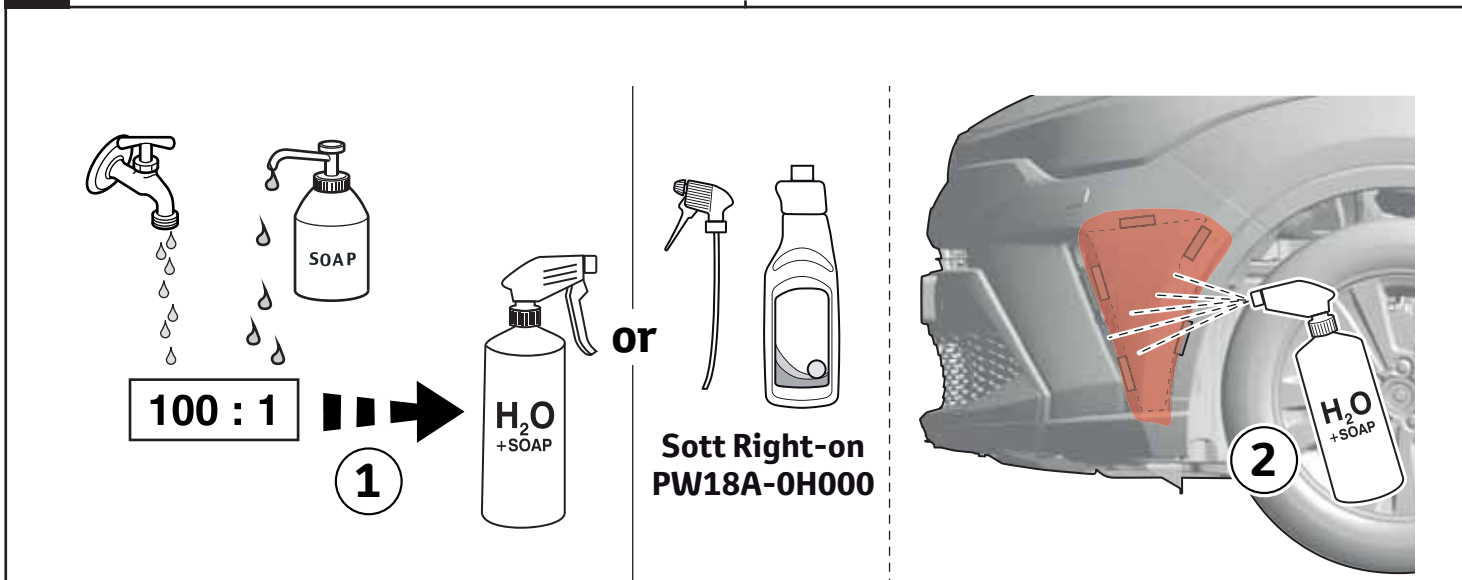


23

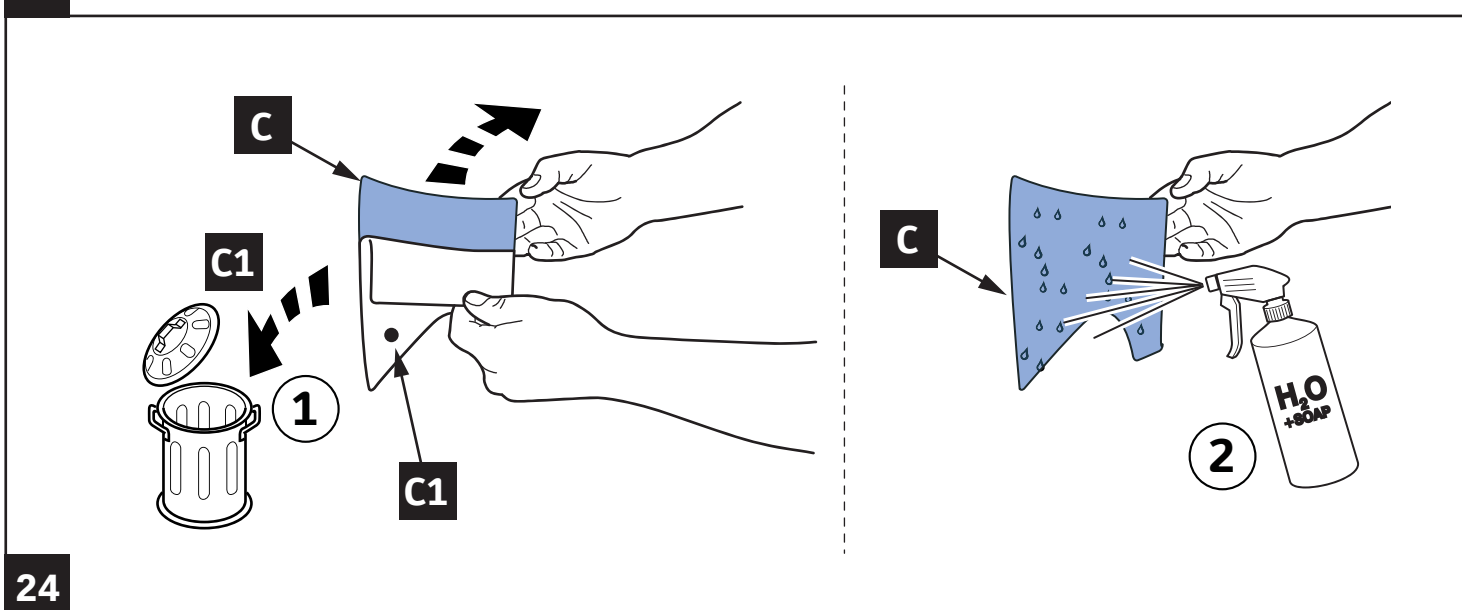


24

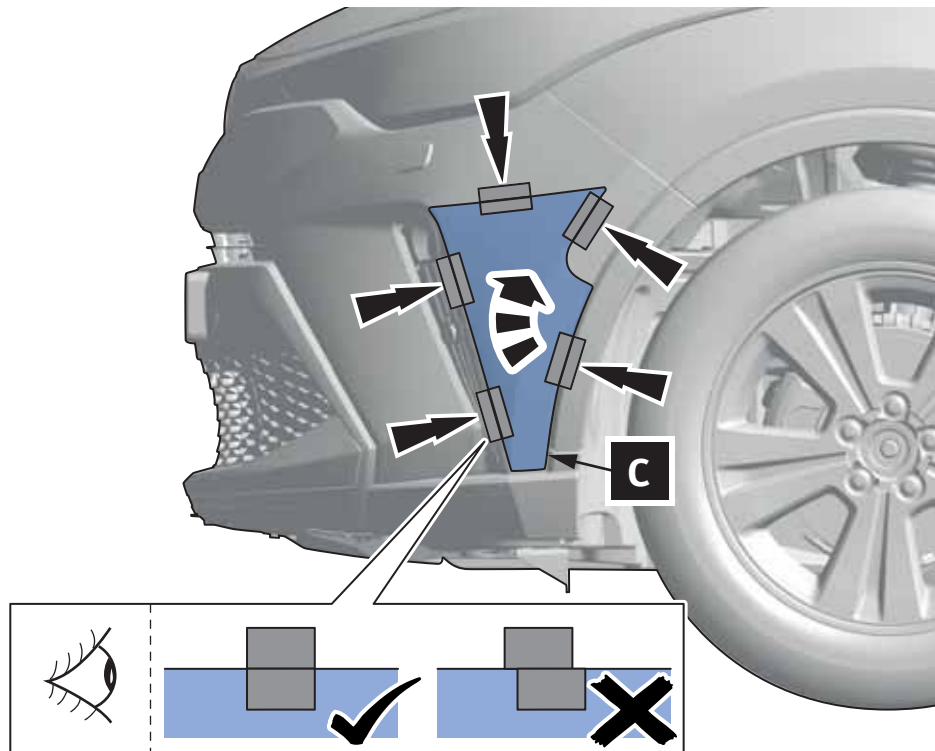


25

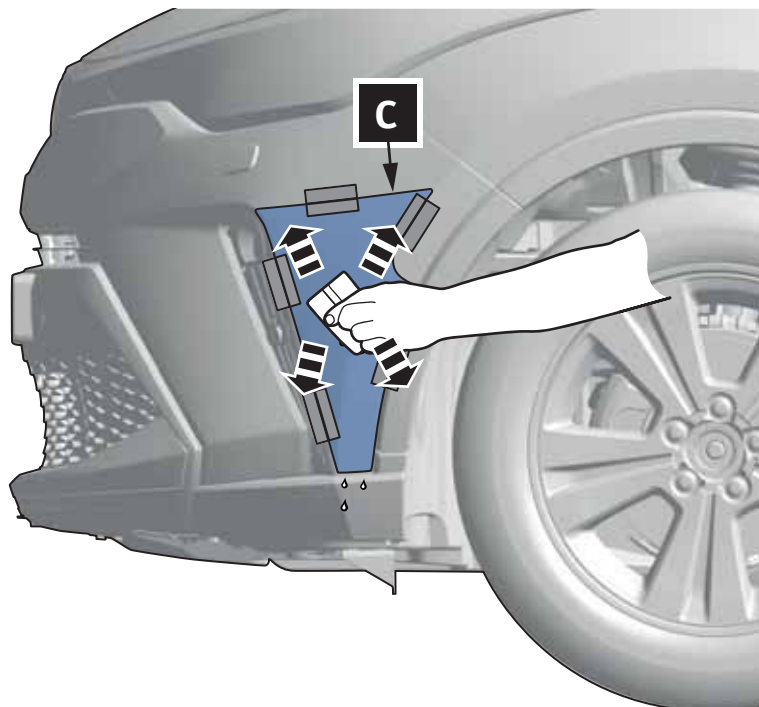


26

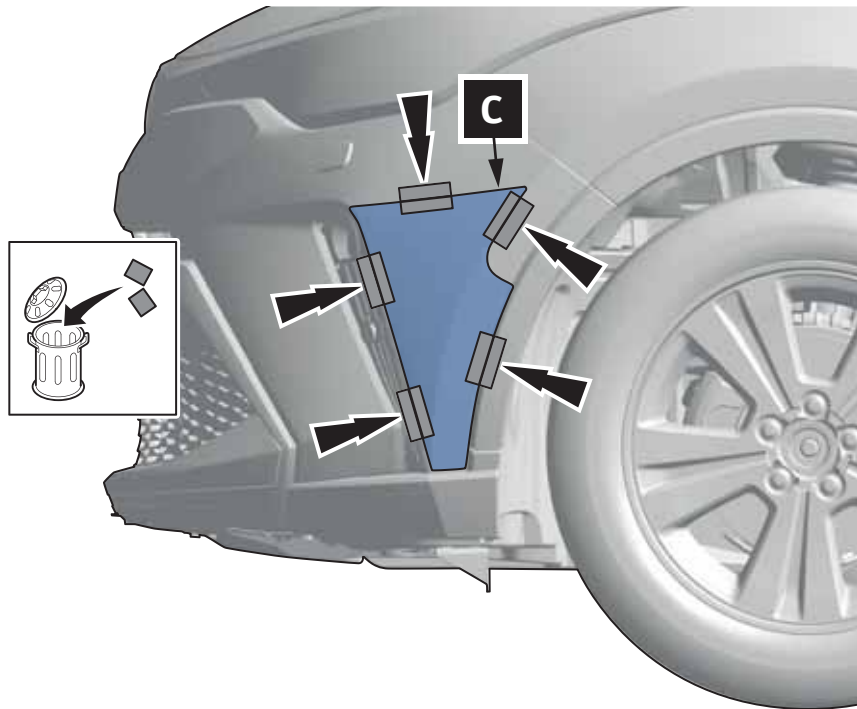

27

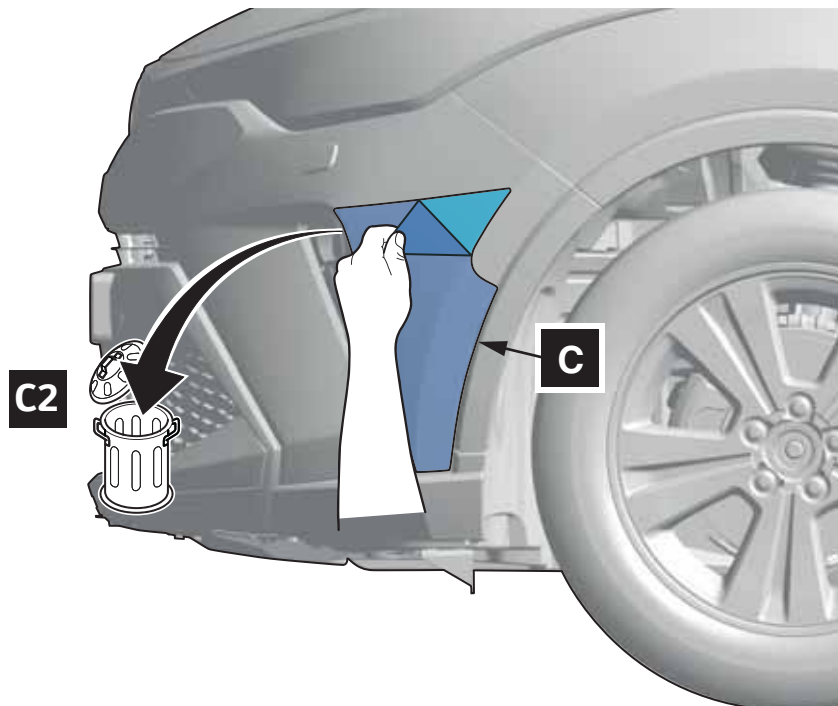

28

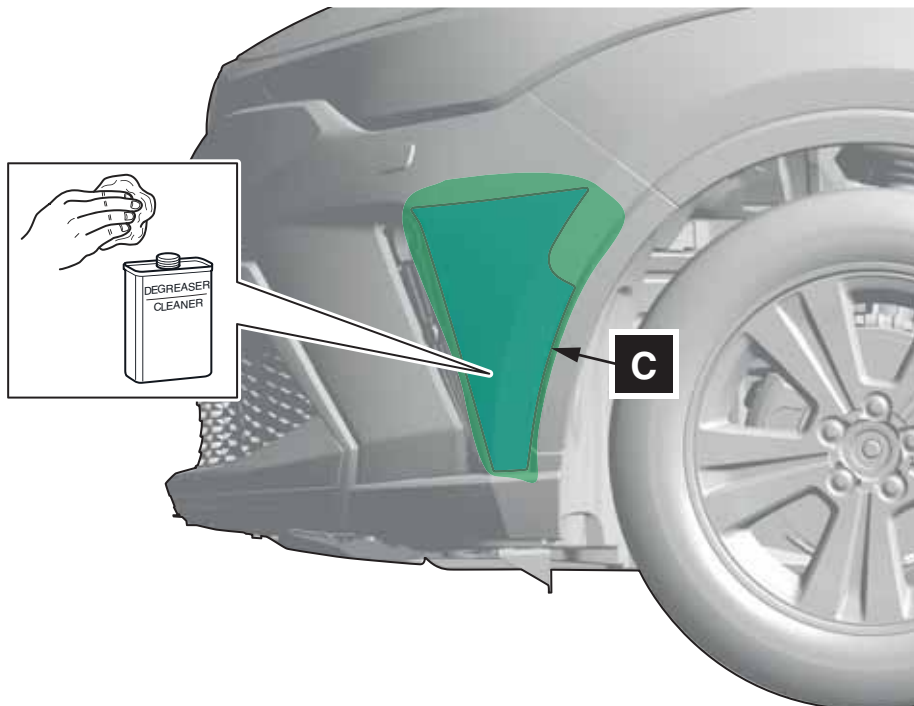


29


RHS = LHS

18 — 29

30

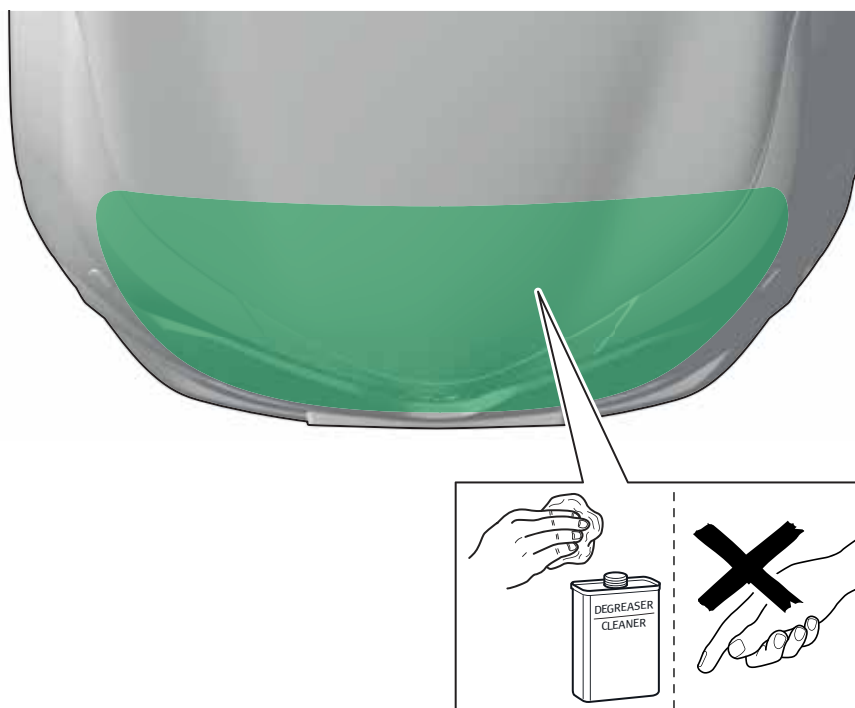


31

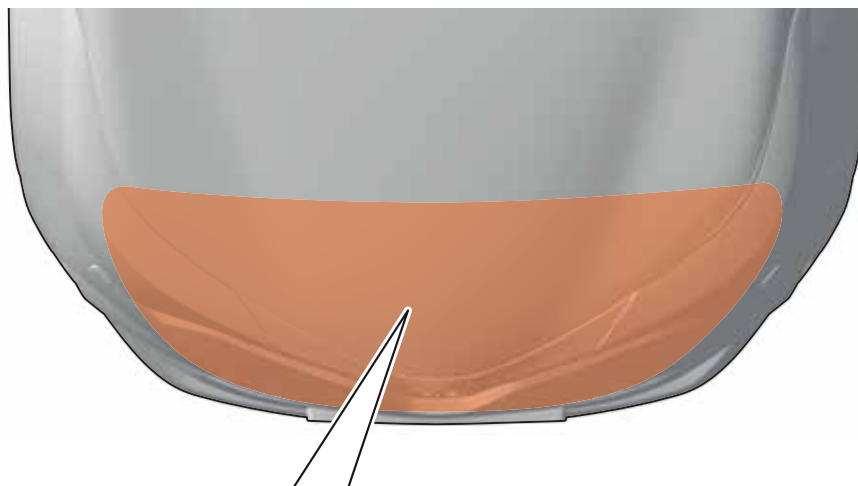



①	? °C < 15°C ➔ ② 15°C - 28°C ➔ 33	②
③	? °C 15°C - 28°C ➔ 33	INFO 32 ➔ 40 ✓ ✗

32

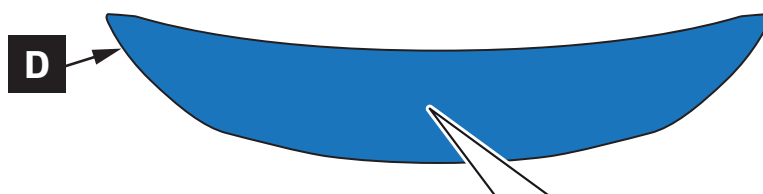


①	? °C < 15°C ➔ ② 15°C - 28°C ➔ 34	②
③	? °C 15°C - 28°C ➔ 34	INFO 33 ➔ 40 ✓ ✗


33

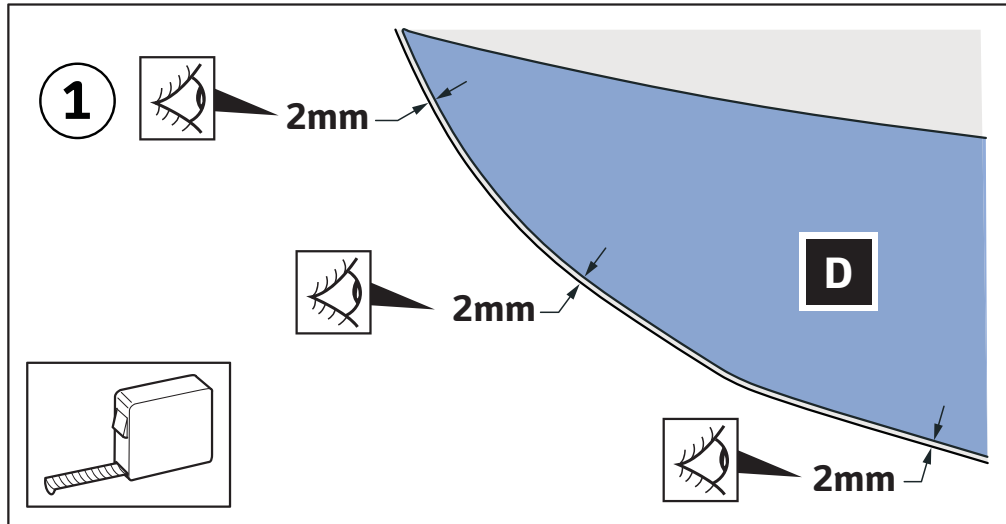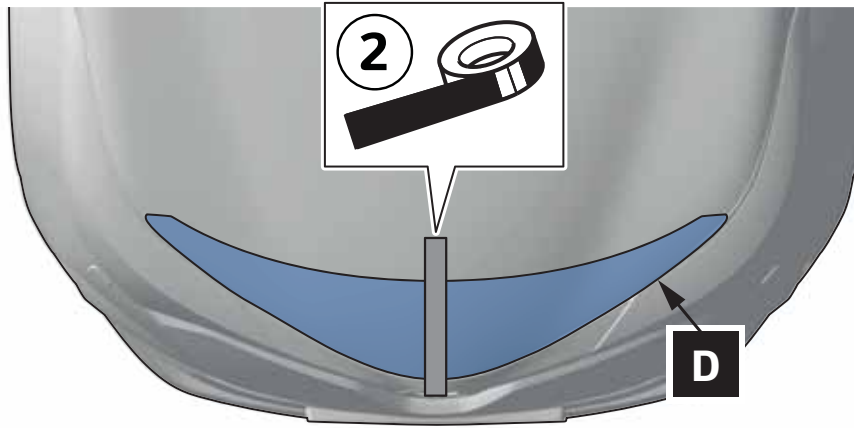


34

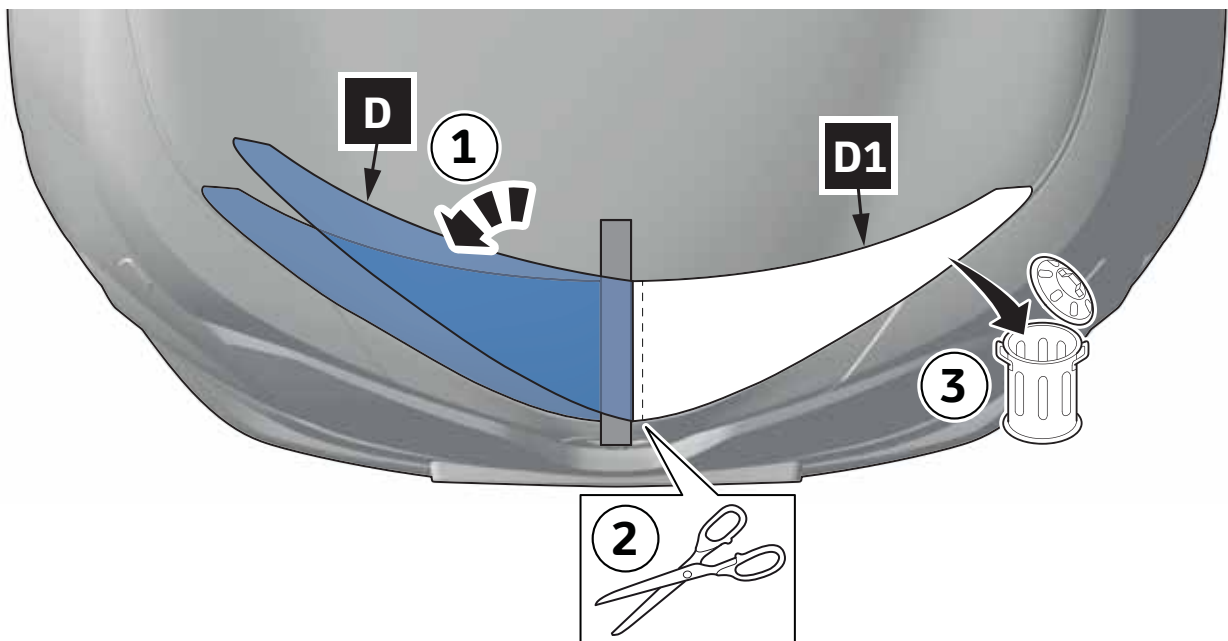


35

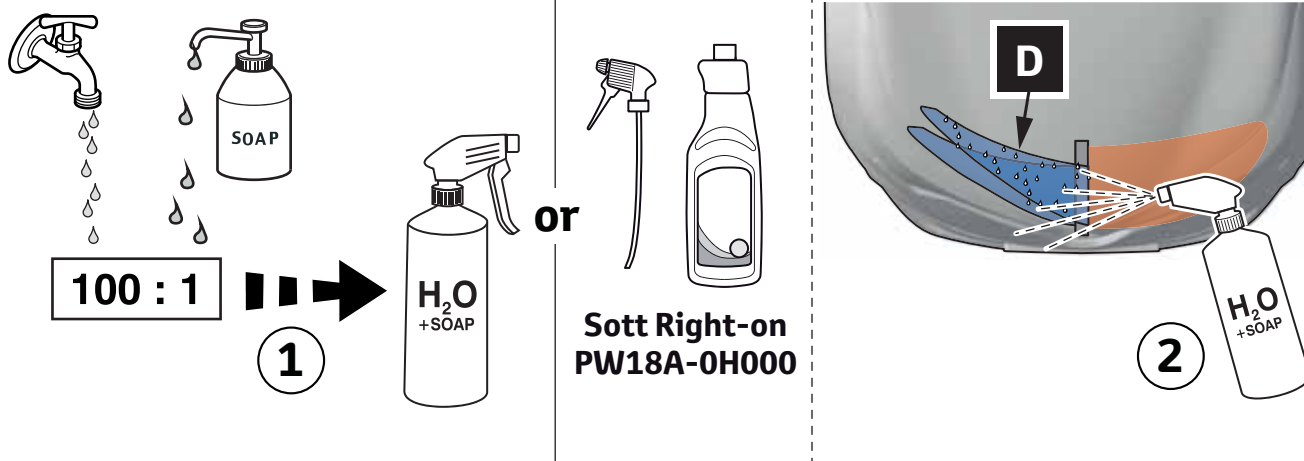


36

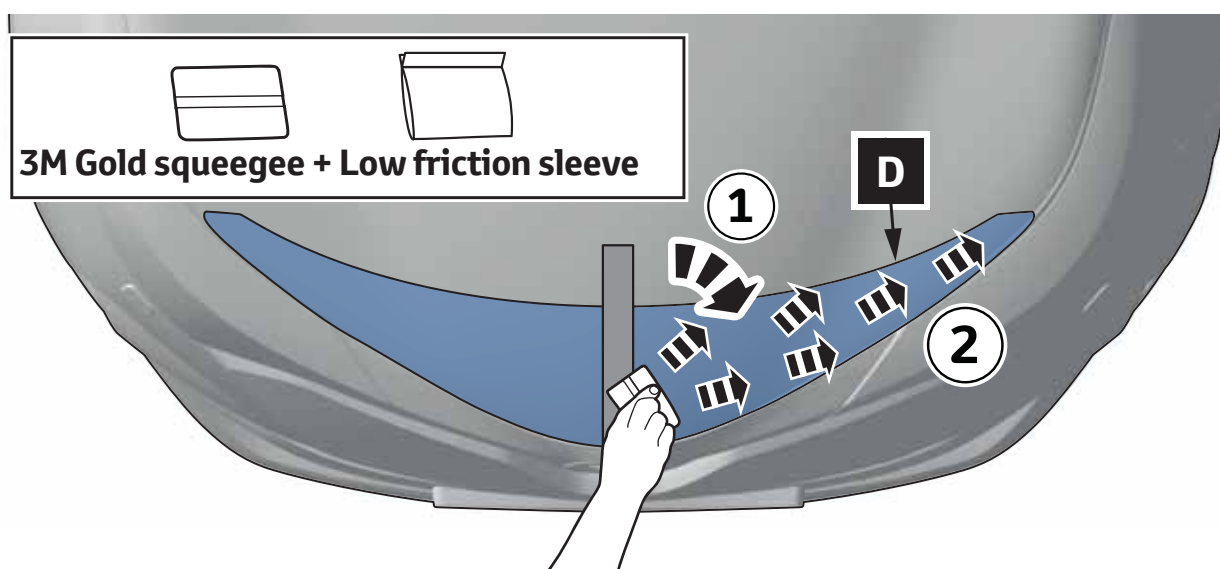


37

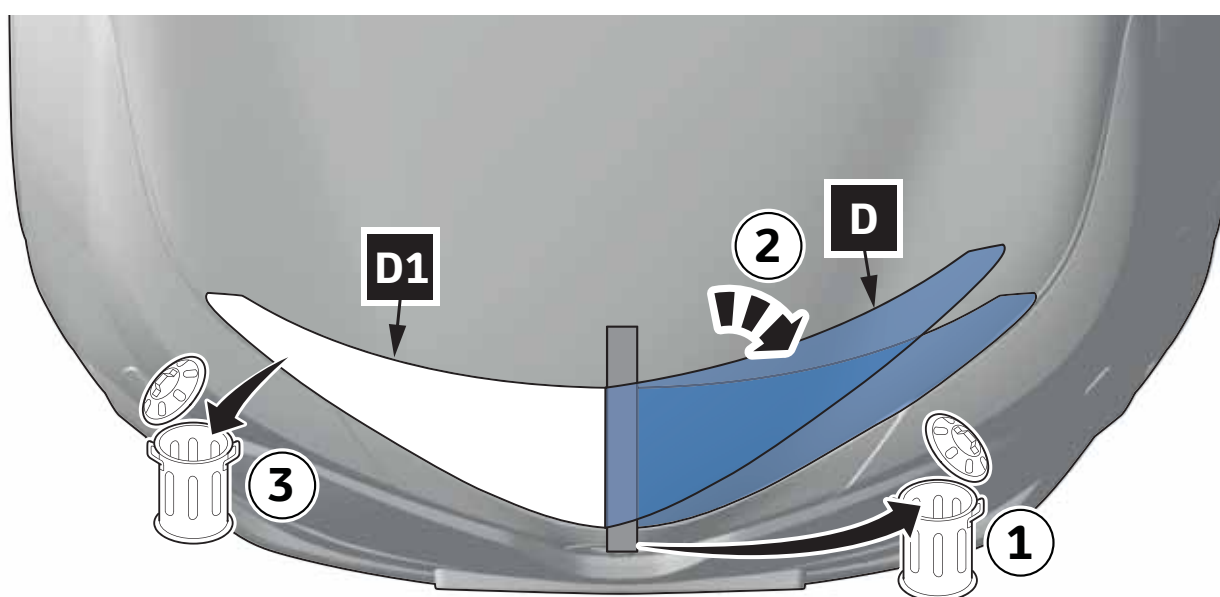


38

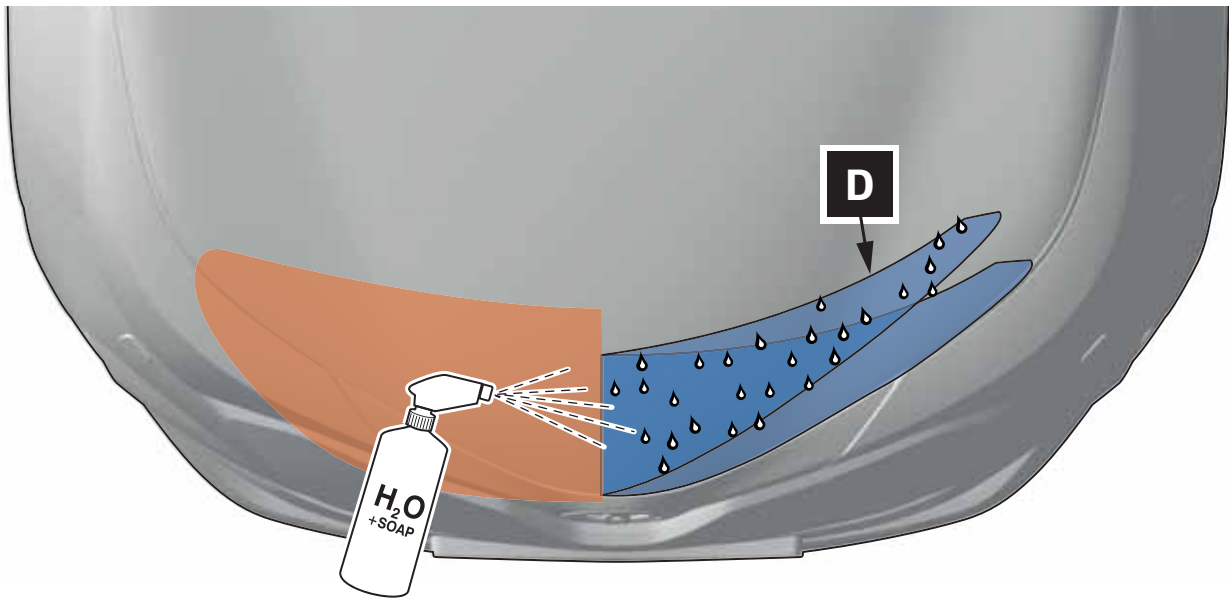


39

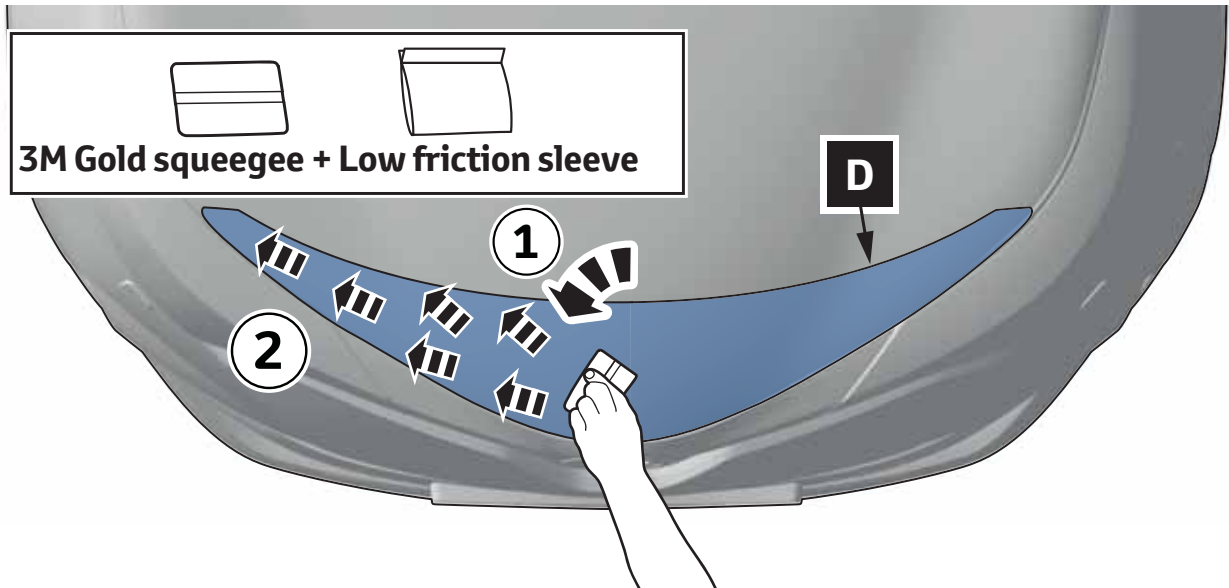


40

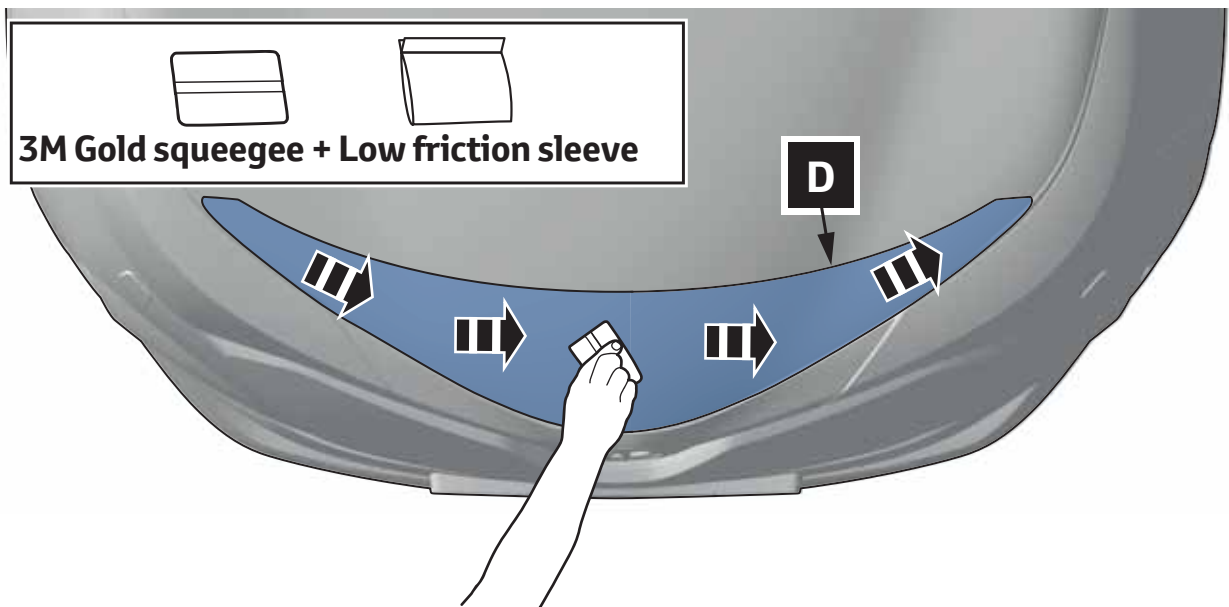


41

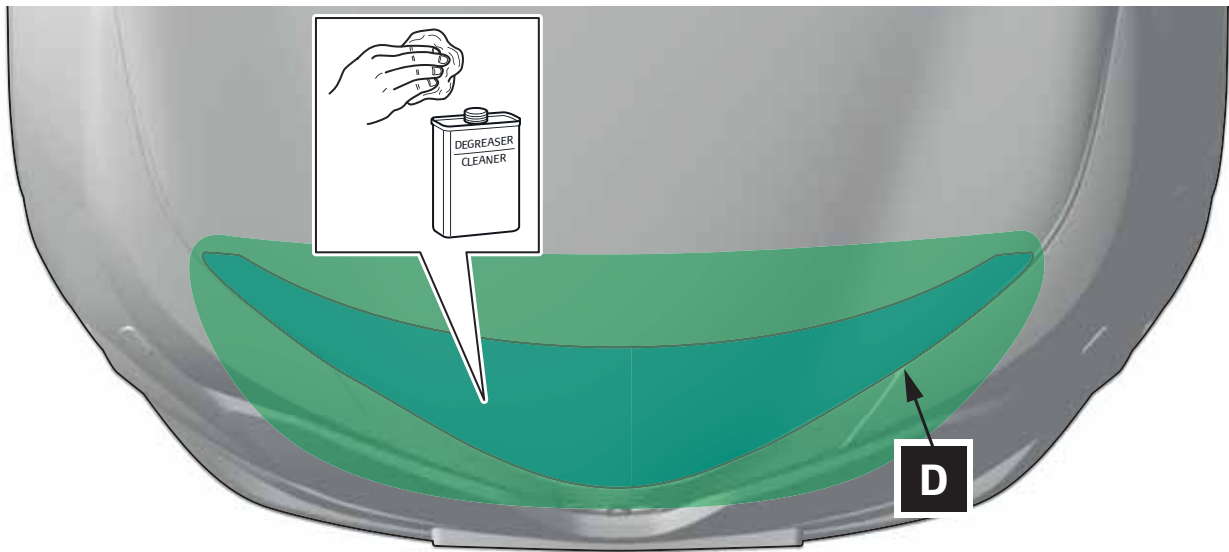

42

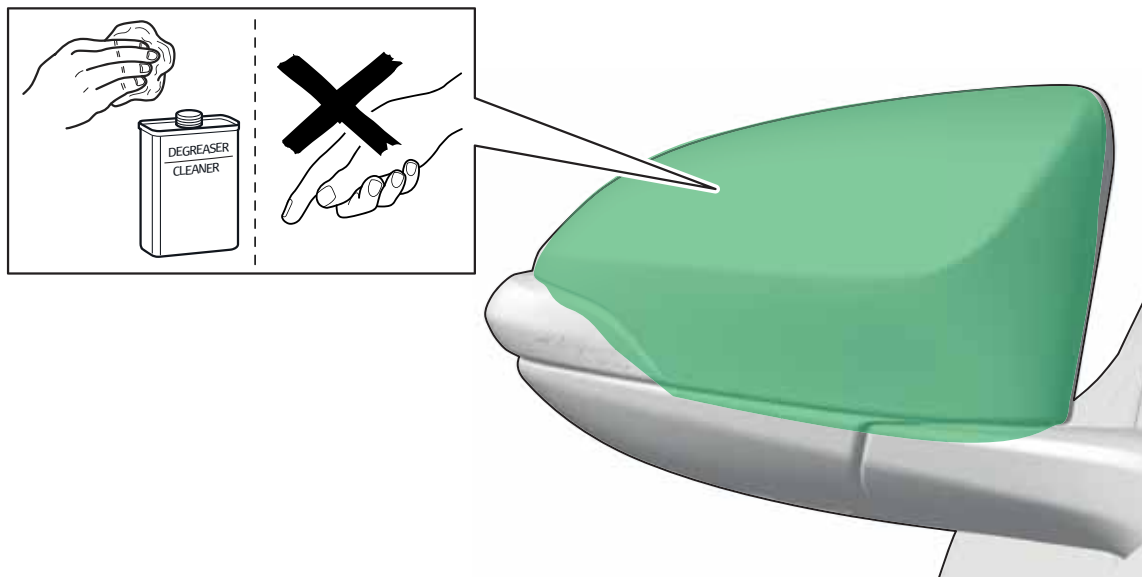


43

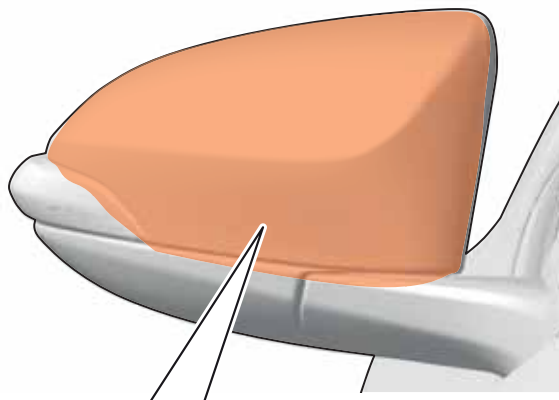


①	< 15°C ➡ ② 15°C - 28°C ➡ 45	②
③	15°C - 28°C ➡ 45	INFO 44 ➡ 51

44

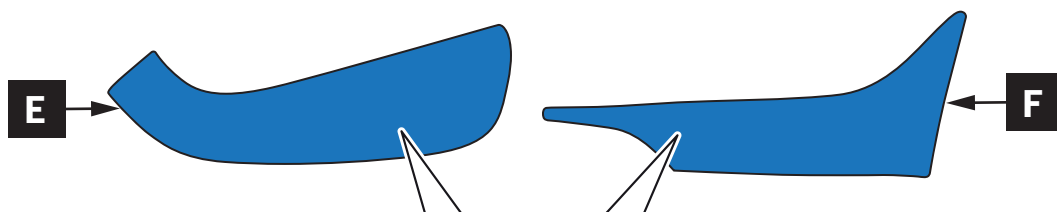


①	< 15°C ➡ ② 15°C - 28°C ➡ 46	②
③	15°C - 28°C ➡ 46	INFO 45 ➡ 51





45

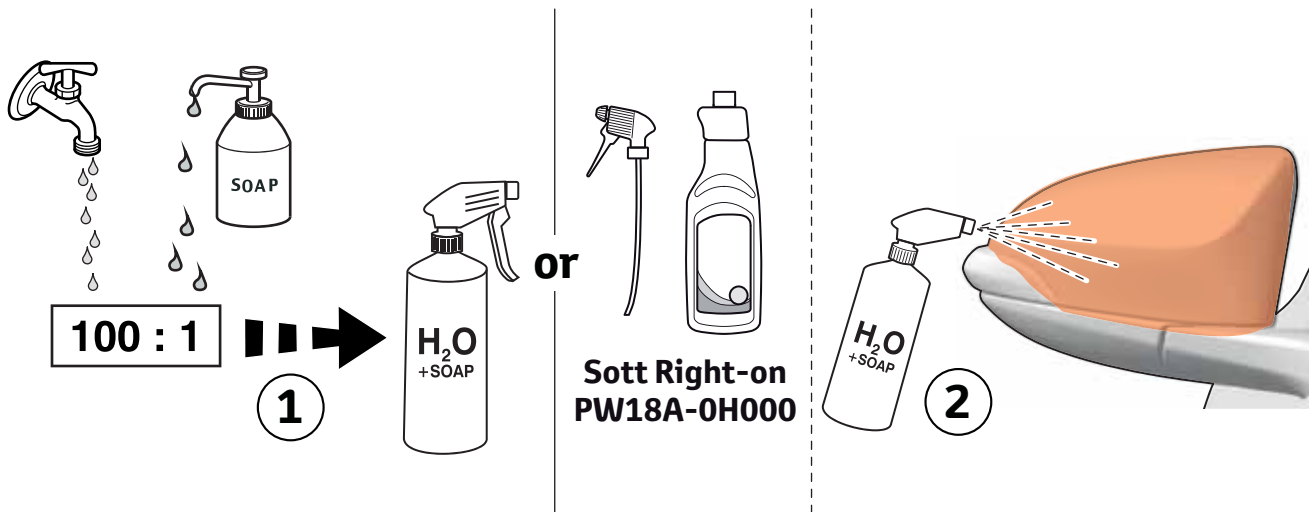



46

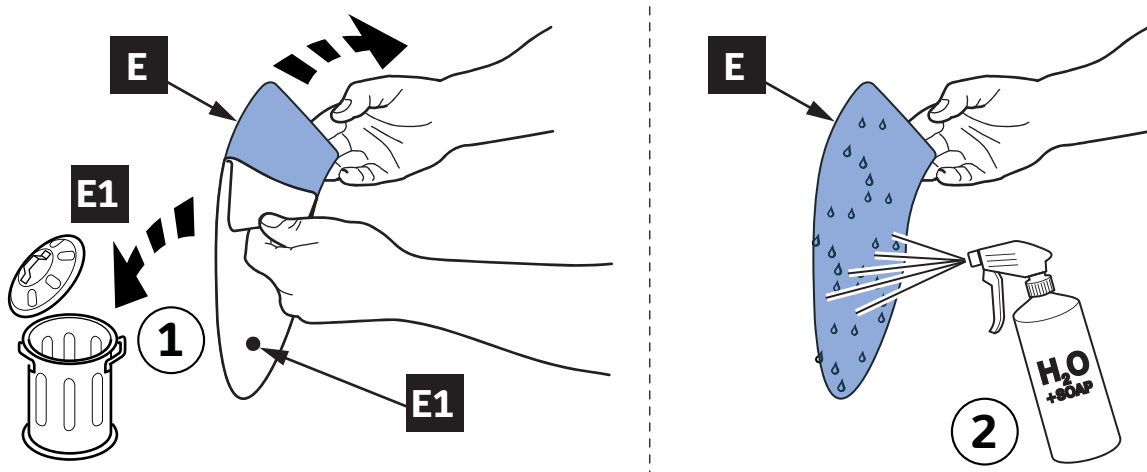



47

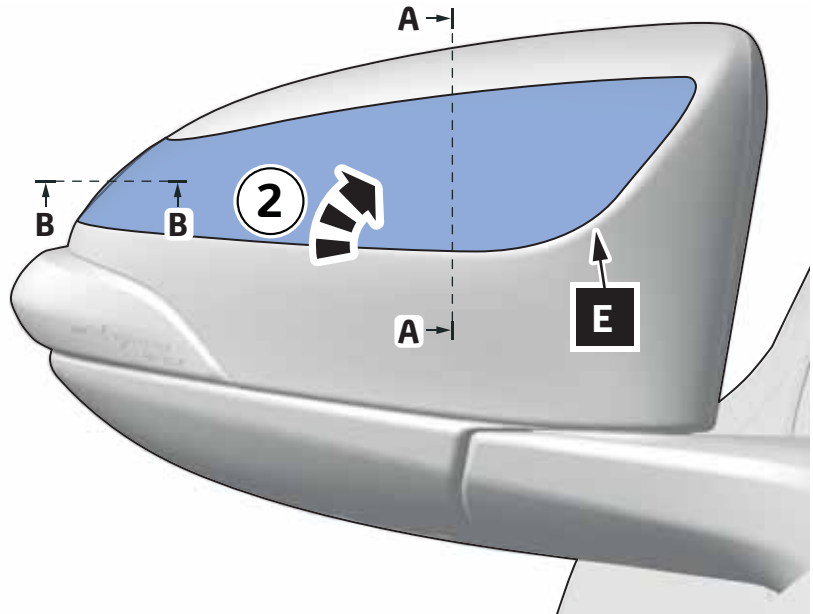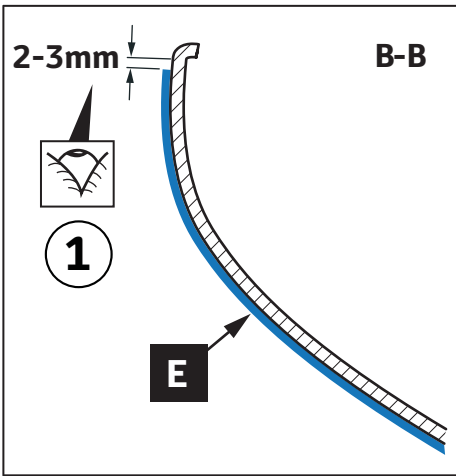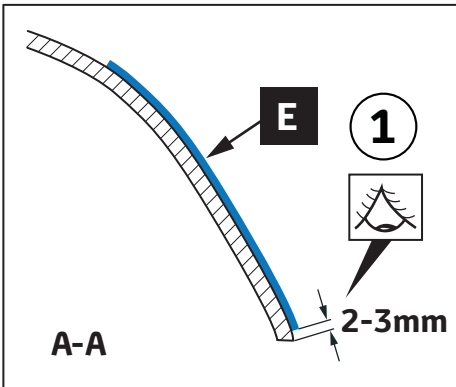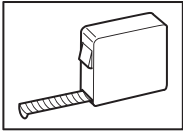





48

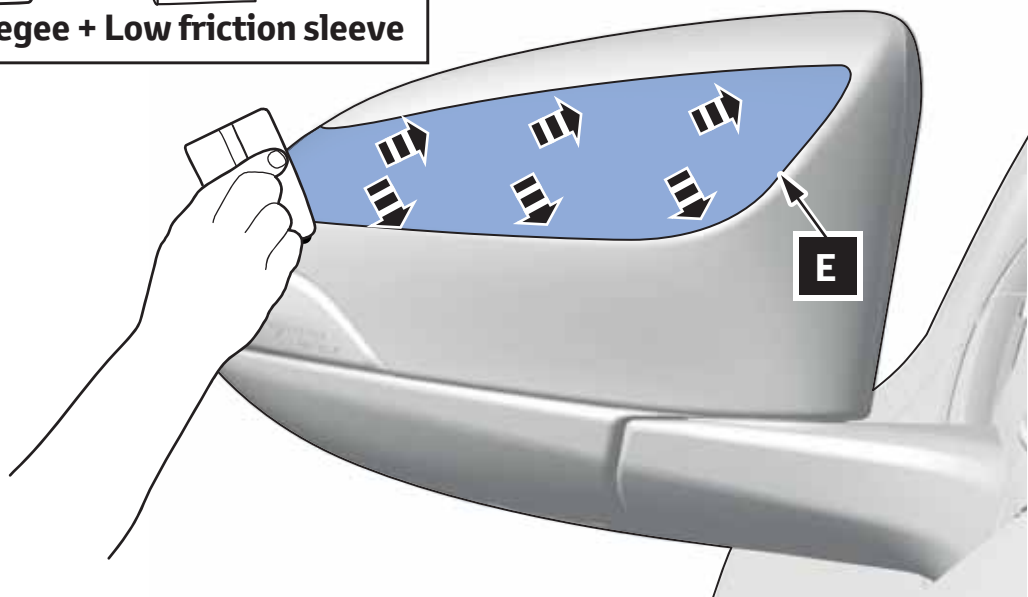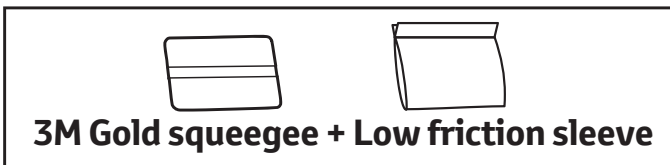


49

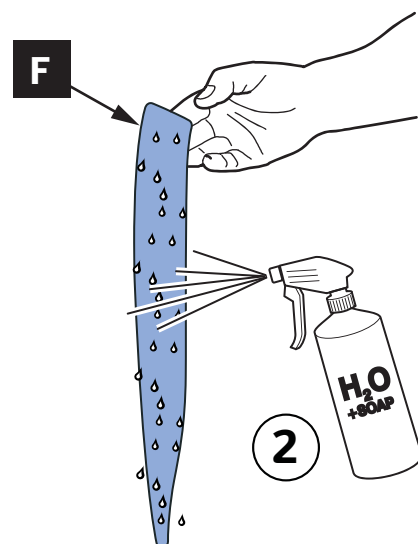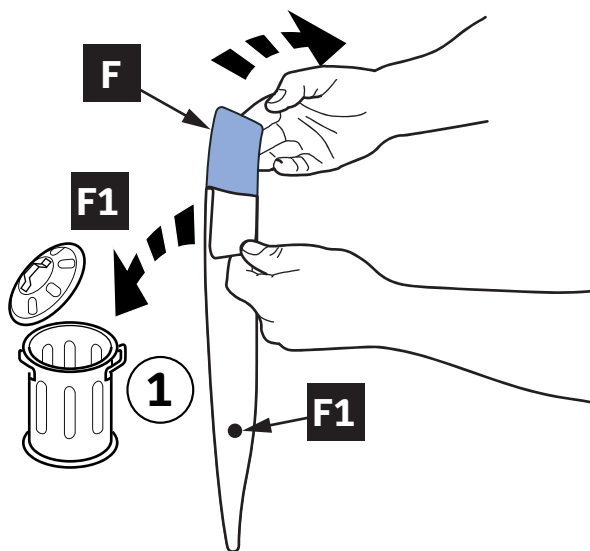


50

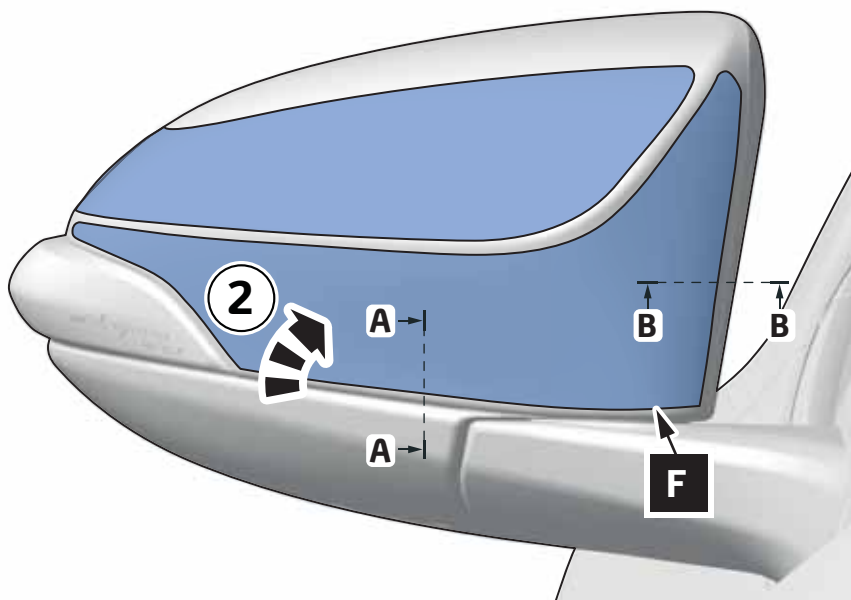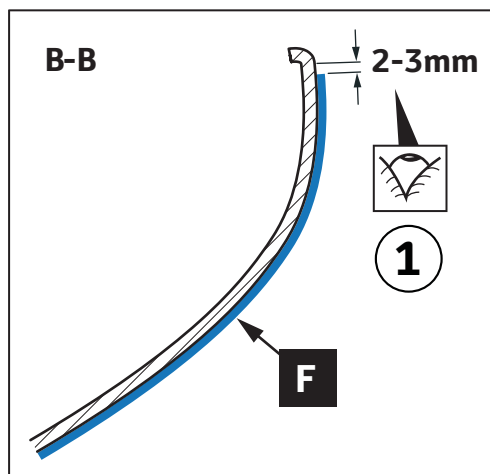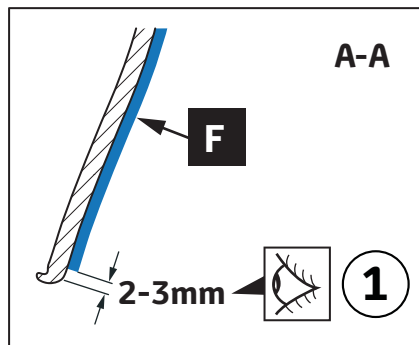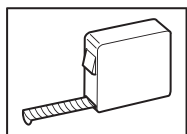


51



3M Gold squeegee + Low friction sleeve

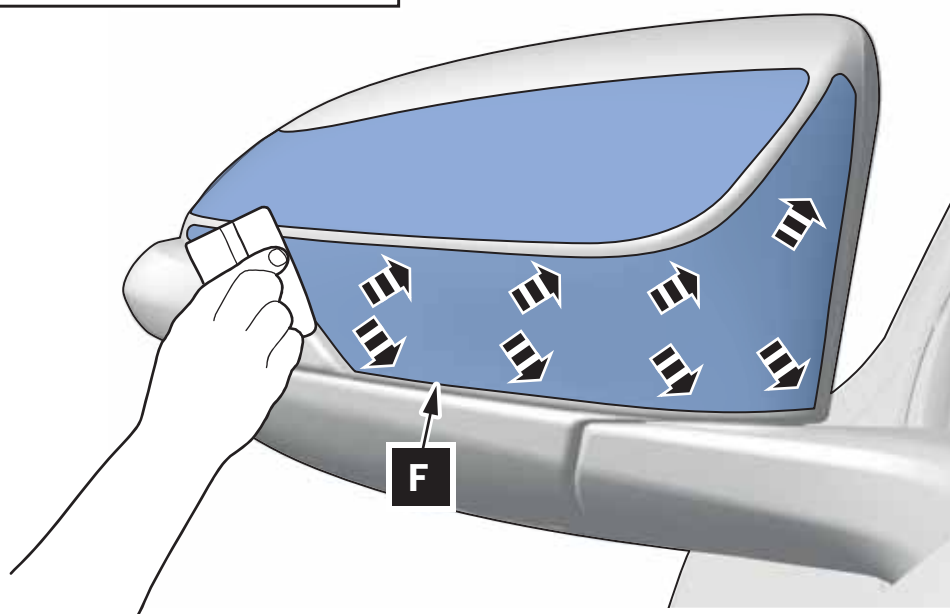

52

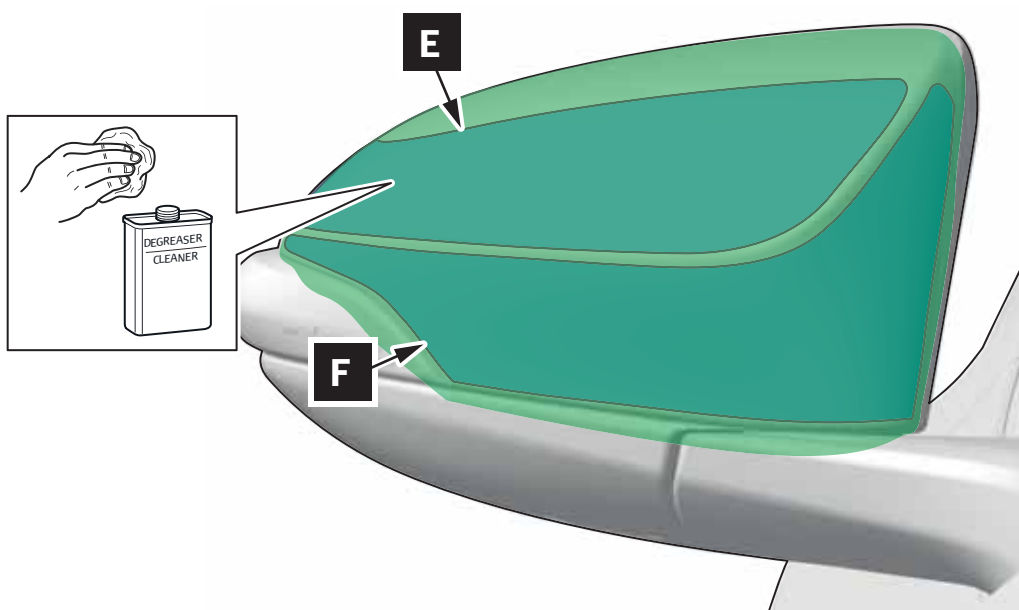

53


RHS = LHS

43

—

53


54

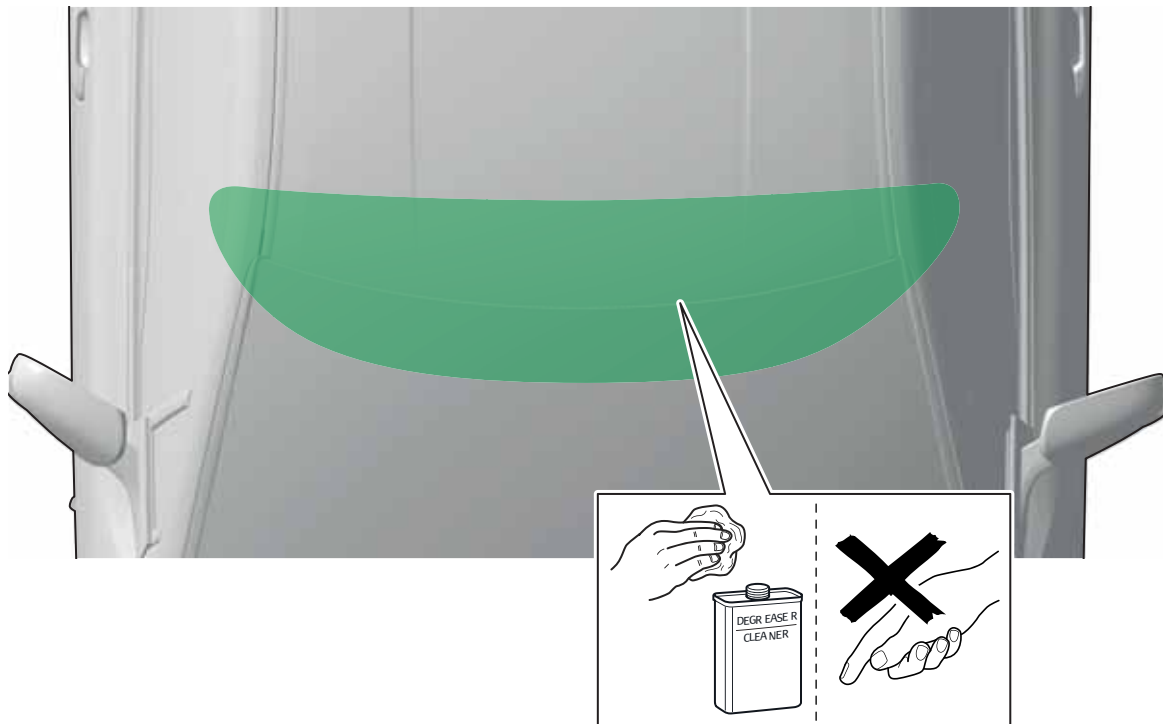

55


① ? °C	< 15°C ➔ ② 15°C - 28°C ➔ 57	② + °C
③ ? °C	15°C - 28°C ➔ 57	INFO ⌚ 56 ➔ 64 🐇 ✓ 🐢 ✗

56

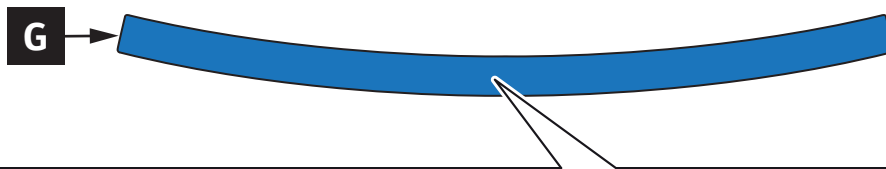


①	< 15°C ➔ ② 15°C - 28°C ➔ 58	②
③	15°C - 28°C ➔ 58	INFO 57 ➔ 64


57

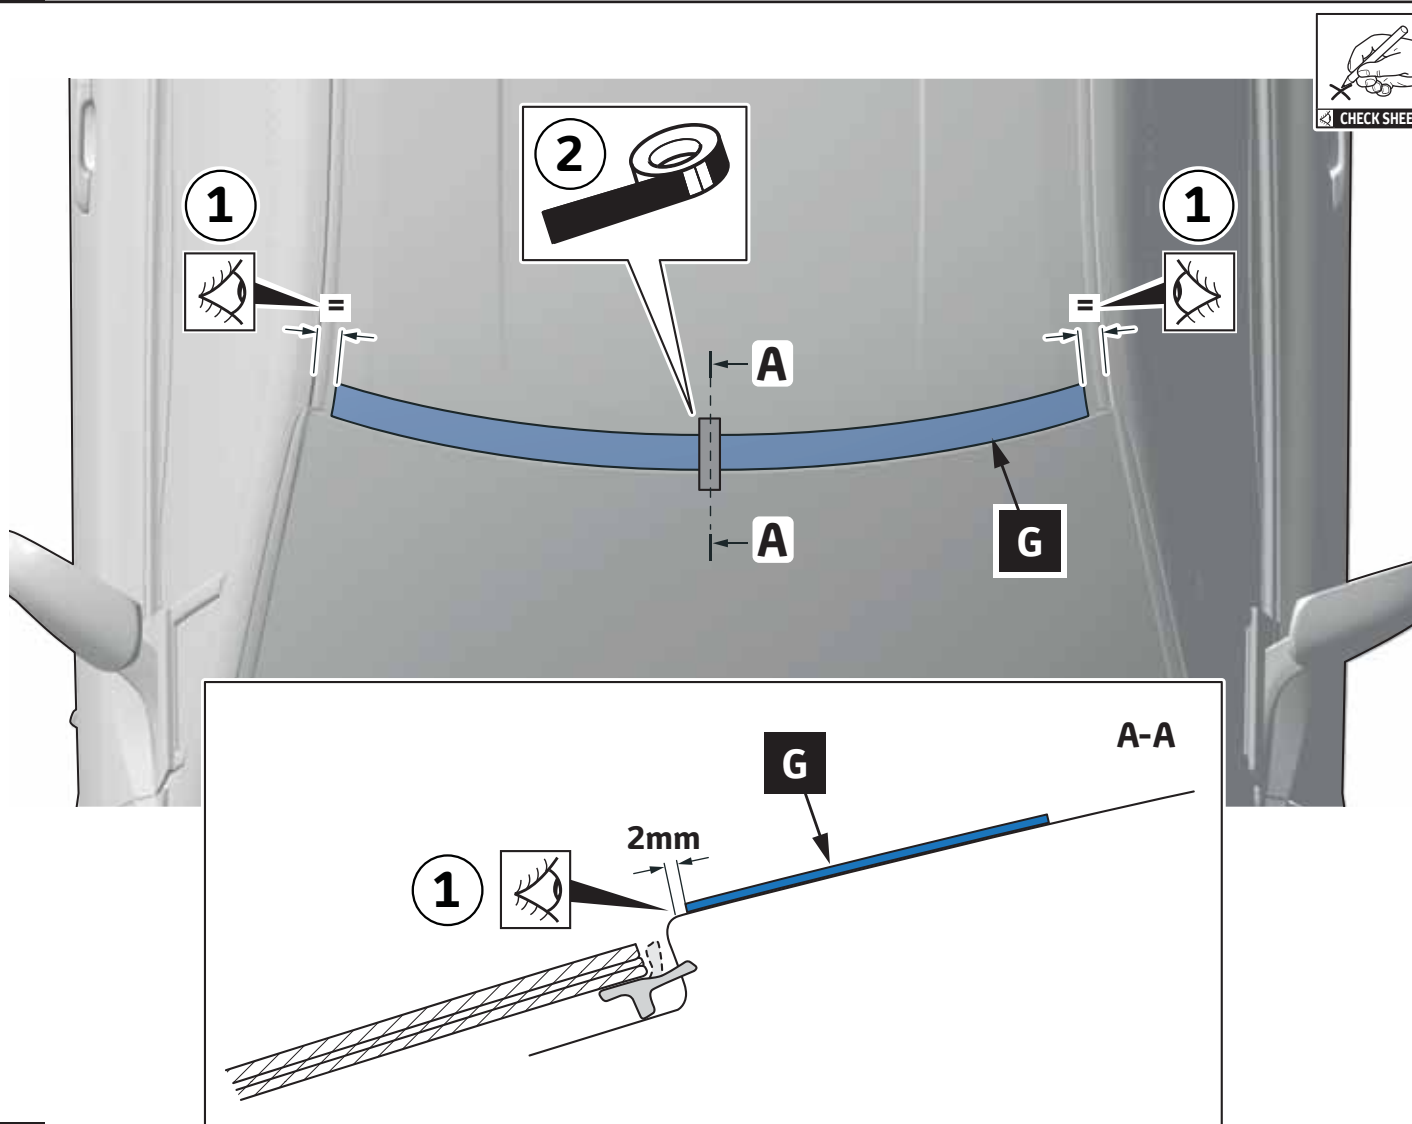


58

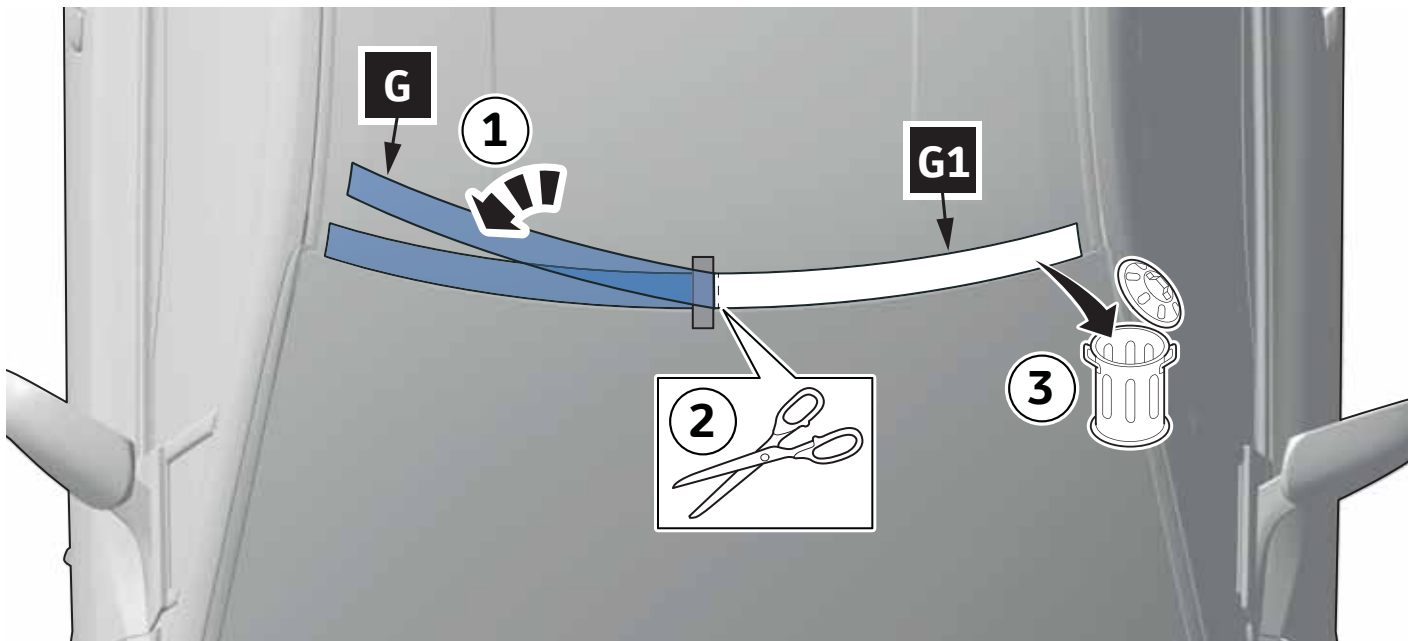


59

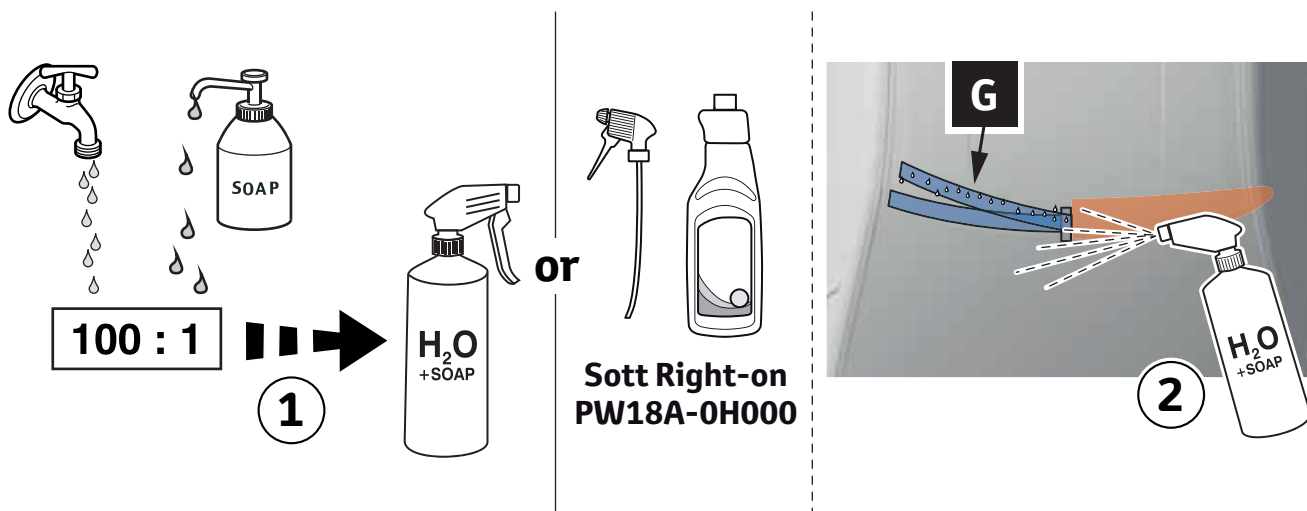


60

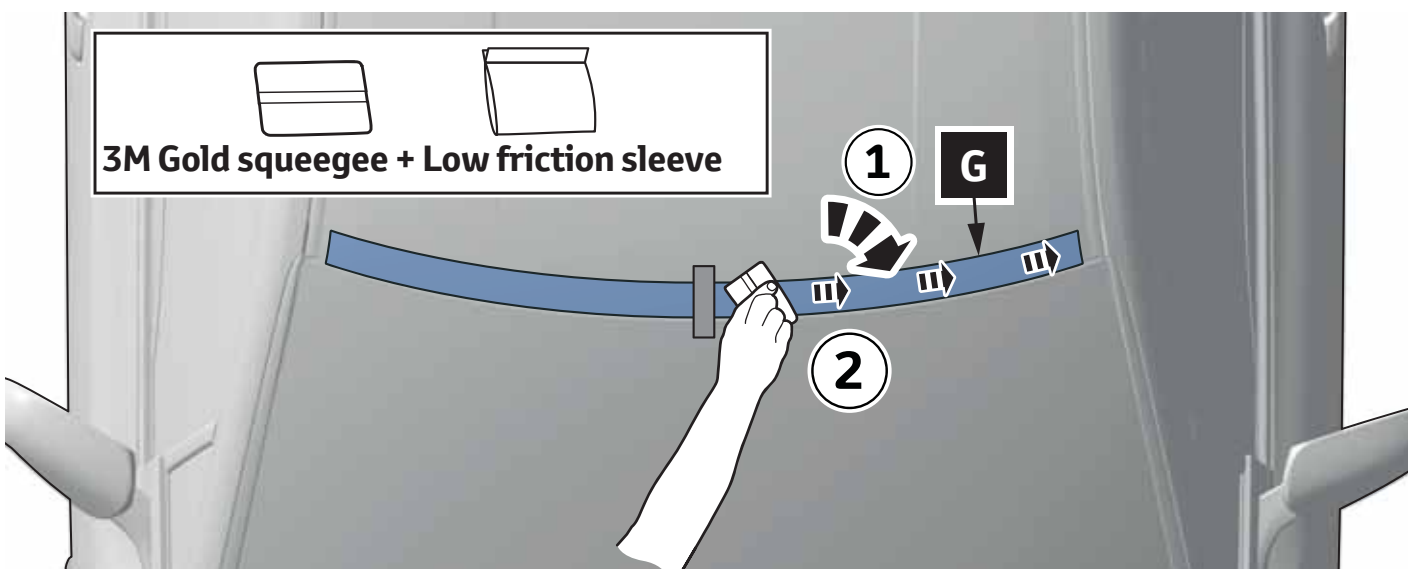


61

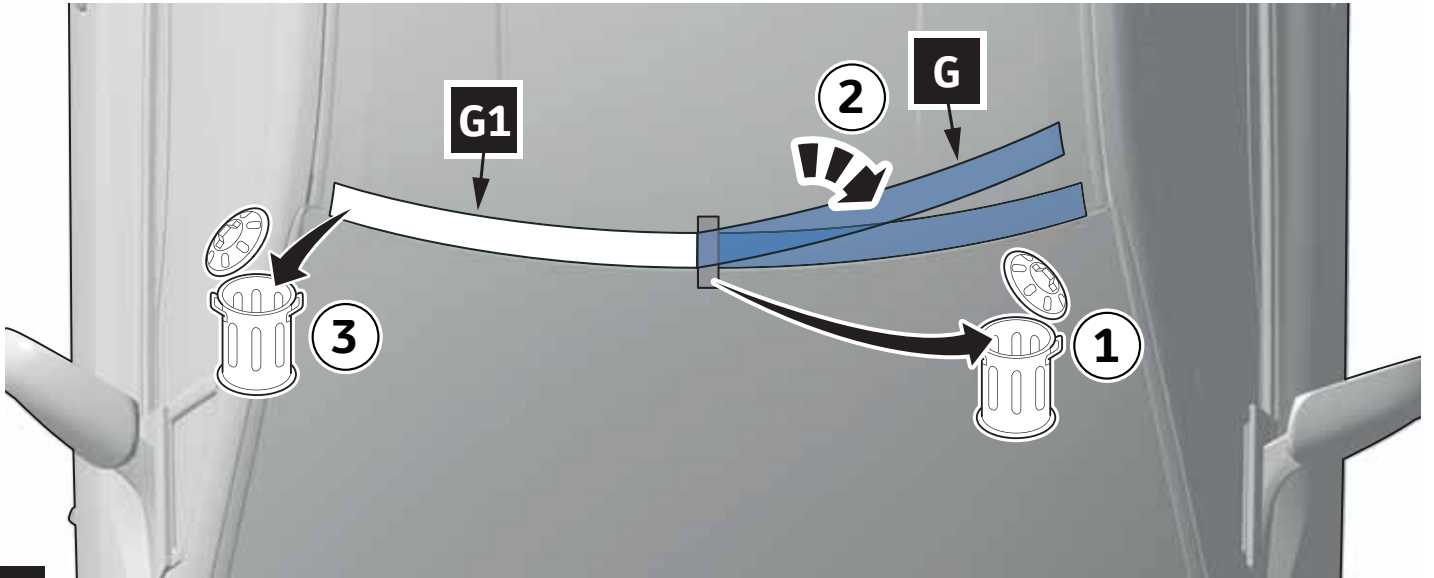


62

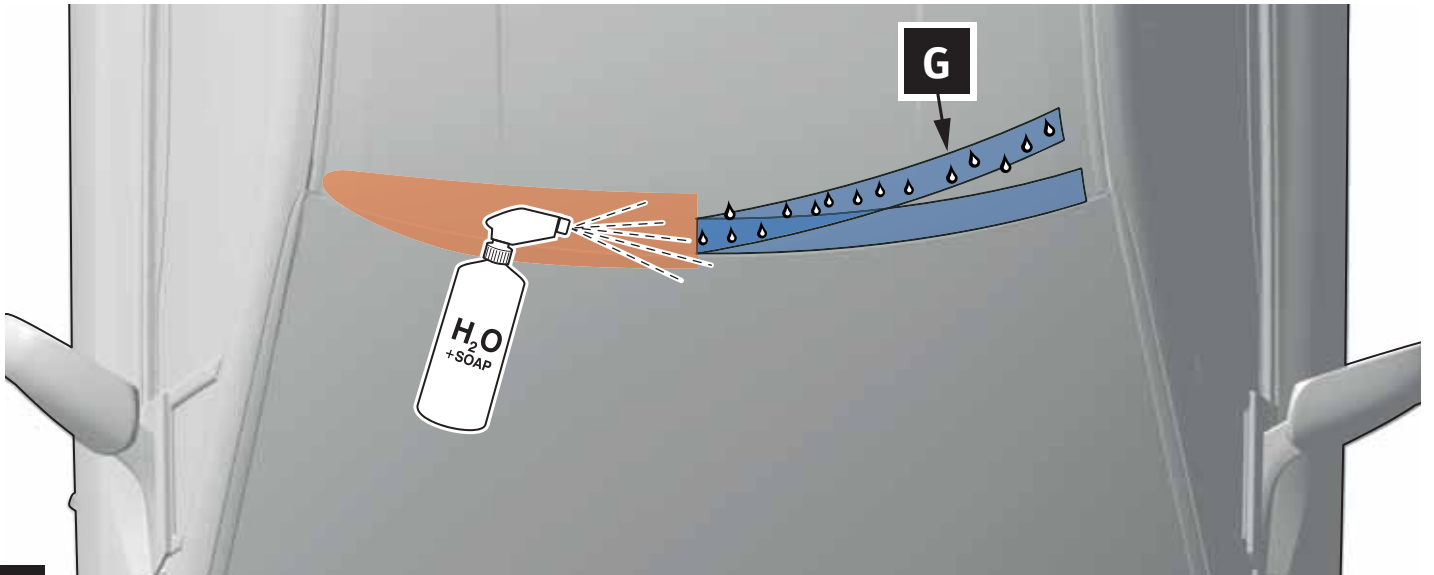


63

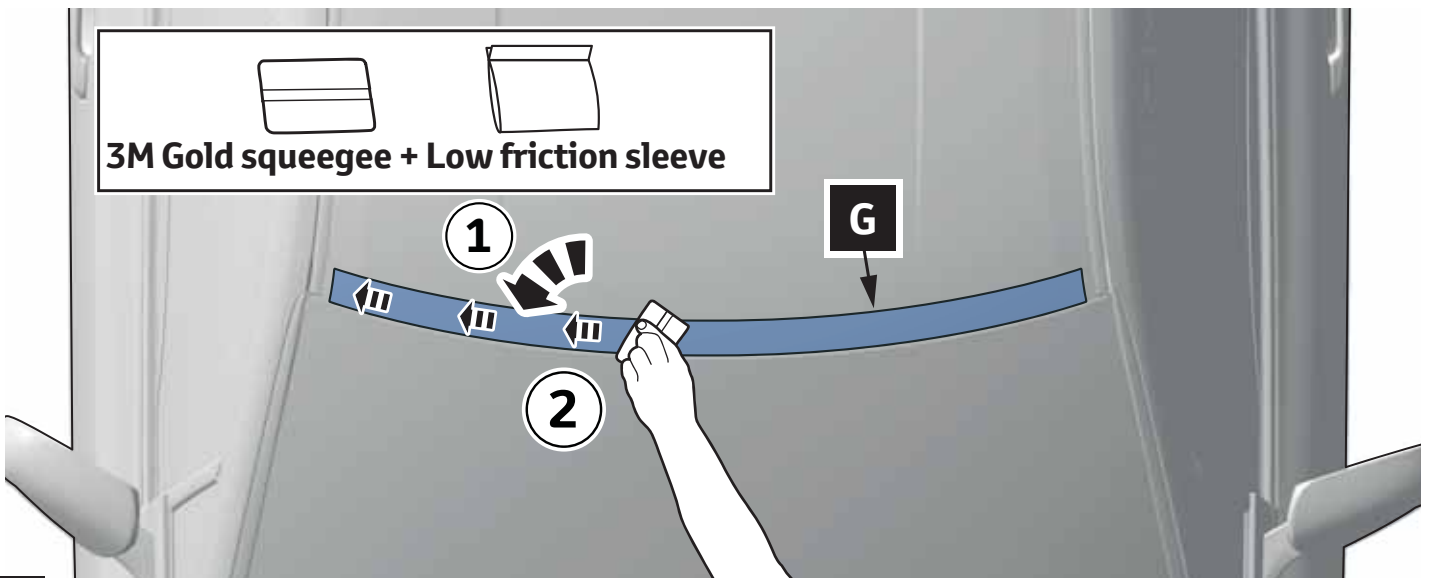





64

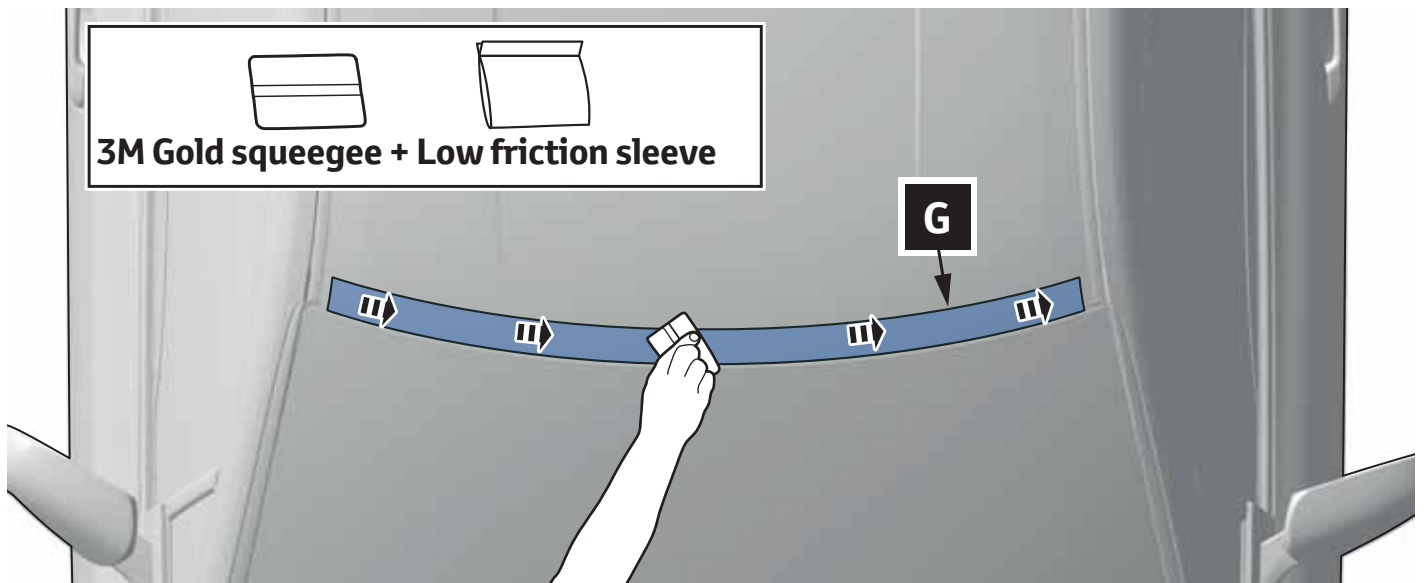

65

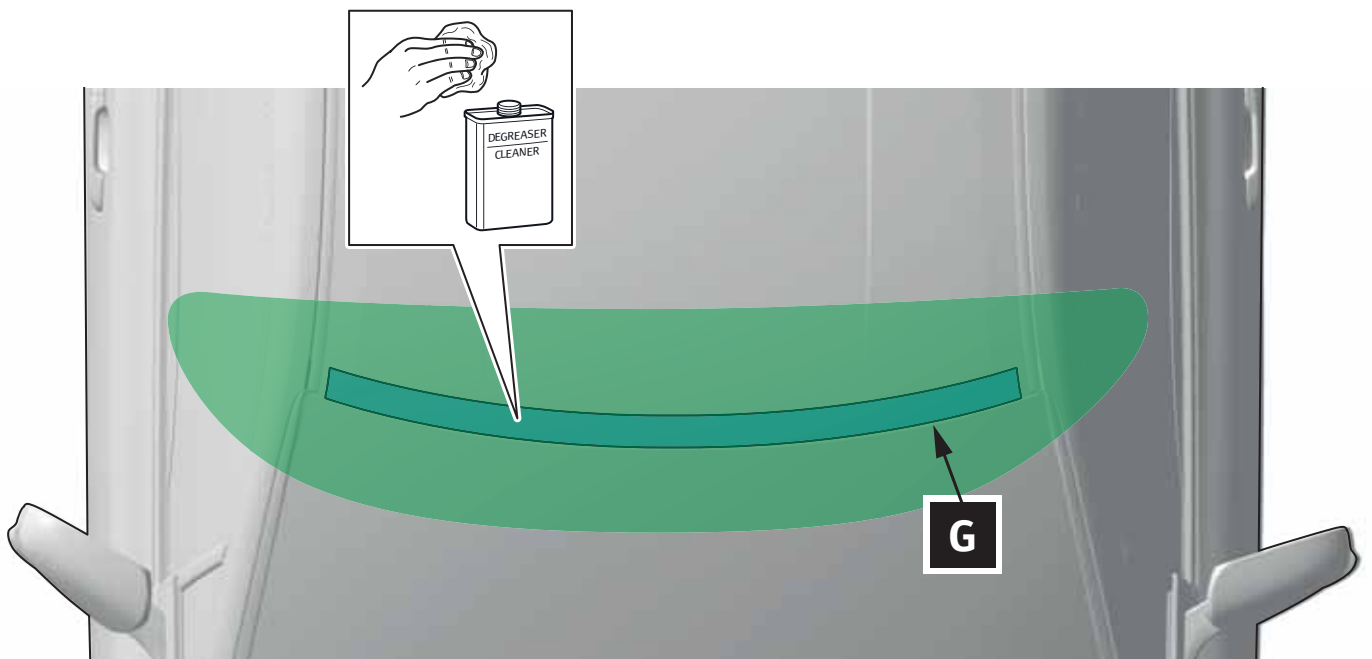

66

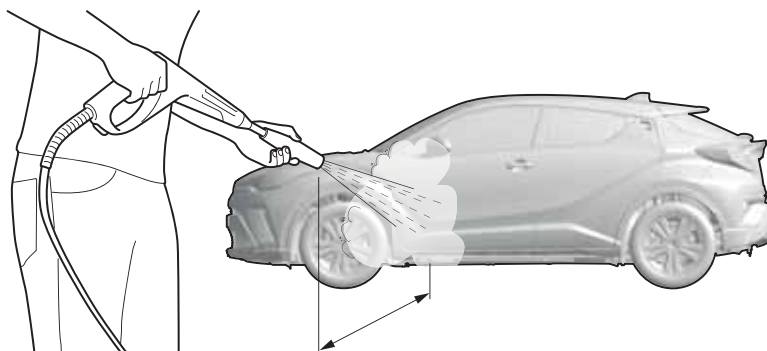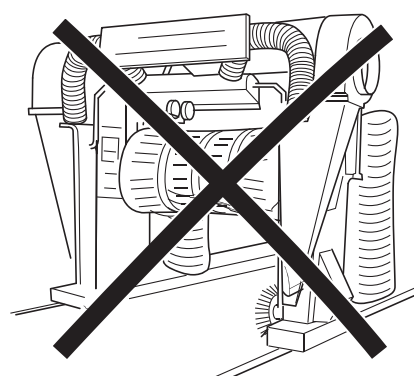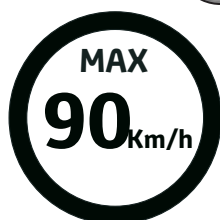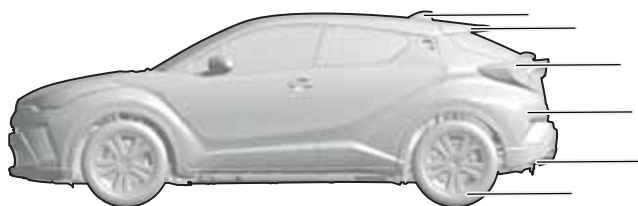

Minimum
50cm

CHECK SHEET Page 1 of 4



TOYOTA

Model / Year

Toyota C-HR
as from 2019/10

Protection film kit

VIN n°

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

ALWAYS A
BETTER WAY

DURING INSTALLATION

1


 **P/N = OK**






2



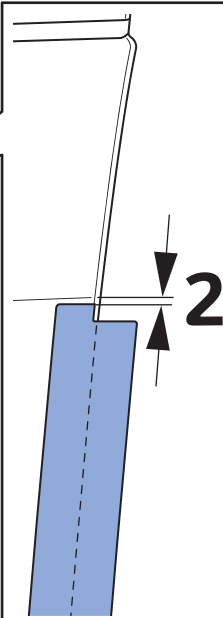

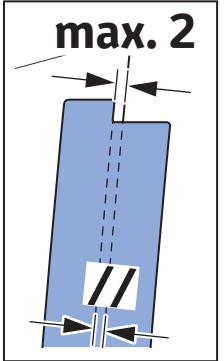



  **= OK**


LHS RHS

3



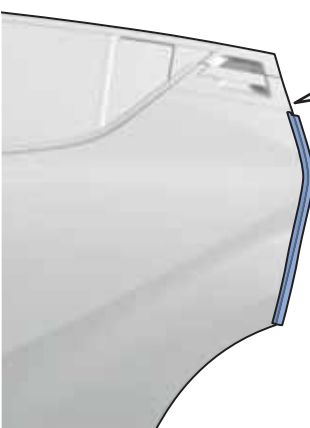

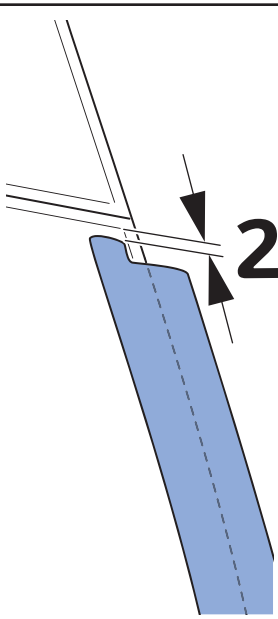


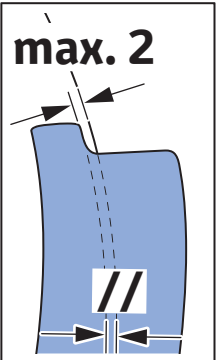
  **= OK**

LHS RHS


 




DURING INSTALLATION

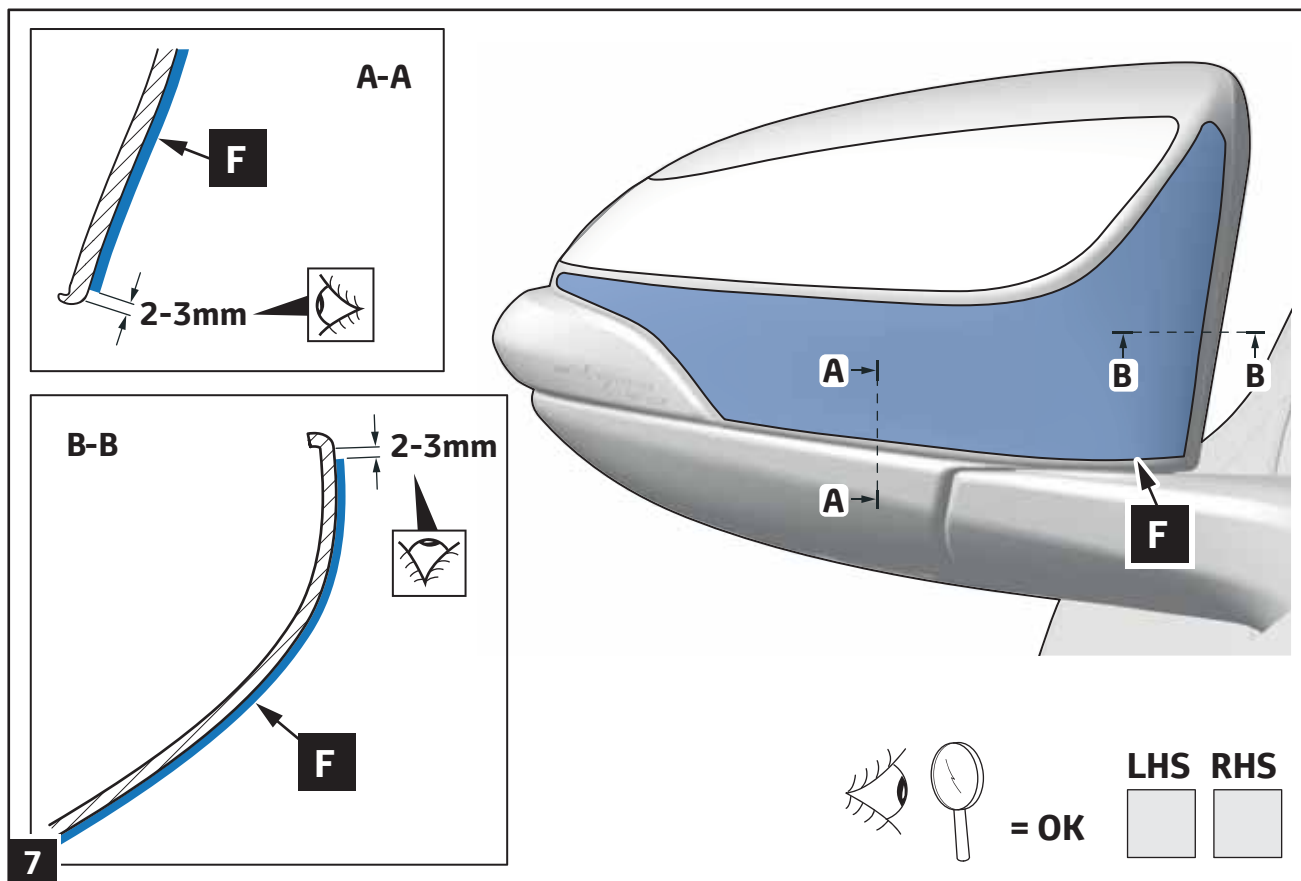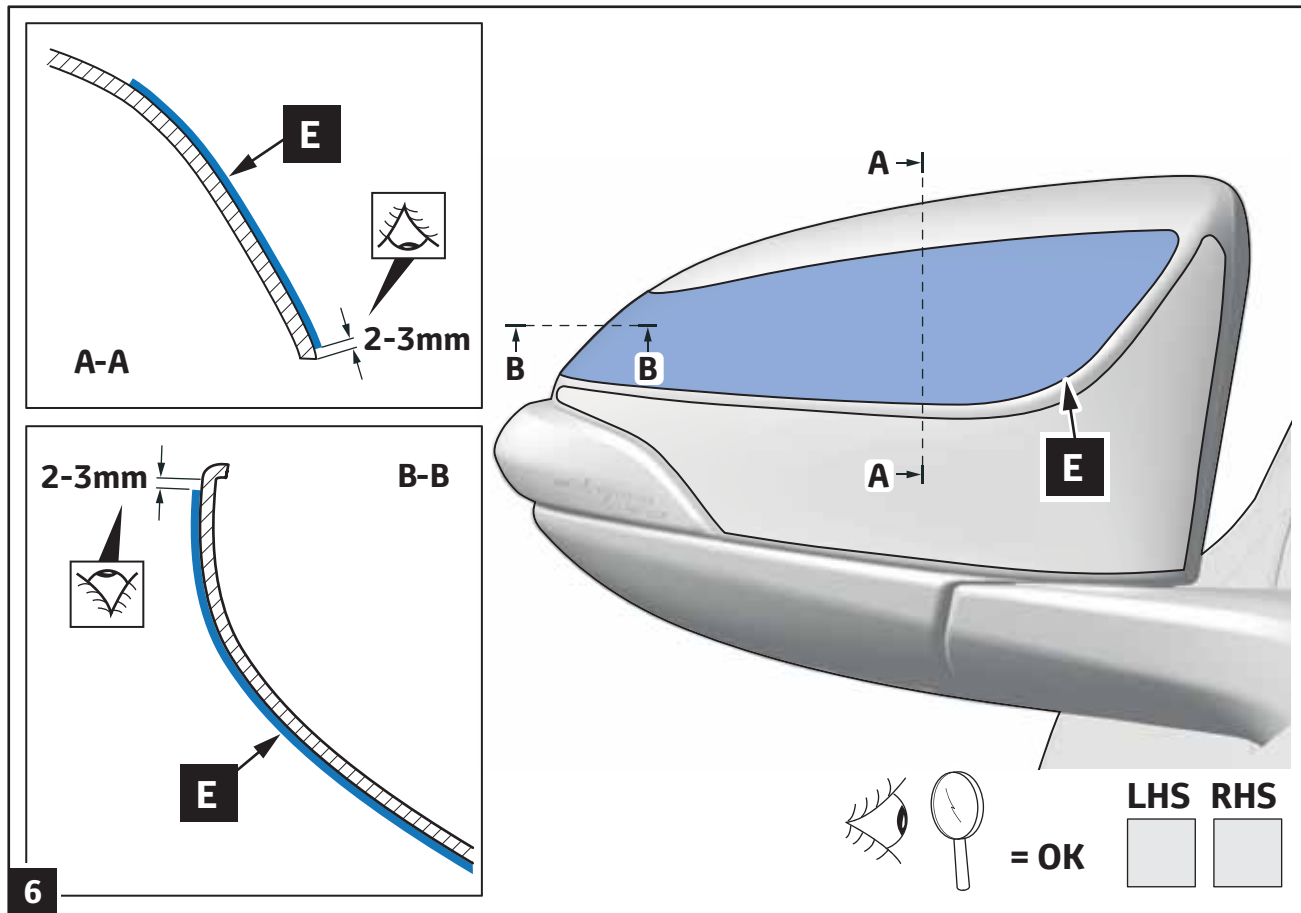

DURING INSTALLATION

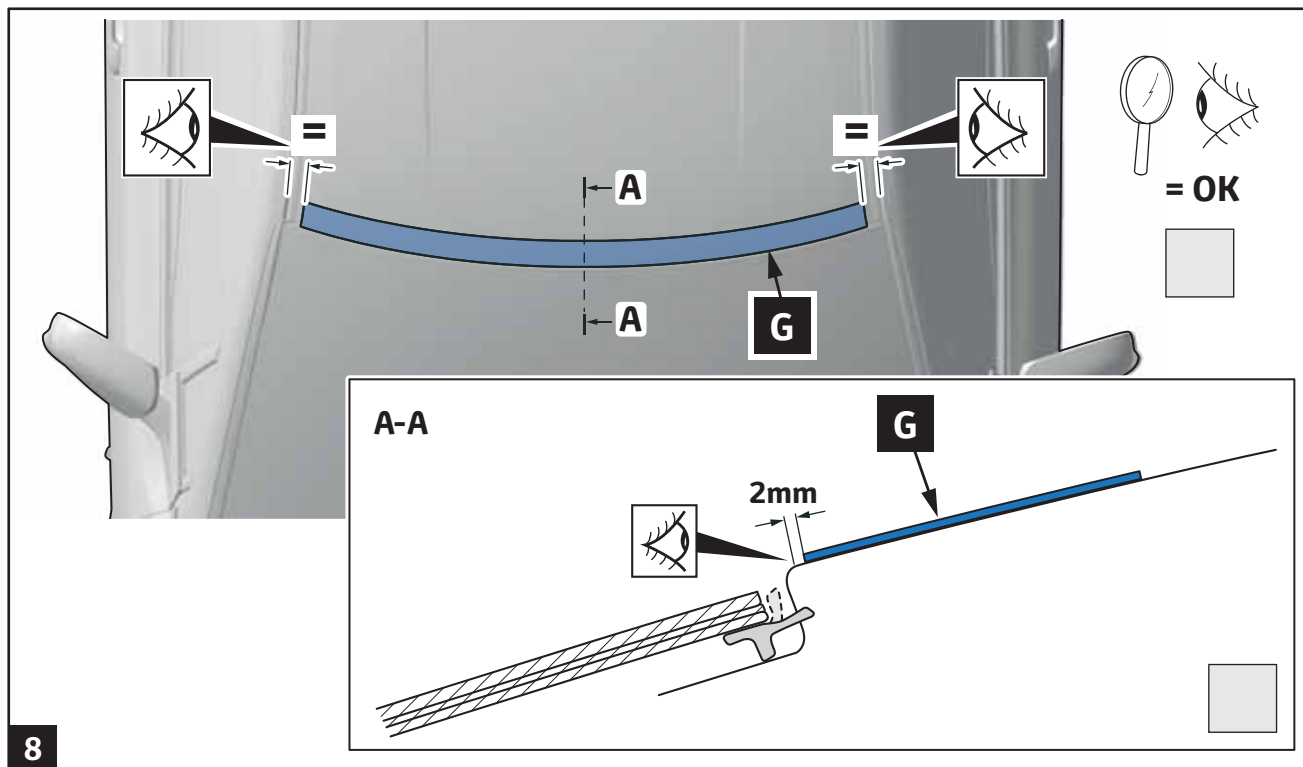

AFTER INSTALLATION

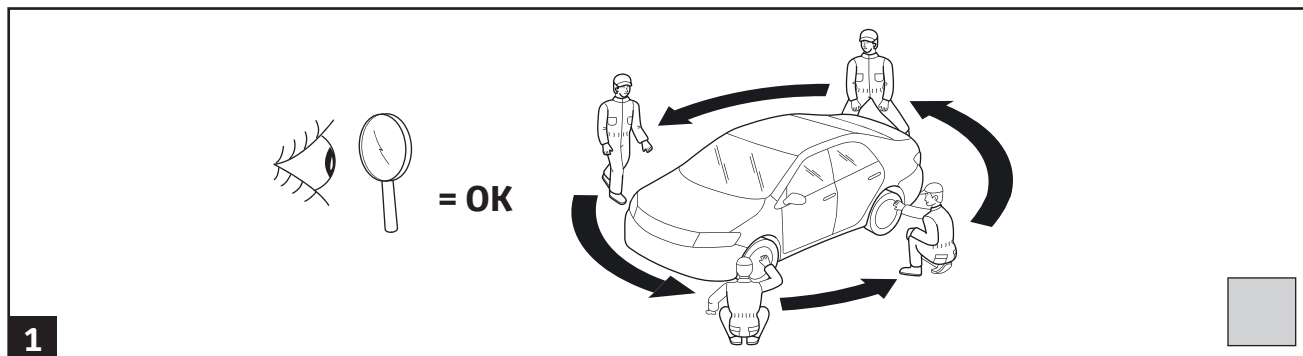

Installation Date:

. . / . . /

Technician Name & Signature:

Stamp: