


FRONT FENDER APRON (ASSY)

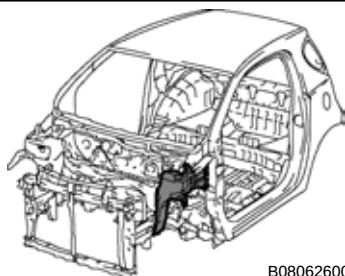

B0806260014

With the cowl top side panel removed.

Symbol meaning

▲ ▲ : Remove Weld Points

⊙ : Cut with Disc Sander etc.



REMOVAL

INSTALLATION

⊙ I : MIG Plug Weld

⊙ : Fillet Weld

REMOVAL·INSTALLATION

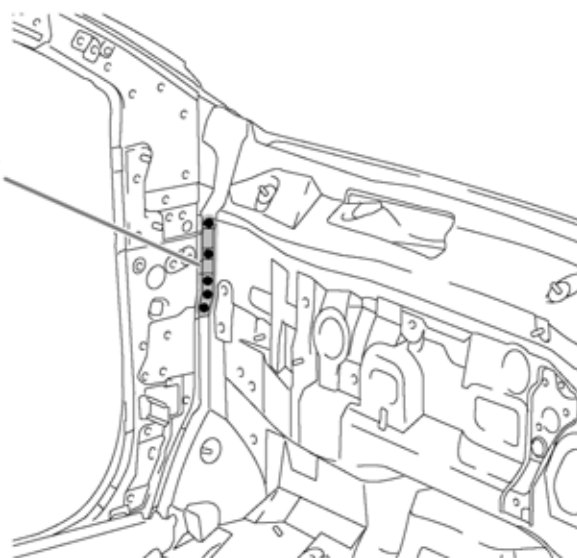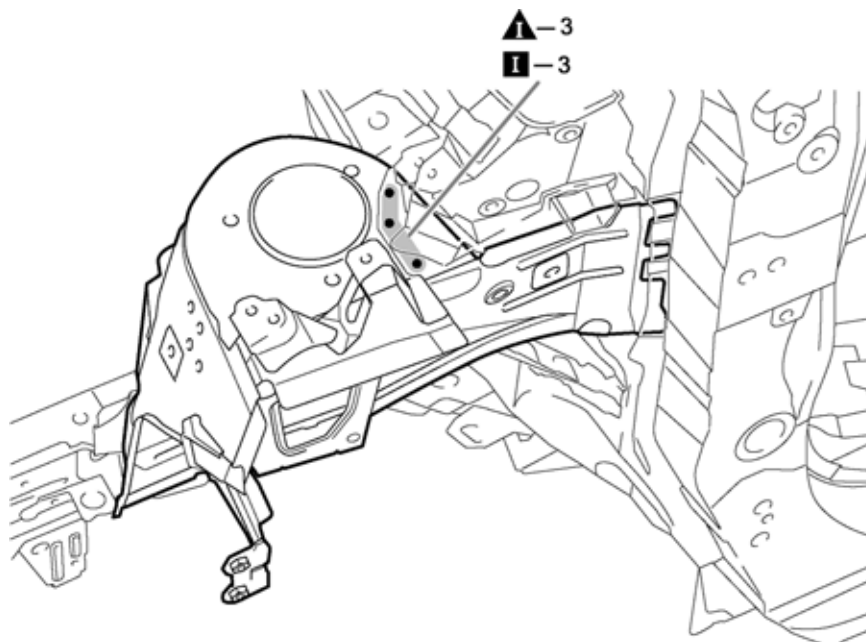

CAUTION

Make sure to attach correctly in accordance with the body dimension diagram as this part affects the front wheel alignment.


B0809050020

INSTALLATION POINT

- 1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 2 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 3 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint-coating)

Symbol meaning

REMOVAL	  : Remove Weld Points	 : Cut with Disc Sander etc.
INSTALLATION	  : MIG Plug Weld	 : Fillet Weld

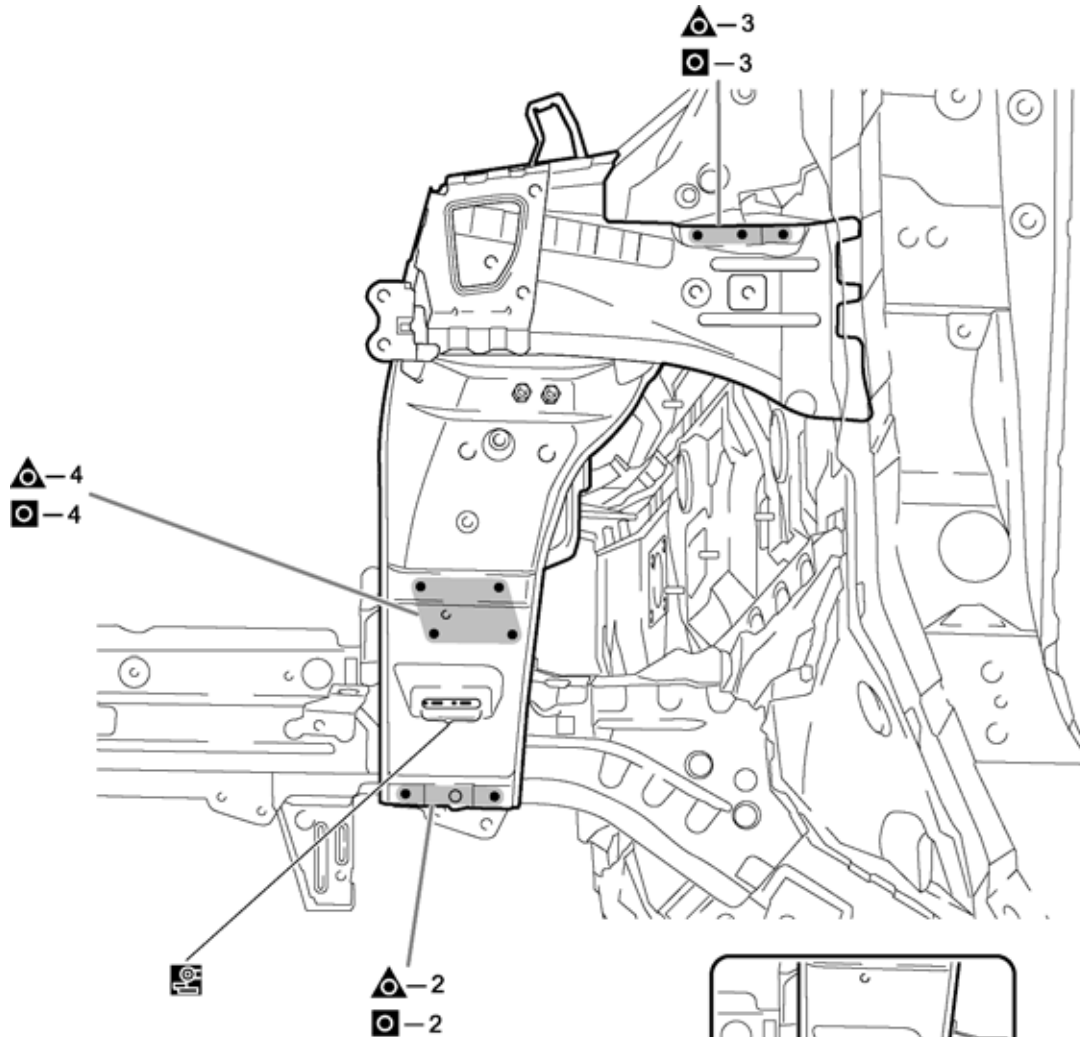**CAUTION**

Make sure to attach correctly in accordance with the body dimension diagram as this part affects the front wheel alignment.

mm (in.)

B0806110037B

INSTALLATION POINT

- 1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 2 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 3 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint coating)
- 4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.