



TOYOTA

ALWAYS A
BETTER WAY

Mirai

Rear Bumper Protection Film

Installation Instructions

Model year: As from 2020/11

Vehicle code: JPD20*-CED*SW

Part number: PT929-62210

Manual reference number: AIM 006 130-0


Revision record

Rev. No.	Date	Page	Step	Remarks

PT929-62210

A

1x



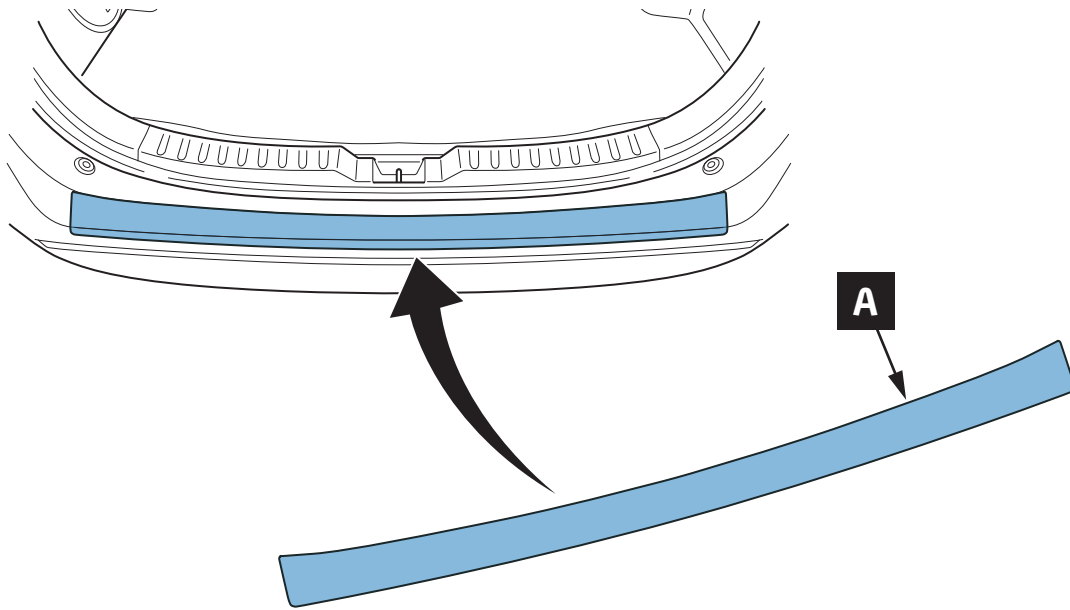


Sprayer

PZ438-00030-90



3M Gold squeegee + Low friction sleeve
NOT INCLUDED

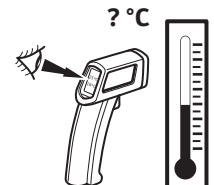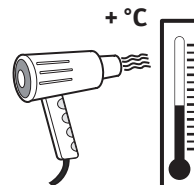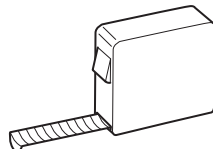





INFO




Material **S**afety **D**ata **S**heet




Technical **D**ata **S**heet

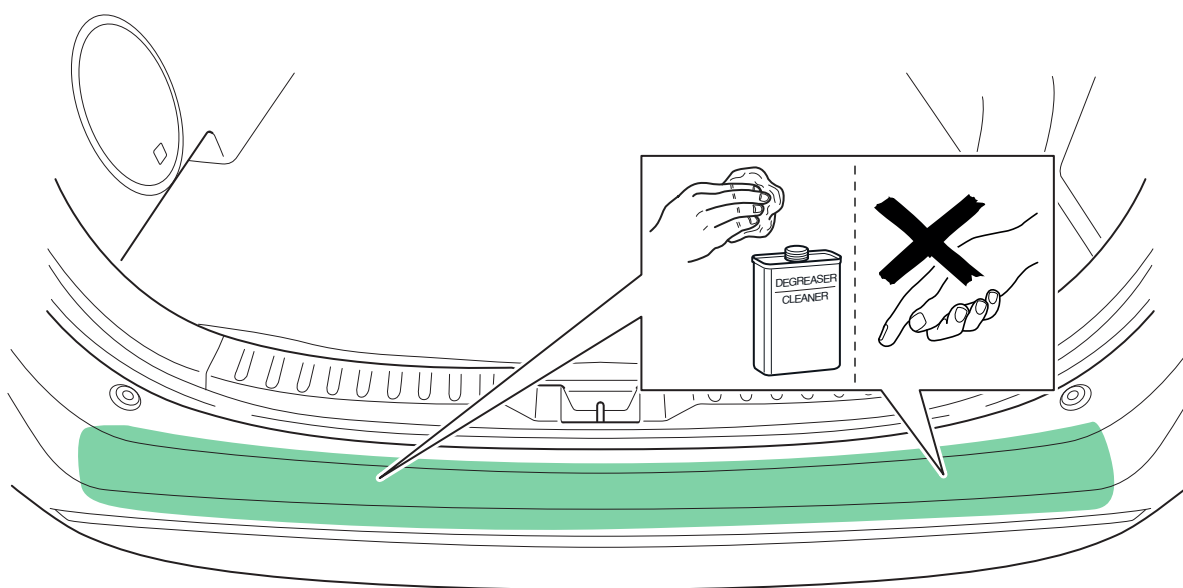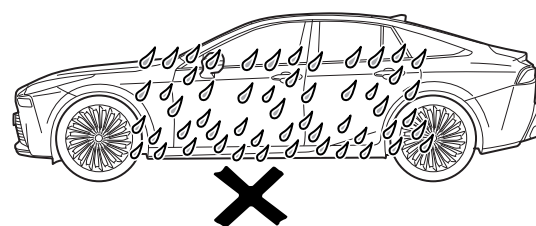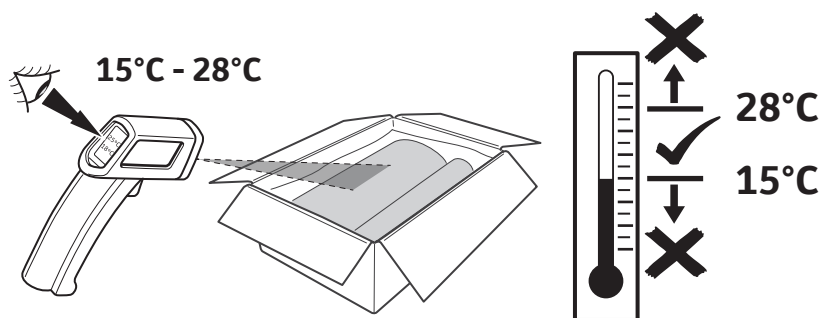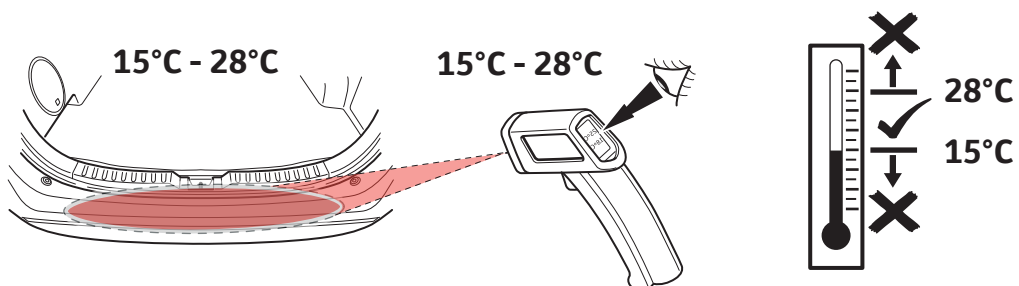

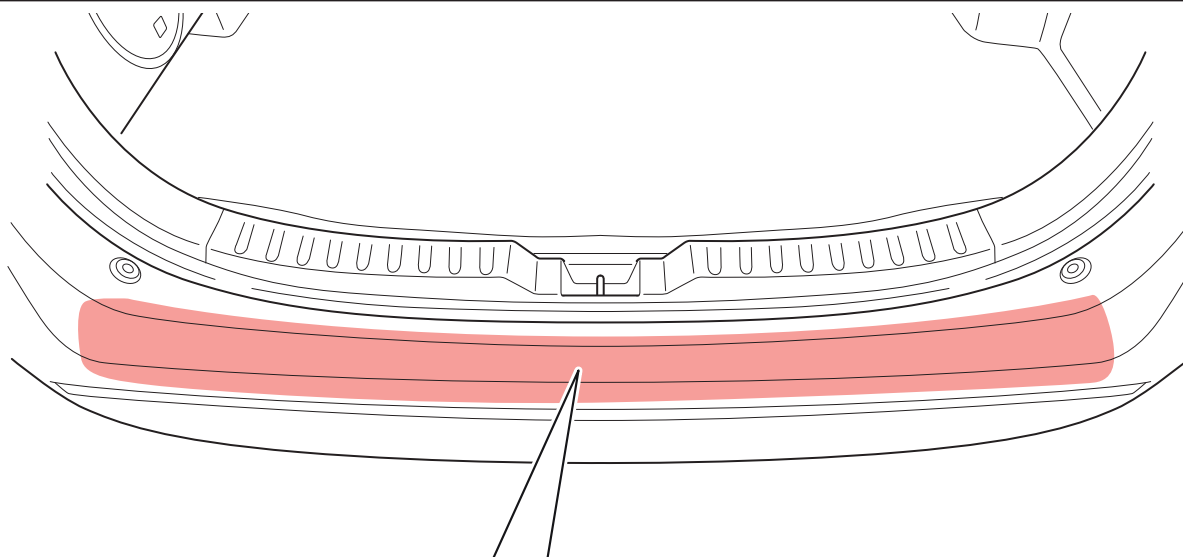



①	< 15°C ➔ ② 15°C - 28°C ➔ ③	②
③	15°C - 28°C ➔ ③	INFO ⌚ ② ➔ ⑪ ✓ ✗

2


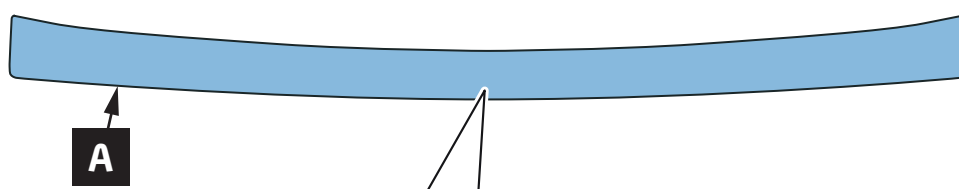


①	< 15°C ➔ ② 15°C - 28°C ➔ ④	②
③	15°C - 28°C ➔ ④	INFO ⌚ ③ ➔ ⑪ ✓ ✗


3

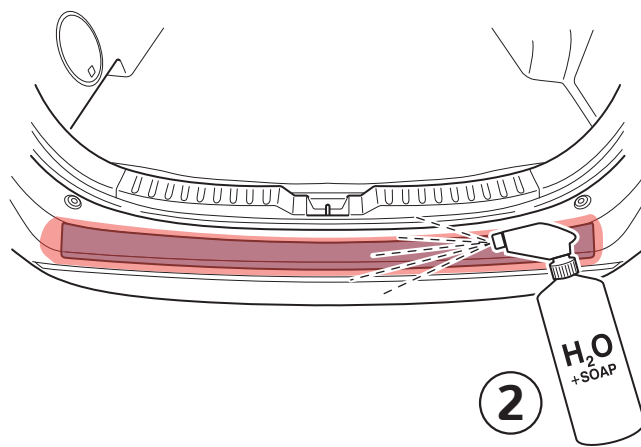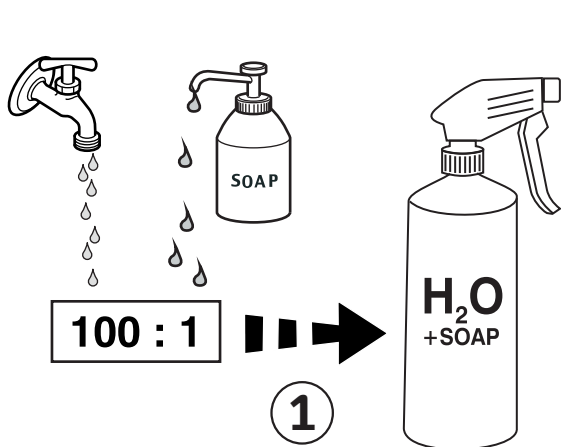





4

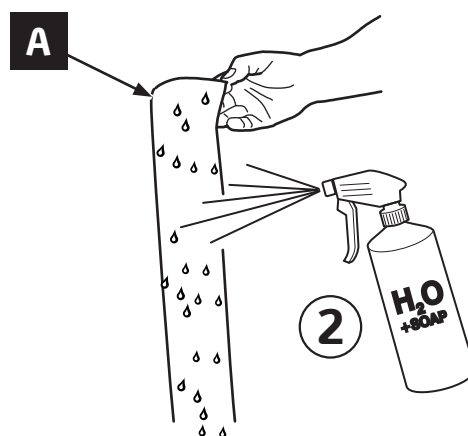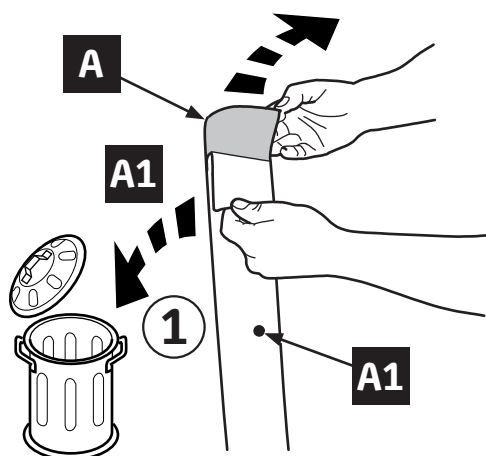


5

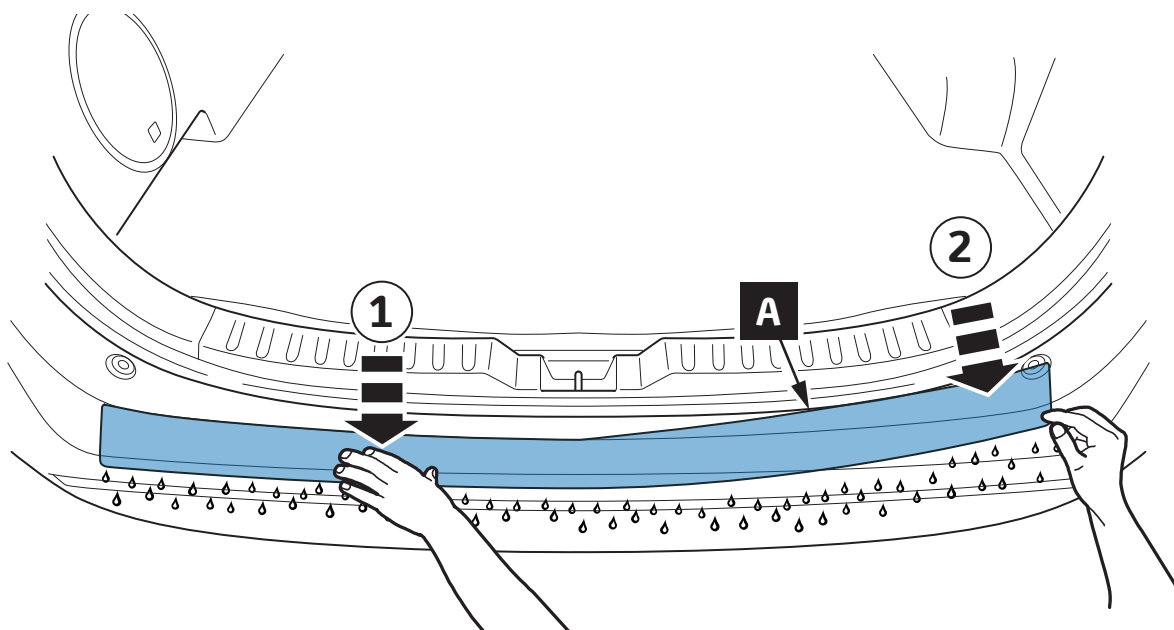


6

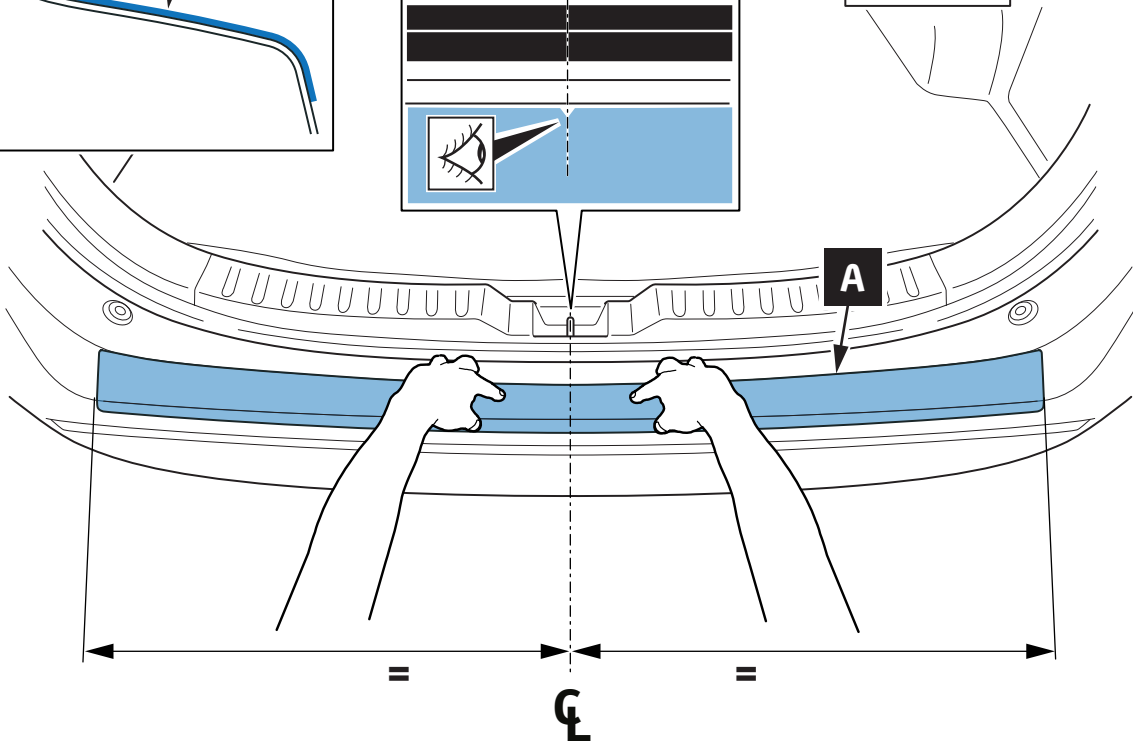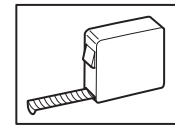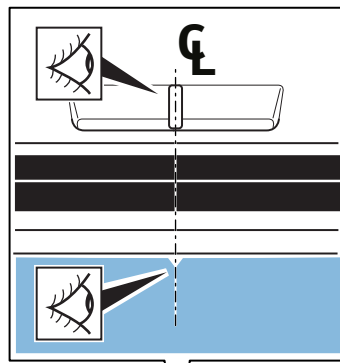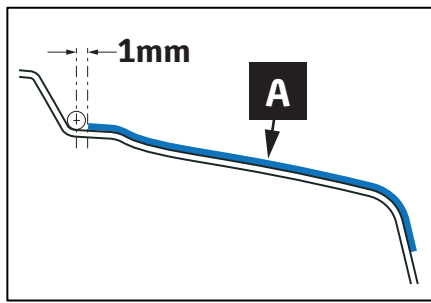


7

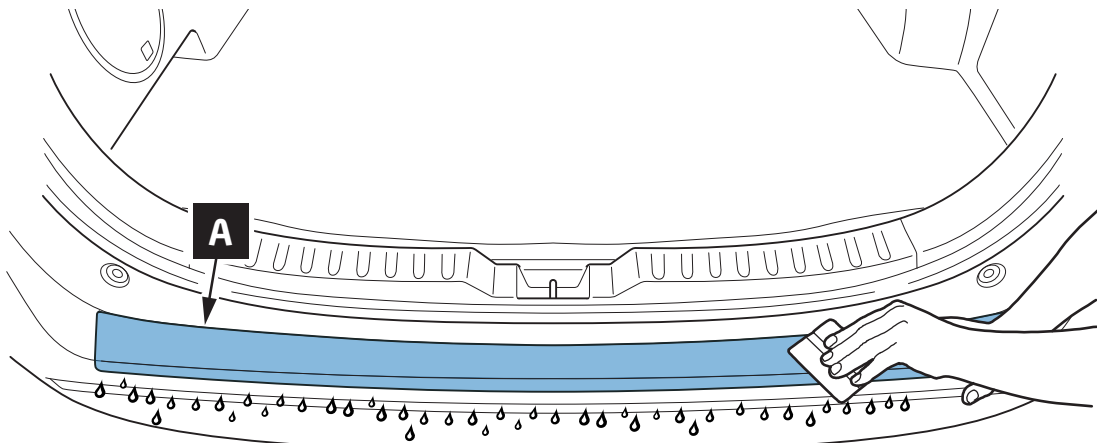


8

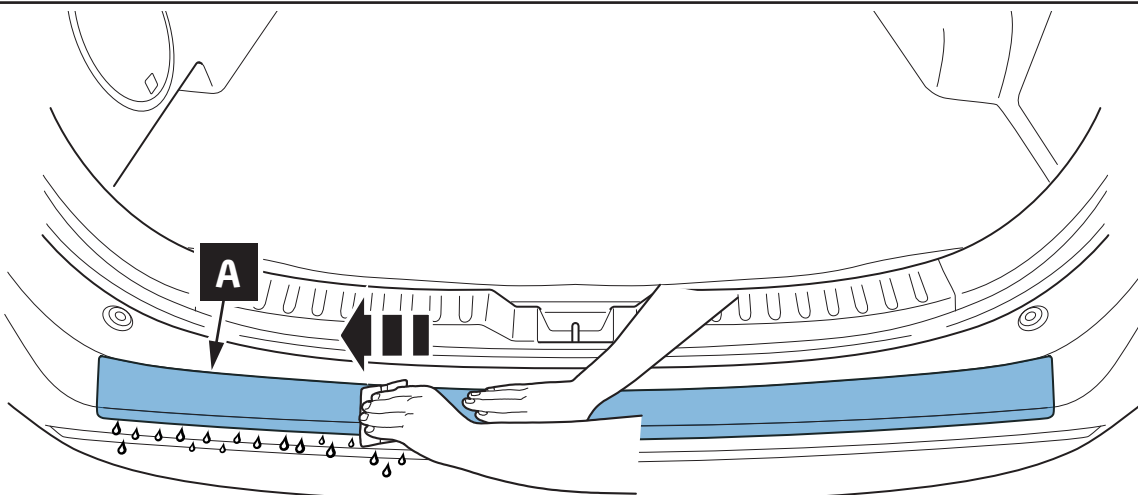


9

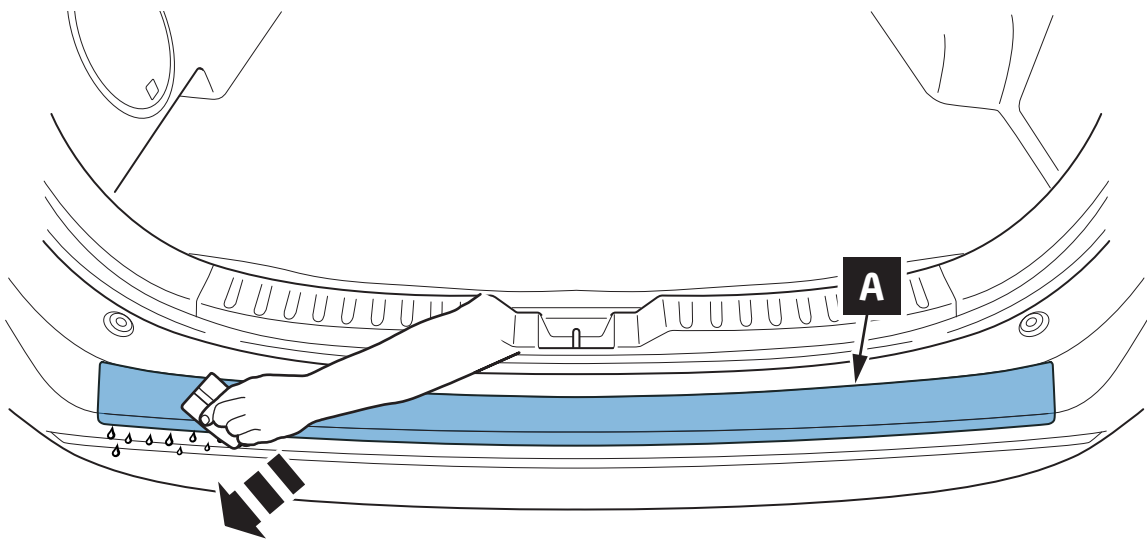

10






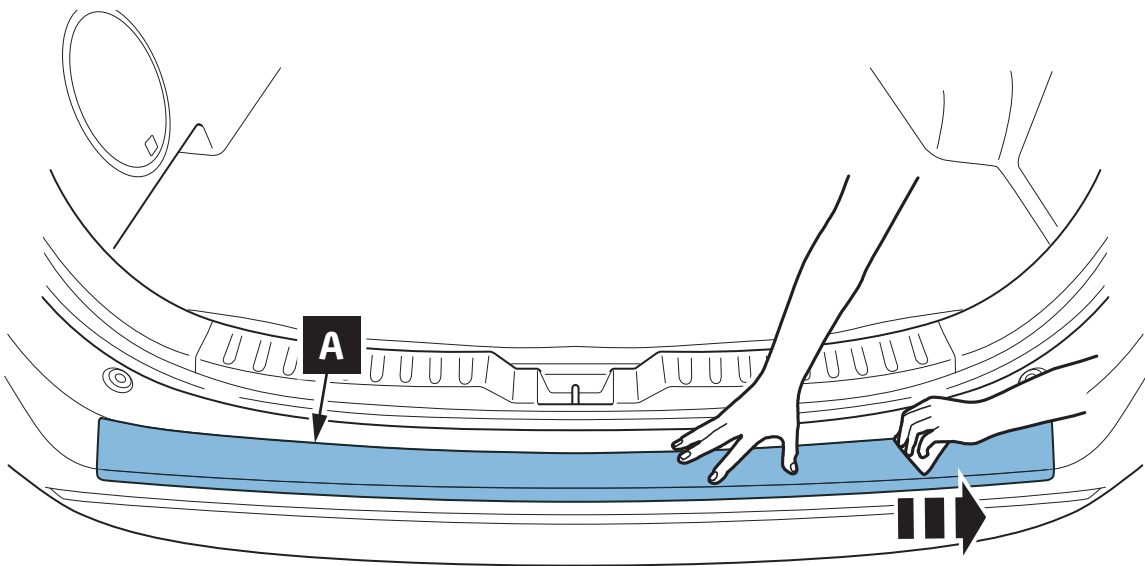


11

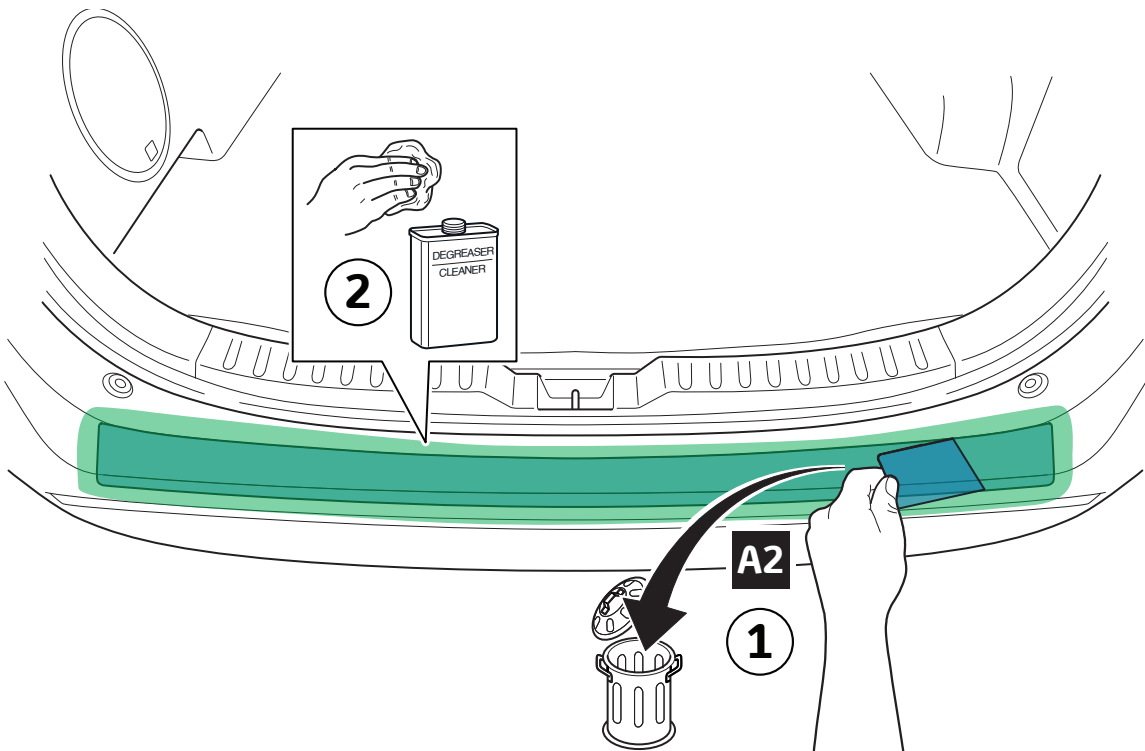

12

INFO

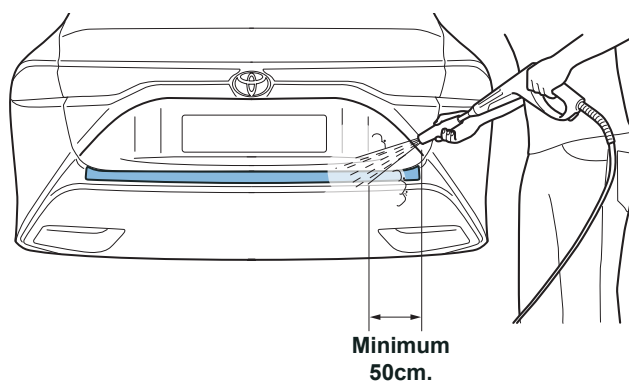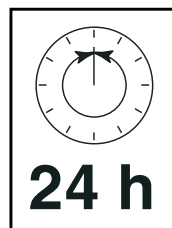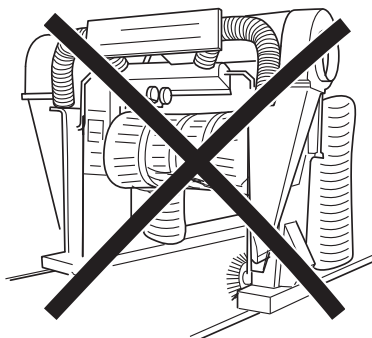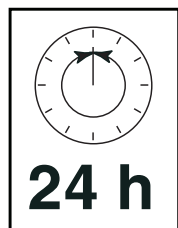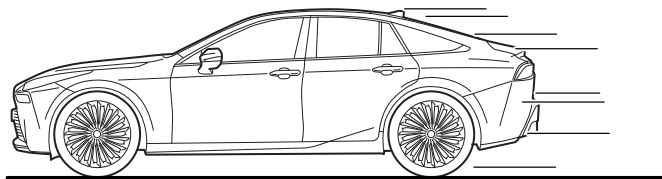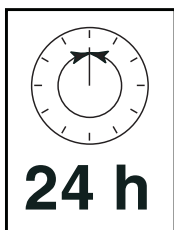



TOYOTA

ALWAYS A
BETTER WAY



CHECK SHEET

Page 1 of 1


Model/Year **Mirai**
As from 2020/11 **Rear Bumper Protection Film**

VIN n°

DURING INSTALLATION

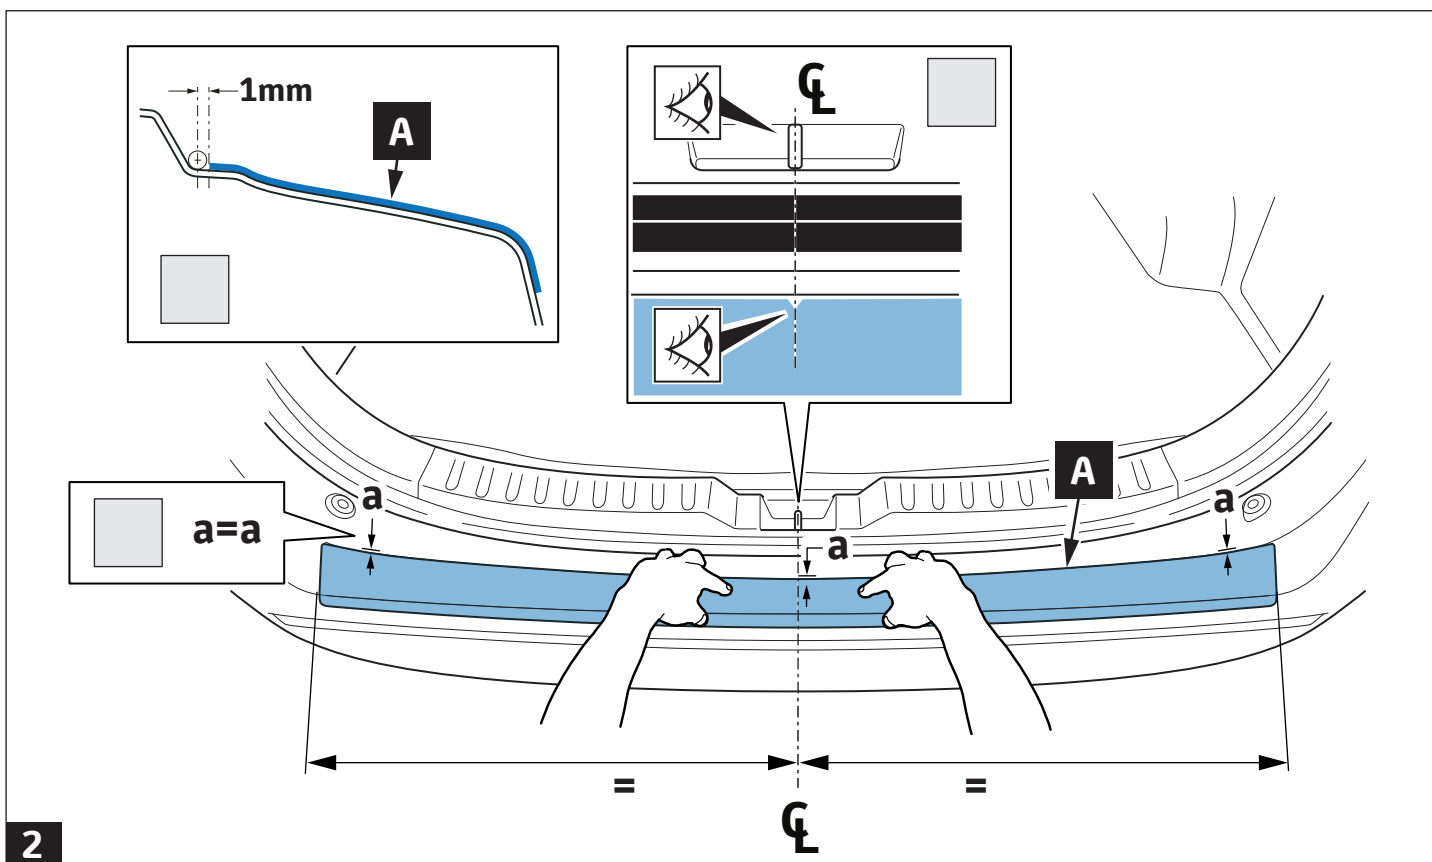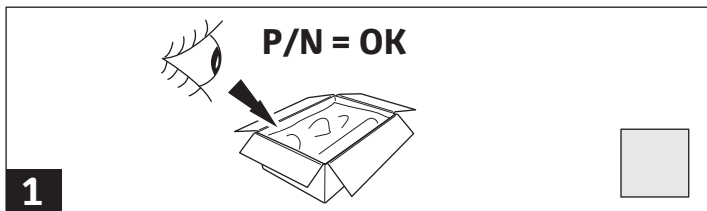

AFTER INSTALLATION

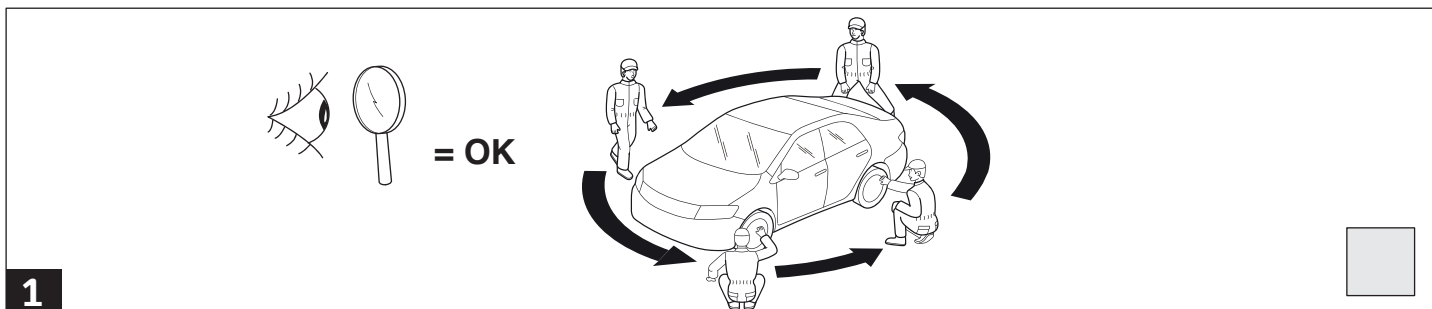

Installation Date:

. . / . . /

Technician Name & Signature:

Stamp:

