


Last Modified: 3-27-2012	6.4 K	From: 201203
Model Year: 2013	Model: FR-S	Doc ID: RM000001OZA01JX
Title: POWER OUTLETS (INT): POWER OUTLET SOCKET: COMPONENTS (2013 FR-S)		

COMPONENTS

ILLUSTRATION

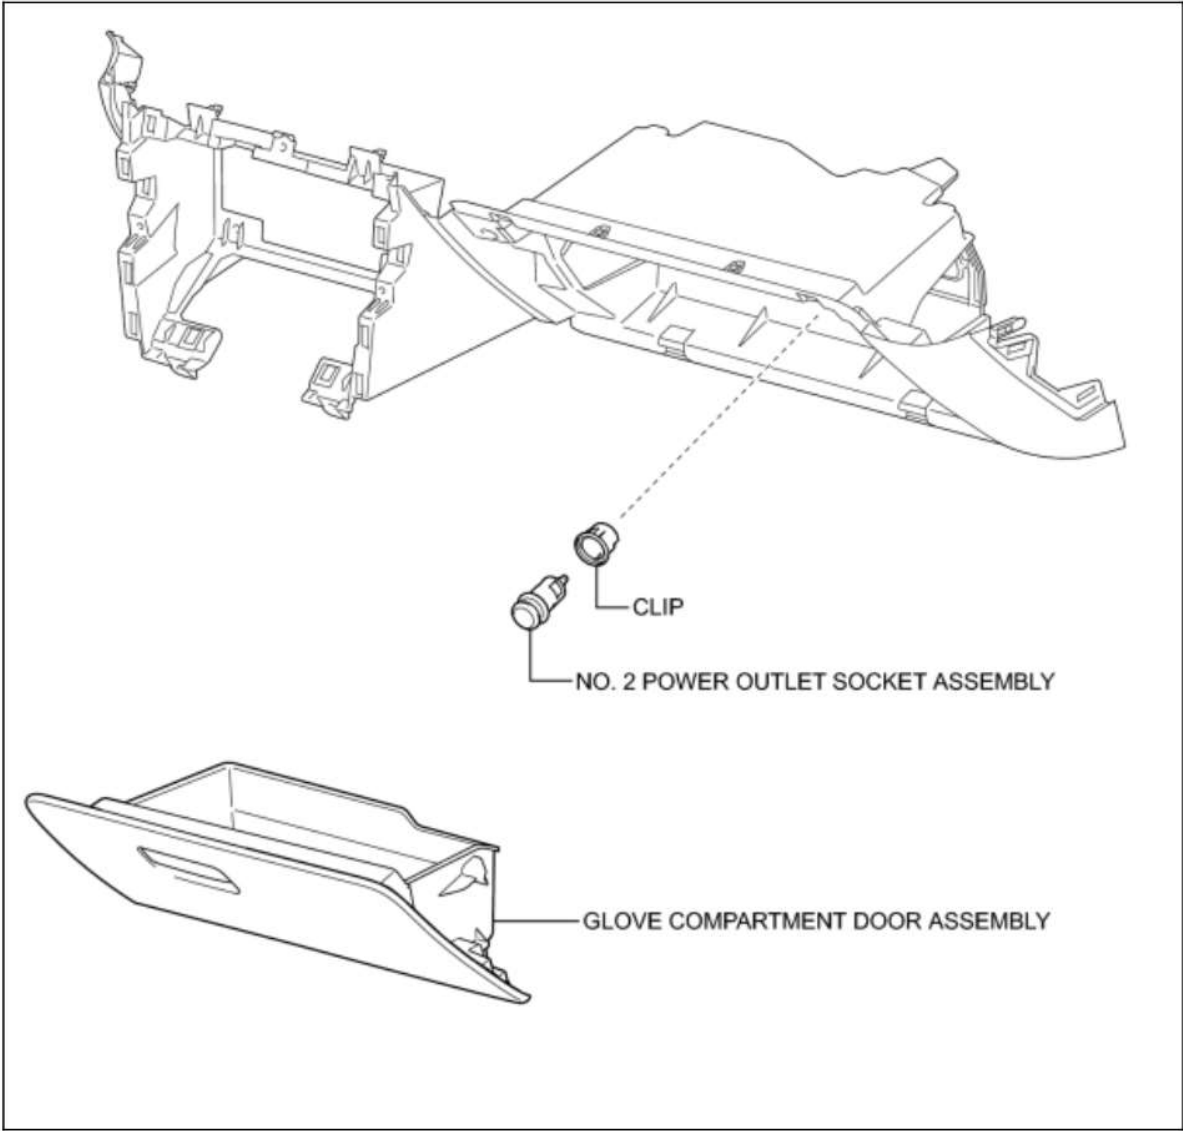


cardiagn.com



Last Modified: 3-27-2012	6.4 A	From: 201203
Model Year: 2013	Model: FR-S	Doc ID: RM000000S6O00VX
Title: POWER OUTLETS (INT): POWER OUTLET SOCKET: INSTALLATION (2013 FR-S)		


INSTALLATION

1. INSTALL CLIP

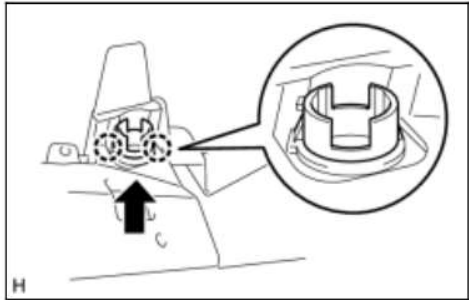

(a) Engage the 2 claws to install the clip.

2. INSTALL NO. 2 POWER OUTLET SOCKET ASSEMBLY

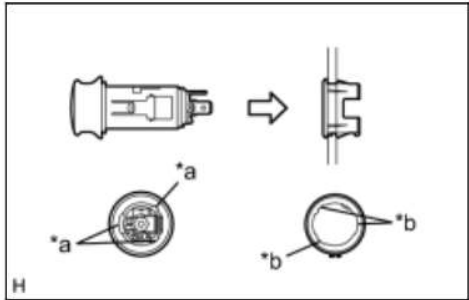

(a) Align the grooves in the clip with the No. 2 power outlet socket assembly ribs, and then attach the No. 2 power outlet socket assembly as shown in the illustration.

Text in Illustration

*a	Rib
*b	Groove

3. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY


INFO



Last Modified: 3-27-2012	6.4 A	From: 201203
Model Year: 2013	Model: FR-S	Doc ID: RM000000S6Q00VX
Title: POWER OUTLETS (INT): POWER OUTLET SOCKET: REMOVAL (2013 FR-S)		

REMOVAL

1. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY
2. REMOVE NO. 2 POWER OUTLET SOCKET ASSEMBLY

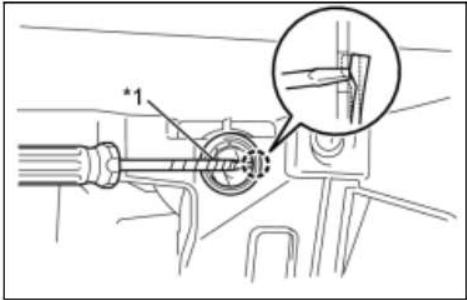

(a) Using a screw driver with its tip wrapped in protective tape, remove the No. 2 power outlet socket assembly while pressing the inside claw.

Text in Illustration


*1	Protective Tape
----	-----------------

(b) Disconnect the connector and remove the No. 2 power outlet socket assembly.

HINT:

If it is difficult to remove the No. 2 power outlet socket assembly, remove the lower instrument panel sub-assembly first and disengage the claw in the back.

3. REMOVE CLIP

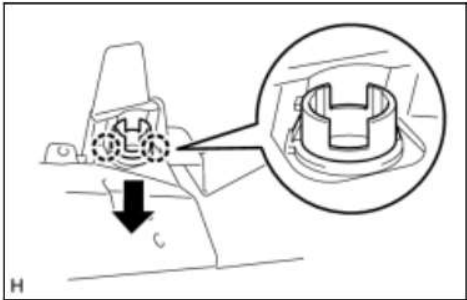


(a) Disengage the 2 claws and remove the clip.

Last Modified: 3-27-2012	6.4 K	From: 201203
Model Year: 2013	Model: FR-S	Doc ID: RM0000041P3007X
Title: POWER OUTLETS (INT): REAR POWER OUTLET SOCKET: COMPONENTS (2013 FR-S)		

COMPONENTS


ILLUSTRATION

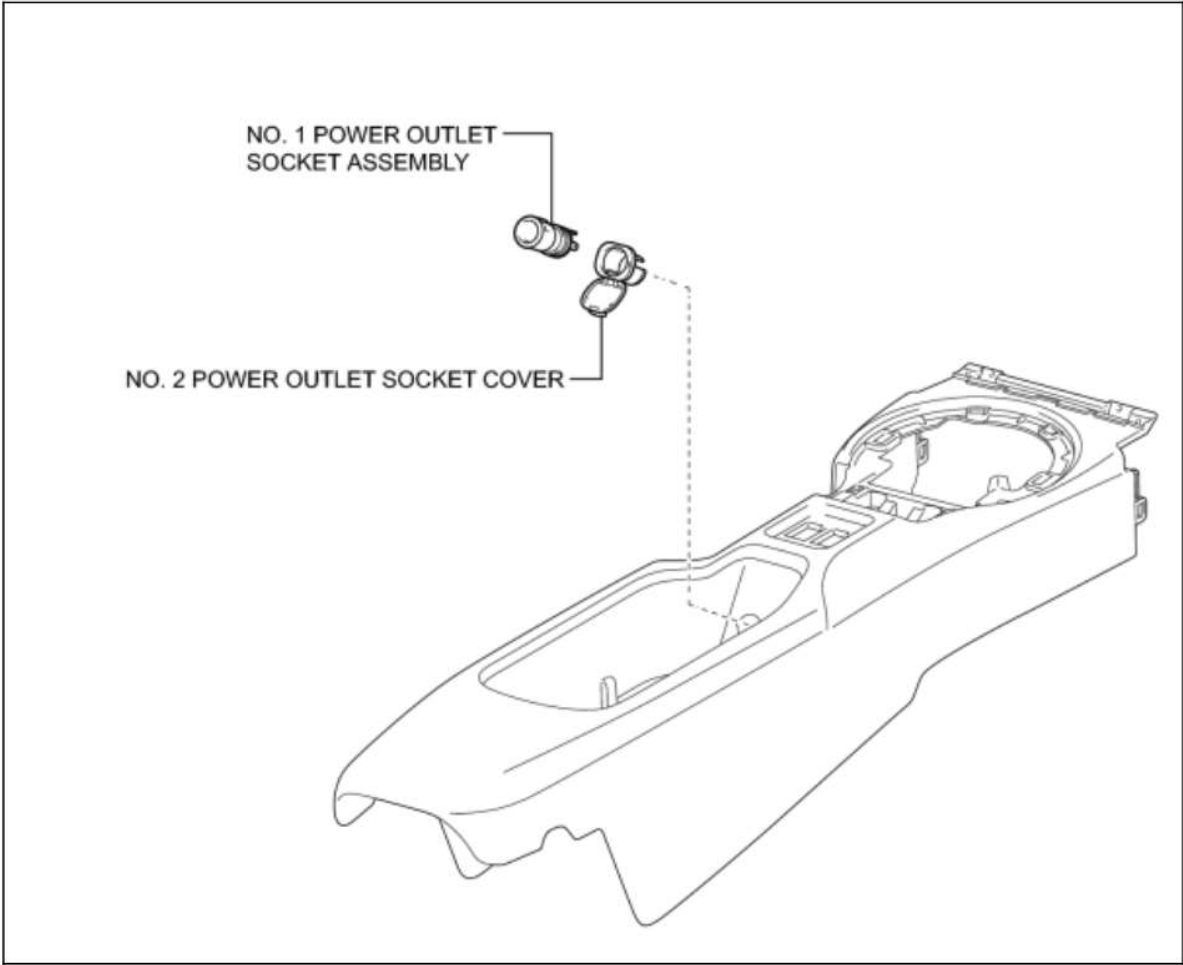

Last Modified: 3-27-2012	6.4 A	From: 201203
Model Year: 2013	Model: FR-S	Doc ID: RM0000023QZ027X
Title: POWER OUTLETS (INT): REAR POWER OUTLET SOCKET: INSTALLATION (2013 FR-S)		


INSTALLATION

1. INSTALL NO. 2 POWER OUTLET SOCKET COVER

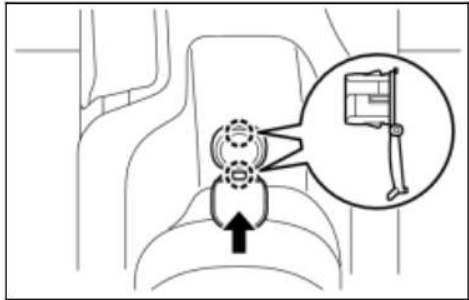

(a) Engage the 2 claws to install the No. 2 power outlet socket cover.

2. INSTALL NO. 1 POWER OUTLET SOCKET ASSEMBLY

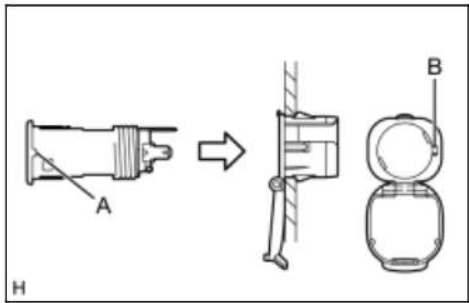


(a) Align the No. 1 power outlet socket assembly A section with the No. 2 power outlet socket cover B section, as shown in the illustration.

(b) Engage the claw to install the No. 1 power outlet socket assembly.

3. INSTALL CONSOLE BOX ASSEMBLY

INFO




Last Modified: 3-27-2012	6.4 A	From: 201203
Model Year: 2013	Model: FR-S	Doc ID: RM0000023QZ028X
Title: POWER OUTLETS (INT): REAR POWER OUTLET SOCKET: REMOVAL (2013 FR-S)		

REMOVAL


1. REMOVE CONSOLE BOX ASSEMBLY

INFO

2. REMOVE NO. 1 POWER OUTLET SOCKET ASSEMBLY

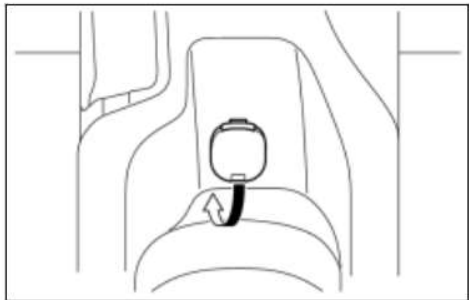

(a) Open the cap of the No. 2 power outlet socket cover.

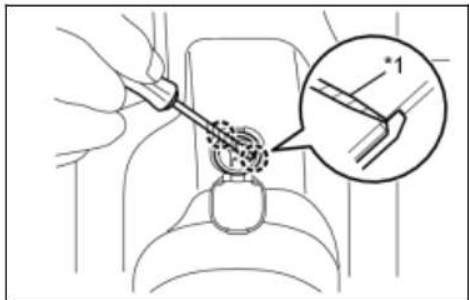

(b) Using a screwdriver, disengage the claw and remove the No. 1 power outlet socket assembly.


Text in Illustration

*1	Protective Tape
----	-----------------

HINT:

Tape the screwdriver tip before use.

3. REMOVE NO. 2 POWER OUTLET SOCKET COVER

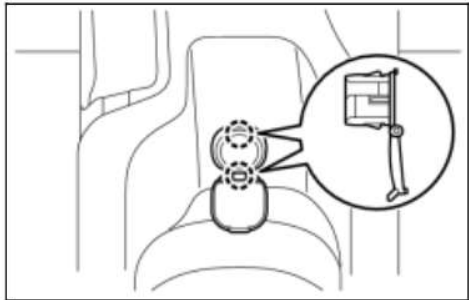

(a) Disengage the 2 claws and remove the No. 2 power outlet socket cover.