

HANDS-FREE CAR KIT
KFZ FREISPRECHEINRICHTUNG
HANDENVRIJE CAR KIT
LE KIT MAINS-LIBRES

THF 10, 20, 30

**TOYOTA
HILUX**

INSTALLATION MANUAL-EINBAUANLEITUNG-MANUEL D'INSTALLATION-MONTAGE HANDLEIDING

LHD

HANDS-FREE CAR KIT
KFZ FREISPRECHEINRICHTUNG
HANDENVRIJE CAR KIT
LE KIT MAINS-LIBRES


THF 10

**TOYOTA
HILUX**

INSTALLATION MANUAL-EINBAUANLEITUNG-MANUEL D'INSTALLATION-MONTAGE HANDLEIDING

LHD


21

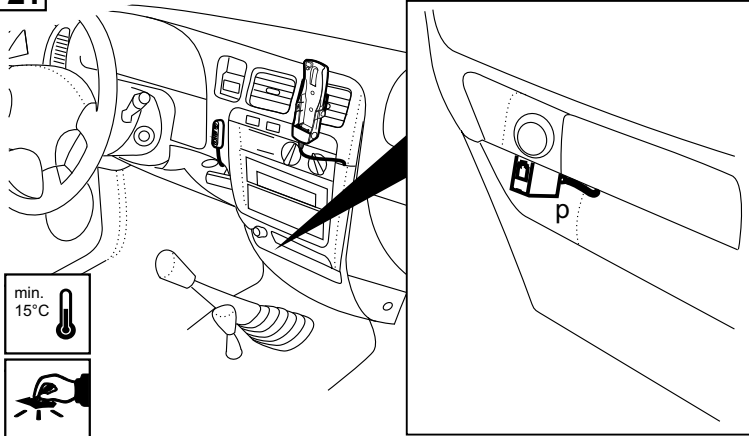

HILUX


LHD

PARTNUMBER: THF 10

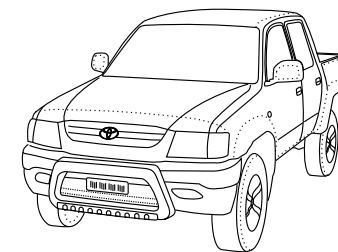

HANDS-FREE CAR KIT
KFZ FREISPRECHEINRICHTUNG
HANDENVRIJE CAR KIT
LE KIT MAINS-LIBRES

KIT CONTENT - STÜCKLISTE - CONTENU - KIT INHOUD

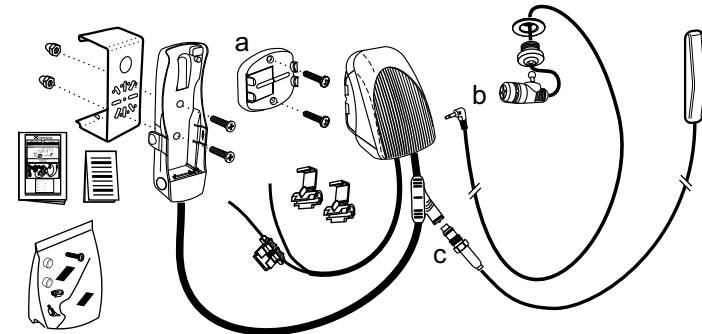




Weight: 0,54 kg
Installation time: 1 h


Gewicht: 0,54 kg
Einbauzeit: 1 h

Poids: 0,54 kg
Temps d'installation: 1 h



Gewicht: 0,54 kg
Installatie tijd: 1 h

INSTALLATION MANUAL-EINBAUANLEITUNG-MANUEL D'INSTALLATION-MONTAGE HANDLEIDING


PARTNAME: HANDS-FREE CAR KIT		PARTNUMBER: THF 10	
TOOLS/WERKZEUGE/OUTILS/WERKTUIGEN			
MODEL CODE: KDN165 L - * R***W*			
😊		☹	
VEHICLE OPTION/FAHRZEUG OPTION/OPTION VEHICULE/VOERTUIG OPTIE			
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
10		10	
ACCESSORY/ZUBEHÖR/ACCESSOIRE			
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
10		10	
SAFETY PRECAUTION/SICHERTHEITSMASSNAHME/PRECAUTIONS DE SECURITE/VEILIGHEIDVOORZIENINGEN			
	Step/Punkt/Point/Stap 4/21		Step/Punkt/Point/Stap
	Step/Punkt/Point/Stap		Step/Punkt/Point/Stap
TOOLS/WERKZEUGE/OUTILS/WERKTUIGEN			
 Drill Bohrmaschine Perceuse Boormachine	 Ø 3 mm Bits Ø 3 mm Bohrer Ø 3 mm Forets Ø 3 mm Boor	 Ø 15 mm Bits Ø 15 mm Bohrer Ø 15 mm Forets Ø 15 mm Boor	
 Philips 2	 PLASTIC CLEANER	 10 mm	
 5,5 mm		 Pencil Stift Stylo pointe Potlood	
 Gum tape Klebeband Ruban adhésif Kleefband		 Ø 5 mm	

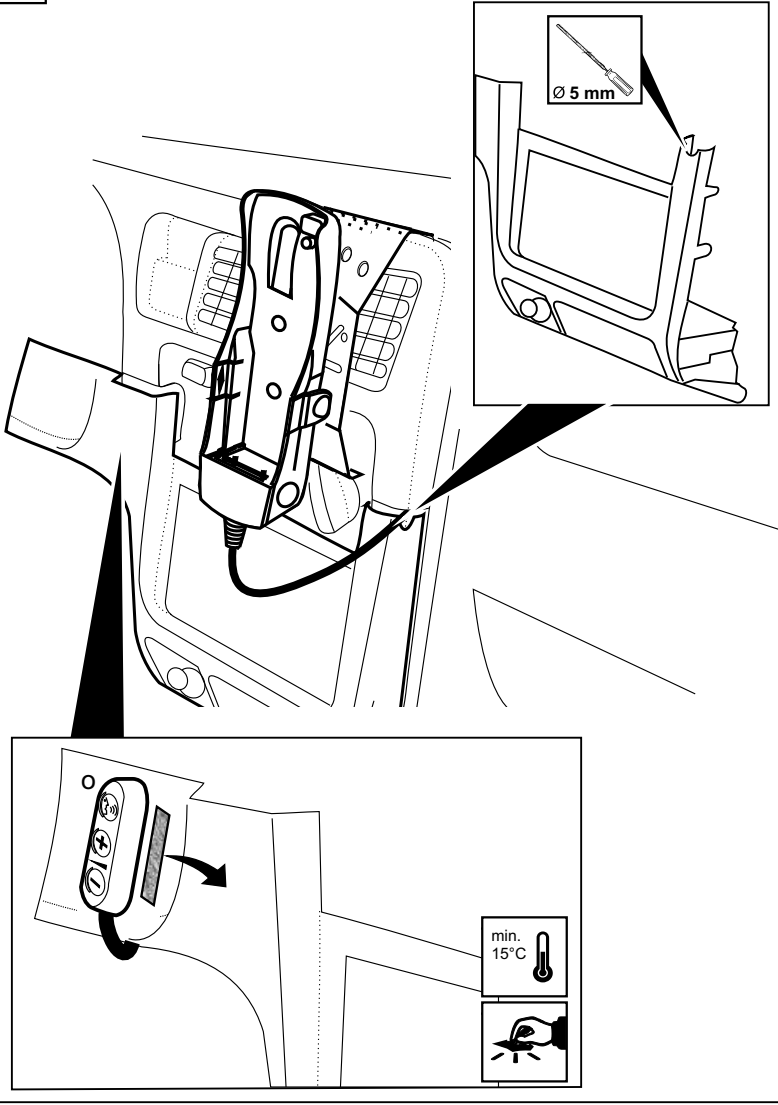

18

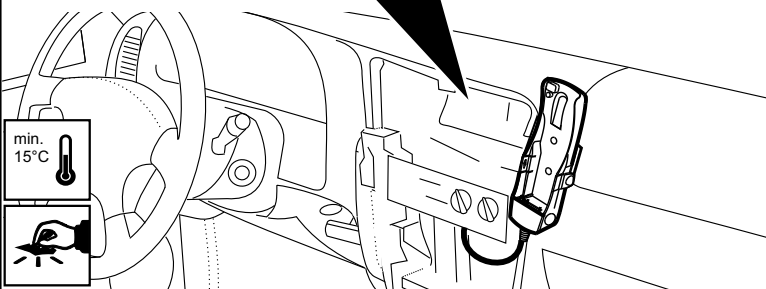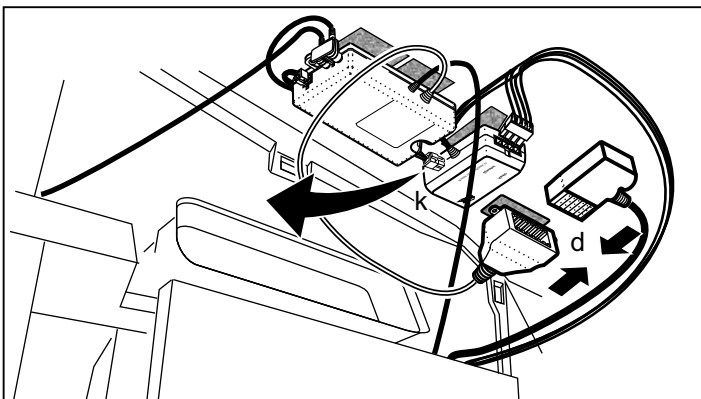


19

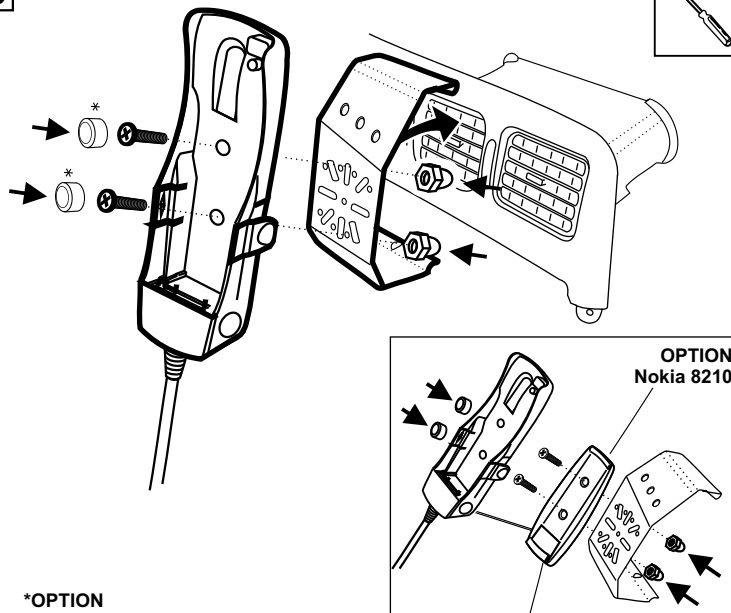


*OPTION

Page: 12/14



INFO

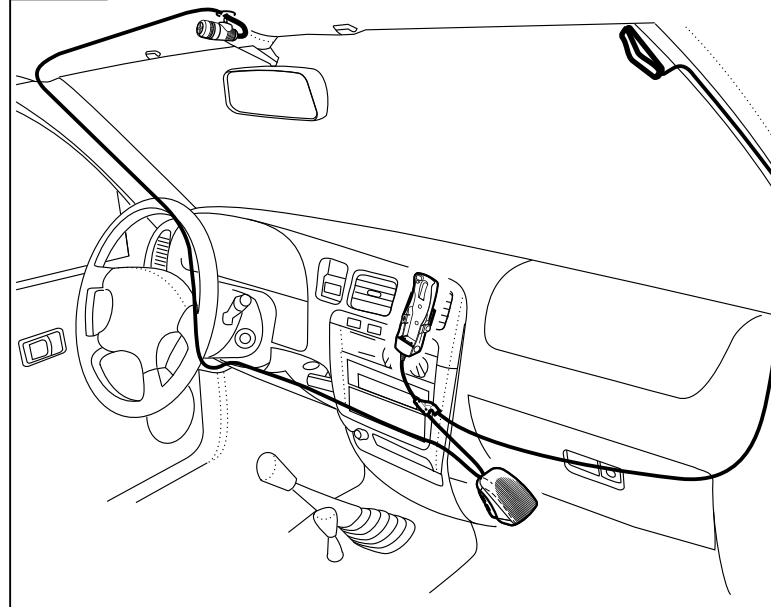


1

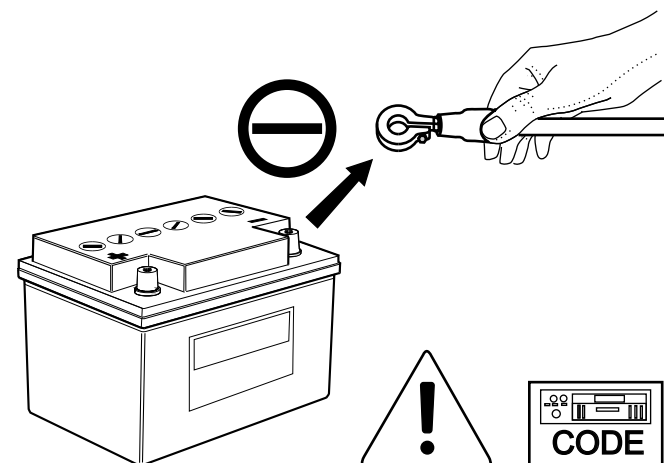

Page: 3/12

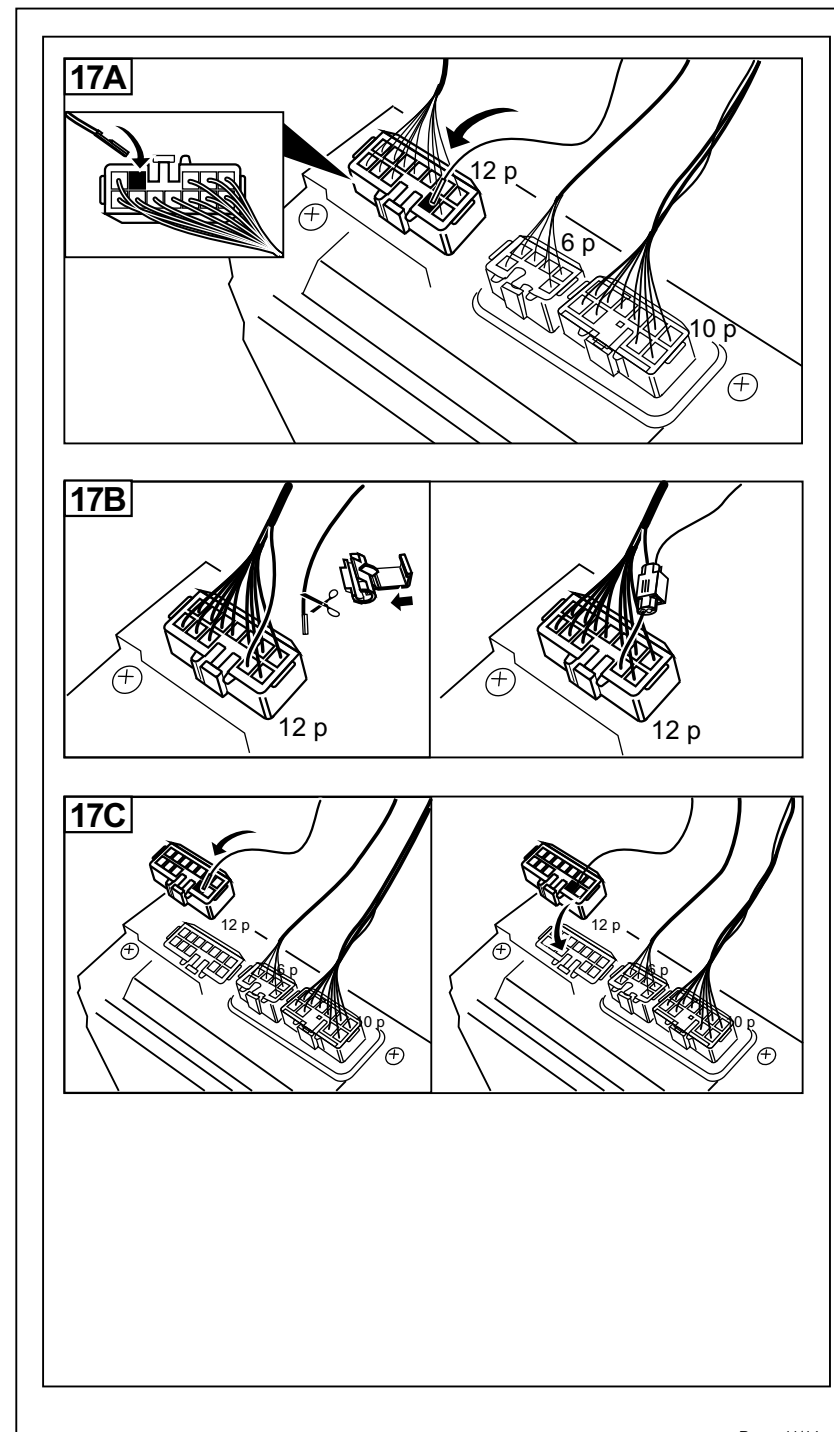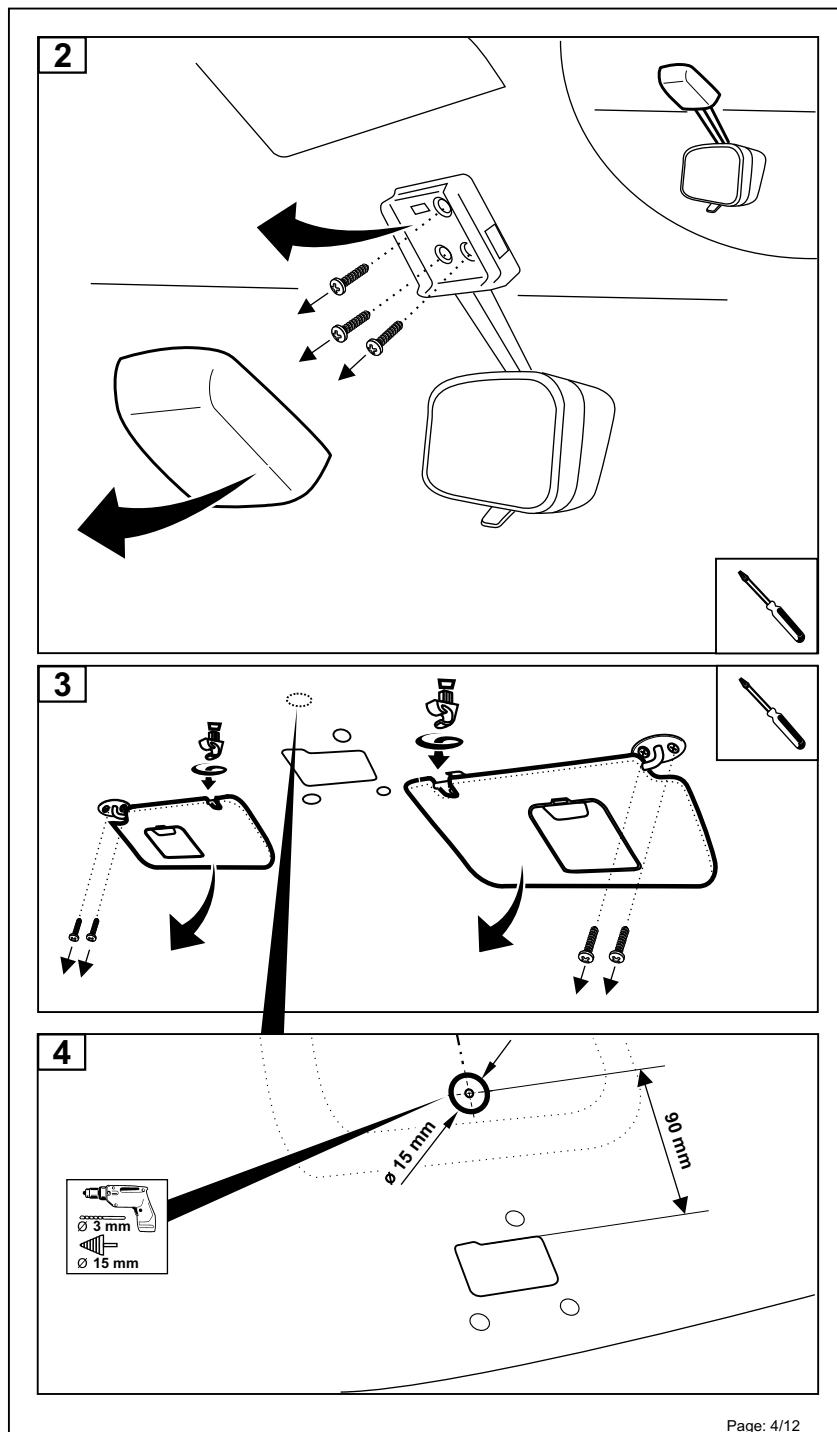

16

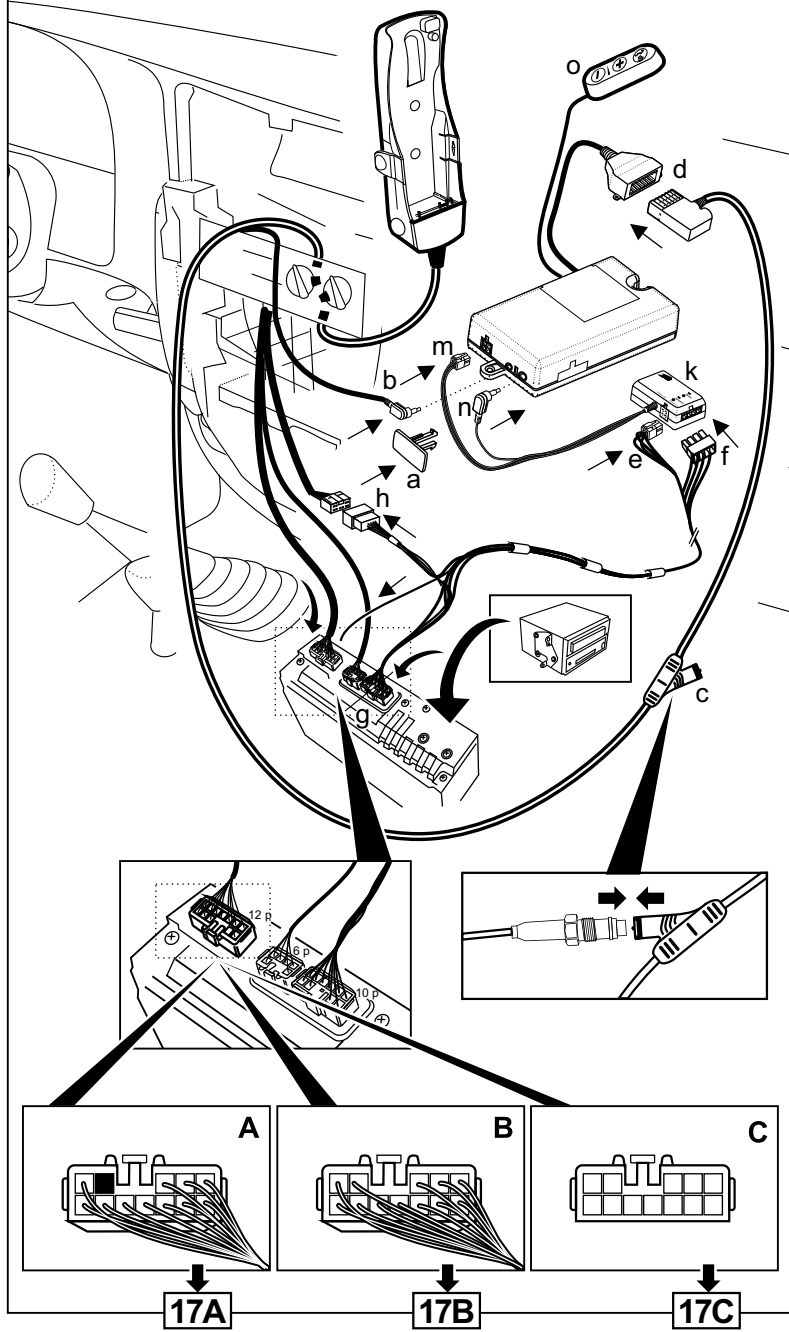


17A


17B





17C






5





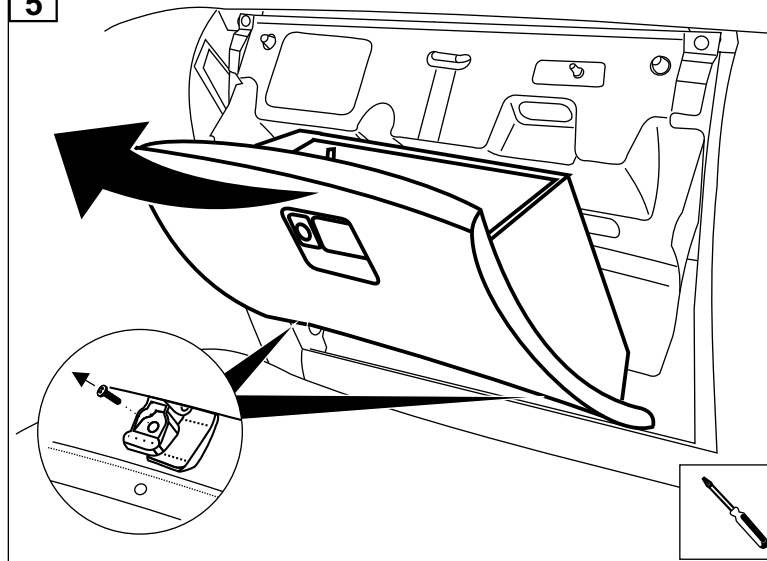






6





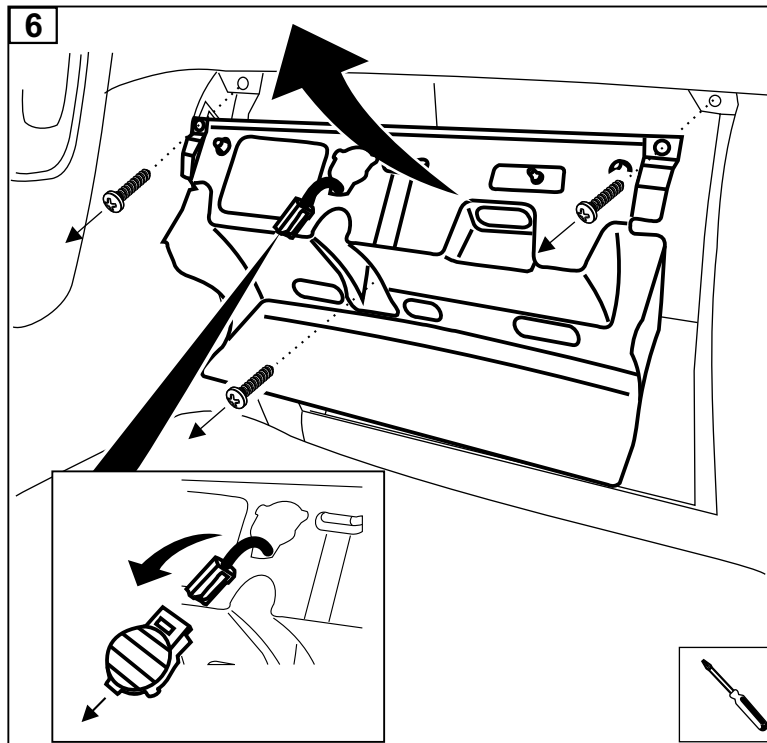


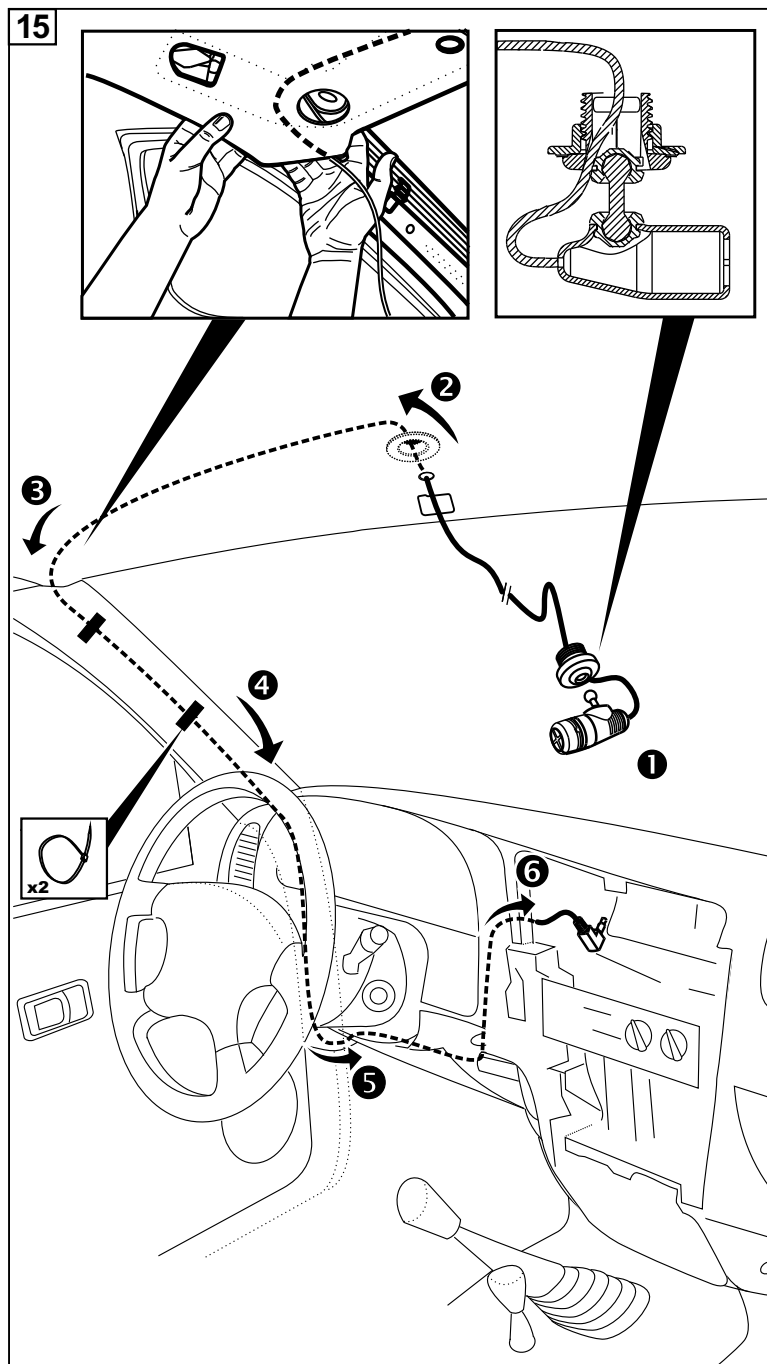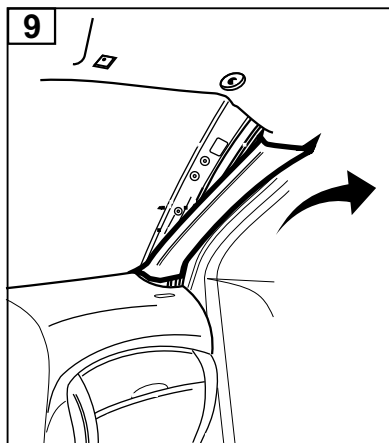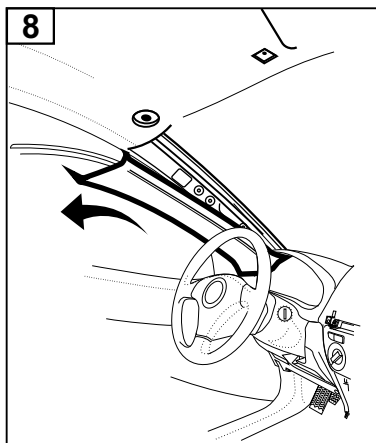
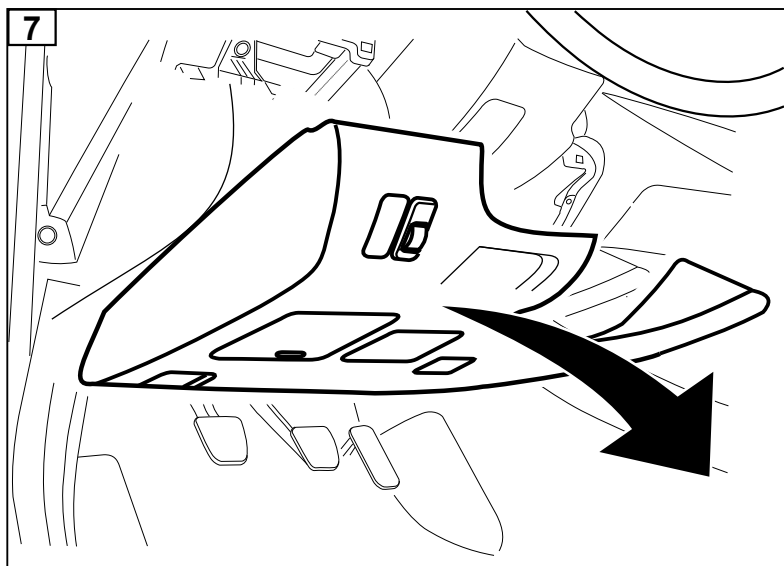


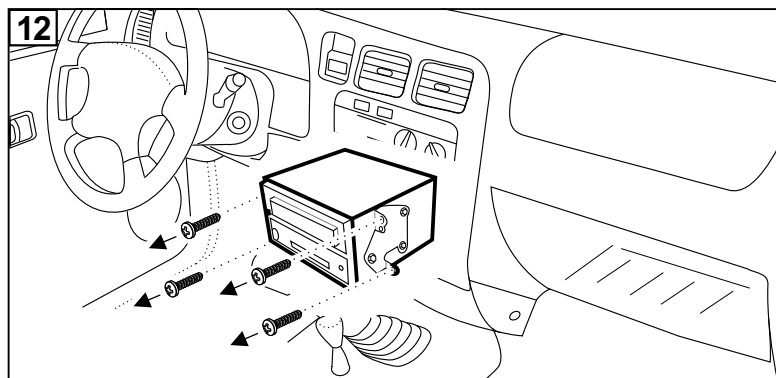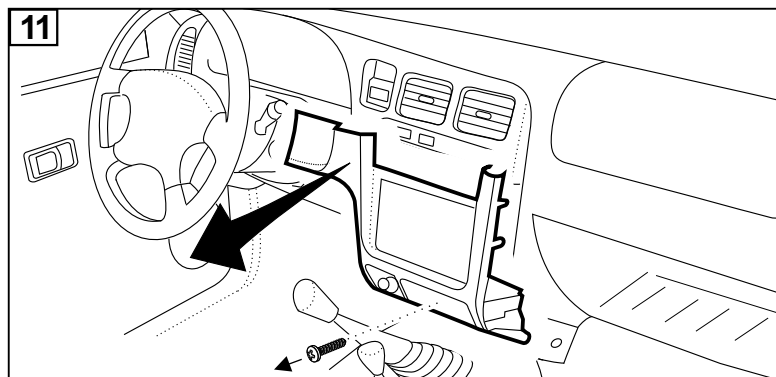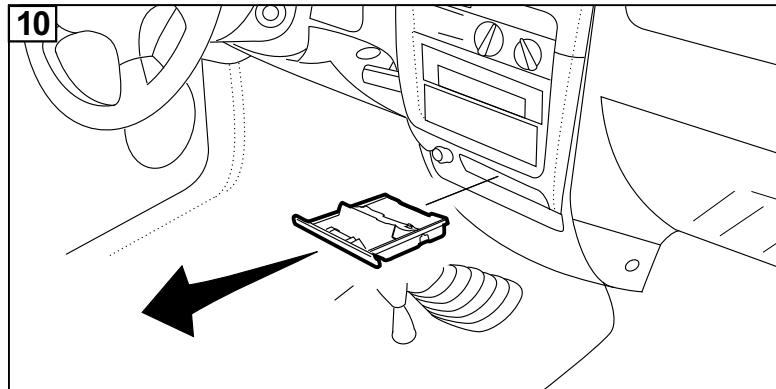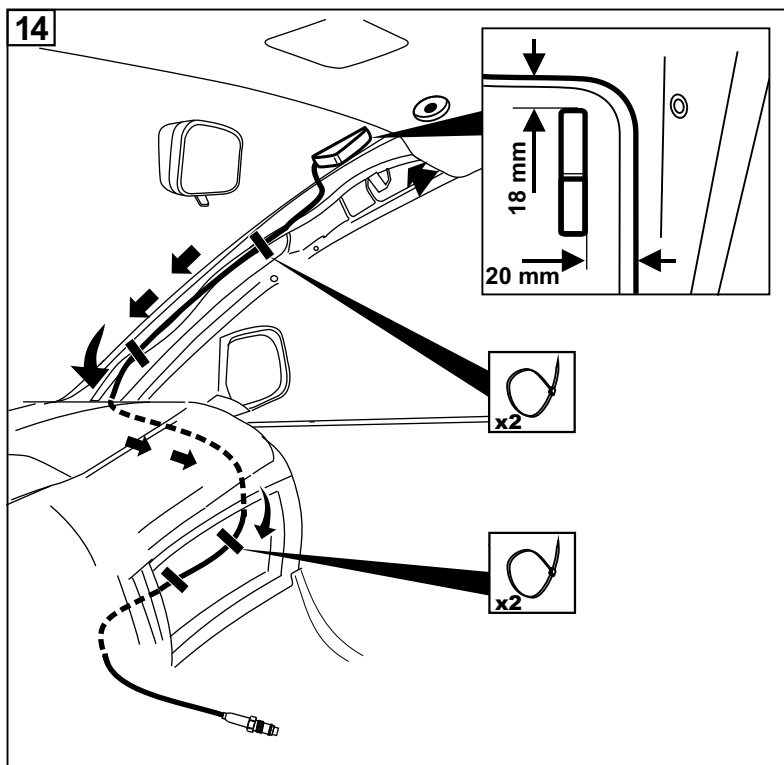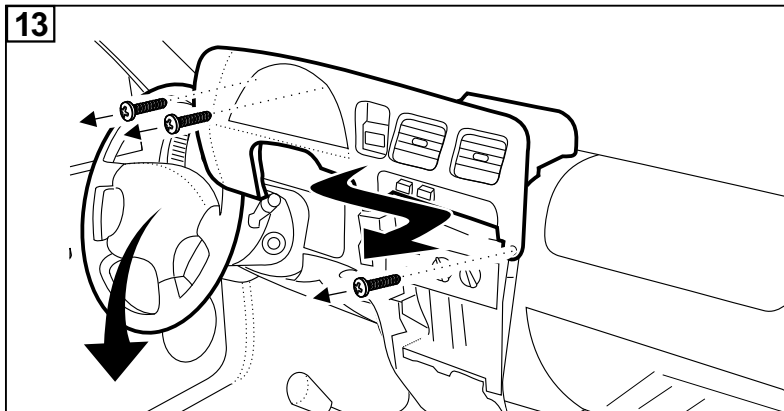

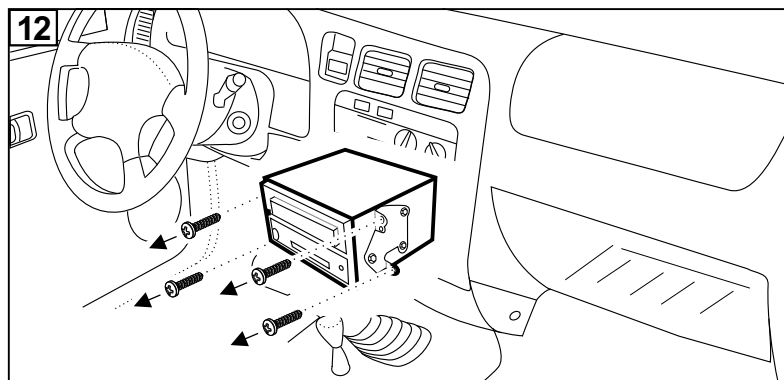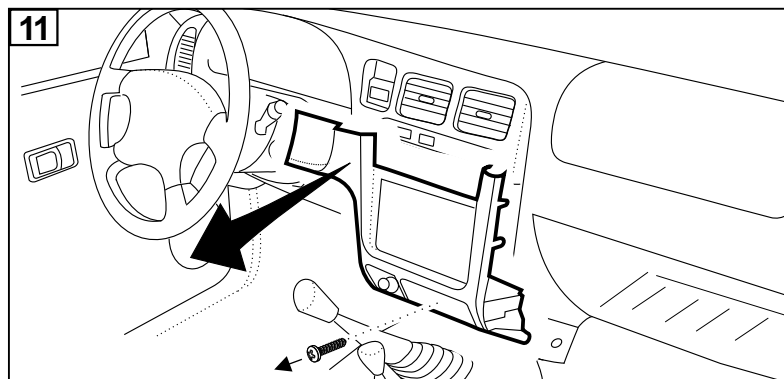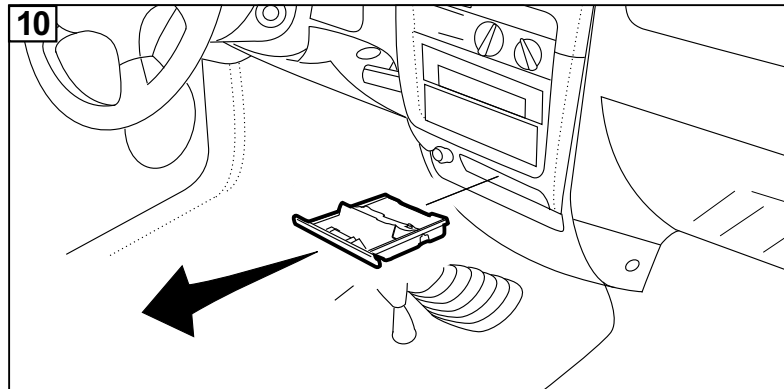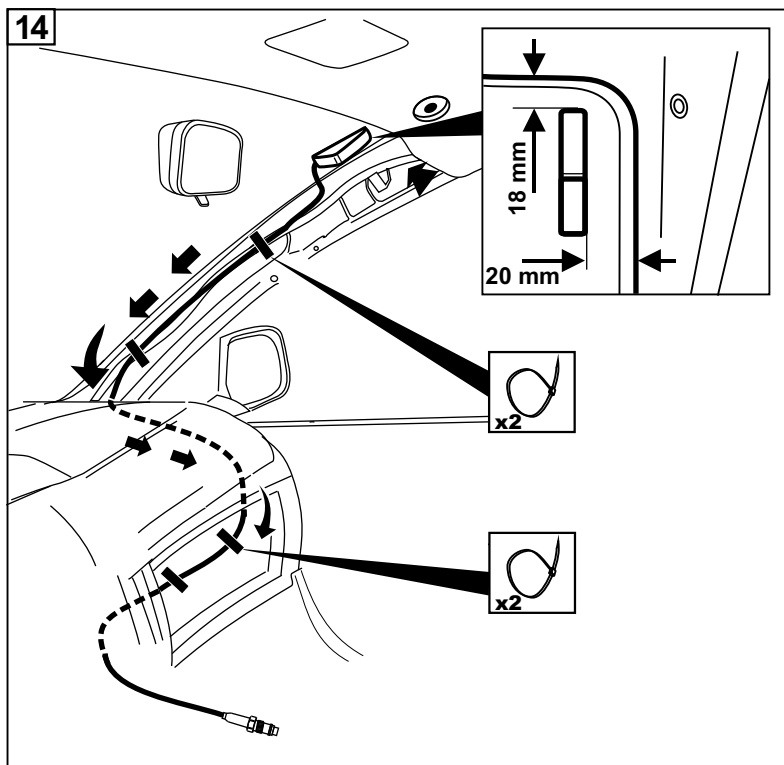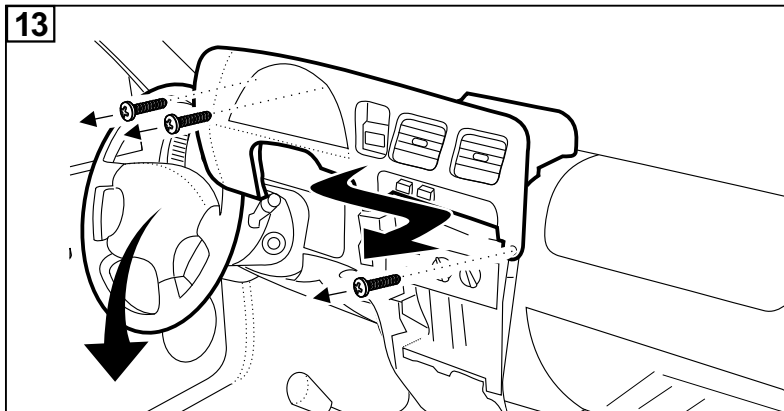


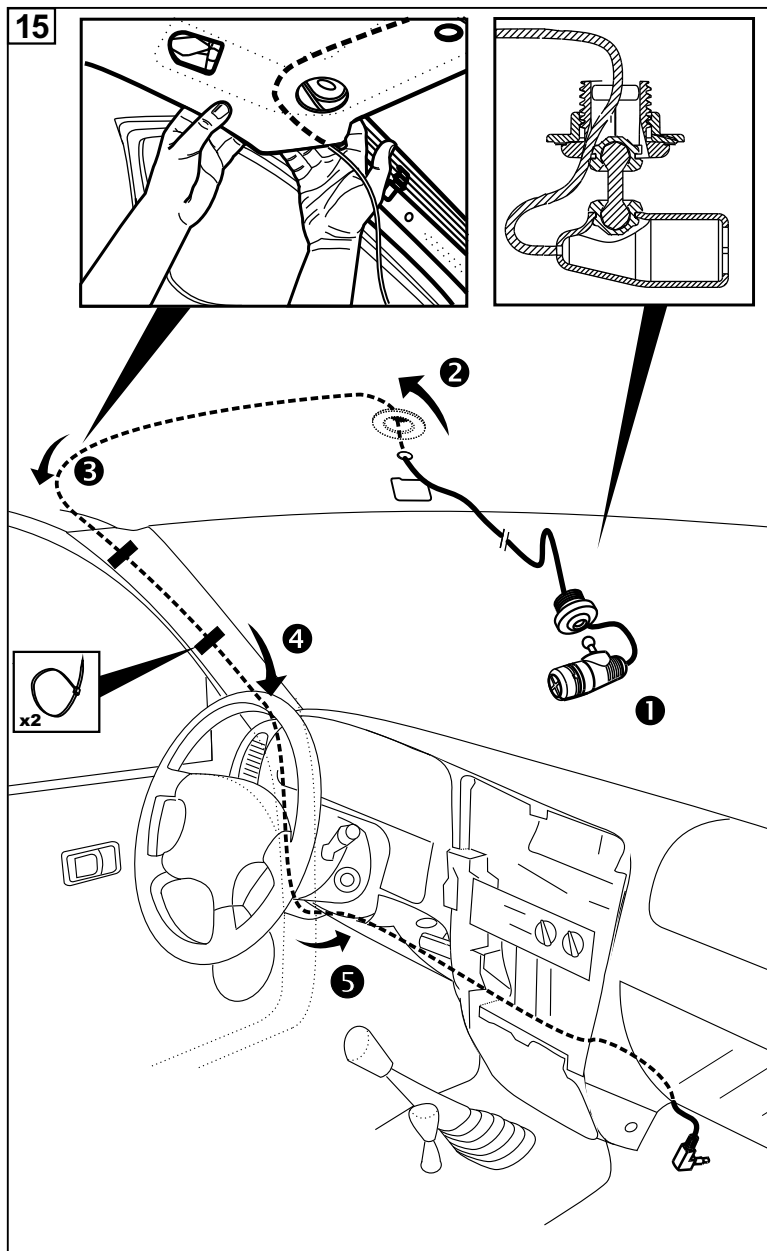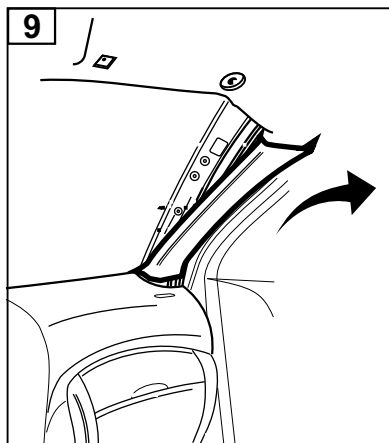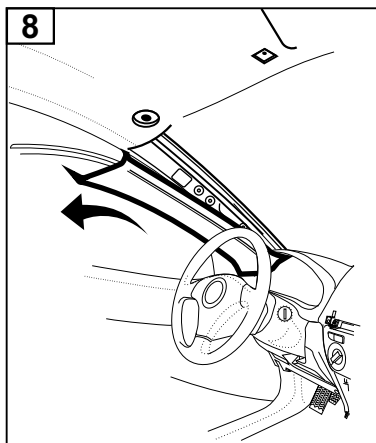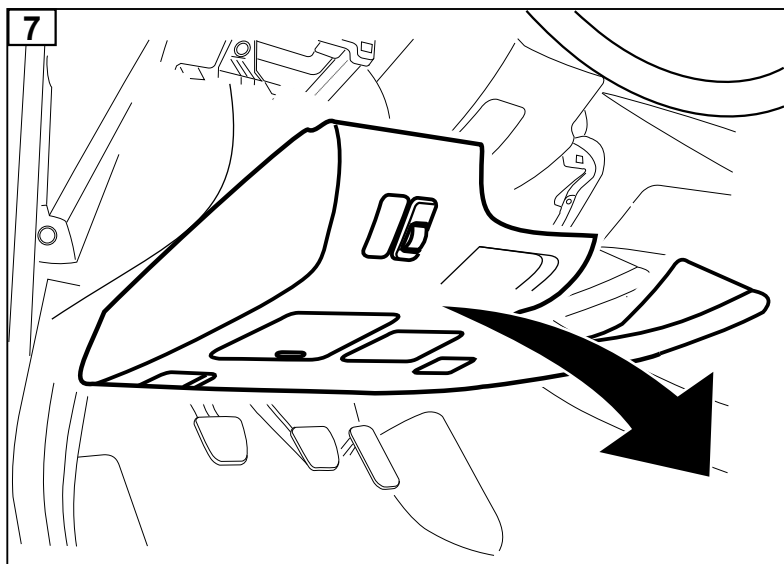

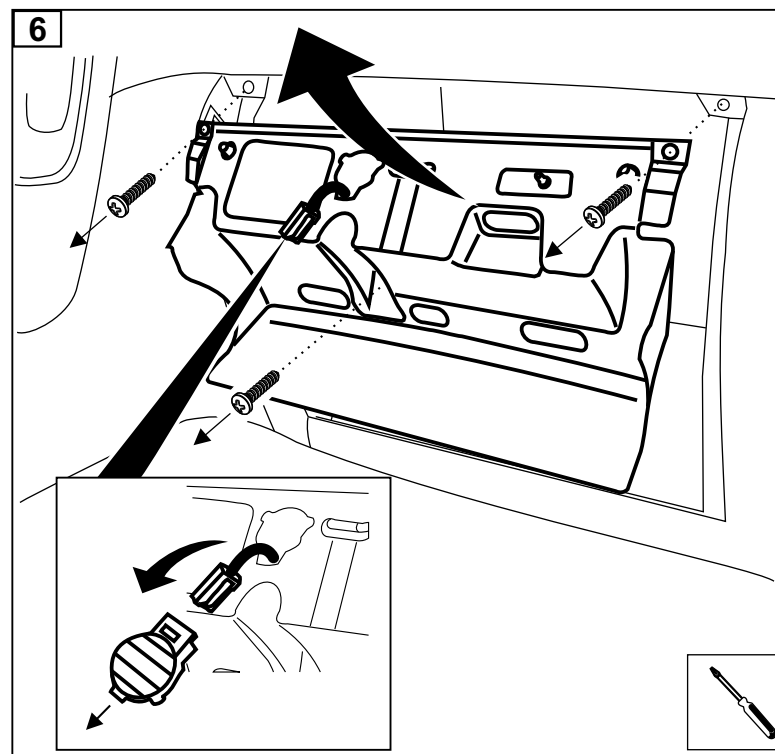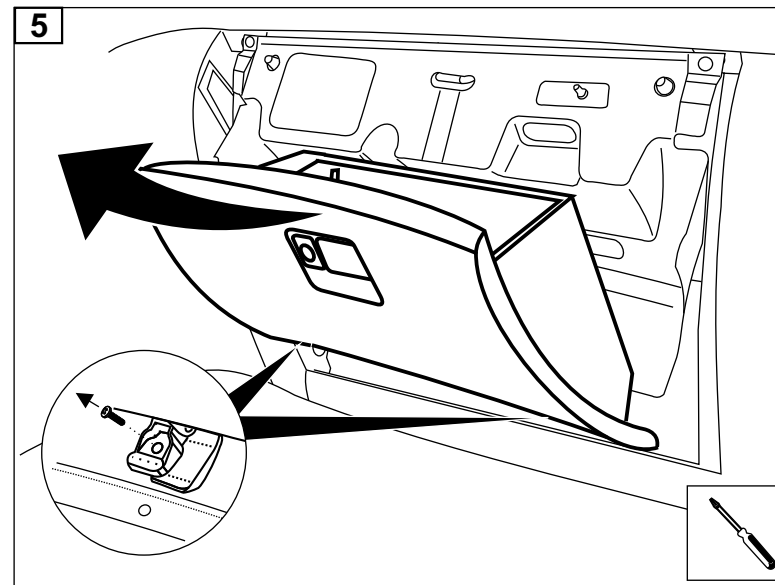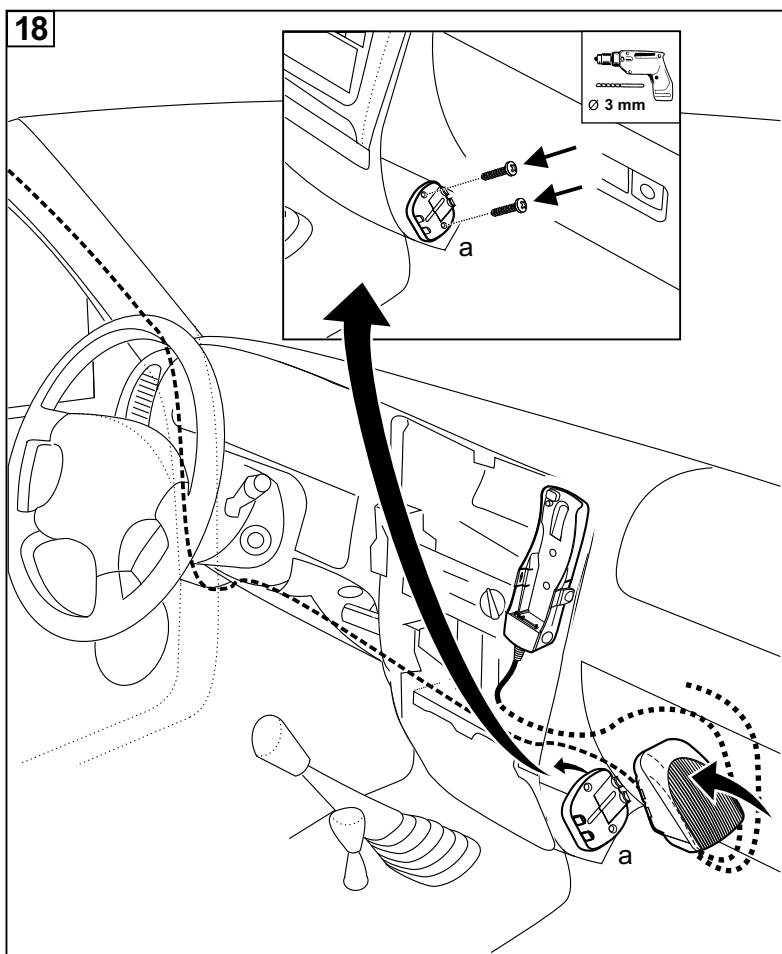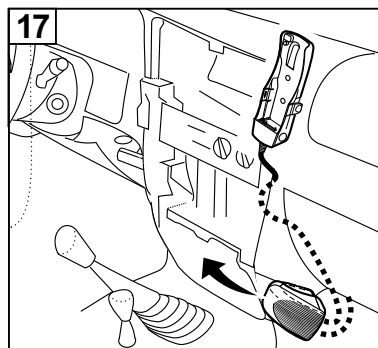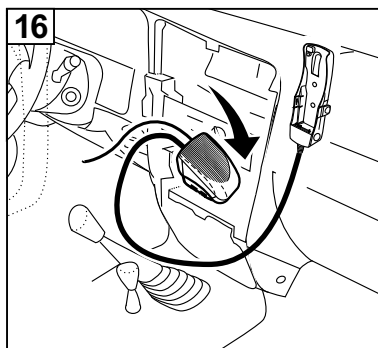


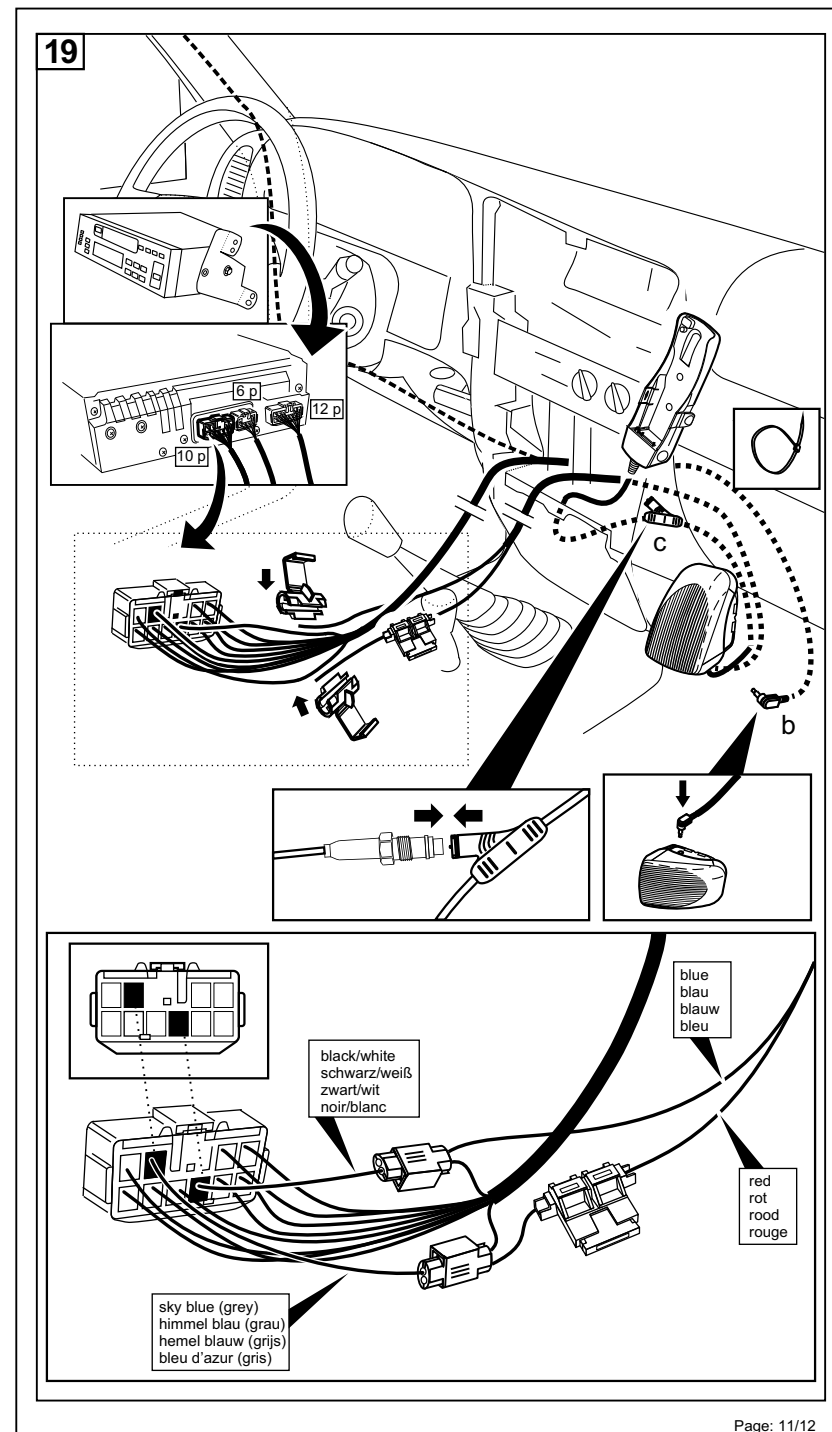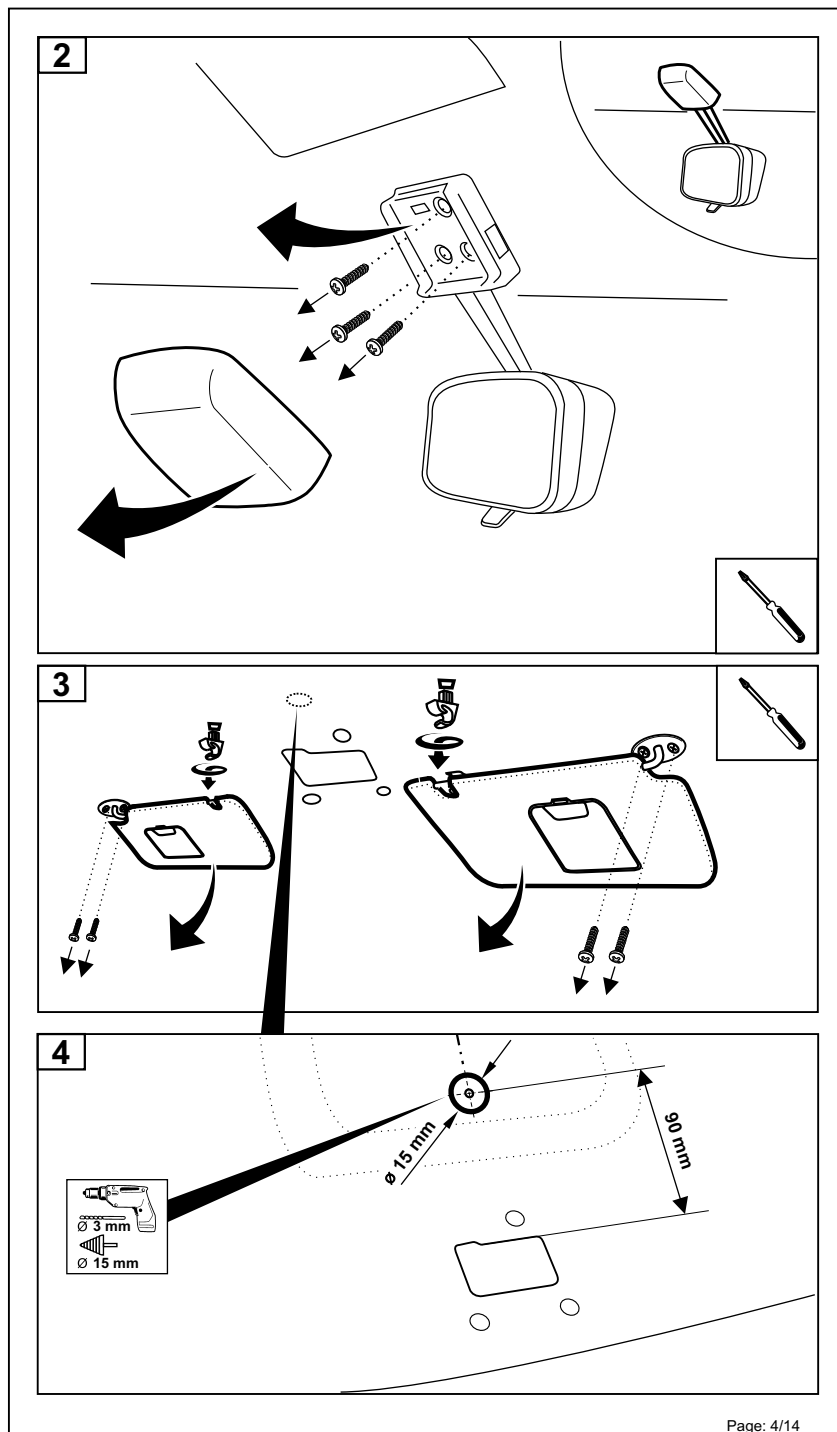


20

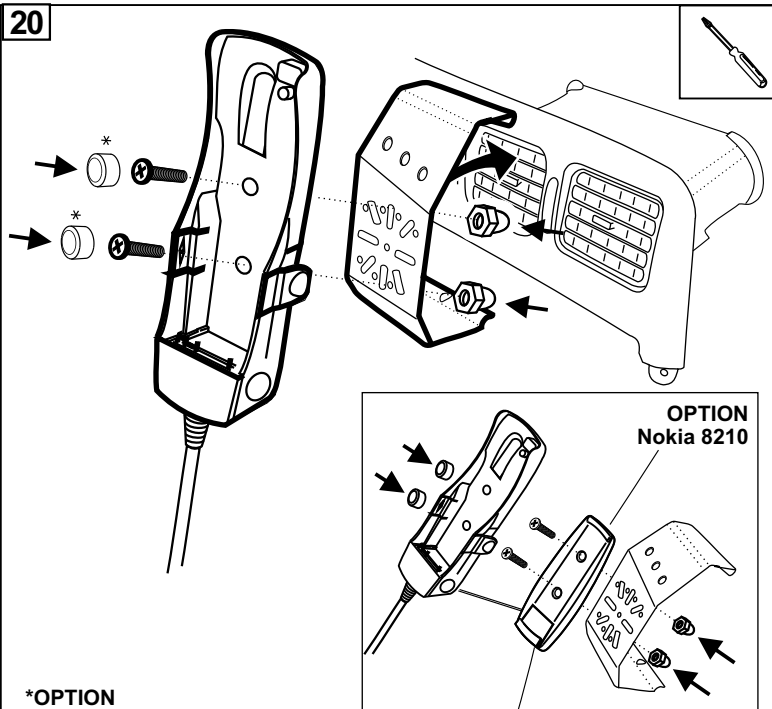


21


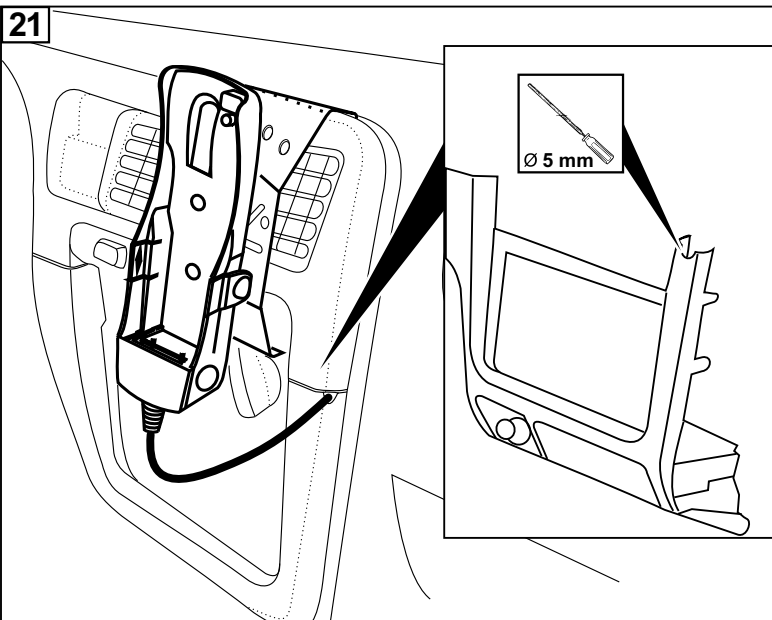


INFO

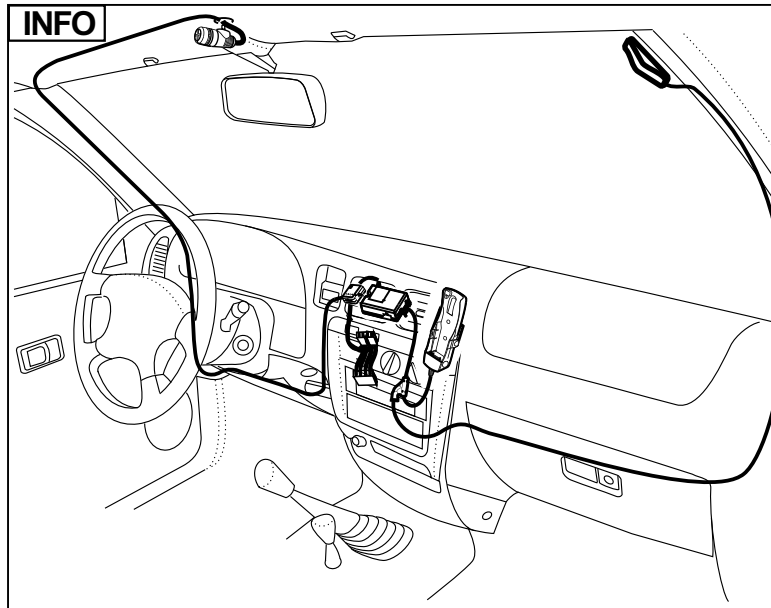

1

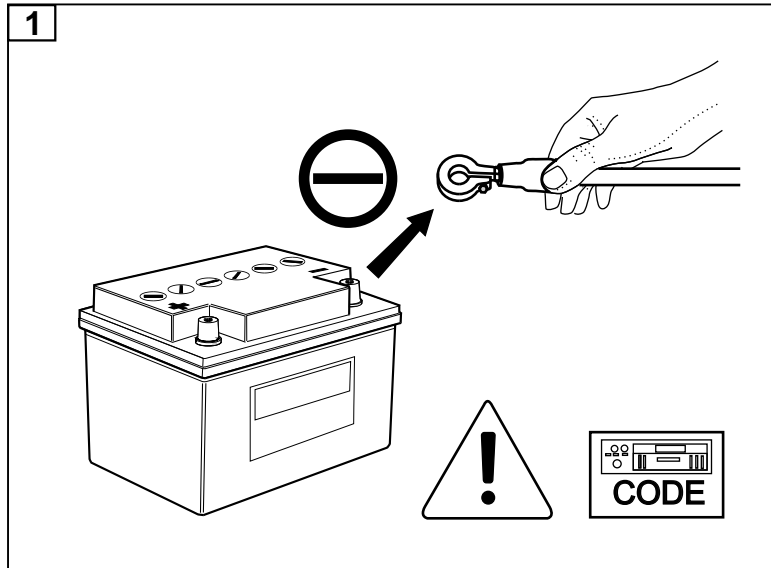

PARTNAME: HANDS-FREE CAR KIT		PARTNUMBER: THF 30	
TOOLS/WERKZEUGE/OUTILS/WERKTUIGEN			
MODEL CODE: KDN165 L - * R***W*			
			
VEHICLE OPTION/FAHRZEUG OPTION/OPTION VEHICULE/VOERTUIG OPTIE			
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
10		10	
ACCESSORY/ZUBEHÖR/ACCESSOIRE			
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
10		10	
SAFETY PRECAUTION/SICHERTHEITSMASSNAHME/PRECAUTIONS DE SECURITE/VEILIGHEIDVOORZIENINGEN			
	Step/Punkt/Point/Stap 4/21		Step/Punkt/Point/Stap
	Step/Punkt/Point/Stap		Step/Punkt/Point/Stap
TOOLS/WERKZEUGE/OUTILS/WERKTUIGEN			
 Drill Bohrmaschine Perceuse Boormachine	 Ø 3 mm Bits Ø 3 mm Bohrer Ø 3 mm Forets Ø 3 mm Boor	 Ø 15 mm Bits Ø 15 mm Bohrer Ø 15 mm Forets Ø 15 mm Boor	
 Philips 2	 PLASTIC CLEANER	 10 mm	
 5,5 mm		 Pencil Stift Stylo pointe Potlood	
 Gum tape Klebeband Ruban adhésif Kleefband		 Ø 5 mm	

HANDS-FREE CAR KIT
KFZ FREISPRECHEINRICHTUNG
HANDENVRIJE CAR KIT
LE KIT MAINS-LIBRES

THF 20

**TOYOTA
HILUX**

INSTALLATION MANUAL-EINBAUANLEITUNG-MANUEL D'INSTALLATION-MONTAGE HANDLEIDING


LHD



HILUX


LHD

PARTNUMBER: THF 30

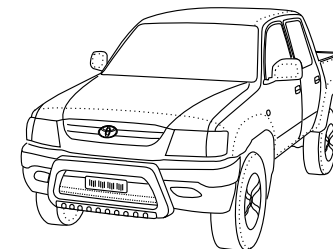

HANDS-FREE CAR KIT
KFZ FREISPRECHEINRICHTUNG
HANDENVRIJE CAR KIT
LE KIT MAINS-LIBRES

KIT CONTENT - STÜCKLISTE - CONTENU - KIT INHOUD

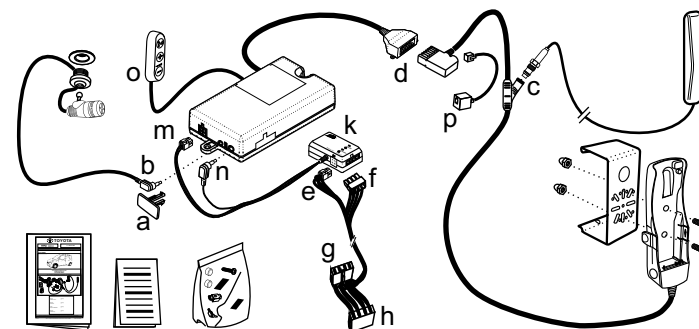

Weight: 0,75 kg
Installation time: 1,30 h

Gewicht: 0,75 kg
Einbauzeit: 1,30 h

Poids: 0,75 kg
Temps d'installation: 1,30 h

Gewicht: 0,75 kg
Installatie tijd: 1,30 h

INSTALLATION MANUAL-EINBAUANLEITUNG-MANUEL D'INSTALLATION-MONTAGE HANDLEIDING


Page: 1/14



HILUX


LHD

PARTNUMBER: THF 20

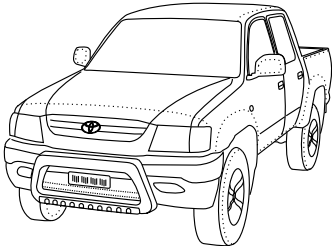

HANDS-FREE CAR KIT
KFZ FREISPRECHEINRICHTUNG
HANDENVRIJE CAR KIT
LE KIT MAINS-LIBRES

KIT CONTENT - STÜCKLISTE - CONTENU - KIT INHOUD

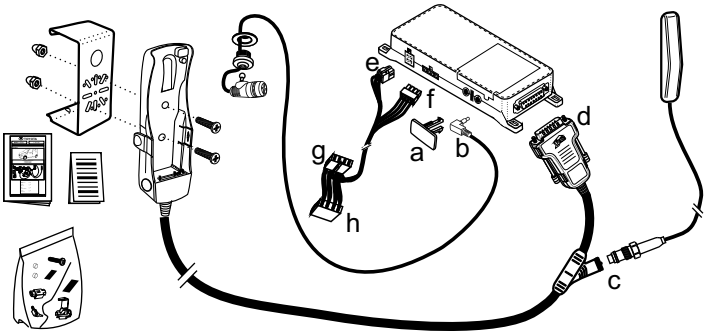




Weight: 0,82 kg
Installation time: 1,15 h

Gewicht: 0,82 kg
Einbauzeit: 1,15 h

Poids: 0,82 kg
Temps d'installation: 1,15 h

Gewicht: 0,82 kg
Installatie tijd: 1,15 h

INSTALLATION MANUAL-EINBAUANLEITUNG-MANUEL D'INSTALLATION-MONTAGE HANDLEIDING

PARTNAME: HANDS-FREE CAR KIT		PARTNUMBER: THF 20	
TOOLS/WERKZEUGE/OUTILS/WERKTUIGEN			
MODEL CODE: KDN165 L - * R***W*			
😊		☹	
VEHICLE OPTION/FAHRZEUG OPTION/OPTION VEHICULE/VOERTUIG OPTIE			
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
10		10	
ACCESSORY/ZUBEHÖR/ACCESSOIRE			
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
10		10	
SAFETY PRECAUTION/SICHERTHEITSMASSNAHME/PRECAUTIONS DE SECURITE/VEILIGHEIDVOORZIENINGEN			
	Step/Punkt/Point/Stap 4/20		Step/Punkt/Point/Stap
	Step/Punkt/Point/Stap		Step/Punkt/Point/Stap
TOOLS/WERKZEUGE/OUTILS/WERKTUIGEN			
 Drill Bohrmaschine Perceuse Boormachine	 Ø 3 mm Bits Ø 3 mm Bohrer Ø 3 mm Forets Ø 3 mm Boor	 Ø 15 mm Bits Ø 15 mm Bohrer Ø 15 mm Forets Ø 15 mm Boor	
 Philips 2	 PLASTIC CLEANER	 10 mm	
 5,5 mm		 Pencil Stift Stylo pointe Potlood	
 Gum tape Klebeband Ruban adhésif Kleefband		 Ø 5 mm	



HANDS-FREE CAR KIT
KFZ FREISPRECHEINRICHTUNG
HANDENVRIJE CAR KIT
LE KIT MAINS-LIBRES



THF 30

**TOYOTA
HILUX**


INSTALLATION MANUAL-EINBAUANLEITUNG-MANUEL D'INSTALLATION-MONTAGE HANDLEIDING

LHD

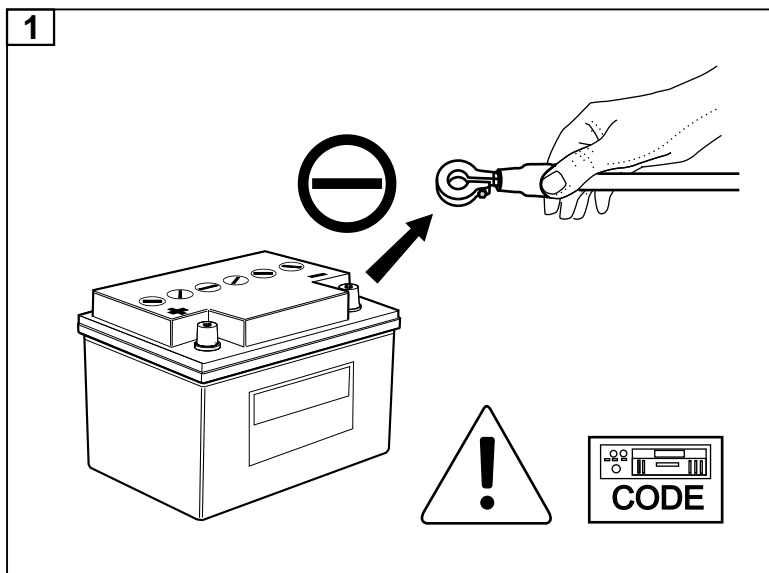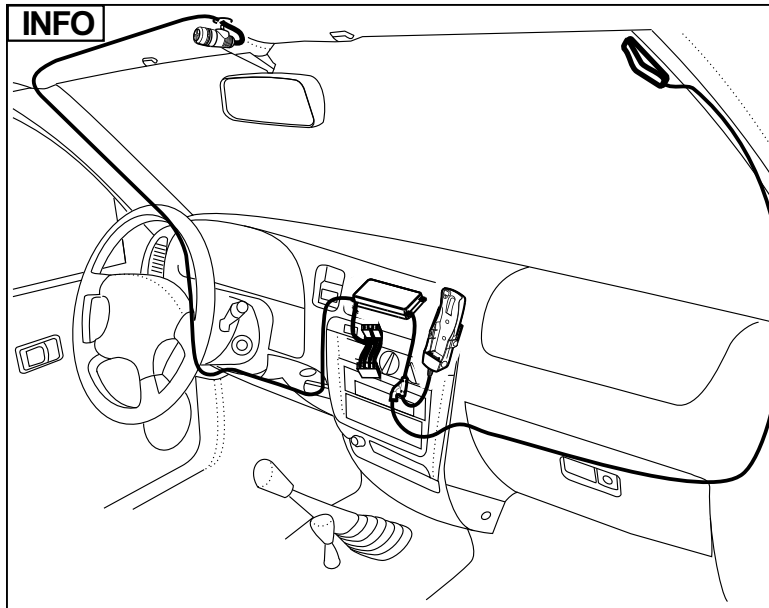


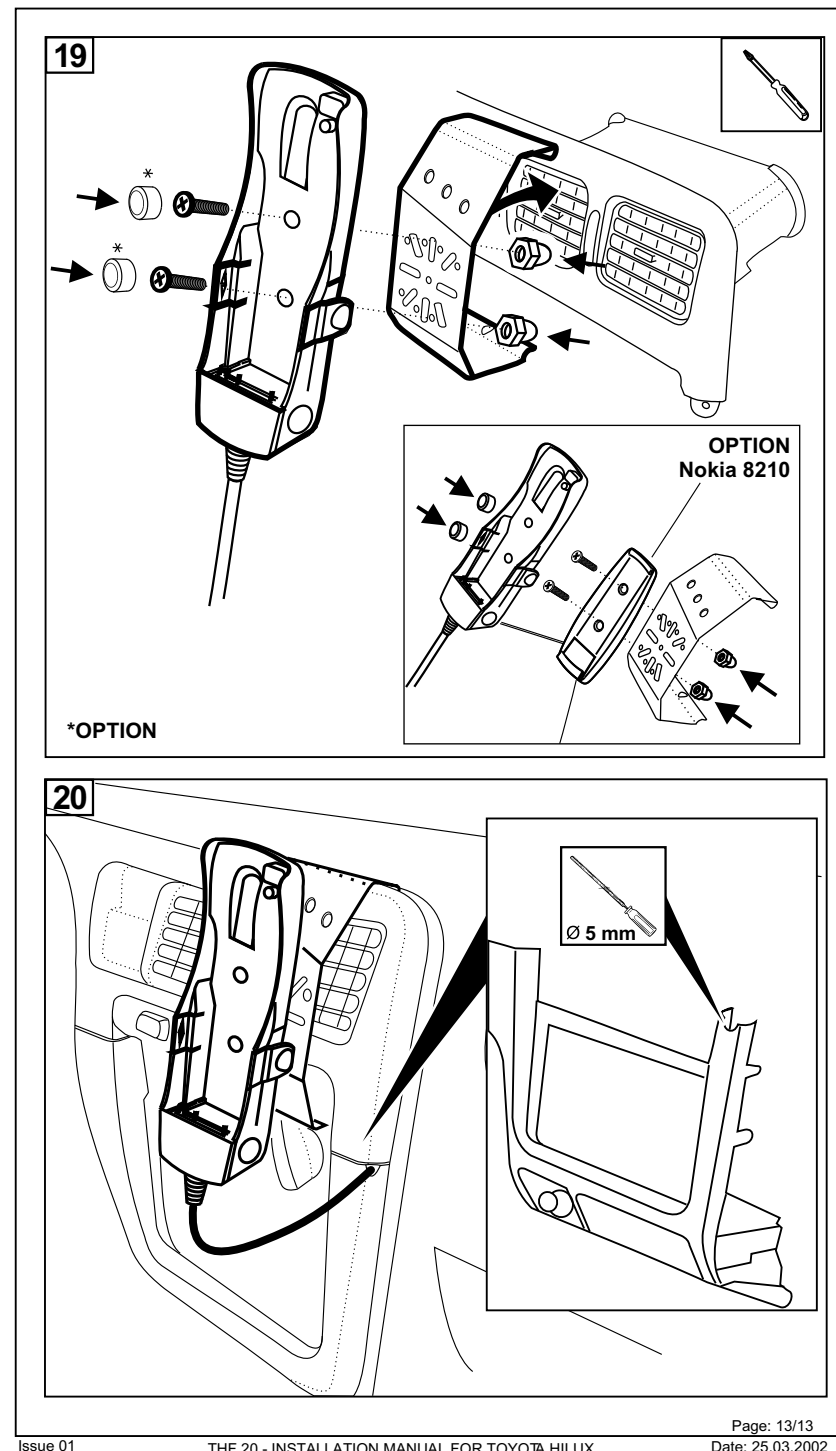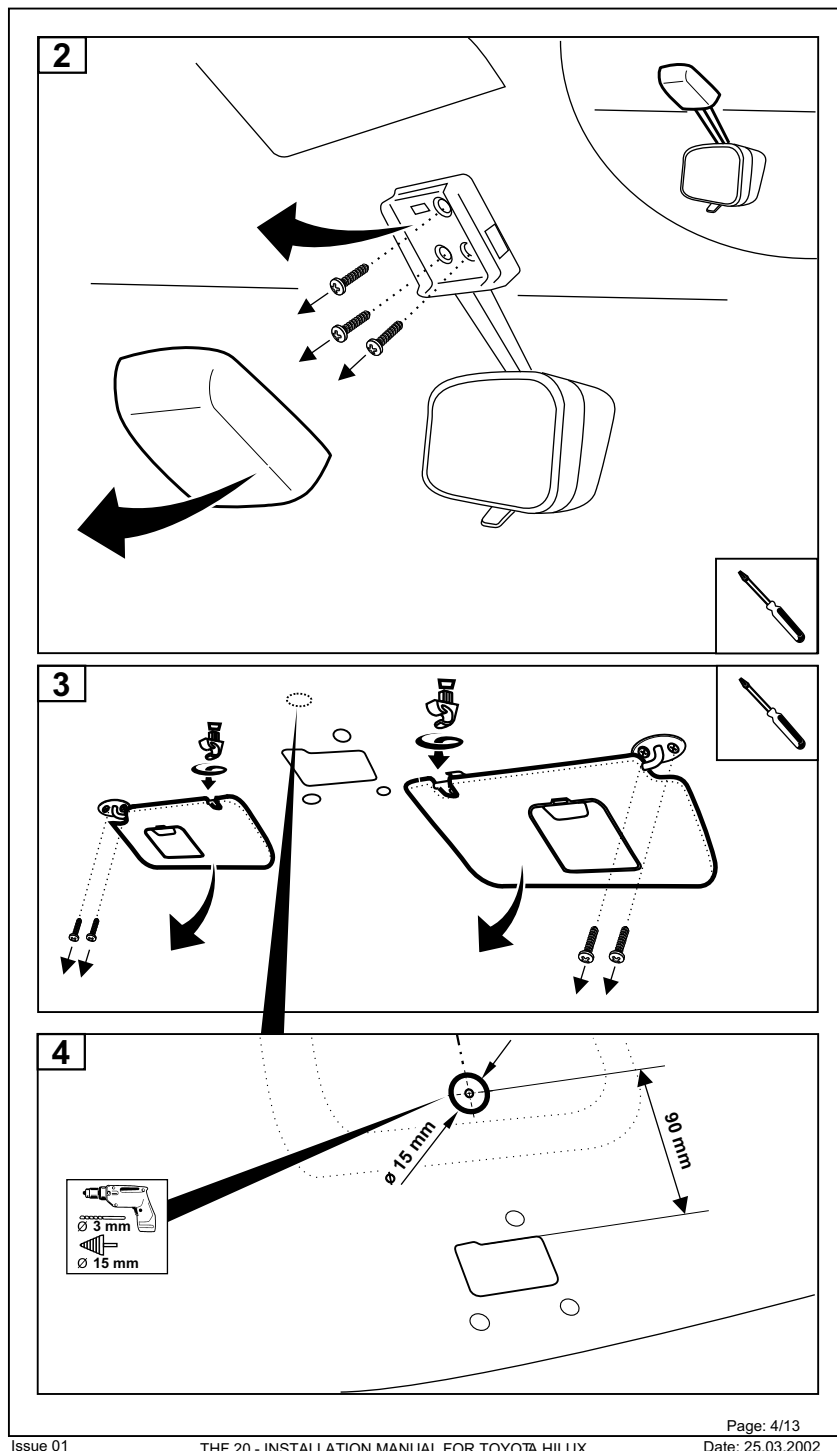

18

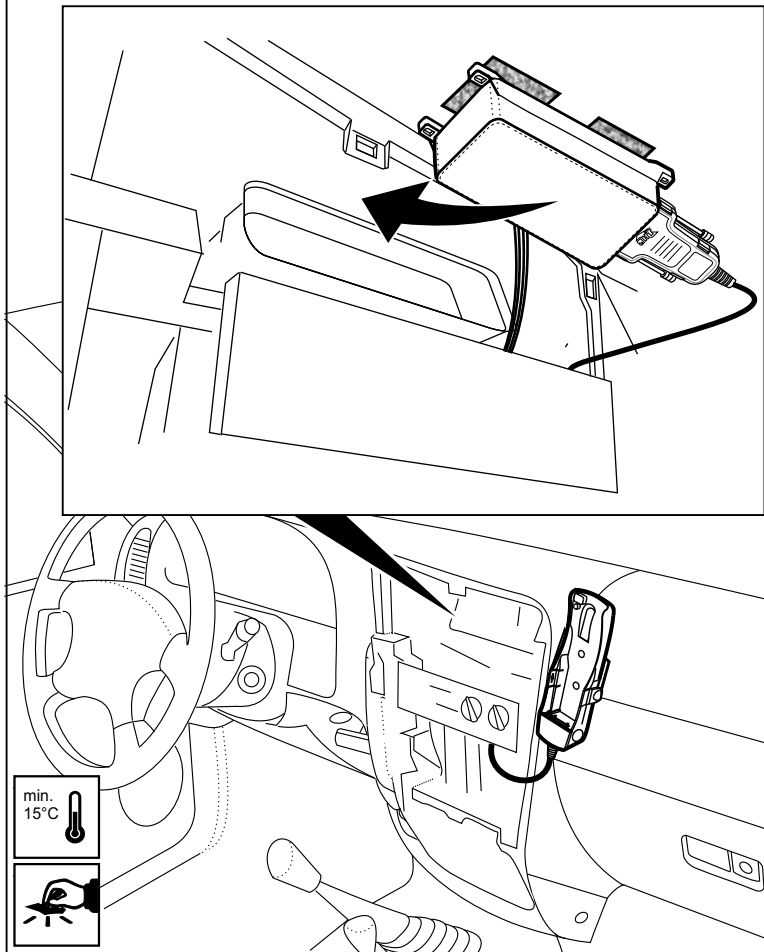

5

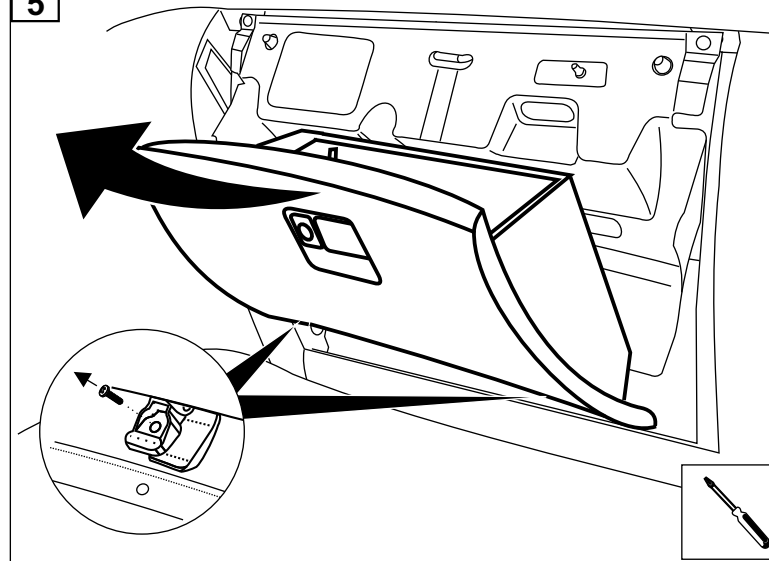

6

