



TOYOTA

ALWAYS A
BETTER WAY

Fortuner

Side Mouldings

Installation Instructions

Model year: As from 2017/08


Vehicle code: **N1***-*****W

Part number: PC170-0K00Q


Manual reference number: AIM 004 210-1

Revision record

Rev. No.	Date	Page	Steps	Remarks
△	13-05-2020	1, 10		Model year & vehicle code updated

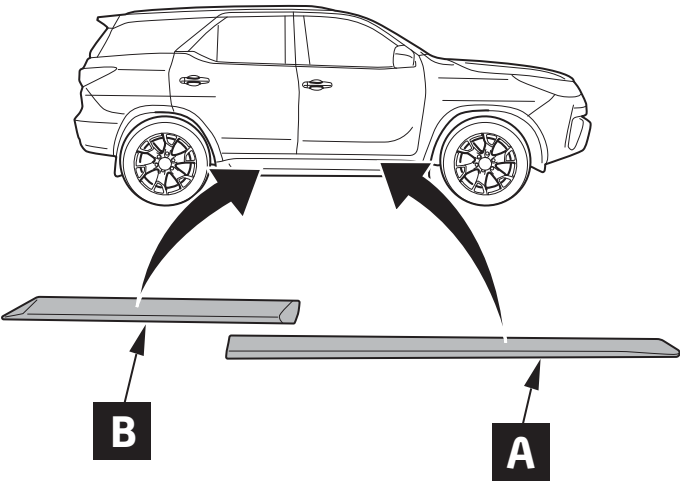

B **A**

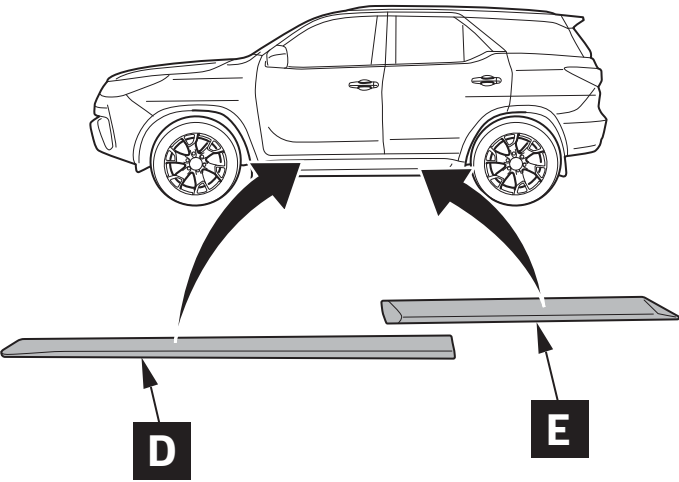

D **E**

D₁  **C₁**

B₁ **A₁** **A₂** **A₃** **A₃**


C₁  **D₁**

A₂ **A₁** **B₁**







 **AIM 003-516-***

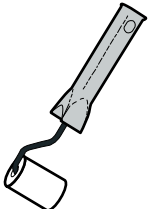

+ °C

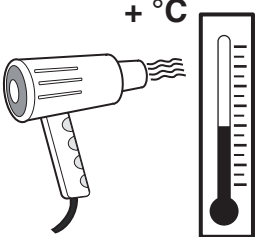

? °C

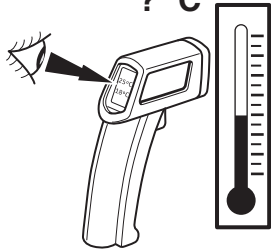

INFO




Material **S**afety **D**ata **S**heet





Technical **D**ata **S**heet







20°C - 40°C



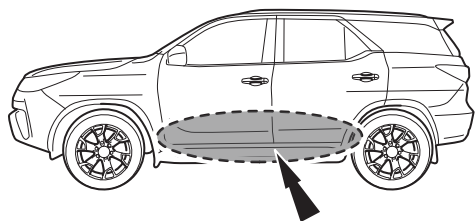




20°C - 40°C

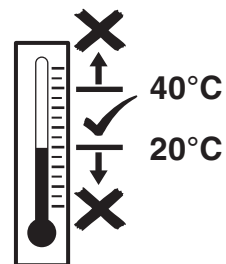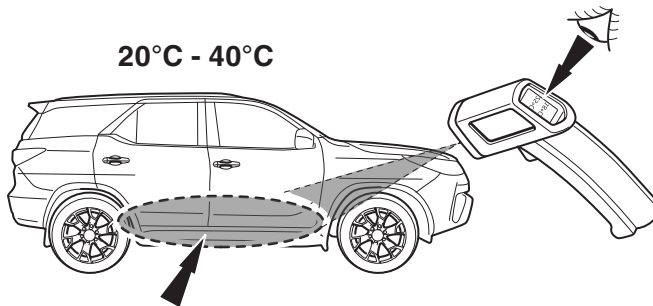

20°C - 40°C

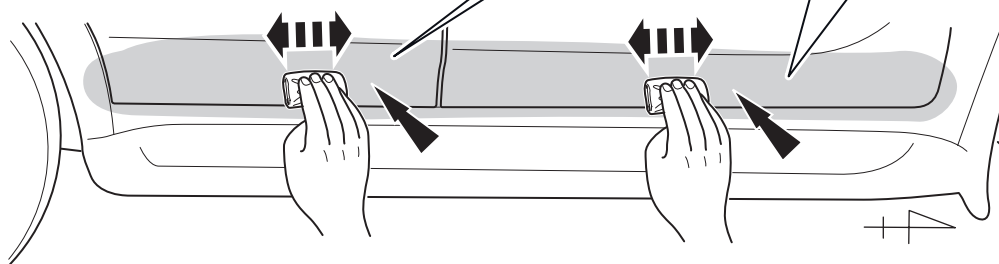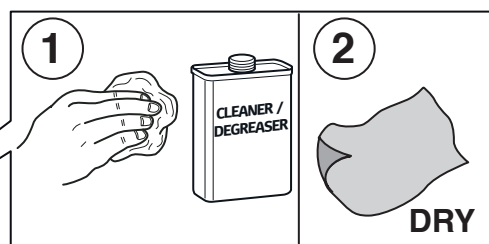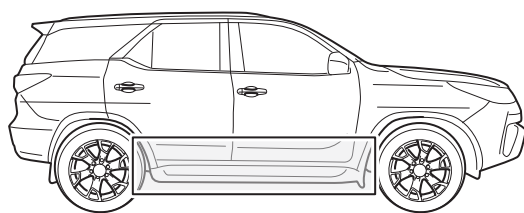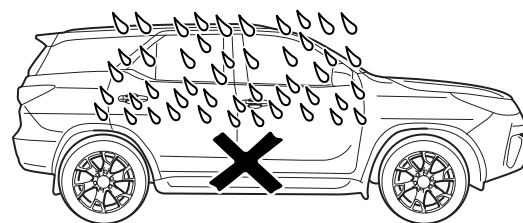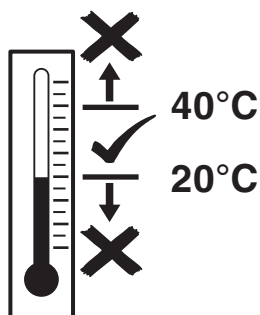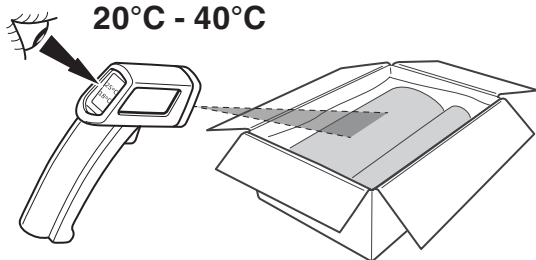

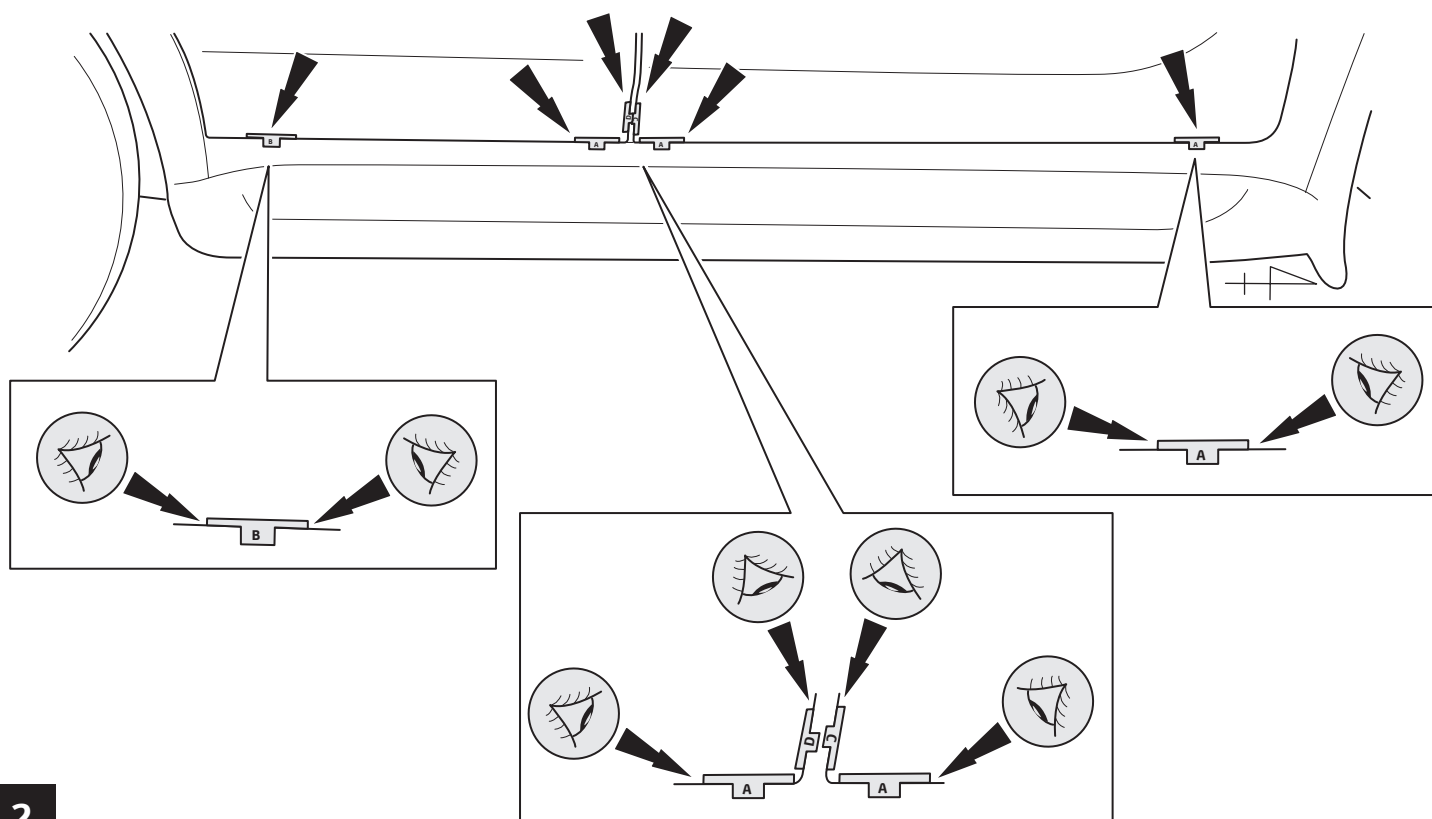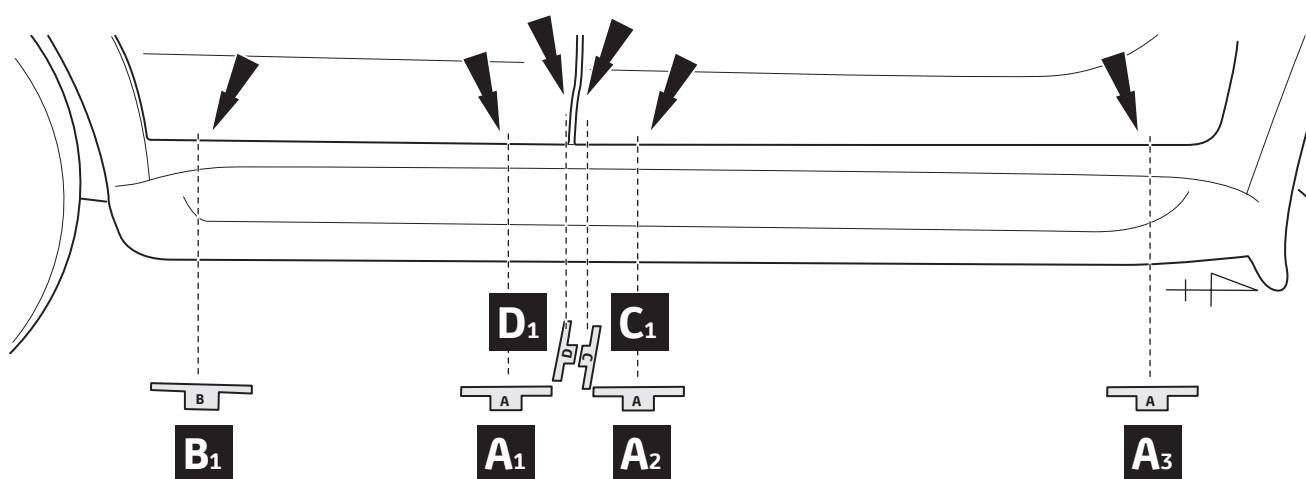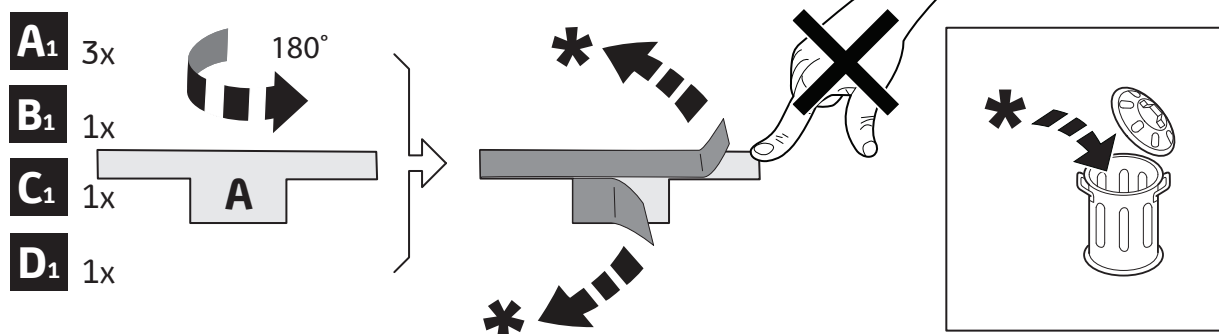

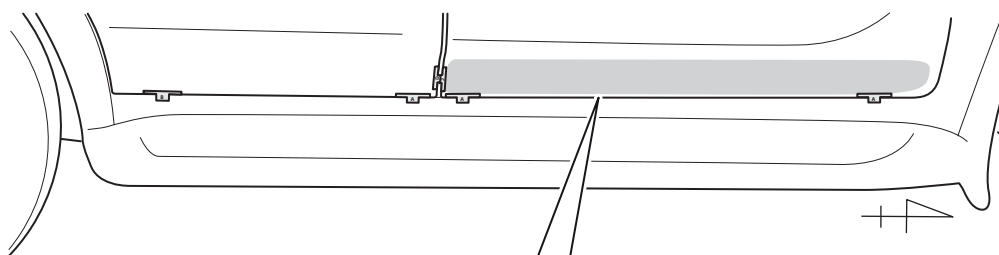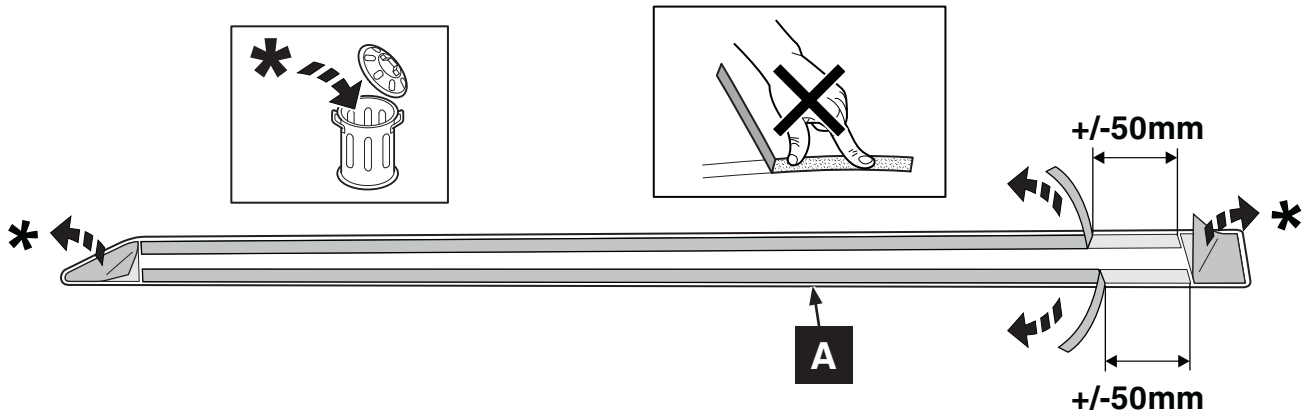


1 	$< 20^{\circ}\text{C}$ → 2 $20^{\circ}\text{C} - 40^{\circ}\text{C}$ → 5	2
3 	$20^{\circ}\text{C} - 40^{\circ}\text{C}$ → 5	INFO →

4




1 	$< 20^{\circ}\text{C}$ → 2 $20^{\circ}\text{C} - 40^{\circ}\text{C}$ → 6	2
3 	$20^{\circ}\text{C} - 40^{\circ}\text{C}$ → 6	INFO →


5

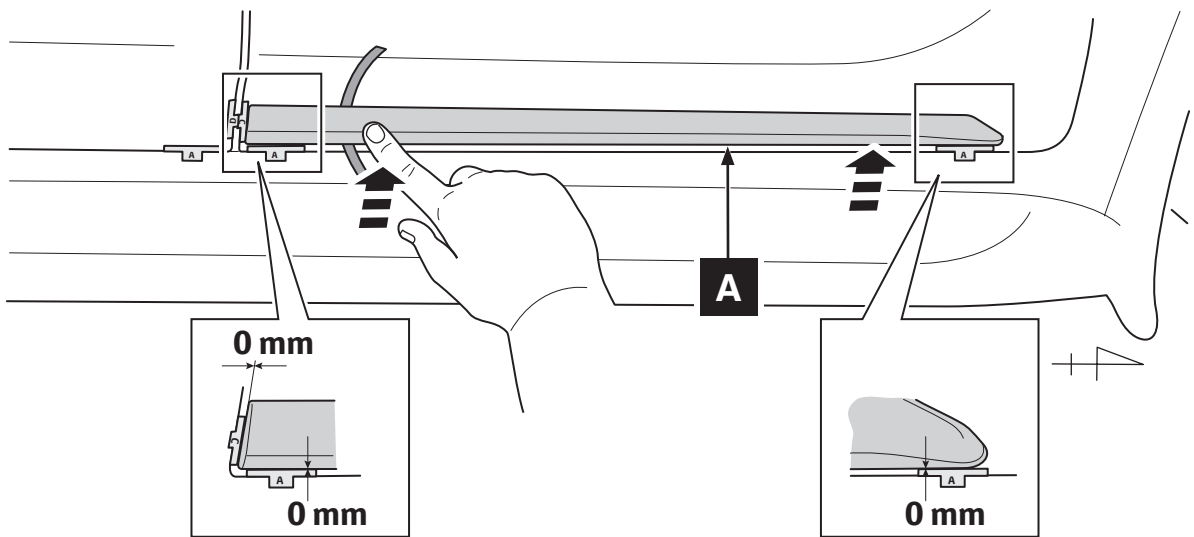

6


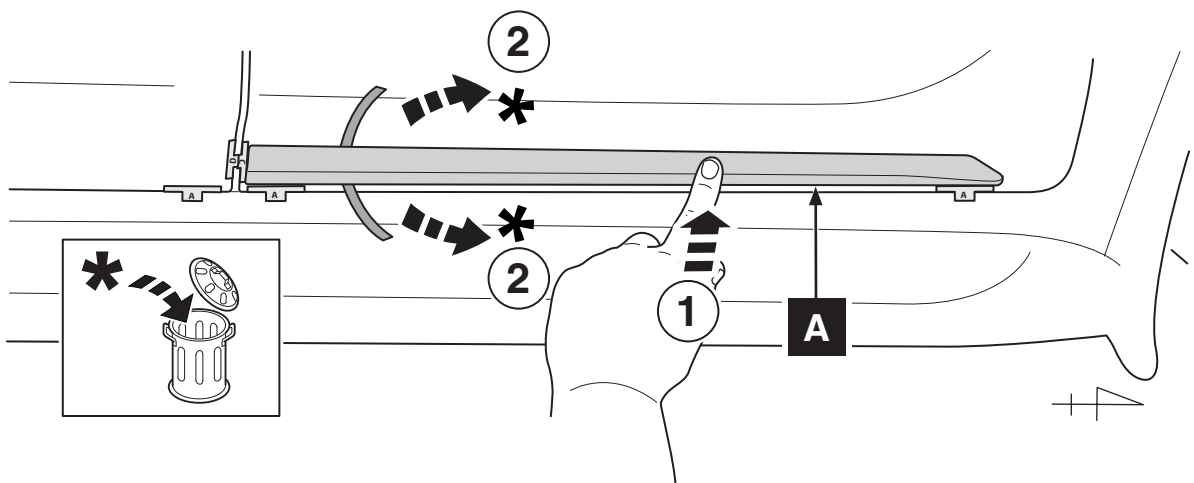


7

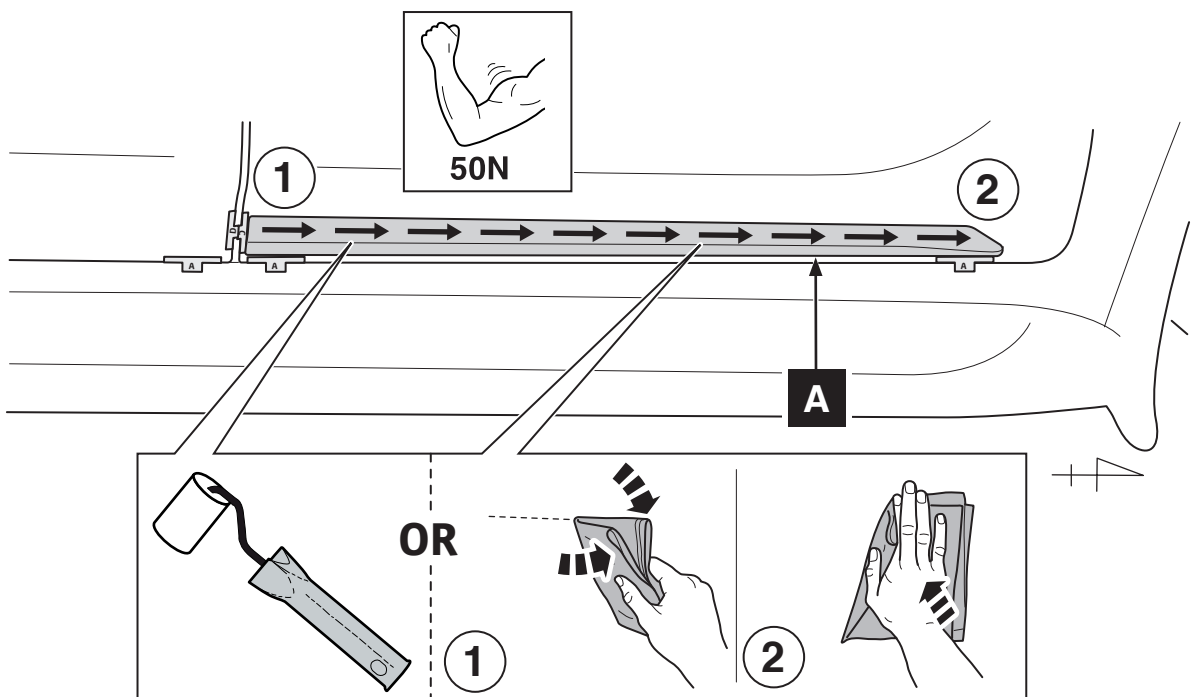

8

9

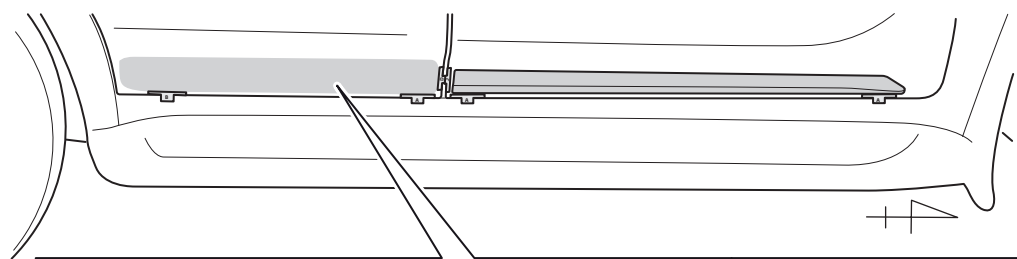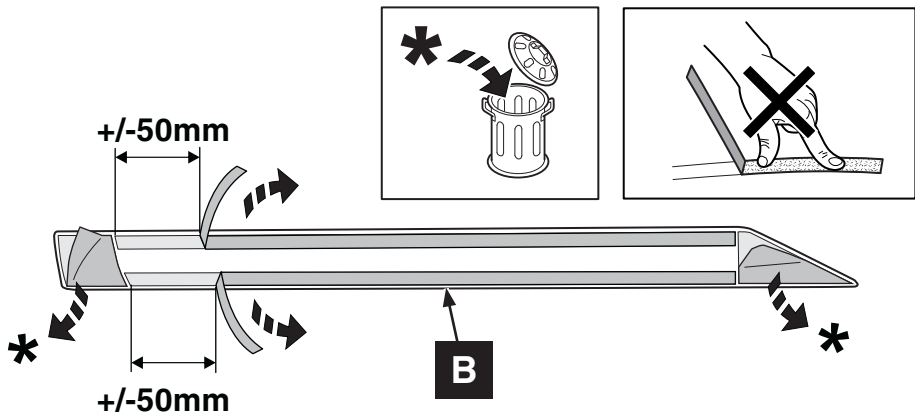


10

 1	$< 20^{\circ}\text{C} \rightarrow$ 2 $20^{\circ}\text{C} - 40^{\circ}\text{C} \rightarrow$ 11	 2
 3	$20^{\circ}\text{C} - 40^{\circ}\text{C} \rightarrow$ 11	INFO 10 $\rightarrow$ 14


11

B


 1	$< 20^{\circ}\text{C} \rightarrow$ 2 $20^{\circ}\text{C} - 40^{\circ}\text{C} \rightarrow$ 12	 2
 3	$20^{\circ}\text{C} - 40^{\circ}\text{C} \rightarrow$ 12	INFO 11 $\rightarrow$ 14

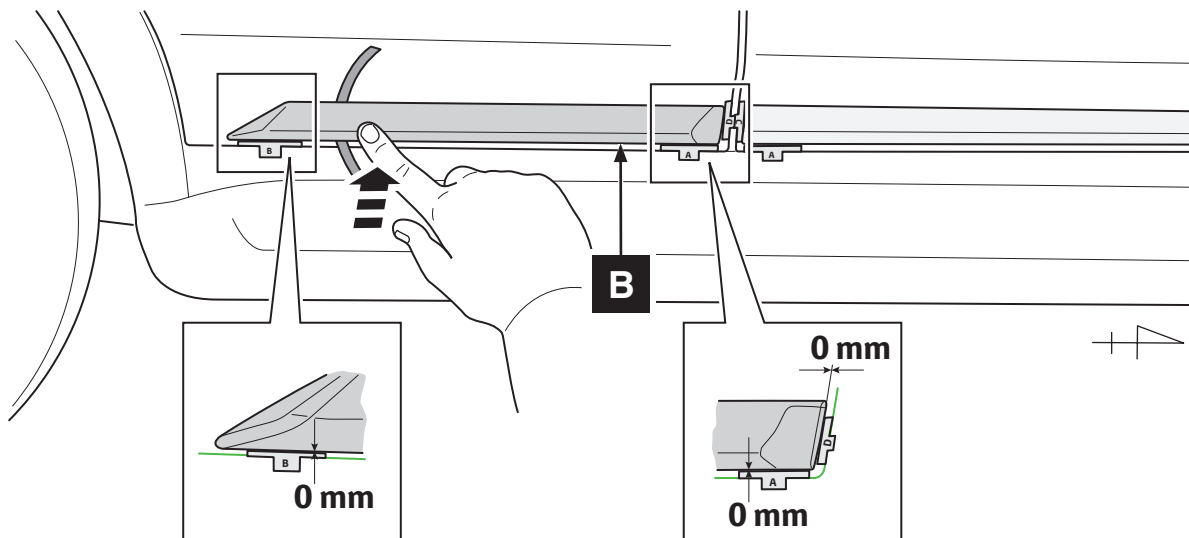

12

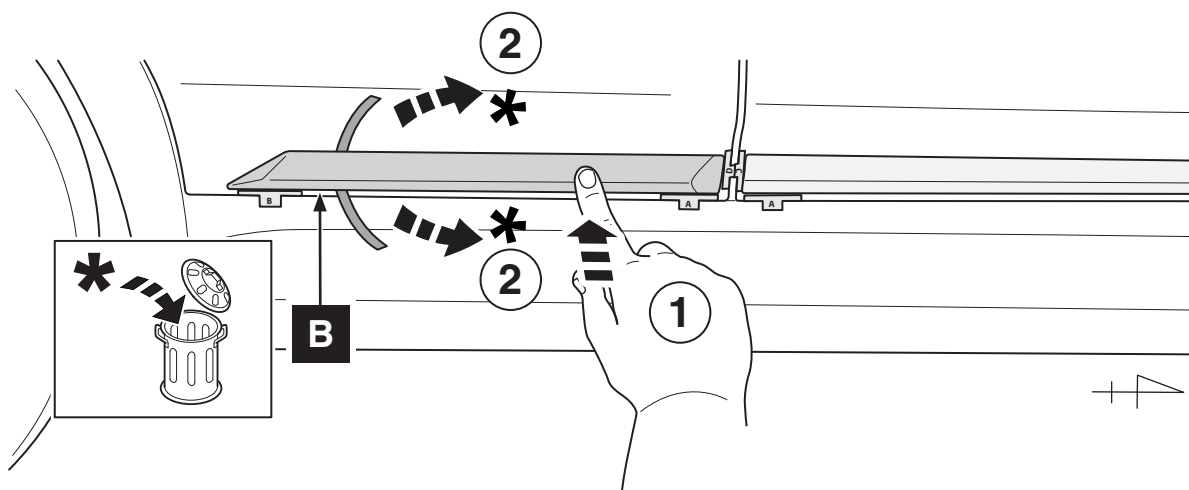


13

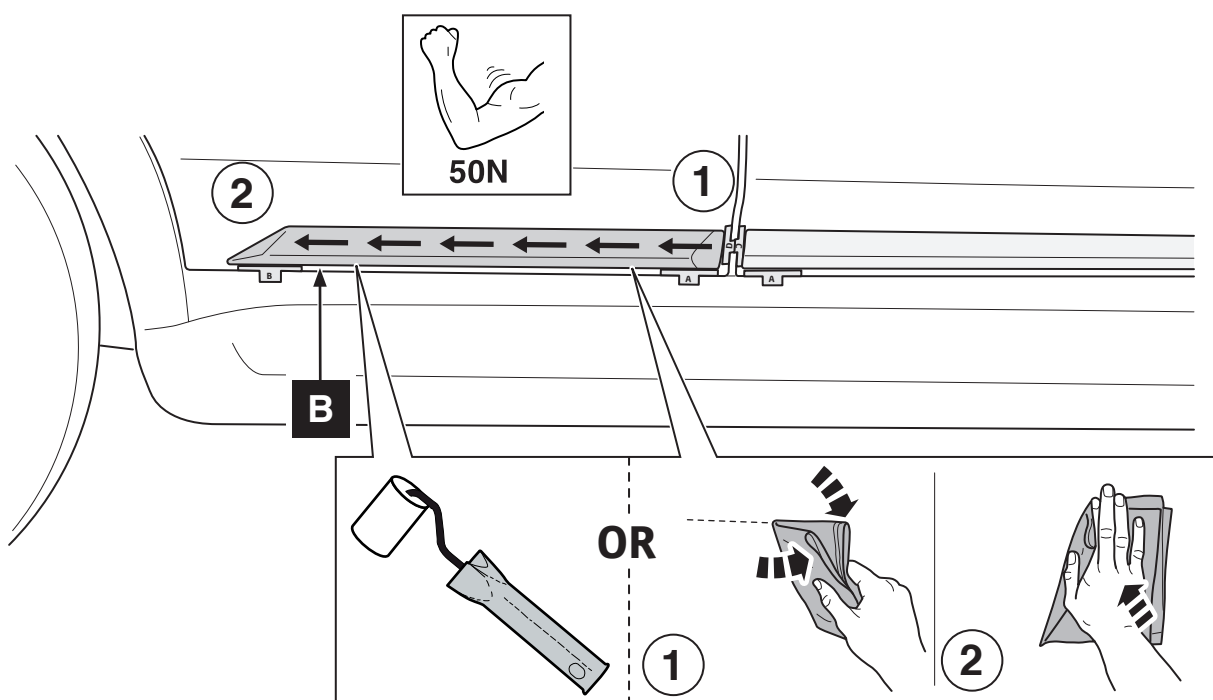


14

15

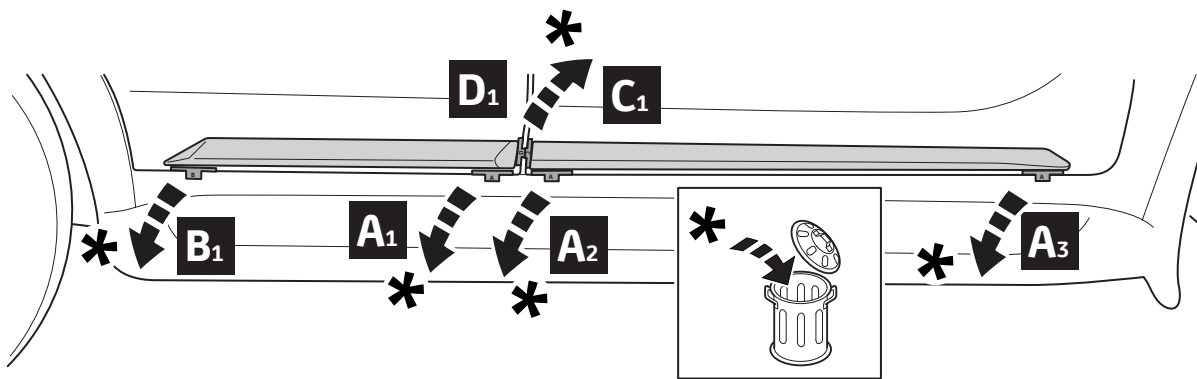







16

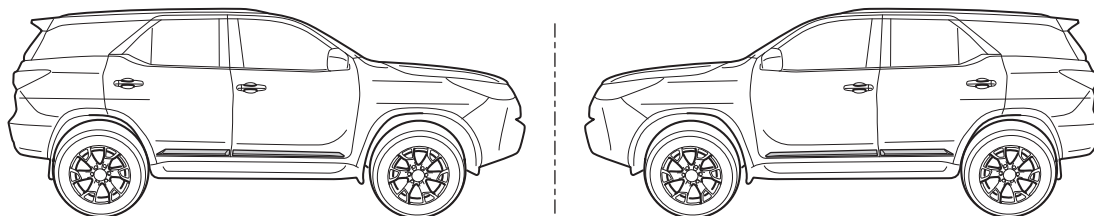

A B LHS = RHS D E



INFO

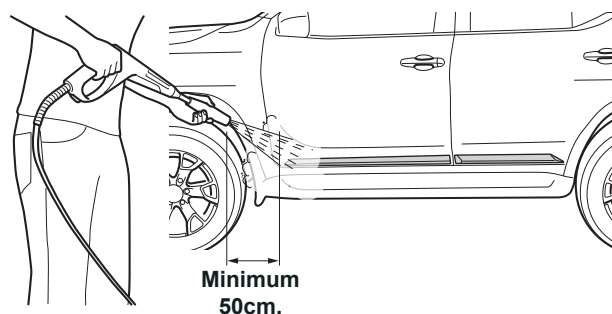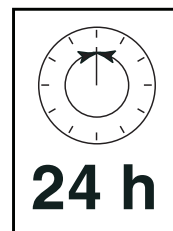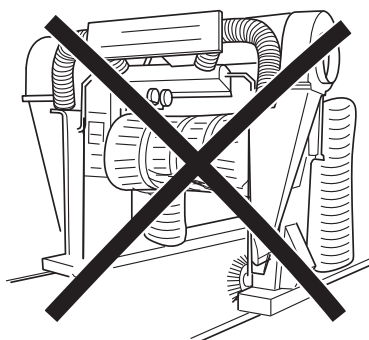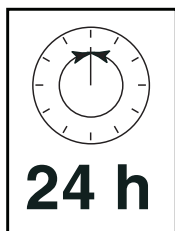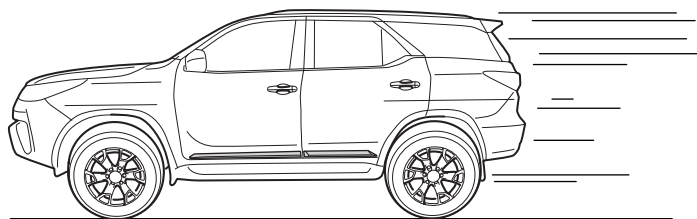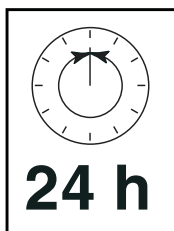

CHECK SHEET

Page 1 of 1



TOYOTA


ALWAYS A
BETTER WAY

Model / Year Fortuner
As from 2017/08




Side moulding

VIN n°

DURING INSTALLATION

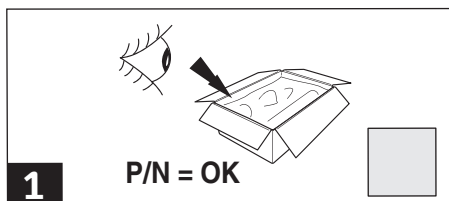

AFTER INSTALLATION

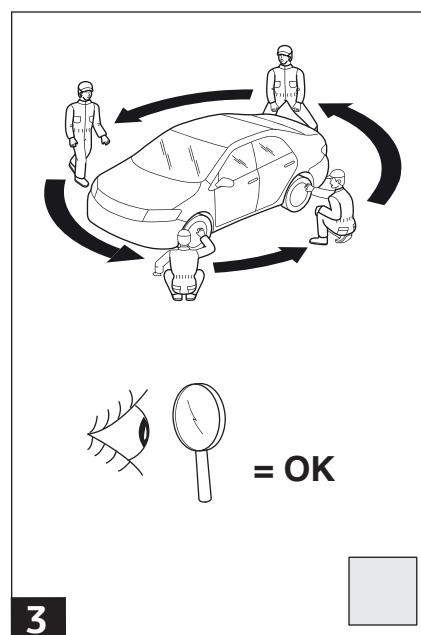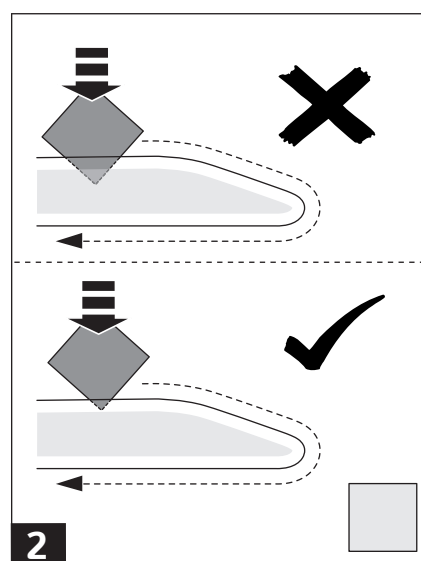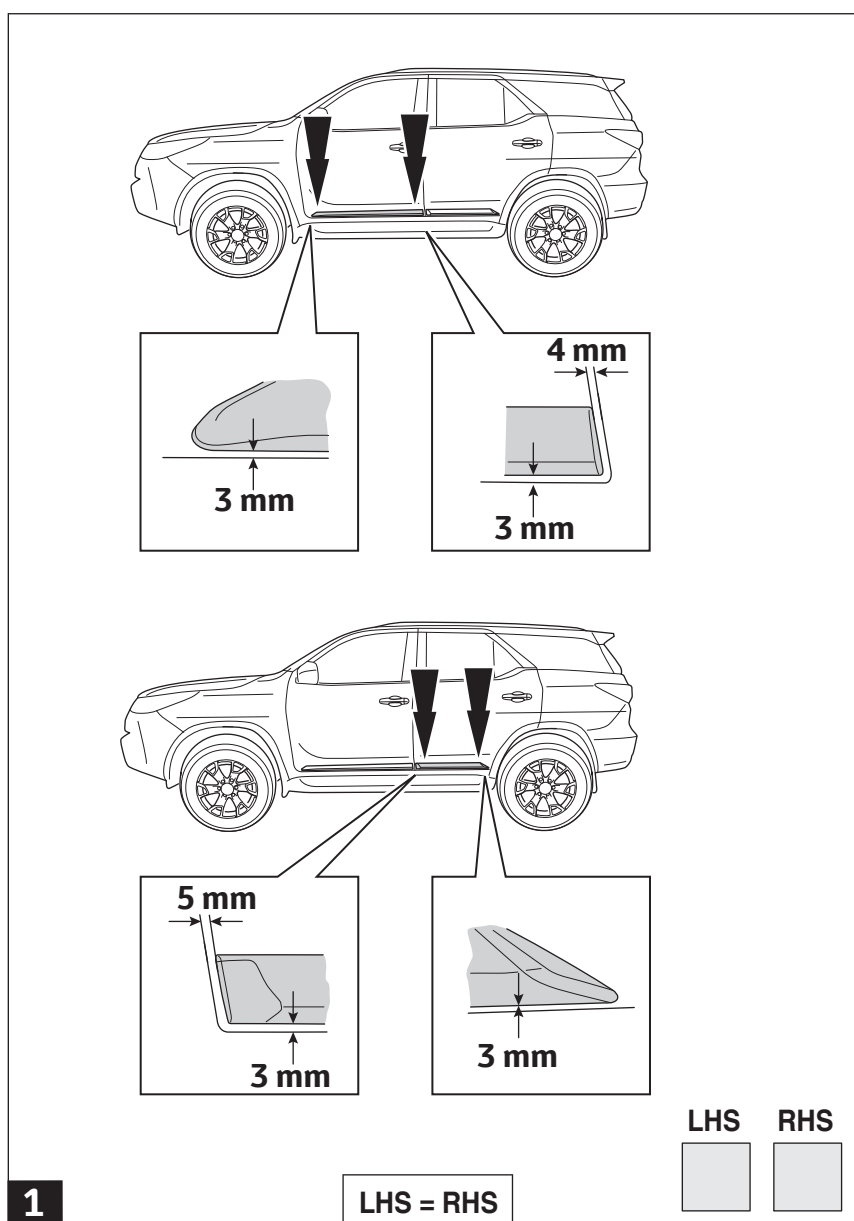

Installation Date:

. . / . . /

Technician Name & Signature:

Stamp: