








Parts and Accessories
INSTALLATION INSTRUCTIONS

SPLASH GUARDS
FOR 2003+ BAJA


J1010LS200

Parts List

Item	Description	Qty	Item	Description	Qty
A	Splash Guard - Front Right	1	E	Bolt with Washer	2
B	Splash Guard - Front Left	1	F	"J" Nut	2
C	Splash Guard - Rear Right	1	G	Screw Rivet	8
D	Splash Guard - Rear Left	1	H	Instructions	1

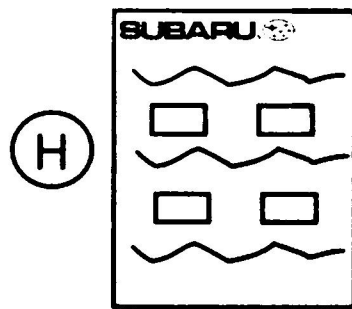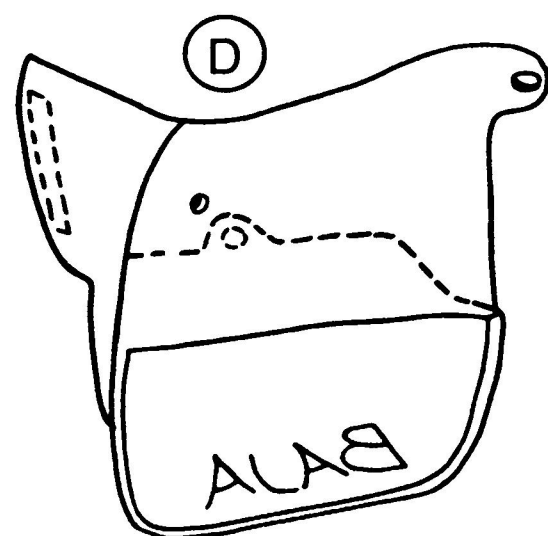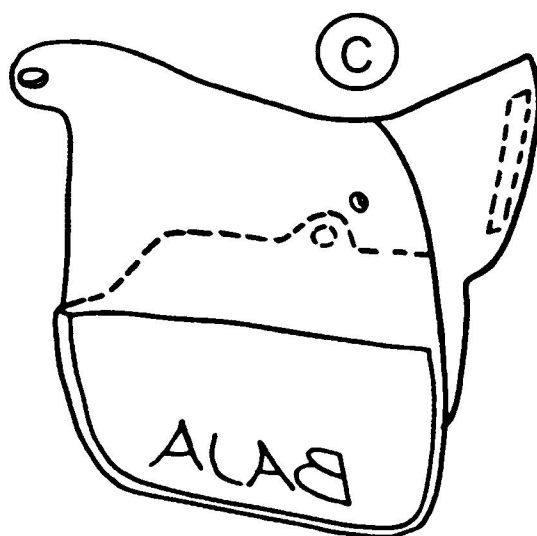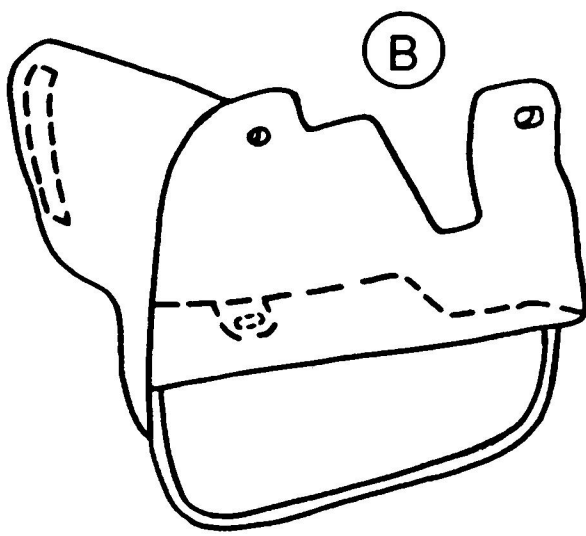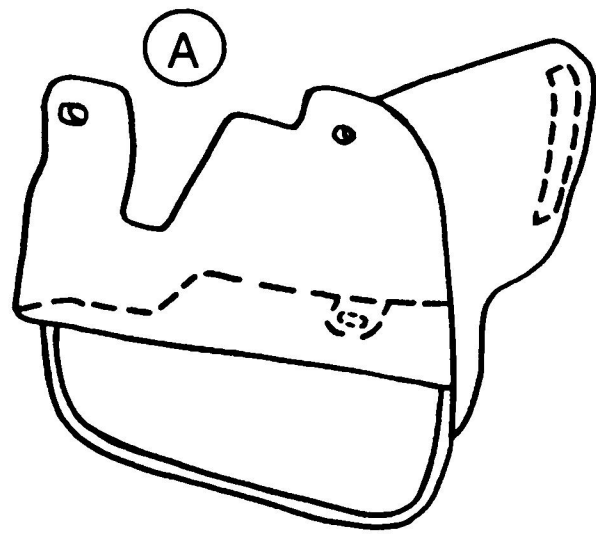

Tools Required

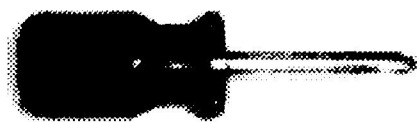

#2 Phillips Screwdriver (+)



soft clean cloths




Isopropyl Alcohol
(90-100%)




PRE-INSTALLATION CAUTIONS

1. Be careful not to scratch the vehicle body or exterior trim pieces during Splash Guard installation.
2. Do not wash the vehicle for 24 hours following installation of Splash Guards.
3. If the Splash Guards require cleaning after installation, wipe with a damp soft cloth or sponge and mild soap. Wipe dry thoroughly with a soft dry cloth. Do not use gasoline, thinner, acid, alkali, or other solvent based products.
4. Prior to installation, clean the Side Sill Cladding (for front Splash Guard), and Rear Quarter Cladding (for rear Splash Guard) with Isopropyl Alcohol.
5. If the temperature is below 60° F (15° C), heat the double sided tape and Cladding surface to a temperature of 80° F (27° C).
6. The adhesive tape is very sticky but loses adhesion when removed and reapplied, so caution is required when fitting the Splash Guard in place.


Installation

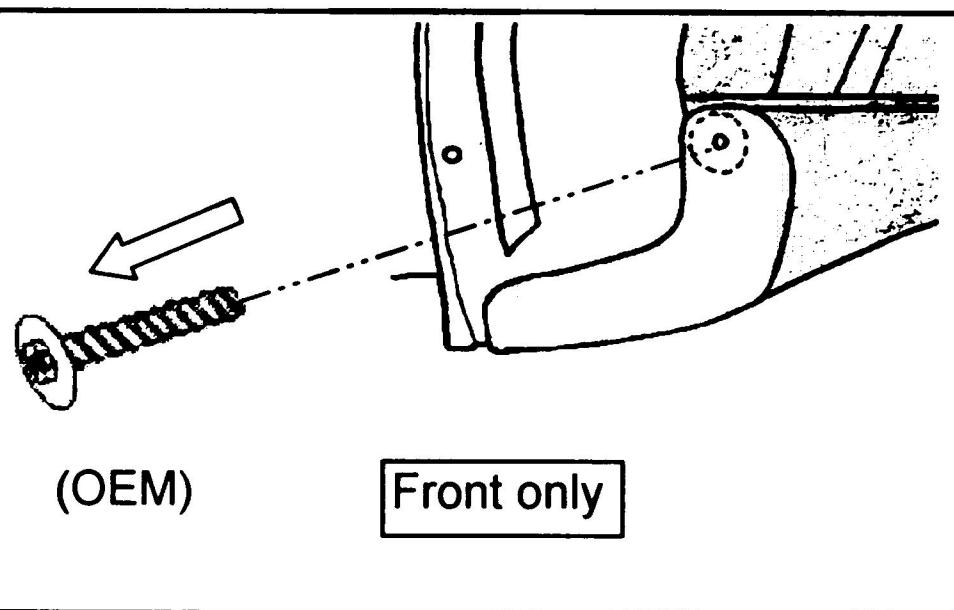


1 Remove OEM bolt, and save for re-installation.

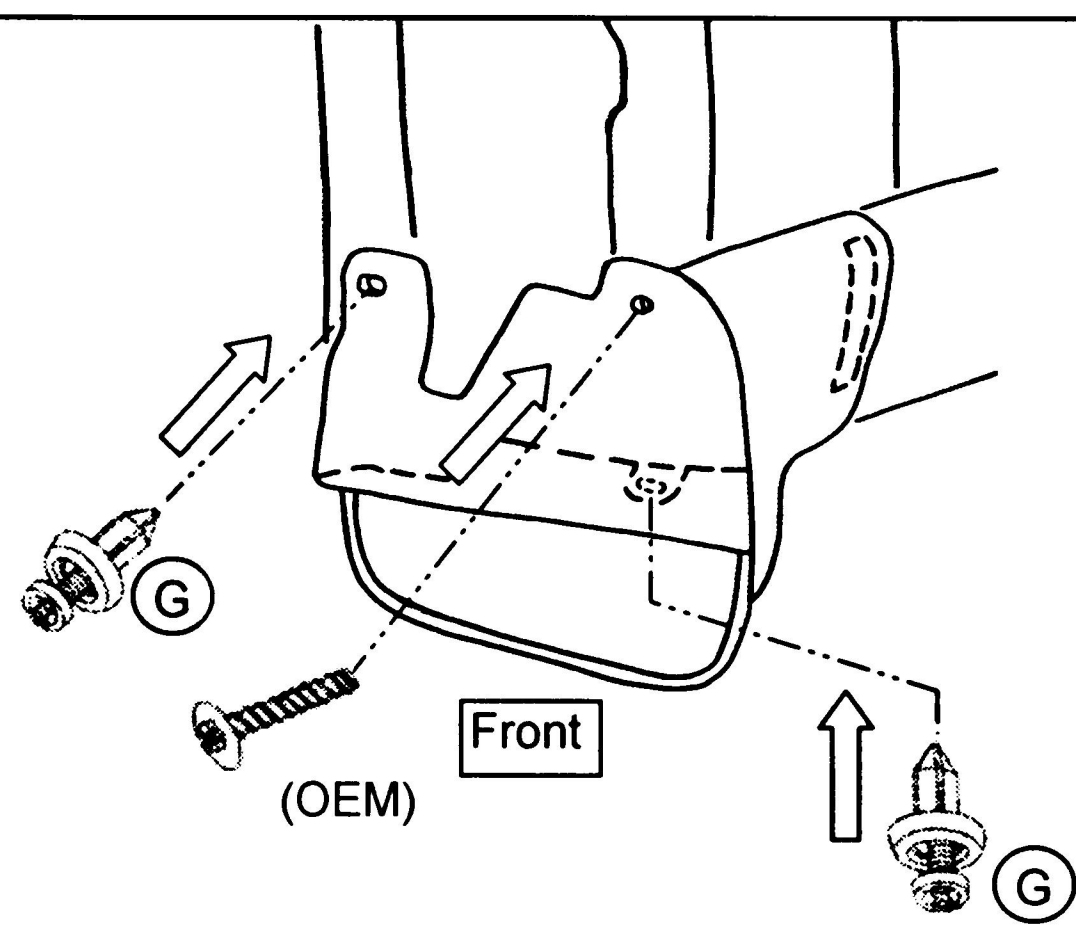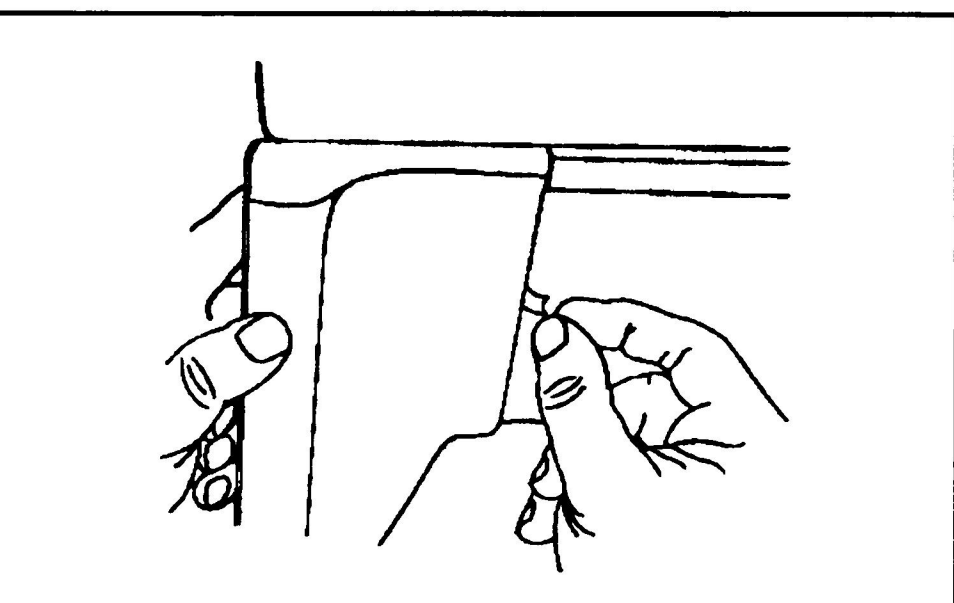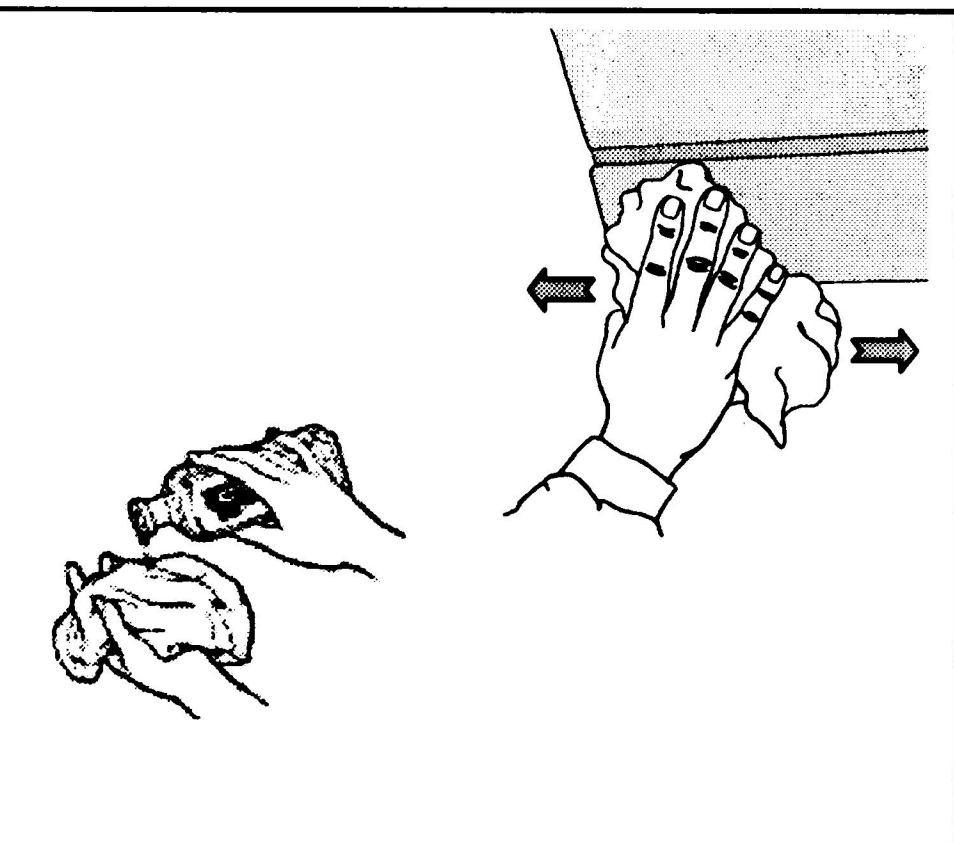

7 Insert and tighten fasteners. Note: tighten bolts to 36 ± 6 in·lbs (4 ± 0.7 N·m)

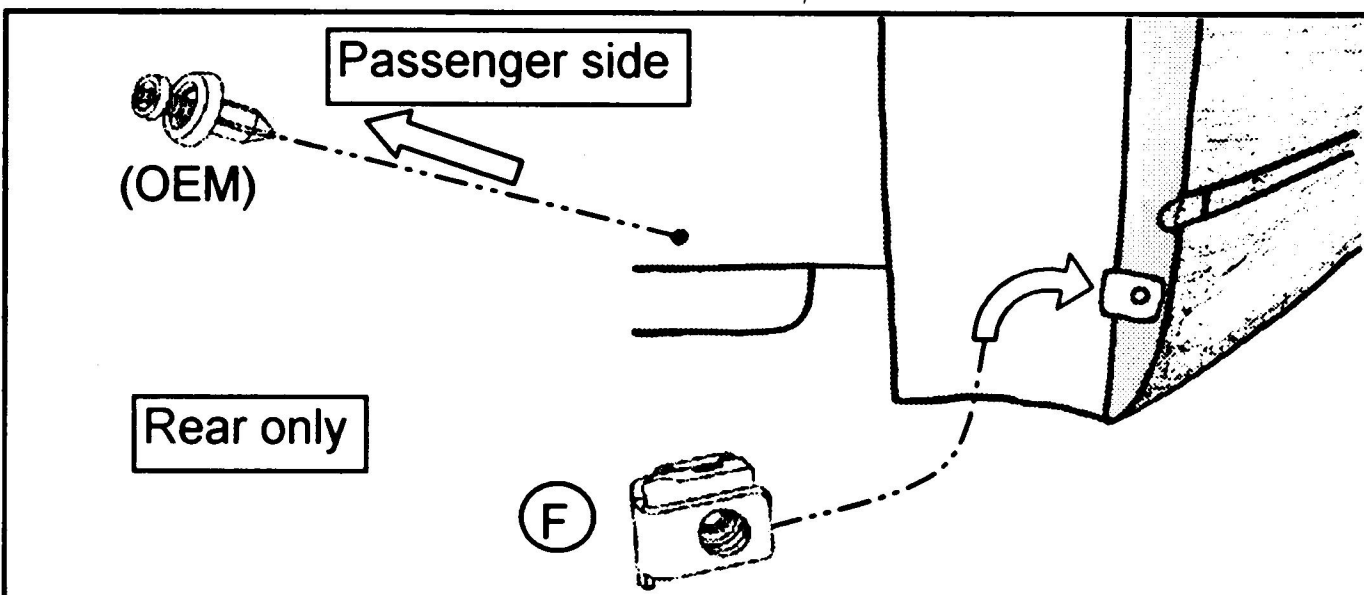

2 Slide J Nut (item F) over hole in flange. Position "nut" to face away from the Splash Guard. Remove OEM screw rivet and discard. (Passenger side only)

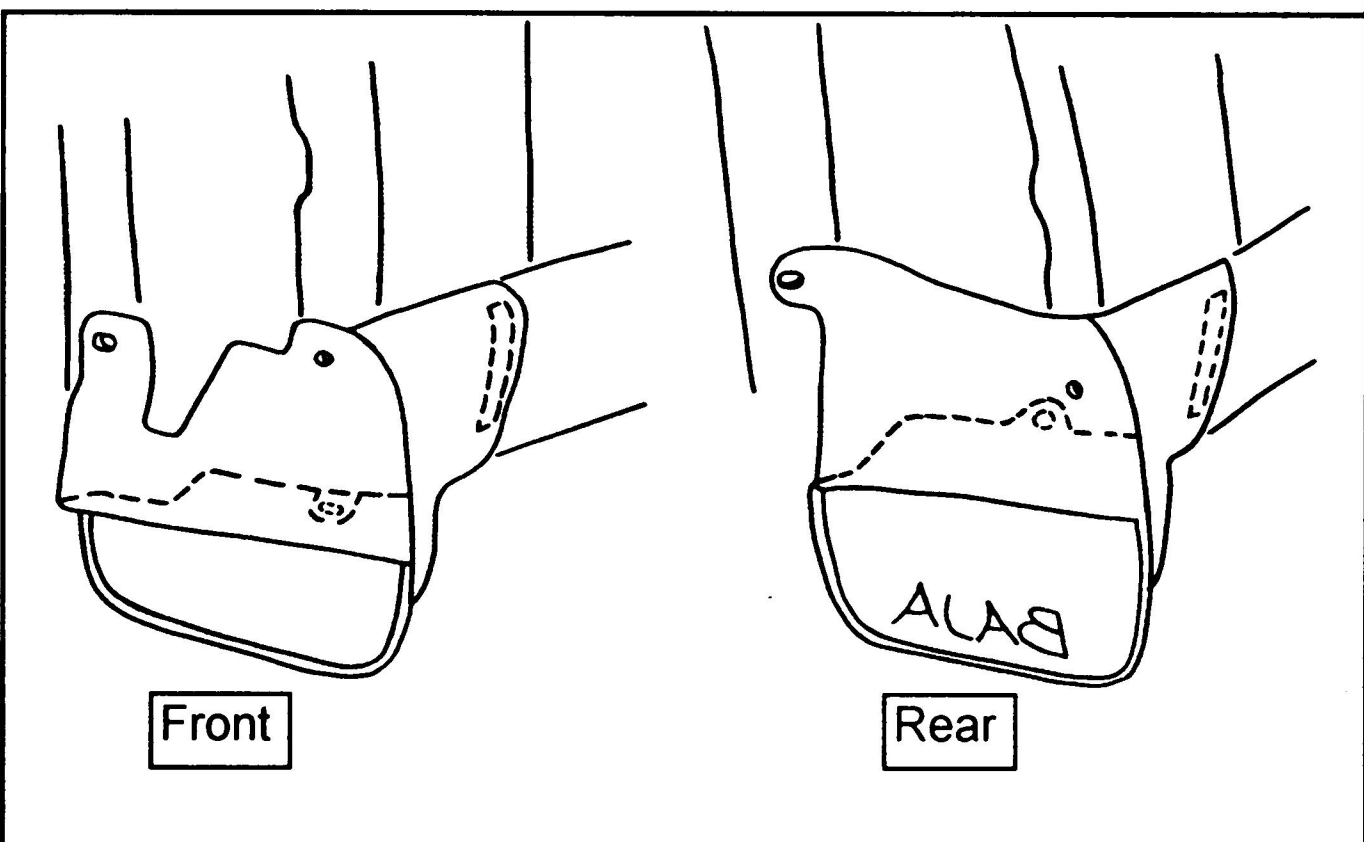

4 Position the Splash Guard. Align holes.

