



TOYOTA

ALWAYS A
BETTER WAY

TOYOTA C-HR

Towing hitch vertical detachable

Installation Instructions

Model year:	2019/10	
Vehicle code:	NGX*0R-AHX*XQ ZYX10R-AHX*BQ	
Part number:	PW960-10012 82711-34360-A	Fitting part (for 2.0L HV only)
Weight:	14,5kg	

Manual reference number: AIM 004 594-1

FITTING INSTRUCTIONS - TOWBAR

Type: 6630
D-value: 8,69 kN
Vertical coupling load towbar: 75
Manufacturer: Brink B. V.
Postbox 24
NL 7950 AA Staphorst
Model Application: Toyota C-HR

A50-X

Expert Fitment Required.

Ensure that this fitting instructions is passed to the customer.

In order to use the trailer hitch, simultaneous installation of an electrical kit is required.

(Cable set not included!)

Remove undersealing, anti-corrosion wax and noise-deadening material in the area of the contact surfaces.

Apply corrosion protection material as specified in the TOYOTA service guidelines, where necessary.

After approximately 1000 km of trailer use, retighten all bolts to the correct torque values.

For correct trailer loads please refer to vehicle documents of the individual vehicle model.




The coupling ball must be kept clean and well greased*.

*EXCEPTION: When stabilizers are used, proceed according to the instructions of the manufacturers of the stabilizer. In this case coupling ball must be inspected for wear at regular intervals.


The trailer coupling must be installed and inspected in accordance with the applicable national regulations.

Revision record


Rev. No.	Date	Page	Step	Remarks
1	21.06.2019	2, 4	Text, Kit	Type updated, part „E“ added to kit






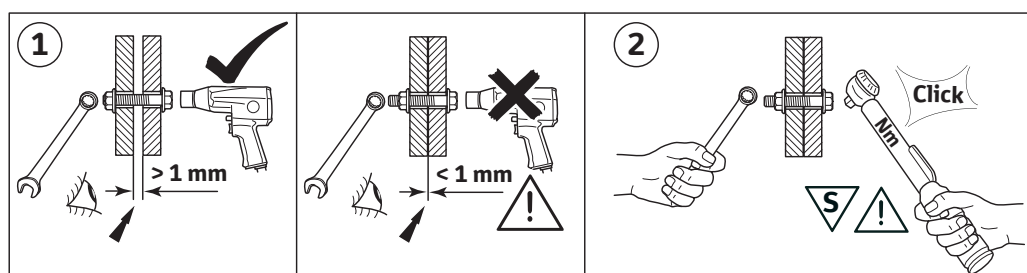
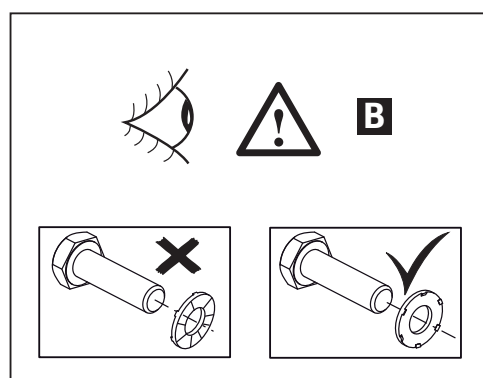
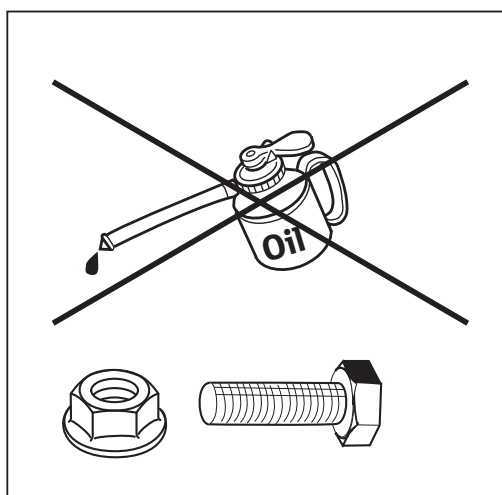

















Material Safety Data Sheet

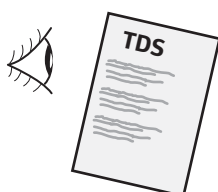




Technical Data Sheet



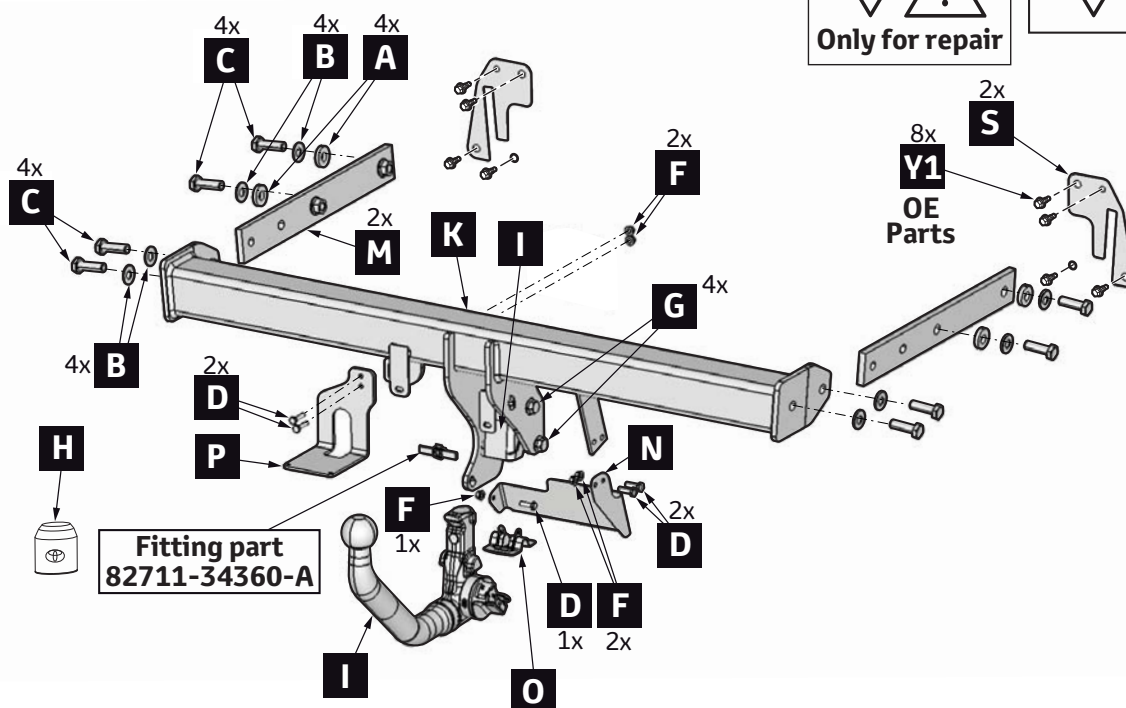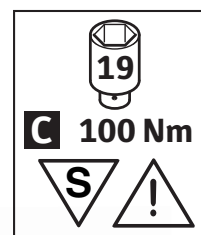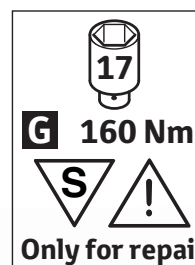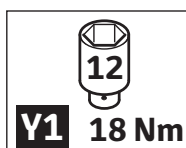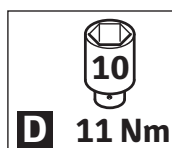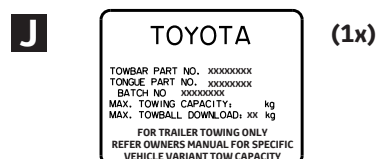

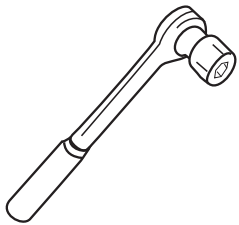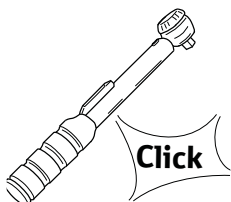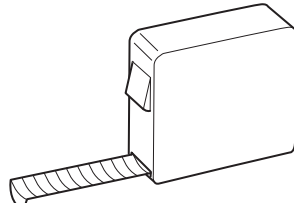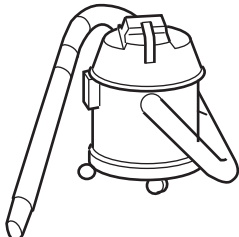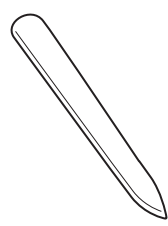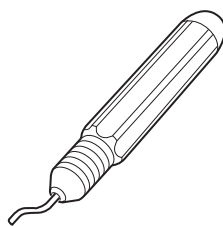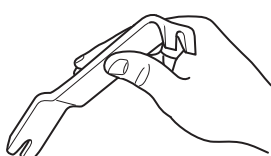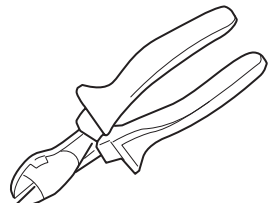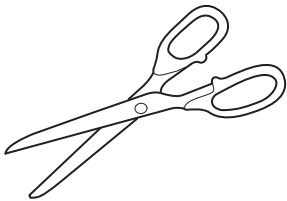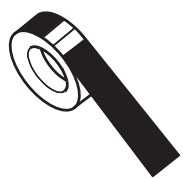
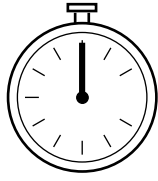



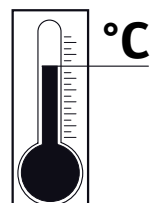
		 10, 12, 17, 19	
	 A:PRIMER B:ACTIVATOR A: Dupont® refinish etching primer B: Dupont® refinish activator or A: Standox® Etching Adhesion Primer 020 16167 B: Standox® Etching Adhesion Activator 020 16168 or A: Sikkens® primer surfacer EP II B: Sikkens® primer surfacer EP II Hardener		
	  AIM 003 516-*		
			
	 	 	

 = 	 = 	 = 	  = 	 = 
 = 	 = 	 = 	  = 	 =  START


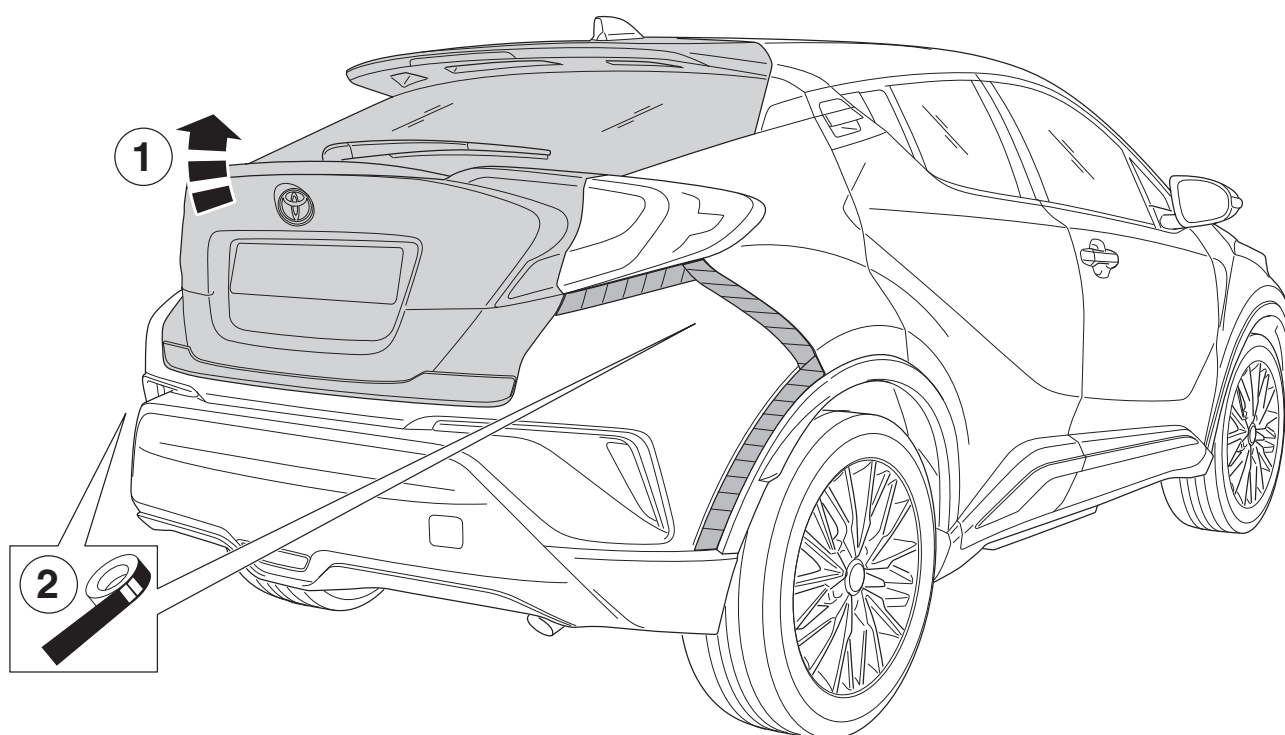
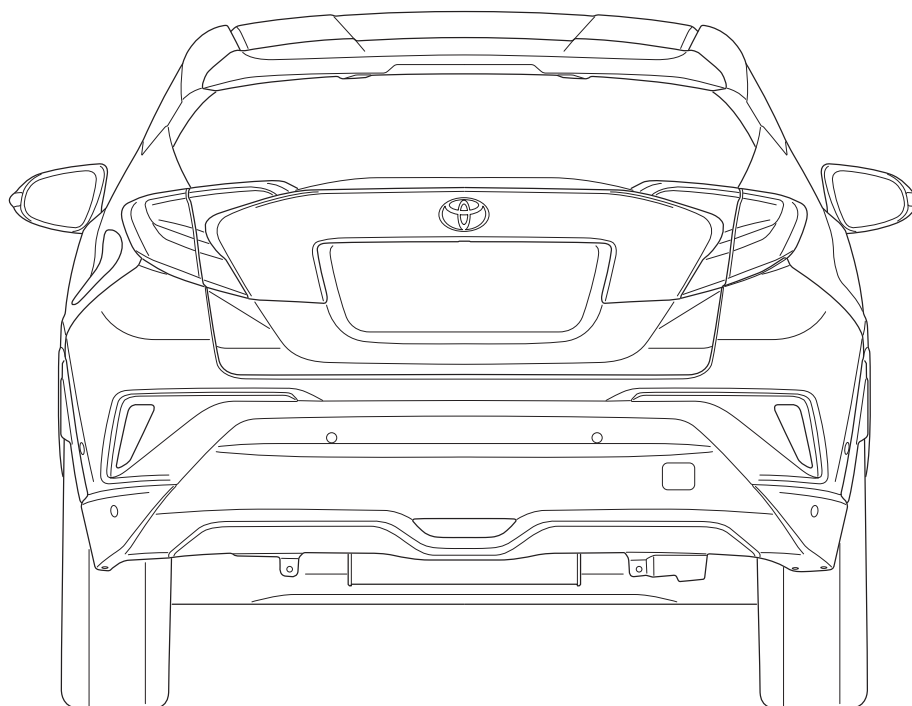


1



2


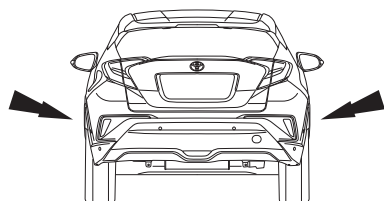
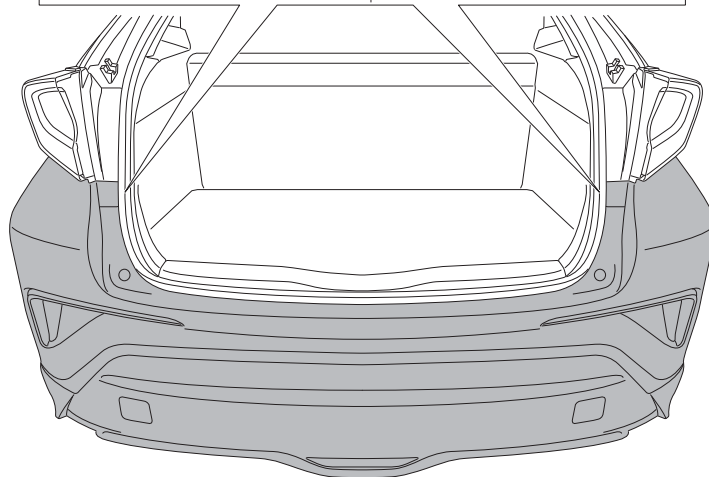
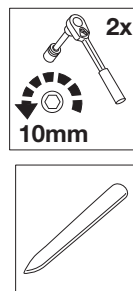
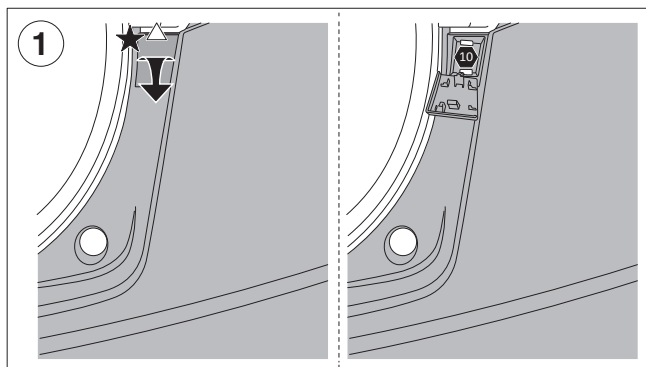
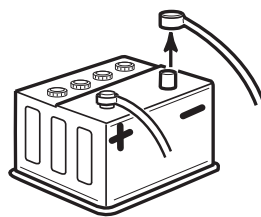
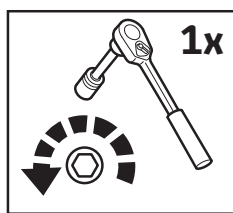



2

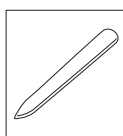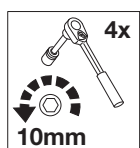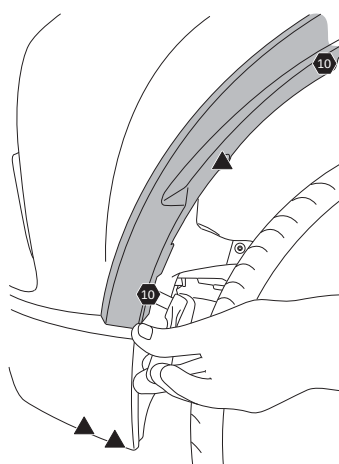



3

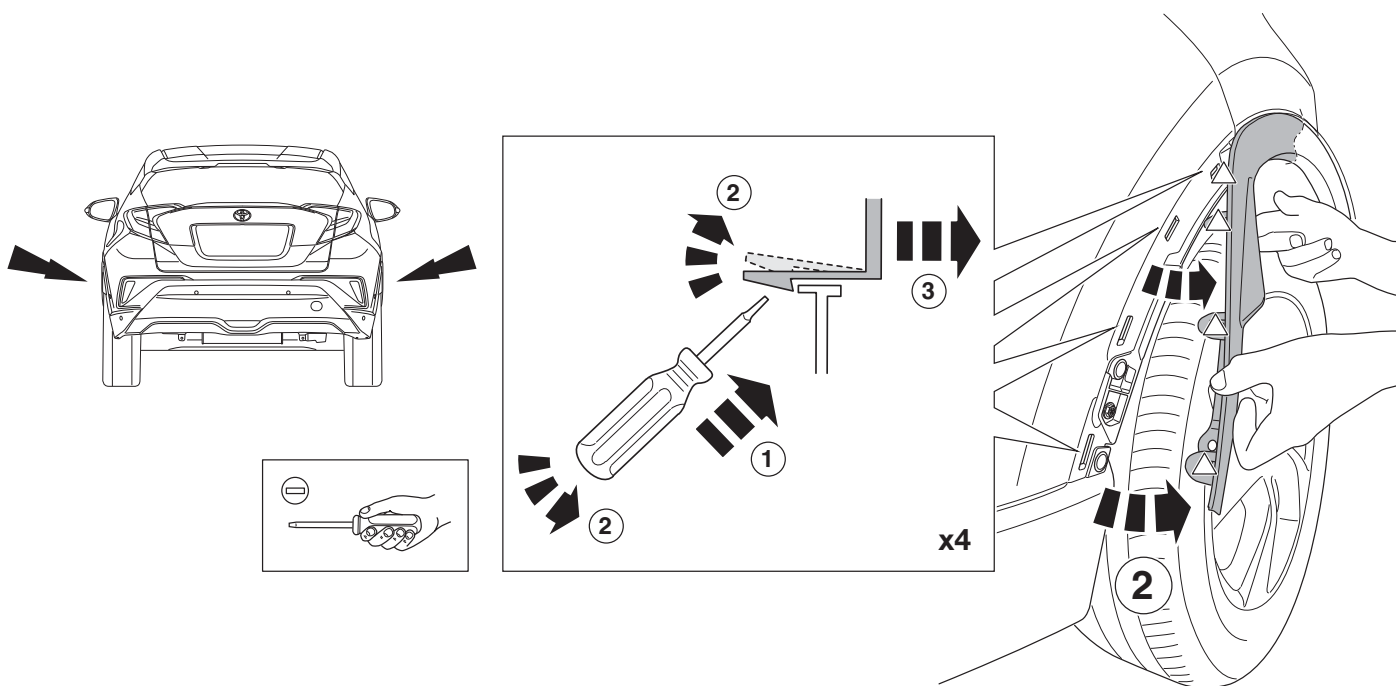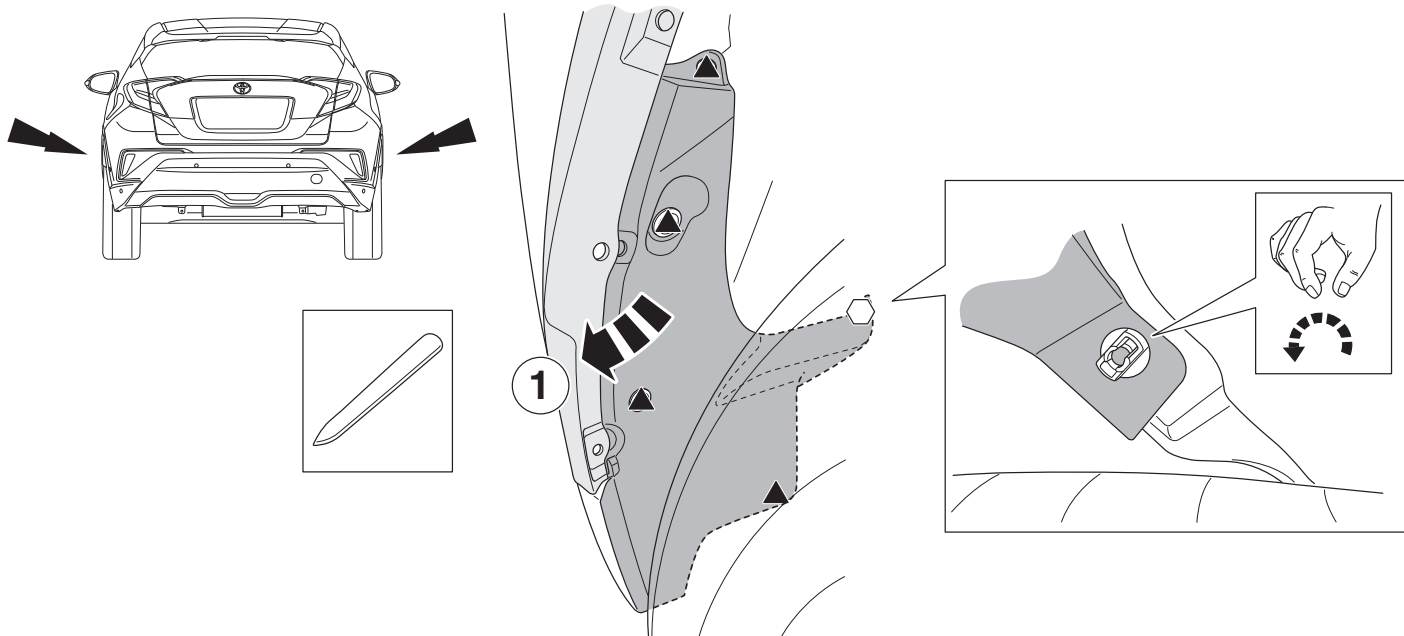

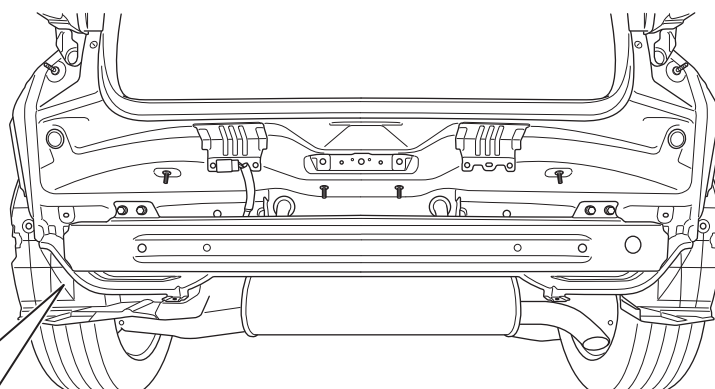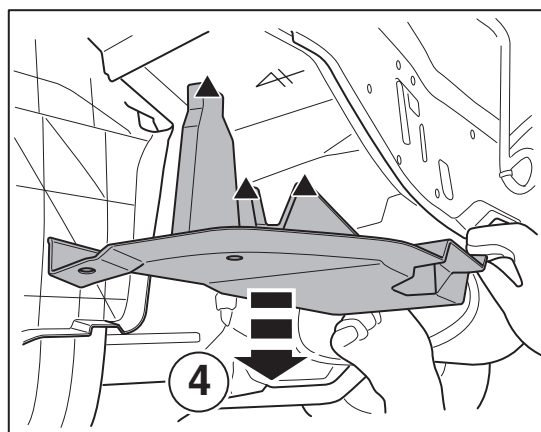
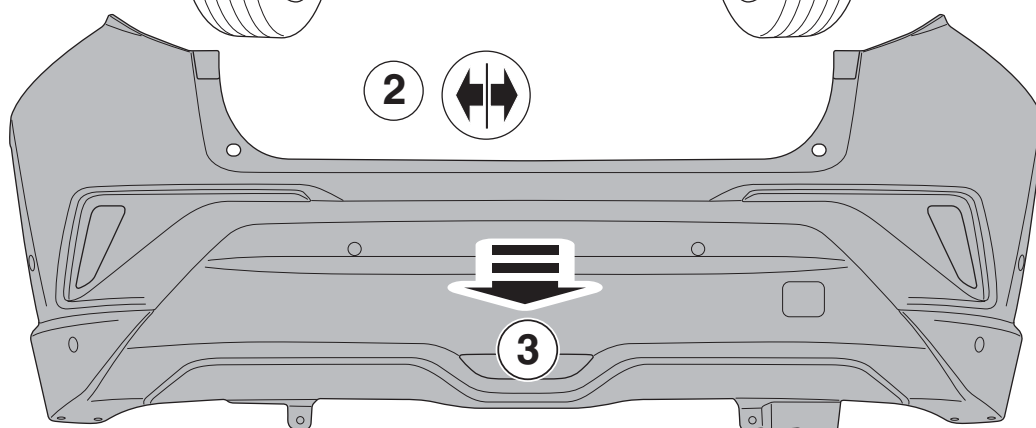
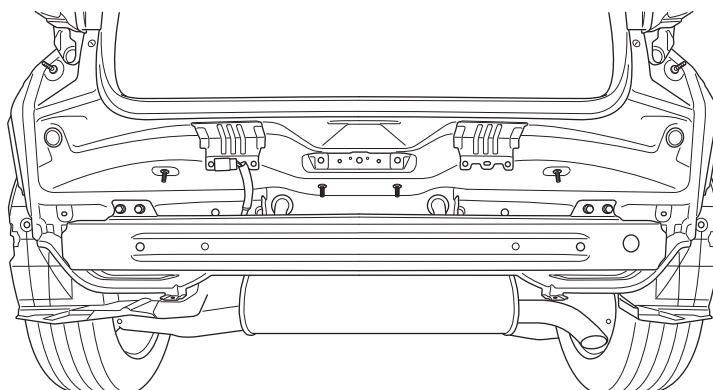
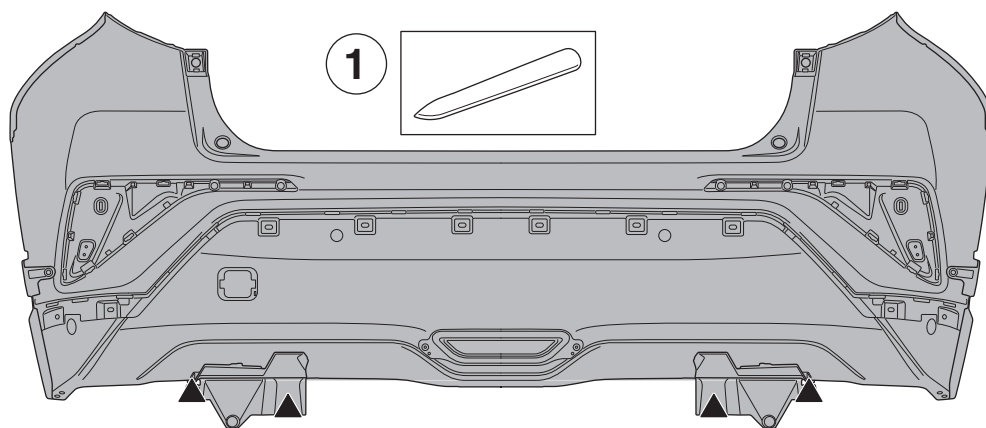
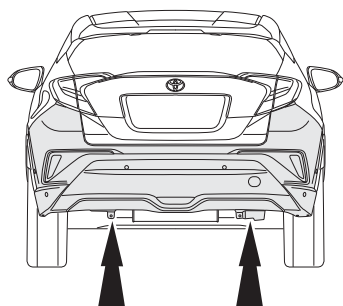


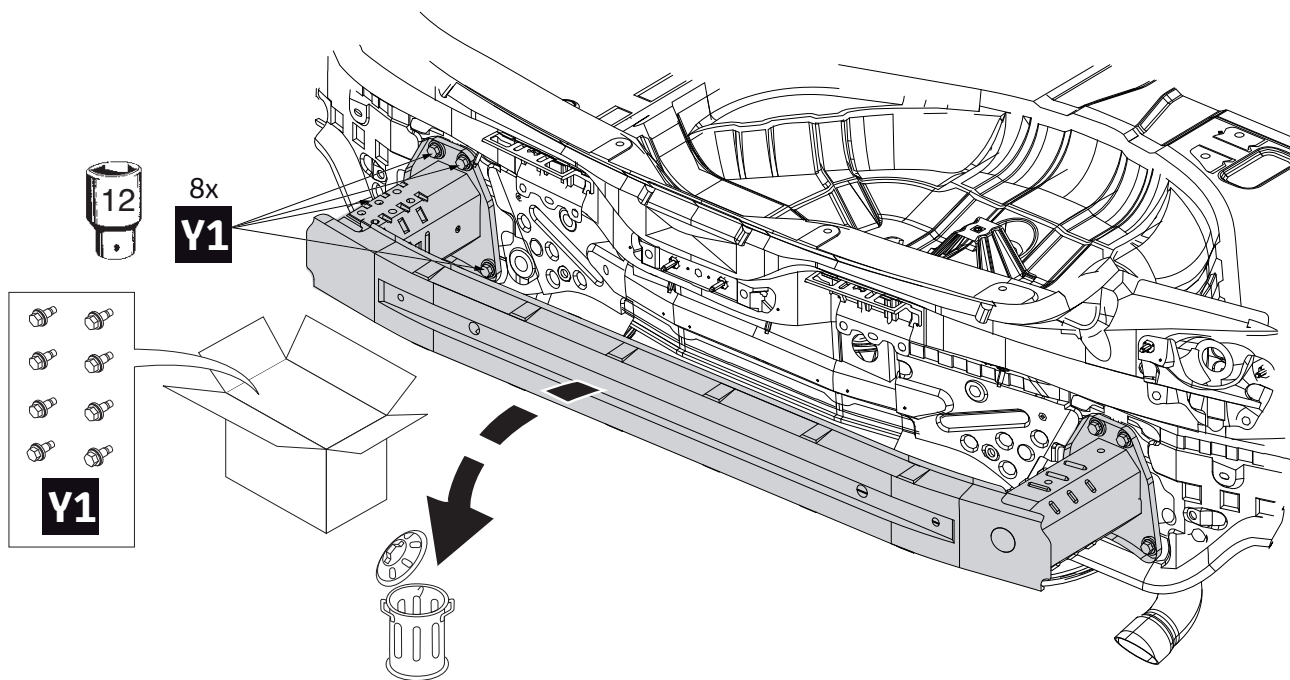


6

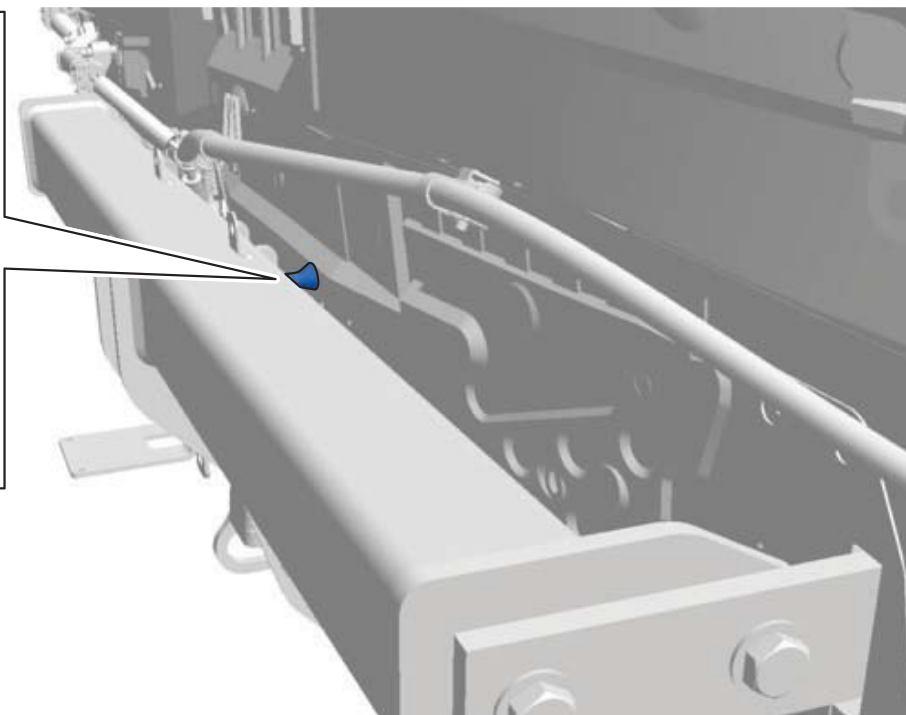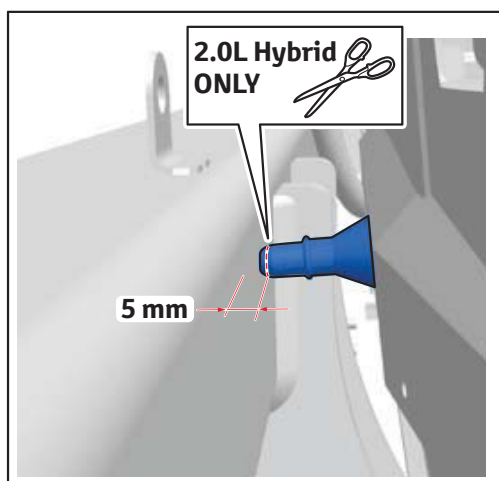


7

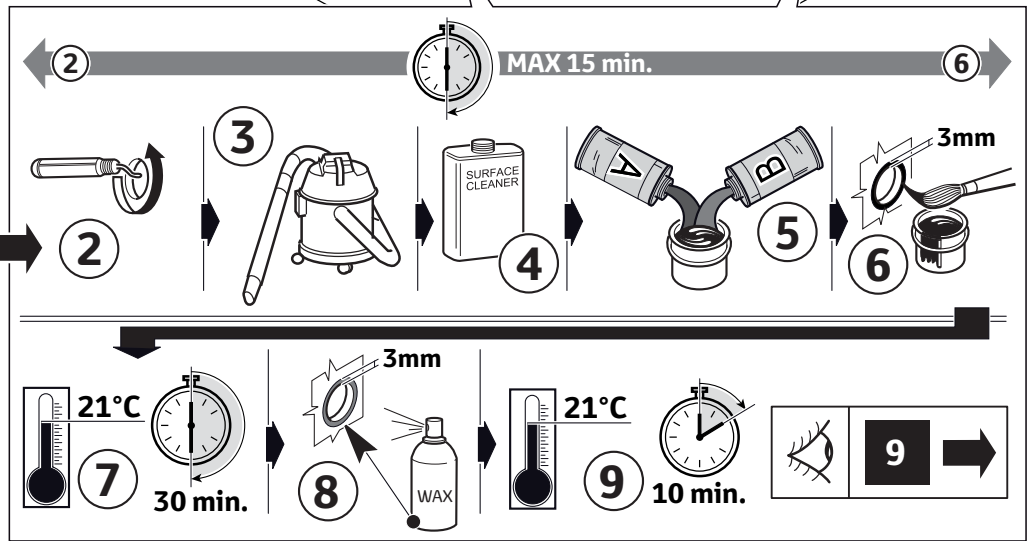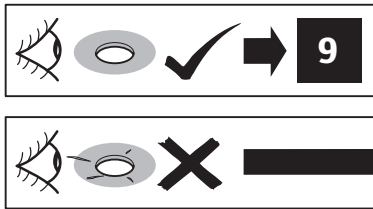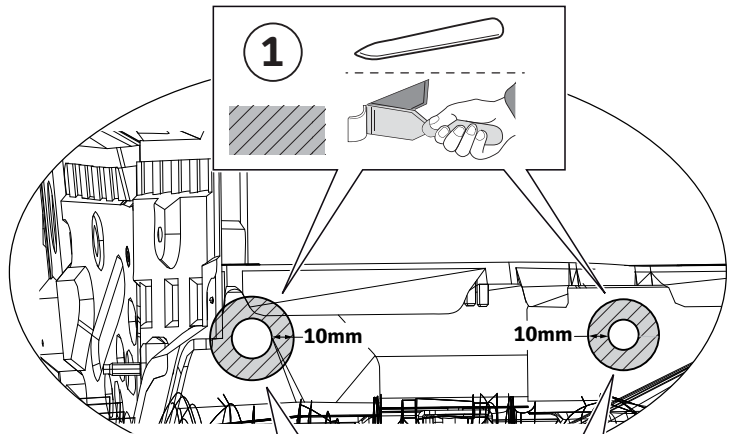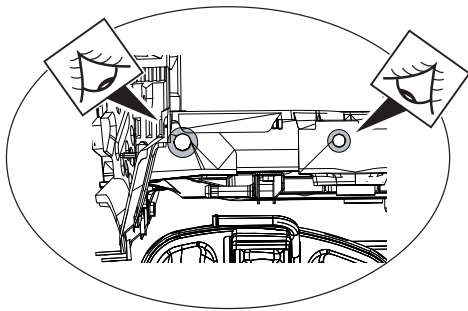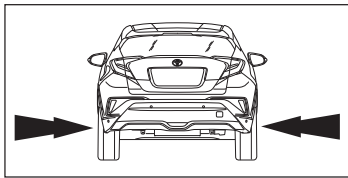


8

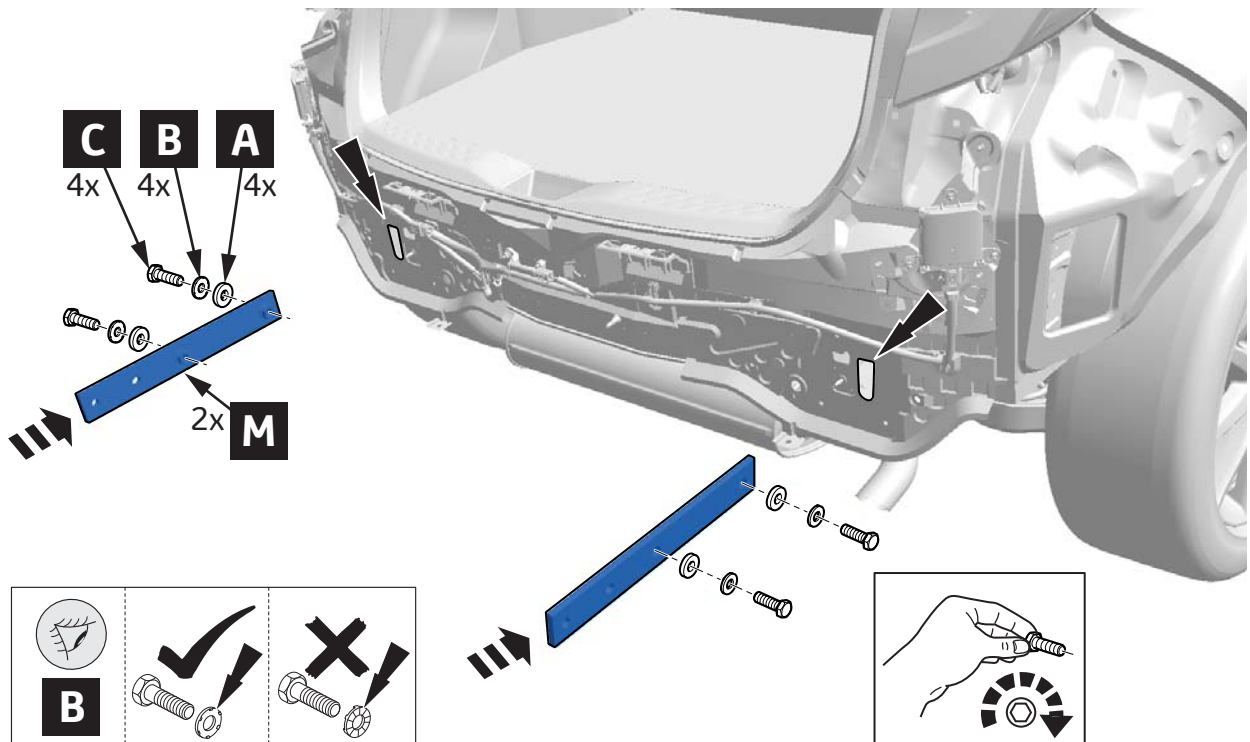


9

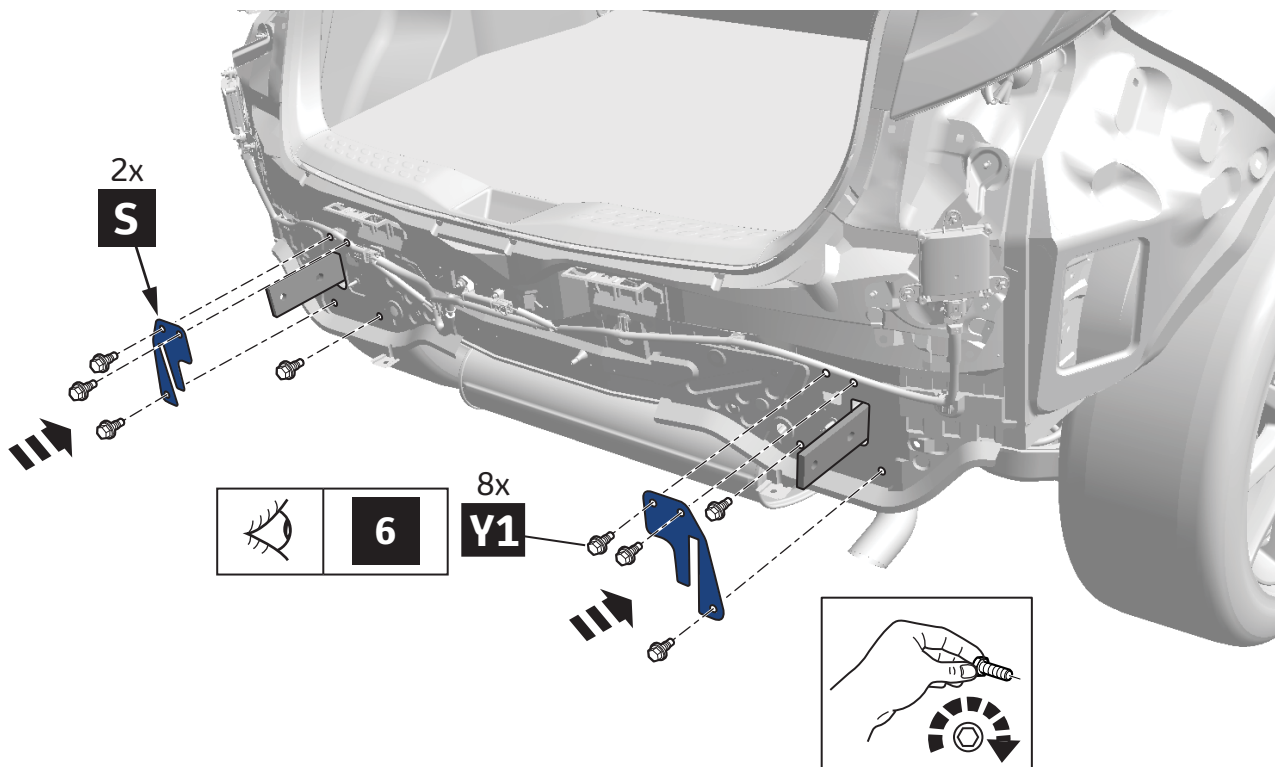


10

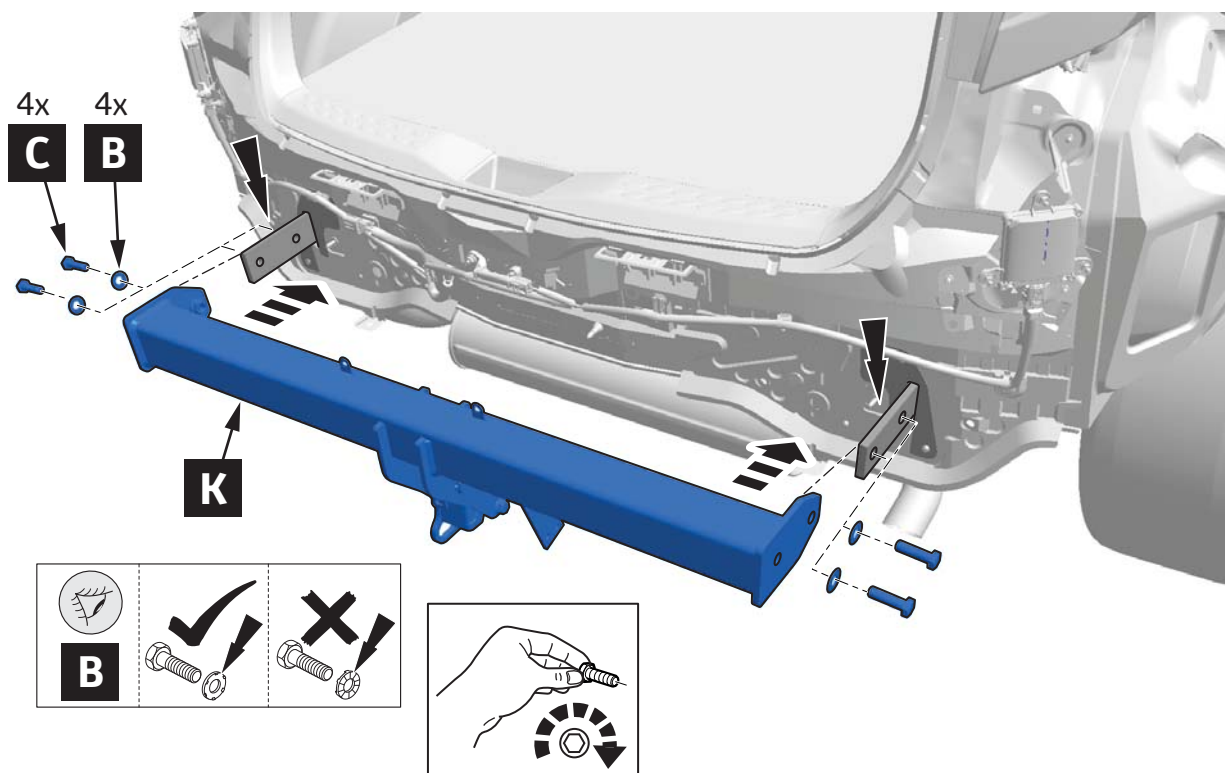


11

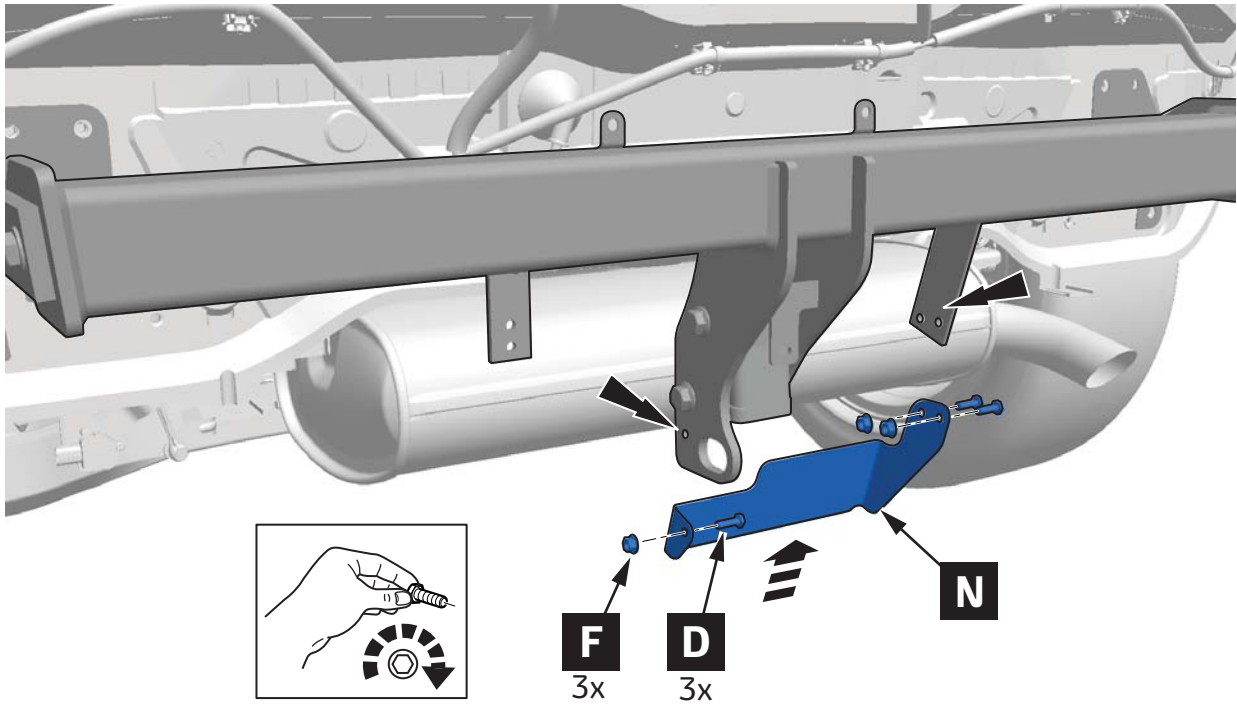


12

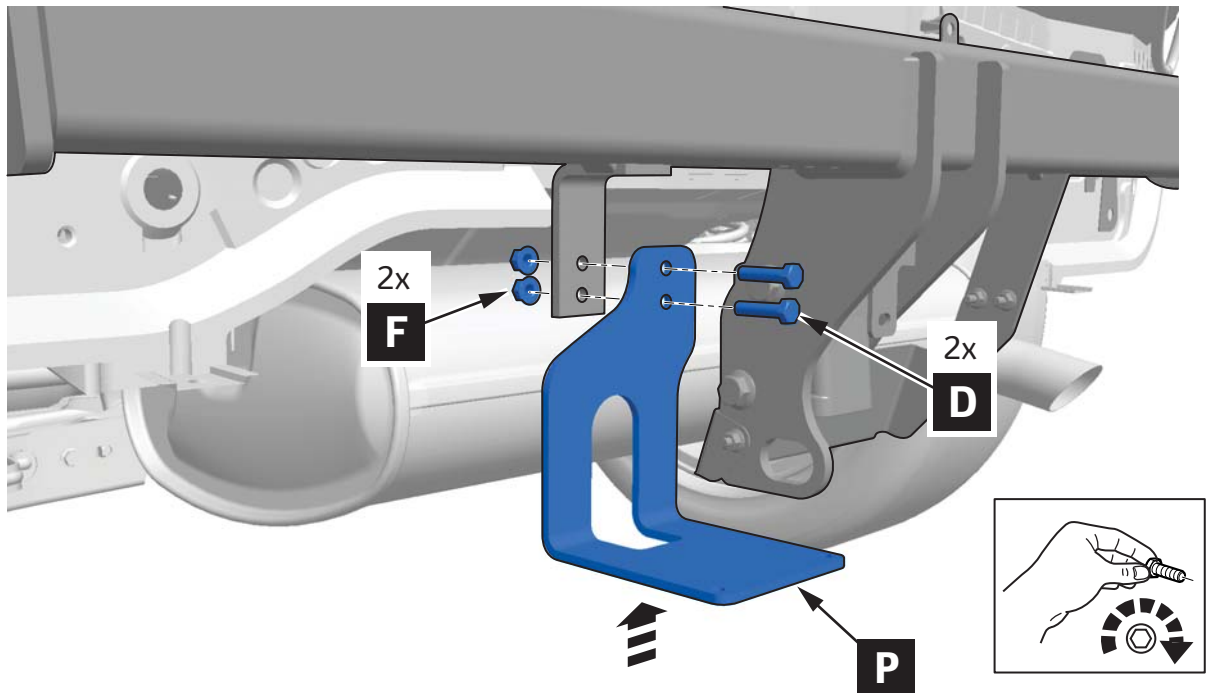


13

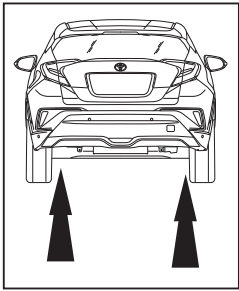


	1→2→3→...	 Click	QTY	
	1 Y1	18Nm	4x	12
	2 Y1	18Nm	4x	12
	3 C	100Nm	2x	19
	4 C	100Nm	2x	19
	5 C	100Nm	2x	19
	6 C	100Nm	2x	19
	7 D	11 Nm	3x	10
	8 D	11 Nm	2x	10
	9 Only for repair G	160Nm	4x	17


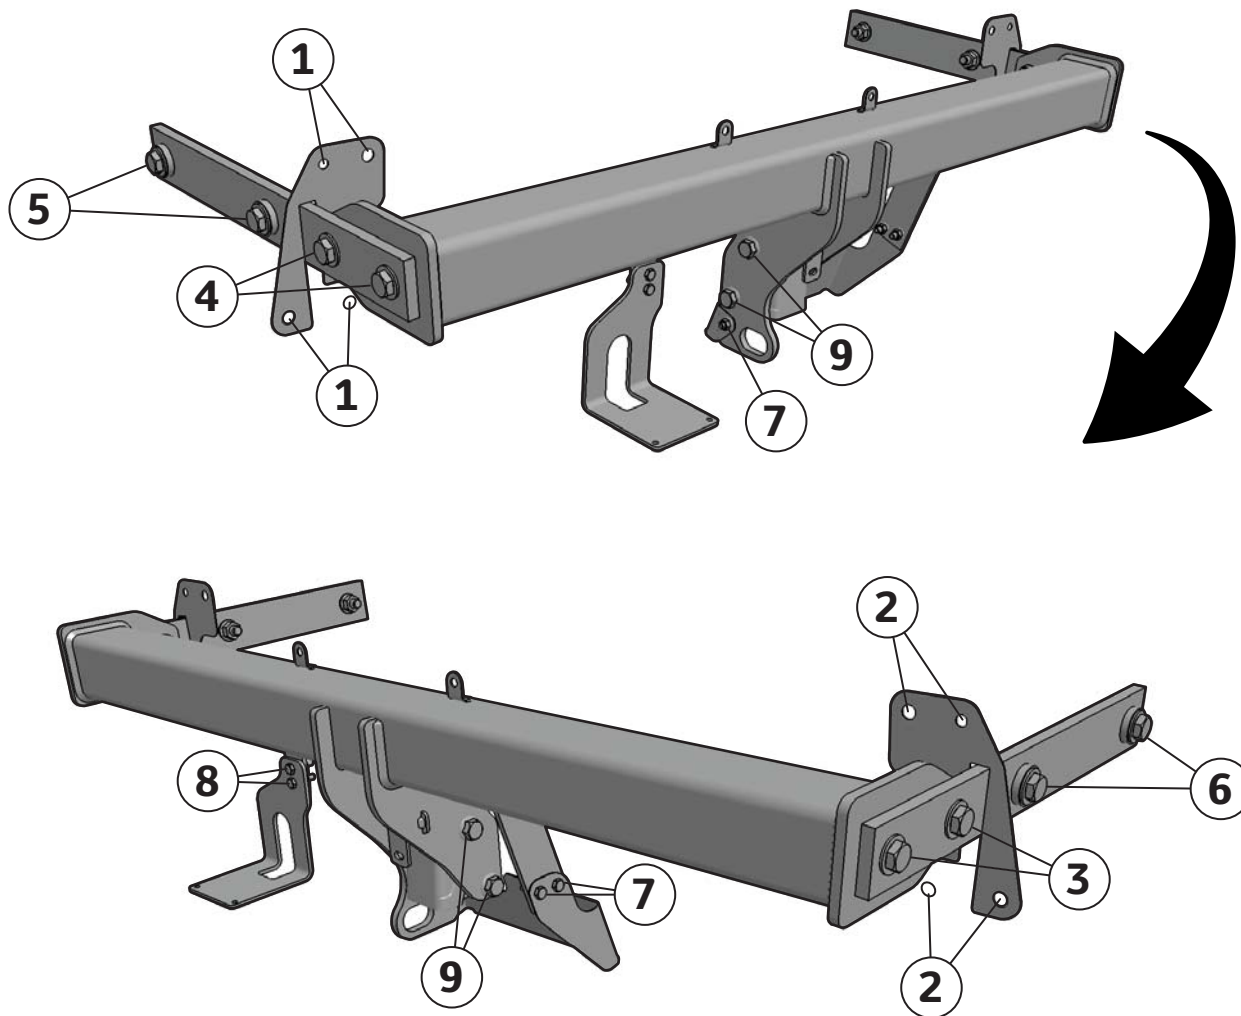


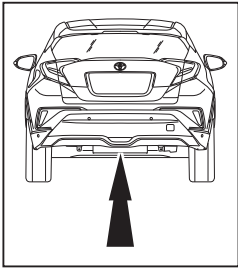


2.0L Hybrid
ONLY

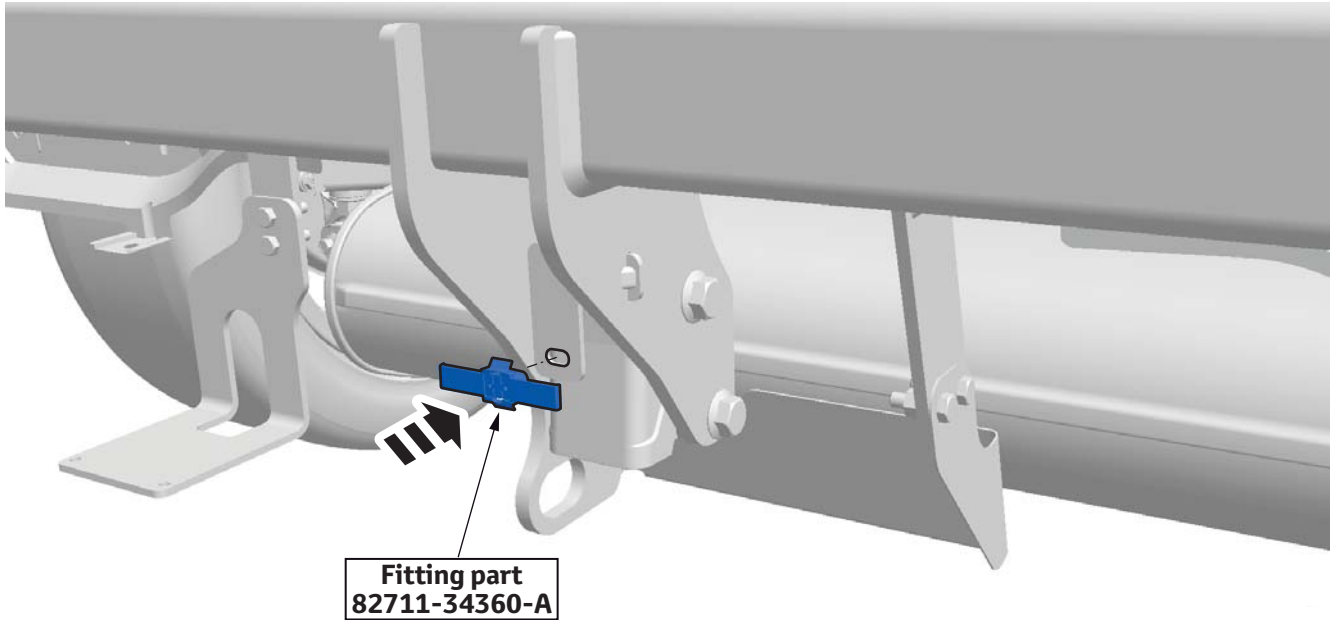





15

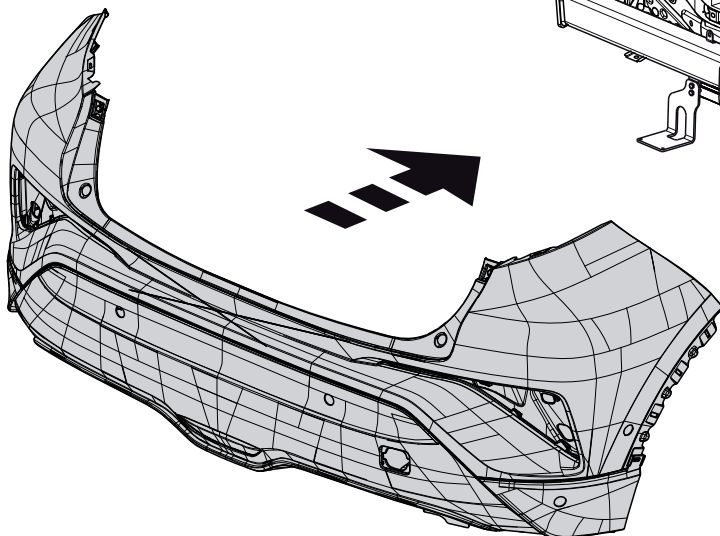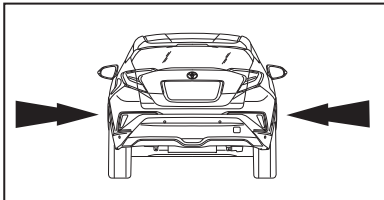



16

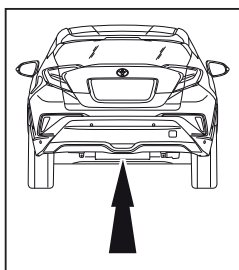




**2.0L Hybrid
ONLY**

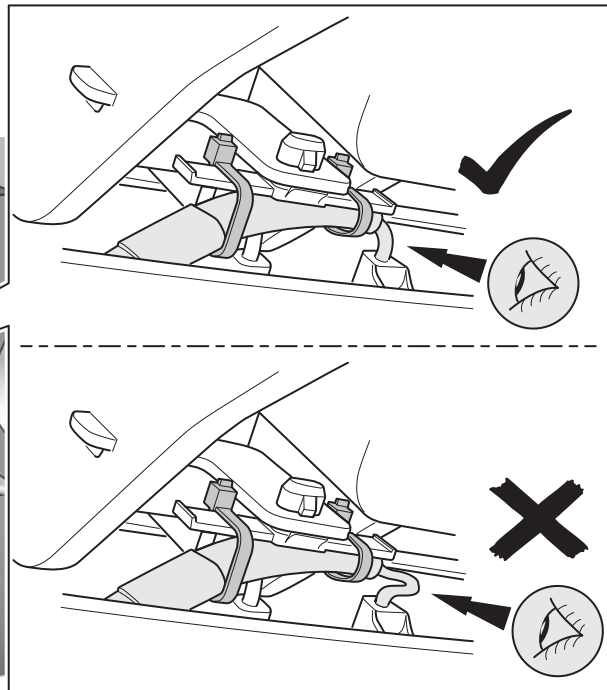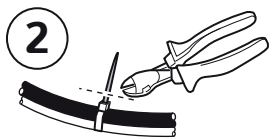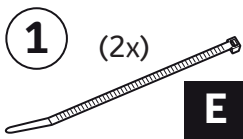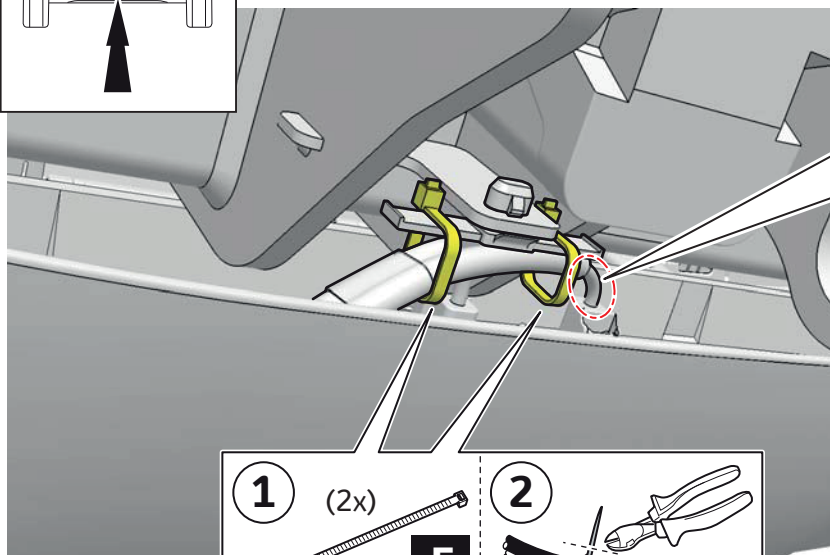

17

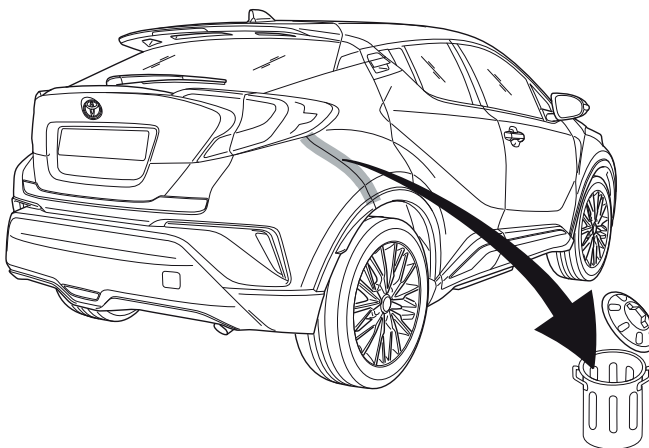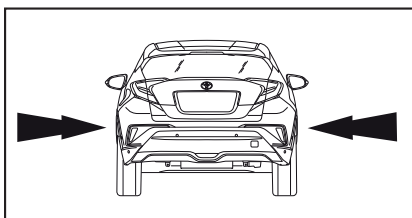

18

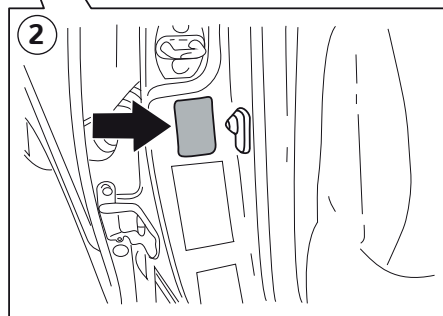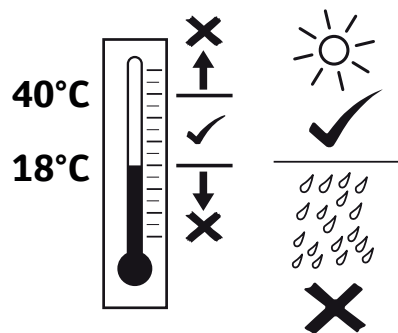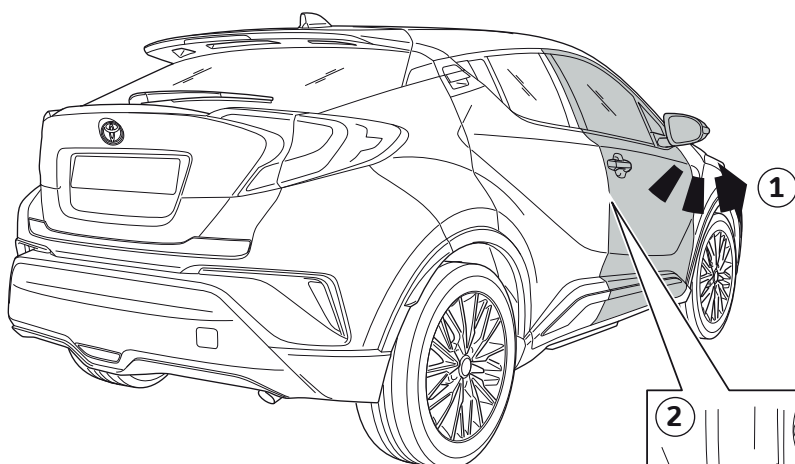


J


TOYOTA
TOWBAR PART NO. XXXXXXXXX
TONGUE PART NO. XXXXXXXXX
BATCH NO. XXXXXXXXX
MAX. TOWING CAPACITY: kg
MAX. TOWBALL DOWNLOAD: kg
FOR TRAILER TOWING ONLY
REFER OWNERS MANUAL FOR SPECIFIC
VEHICLE VARIANT TOW CAPACITY

19


20

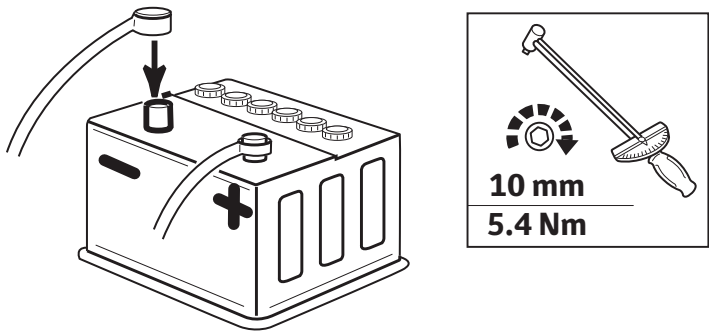

21

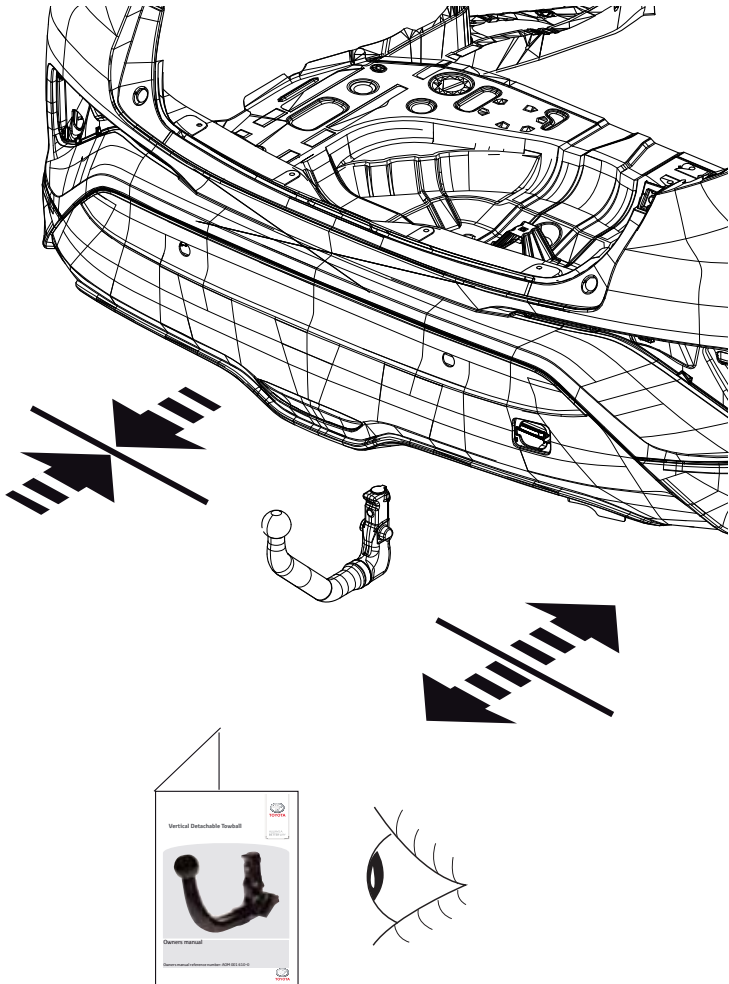

22

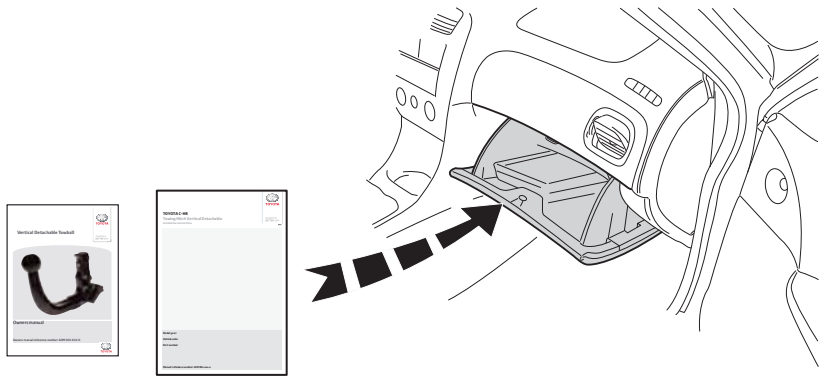






TOYOTA

Model/Year TOYOTA C-HR 2019/10

Towing hitch
vertical detachableVIN n° ALWAYS A
BETTER WAY

DURING INSTALLATION

1

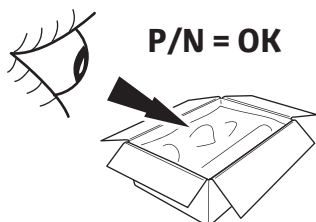


=A




=B


2

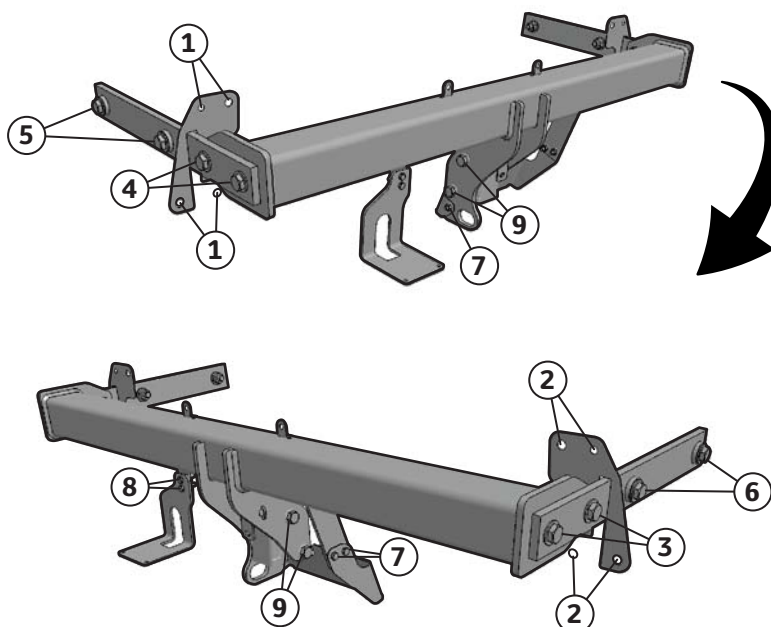

	1→2→3→...		 A	 B	S/N
	1	18Nm 4x	☐	☐	
	2	18Nm 4x	☐	☐	
	3	100Nm 2x	☐	☐	
	4	100Nm 2x	☐	☐	
	5	100Nm 2x	☐	☐	
	6	100Nm 2x	☐	☐	
	7	11Nm 3x	☐	☐	
	8	11Nm 2x	☐	☐	
	9 Only for repair	160Nm 4x	☐	☐	

1

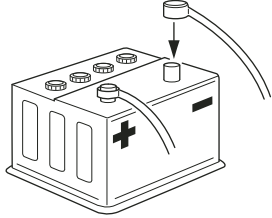




Click


Serial Number

5,4 Nm


2

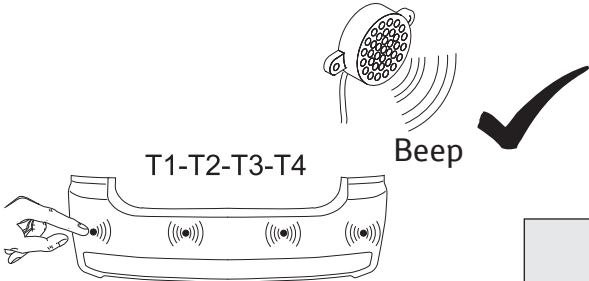


3

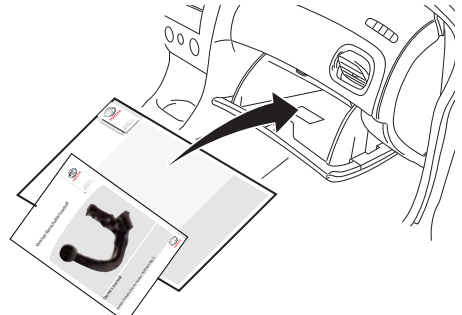


4

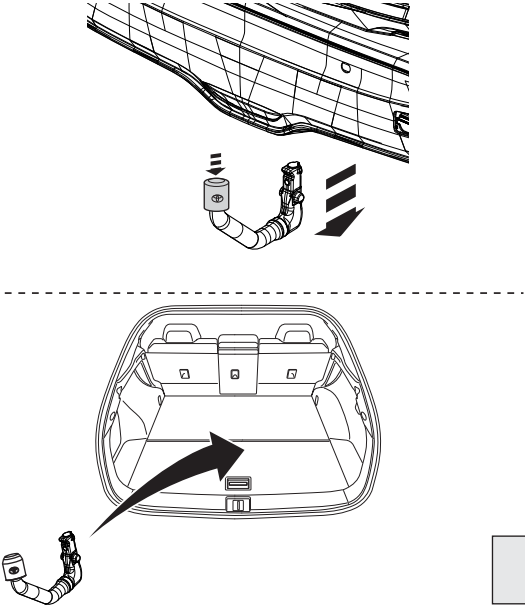


5

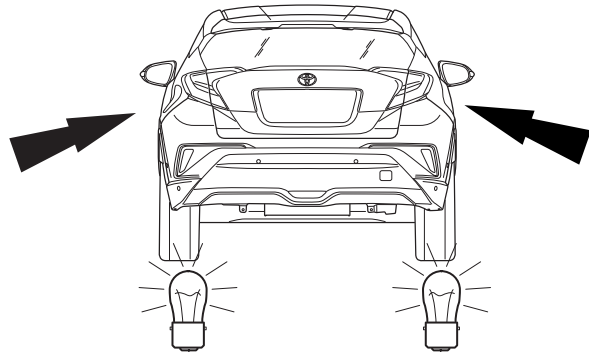

6

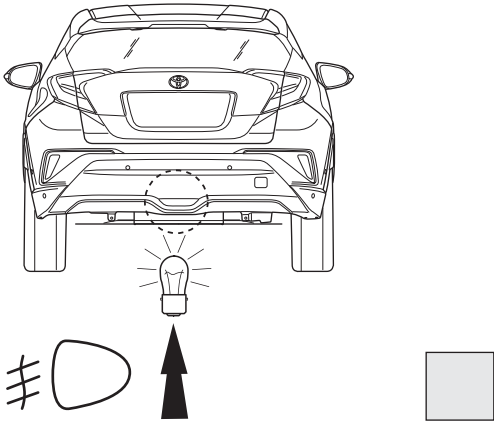

7

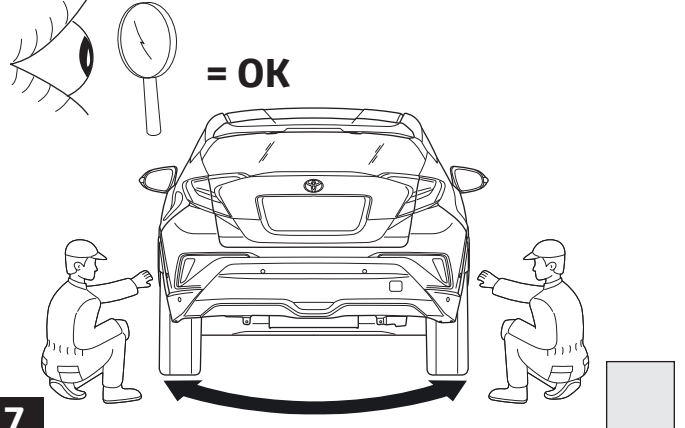

Installation Date:

. . . / . . . /

Technician Name & Signature:

Stamp: