


Toyota Aygo (AB40; from 2014) – fuse box diagram

Year of production: 2014, 2015, 2016

Engine compartment

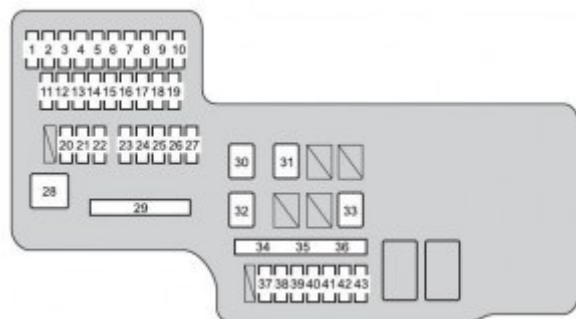

Toyota Aygo mk2 – fuse box – engine


compartment

Fuse	Ampere rating [A]	Circuit
1 H-LP RH-LO	10	Right-hand headlight (low beam)
2 H-LP LH-LO	10	Left-hand headlight (low beam), manual headlight leveling dial
3 H-LP RH-HI	7,5	Right-hand headlight (high beam)
4 H-LP LH-HI	7,5	Left-hand headlight (high beam), gauges and meters
5 EFI NO.3*1	15	Multiport fuel injection system/sequential multiport fuel injection system
6 EFI NO.4*1	7,5	Multiport fuel injection system/sequential multiport fuel injection system
7 EFI NO.5*1	15	Multiport fuel injection system/sequential multiport fuel injection system
8 RDI NO.2*1	7,5	Electric cooling fan
9 A/C COMP	7,5	Air conditioning system
10 IG2 NO.3*2	7,5	Multiport fuel injection system/sequential multiport fuel injection system, stop lights, high mounted stoplight
11 DOME	5	Interior light, luggage compartment light
12 HAZ	10	Turn signal lights, emergency flashers, gauges and meters
13 HORN	10	Horn
14 D/C CUT	30	ECU-B NO.1, ECU-B NO.2, ECU-B NO.3
15 ECU-B NO.4*2	7,5	Multi-mode manual transmission

16	AM2 NO.2	7,5	Multiport fuel injection system/sequential multiport fuel injection system
17	AM2 NO.3	7,5	Smart entry & start system
18	ICS*2	7,5	Charging system
19	EFI- MAIN*1	25	EFI NO.3, EFI NO.4, EFI NO.5, RDI NO.2
20	ST	30	Starting system
21	STRG LOCK	7,5	Steering lock system
22	H-LP- MAIN	25	H-LP RH-LO, H-LP LH-LO, H-LP RH-HI, H-LP LH-HI
23	WIPER- S*2	7,5	Multiport fuel injection system/sequential multiport fuel injection system
24	STA	7,5	Multiport fuel injection system/sequential multiport fuel injection system, starting system, multi-mode manual transmission, Stop & Start system
25	ECU-B NO.3	15	Audio system, smart entry & start system
26	ECU-B NO.1	7,5	Gauges and meters
27	ECU-B NO.2	7,5	Vehicle stability control system
28	J/B	60	Instrument fuse box
29	ALT*2	125	DEF, S/HTR F/R, S/HTR F/L, CANVAS TOP, ABS NO.1, ABS NO.2, RDI NO.1, FOG FR, DRL
30	AMT*3	50	Multi-mode manual transmission
	BBC*4	40	Stop & Start system
31	EPS	50	Electric power steering system
32	RDI NO.1	50*1	Electric cooling fan
		30*5	
		40*5	
33	ABS NO.1	50	Anti-lock brake system, vehicle stability control system
34	SPARE	10	Spare fuse
35	SPARE	20	Spare fuse
36	SPARE	30	Spare fuse
37	DEF	20	Rear window defogger, outside rear view mirror defoggers
38	ABS NO.2	30	Anti-lock brake system, vehicle stability control system
39	FOG FR	7,5	Front fog lights, gauges and meters
40	DRL	7,5	Daytime running lights
41	S/HTR F/R	15	Seat heaters (right side)

42	CANVAS TOP	20	Canvas top
43	S/HTR F/L	15	Seat heaters (left side)
*1: HM01 engine *2: 1KR engine *3: Vehicles with a multi-mode manual transmission *4: Vehicles with a Stop & Start system *5: Replace the fuse with one of the same ampere rating as the original			

Driver's side instrument panel

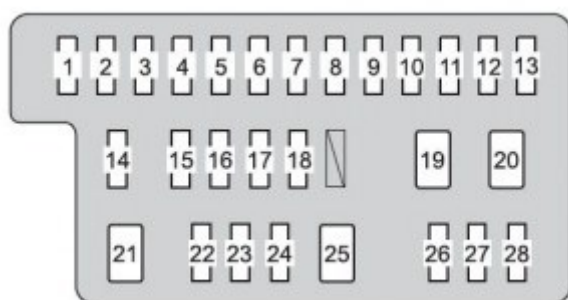

Toyota Aygo mk2 – fuse box – instrument panel

Fuse	Ampere rating [A]	Circuit
1 IG1 NO.2	5	Back-up light, multiport fuel injection system/sequential multiport fuel injection system, audio system, vehicle stability control system
2 WASHER	15	Windshield washer, rear window washer
3 ECU-IG NO.1	5	Main body ECU, gauges and meters, air conditioning system, rear window defogger, outside rear view mirror defoggers, seat heaters, canvas top, audio system, PCS system
4 ECU-IG NO.2	5	Electric power steering system, Stop & Start system
5 WIPER RR	15	Rear window wiper
6 IG1 NO.1	5	Electric cooling fan, anti-lock brake system, vehicle stability control system
7 WIPER	25	Windshield wiper
8 MIR HTR	10	Outside rear view mirror defoggers
9 P/OUTLET	15	Power outlet
10 ECU-ACC	7,5	Outside rear view mirrors, audio system, Stop & Start system, gauges and meters
11 IG2 NO.2	5	Steering lock system, multiport fuel injection system/sequential multiport fuel injection system, multi-mode manual transmission
12 A/BAG	7,5	SRS airbag system

13	METER	5	Gauges and meters, Stop & Start system
14	IG2 NO.1	15*1 7.5*2	Multiport fuel injection system/sequential multiport fuel injection system, stop lights
15	EFI NO.1	7.5*1 10*2	Multiport fuel injection system/sequential multiport fuel injection system, Stop & Start system
16	OBD	7,5	On-board diagnosis system
17	STOP	10	Stop lights, high mounted stoplight, multiport fuel injection system/sequential multiport fuel injection system, anti-lock brake system, vehicle stability control system, multi-mode manual transmission, smart entry & start system
18	TAIL	10	Position lights, license plate lights, rear fog light, front fog lights, tail lights, switch illumination, multiport fuel injection system/ sequential multiport fuel injection system, gauges and meters, audio system
19	HTR	40	Air conditioning system
20	AM1	40	HTR, OBD, A/C, TAIL, FOG RR, STOP, P/W, DOOR F/L, DOOR F/R
21	AM2 NO.1	30	EFI NO.2, EFI-MAIN, D/L
22	EFI NO.2*1	7,5	Multiport fuel injection system/sequential multiport fuel injection system
23	EFI-MAIN*1	20	EFI NO.1, multiport fuel injection system/sequential multiport fuel injection system, fuel pump
24	D/L	25	Main body ECU, door lock system
25	P/W	30	Power windows
26	DOOR F/R*3 DOOR F/L*4	25	Power windows
27	A/C	10	Air conditioning system
28	FOG RR	5	Rear fog light
*1: 1KR engine *2: HM01 engine *3: Left-hand drive vehicles *4: Right-hand drive vehicles			

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.