


Dodge Durango 2005 fuse box diagram

Interior Fuses

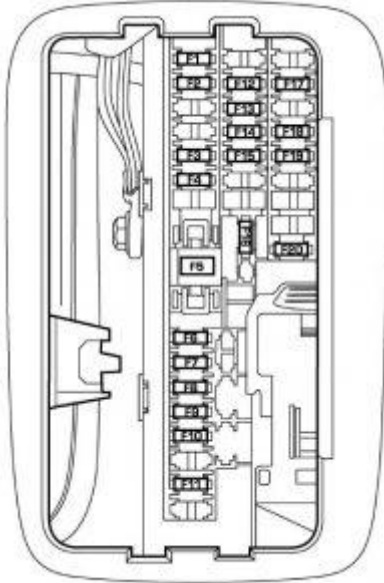

Dodge Durango – fuse box – interior box

Cavity	Ampere rating [A]	Description
F1	15	Instrument Cluster Battery Feed
F2	10	Occupant Classification Module (OCM) Battery Feed
F3	10	Ignition Run/Start for Controller (NGC), Integrated Power Module (IPM), AC Relay and Fuel Pump Relay
F4	10	Door Node and Non-Memory Power Mirror Switch Battery Fuse Block Feed
F5	(2) 10	Airbags (2 Fuses in Yellow Holder)
F6	10	Ignition Run/ Start Unlock

F7	25	Radio Battery Feed
F8	10	Ignition Run/Start fro Cluster/Transfer Case/Seat Sw. Back lighting
F9	10	SDAR/DVD Battery Feed
F10	10	Spare
F11	10	Heated Mirrors
F12	20	Cluster Battery Feed
F13	10	Ignition Run HVAC Module/ Heated Rear Glass (EBL) Relay
F14	10	ABS Module Ignition Run
F15	15	Battery Feed Blue Tooth, Compass/Trip Computer (CMTC), Sentry Key Diagnostics
F16	20	Reconfigurable Power Outlets
F17	20	Cigar Lighter Ignition
F18	10	Spare Fuse
F19	15	Heating & Air Conditioning w/ATC Only Battery Feed
F20	25	Amplifier Battery Feed

Underhood Fuses (Power Distribution Center)

Cavity	Ampere rating [A]	Description
1	40	HVAC Blower
2	30	Power Outlets
3	30	Rr Wiper/Ign R/O
4	30	ABS Pump
5	50	Cabin Htr 1 (Diesel Only)
6	50	ASD
7	30	Rr HVAC (XK)
8	40	Acc Delay/Seats
9	Spare	—
10	40	Starter/JB Power
11	30	Cig Ltr/T-Tow
12	40	EBL/Htd Mirror
13	40	JB Power
14	50	Cabin Htr 2 (Diesel Only)

15	50	Cabin Htr 3 (Diesel Only)
16	25	IPM/Coils
17	Spare	—
18	20	TCM/AC Clutch
19	20	Ign Sw
20	20	PCM Batt (Gasoline Only)
21	30	ABS Valves
22	Spare	—
23	20	FDCM
24	20	Fuel Pump
25	20	FDCM/E-Diff.
26	15	Hyd/PCM (Diesel Only)
27	15	Brake/Stop Lamps
28	25	NGC/Injectors
29	Spare	—

30	Spare	—
31	Mini Relay	Cabin Htr 1 Rly (Diesel Only)
32	Micro Relay	TCM Rly (Gasoline Only)
33	Micro Relay	Starter Rly
34	Micro Relay	AC Clutch Rly
35	Micro Relay	Fuel Pump Rly
36	Mini Relay	Cabin Htr 3 Rly (Diesel Only)
38	Mini Relay	Cabin Htr 2 Rly (Diesel Only)
39	Mini Relay	HVAC Blower Rly
40	Mini Relay	ASD Rly

Underhood Fuses (Integrated Power Module)

Cavity	Ampere rating [A]	Description
1	Micro Relay	Wiper On/Off Rly
2	Micro Relay	Wiper Hi/Lo Rly
3	Micro Relay	Horn Rly
4	Micro Relay	Rear Fog Rly (BUX Only)

5	Micro Relay	Lt T-Tow Stop/Turn Rly
6	Micro Relay	Rt T-Tow Stop/Turn Rly
7	Micro Relay	Park Lamps Rly
8	10	Lt Park Lamps
9	10	T-Tow Park Lamps
10	10	Rt Park Lamps
11	Mini Relay	Rad Fan Hi Rly
12	20	FCM Batt #4
13	20	FCM Batt #2
14	20	Adjustable Pedal
15	20	Ft Fog Lamps
16	20	Horn
17	20	Rear Fogs
18	20	FCM Batt #1
19	20	Lt T-Tow Stop/Turn

20	20	FCM Batt #3
21	20	Rt T-Tow Stop/Turn
22	30	FDCM Mod
23	50	Rad Fan
24	Mini Relay	Rad Fan Lo Rly
25	Micro Relay	Ft Fog Lamps Rly
26	Micro Relay	Adjustable Pedal Rly
27	15	IOD #1
28	20	IOD #2 (Audio)
29	10	ORC (Ign R/.S)
30	10	ORC (Ign R/.O)