


Lincoln MKX 2006 – 2010 fuse box diagram

Passenger compartment fuse panel

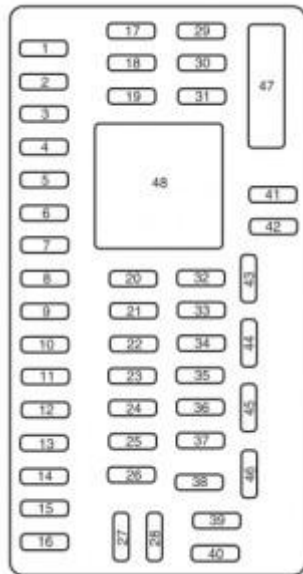

Lincoln MKX – fuse box diagram – passenger compartment

No.	A	Protected components
1	30	'07: Driver front smart window '08-'10: Passenger front smart window
2	15	'10: High-mount brake lamp (brake on/off)
3	15	Family entertainment system (FES)/Rear seat control ('07-'08), SYNC ('08-'10)
4	30	'07: Passenger front smart window '08-'10: Driver front smart window
5	10	Keypad illumination, 2nd row seat, Tire Pressure Monitoring System (TPMS ('07-'09)), Brake Shift Interlock (BSI ('07-'09)), Smart junction box (SJB ('09))

6	20	Turn signals
7	10	Low beam headlamps (left)
8	10	Low beam headlamps (right)
9	15	Interior lights, Cargo lamps
10	15	Backlighting, Puddle lamps, Ambient lighting ('09)
11	10	All wheel drive
12	7.5	Power mirror switch, Driver side power seat memory, Driver seat module – Keep alive power (KA)
13	7.5	Satellite radio ('09-'10), DSP ('09)
14	10	Power liftgate module
15	10	Climate control, GPS module ('10)
16	15	Not used (Spare)
17	20	All power lock motor feeds, Liftgate release, Moon roof ('07-'08), Express up/down front windows ('09-'10)
18	20	THX system, Heated seats ('09)
19	25	Rear wiper


20	15	Datalink
21	15	Fog lamps
22	15	Park lamps
23	15	High beam headlamps
24	20	Horn relay
25	10	Demand lamps/interior lamps
26	10	Instrument panel cluster
27	20	Ignition switch
28	5	Radio
29	5	Instrument panel cluster
30	5	Overdrive cancel switch
31	10	Compass ('07), Automatic dimming rear view mirror ('07-'09)
32	10	'10: Restraint control module
33	10	Not used (Spare)
34	5	Steering angle sensor

35	10	Rear park assist, All wheel drive (AWD ('07-'09)), Heated seat module, Yaw rate sensor ('10)
36	5	Passive anti-theft system (PATS) transceiver
37	10	Climate control
38	20	'07-'09: THX System '10: Subwoofer/amplifier
39	20	Radio
40	20	Not used (Spare)
41	15	Delayed accessory function for radio and lock switch illumination ('07-'09), Ambient lighting ('09), Automatic dimming rear view mirror ('10)
42	10	Not used (Spare)
43	10	Rear wiper logic
44	10	Customer accessory feed
45	5	Front wiper logic, Climate control relay feed ('07-'09)
46	7.5	Occupant Classification Sensor (OCS), Passenger Airbag Deactivation Indicator (PADI)
47	30	Circuit Breaker: Power windows

Relay

48 Delayed accessory

Engine Compartment Fuse Box

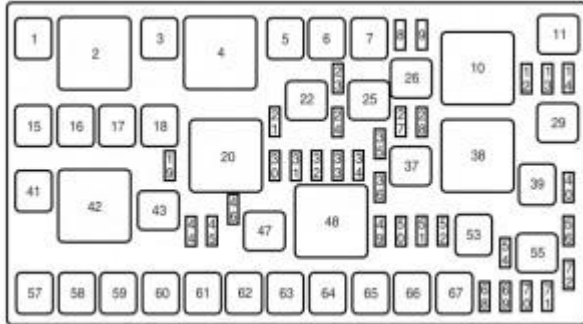

Lincoln MKX – fuse box diagram – engine

compartment

No.	A	Protected components
1	—	Not used
3	—	Not used
5	40	Cooling fan (vehicles with trailer tow)
	60	Cooling fan (vehicles without trailer tow)
6	40	Cooling fan (trailer tow only)
7	30	Rear heated seats
8	10	Alternator
9	20	Trailer tow parking lamps

12	—	Not used
13	—	Not used
14	—	Not used
15	40	ABS pump motor
16	30	Front heated seats
17	20	Cigar lighter/Power point
18	30	'07: Panorama moon roof
	20	'08-'10: Panorama moon roof
21	7.5	Powertrain control module (PCM) – Keep alive power (KA)
24	15	'07: Trailer tow left stop/turn lamp
	10	'08-'10: Trailer tow left stop/turn lamp
27	10	Rear seat release
28	15	Heated mirror
30	15	VPWR 1 – PCM
31	10	VPWR 3 – PCM

32	10	VPWR 2 – PCM
33	15	VPWR 4 – PCM
34	—	Not used
35	10	A/C clutch
36	—	Not used
39	40	Rear window defroster
40	—	Not used
41	30	Starter
44	10	Backup lamps
45	—	Not used
46	15	'07: Trailer tow right stop/turn lamp
	10	'08-'10: Trailer tow right stop/turn lamp
49	10	PCM ISPR
50	10	ABS Run/Start
51	5	Adaptive lighting

52	5	Fuel pump relay coil
53	30	Passenger compartment fuse panel run/start
54	—	Not used
55	—	Not used
57	40	Anti-lock brake system valves
58	30	Front wipers
59	30	Power liftgate
60	30	Driver power seat
61	30	Passenger power seat
62	—	Not used
63	40	Blower motor
64	20	Cigar lighter/Power point
65	20	Cigar lighter/Power point
66	20	Cigar lighter/Power point
67	—	Not used

68	15	Fuel pump
69	—	Not used
70	—	Not used
71	10	Stop lamps (Brake on/off switch)
72	—	Not used
Diode		
19	Fuel pump	
23	'09-'10: One-touch integrated start	
56	A/C clutch	
Relay		
2	Blower motor	
4	Not used	
10	Not used	
11	Trailer tow parking lamp	
20	PCM	

22	Trailer tow left stop/turn lamp
25	Rear seat release
26	Fuel pump
29	Heated mirror
37	A/C clutch
38	Rear window defroster
42	Starter
43	Backup lamp
47	Trailer tow right stop/turn lamp
48	Run/Start