

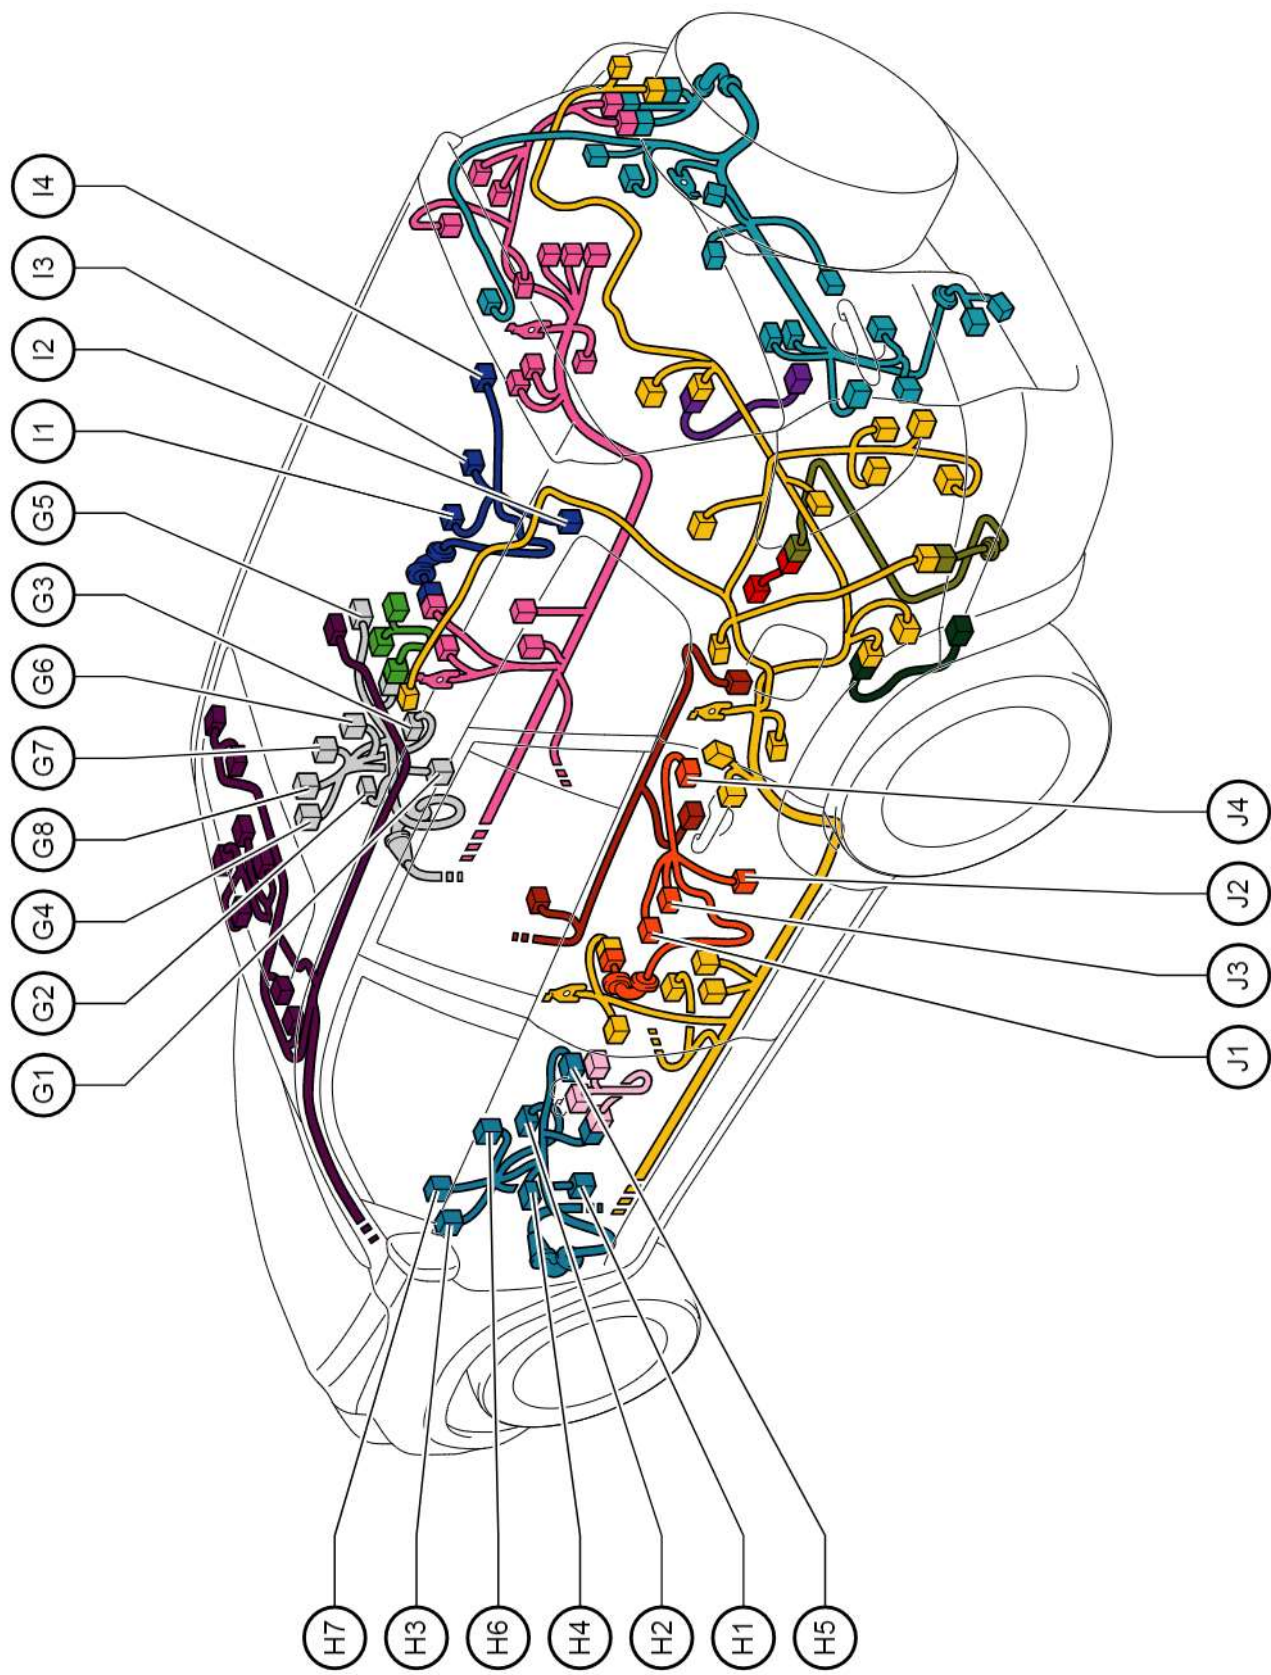
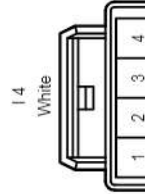
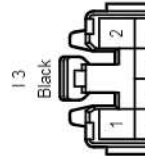
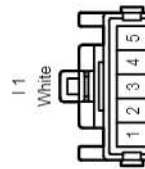
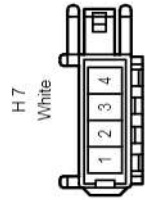

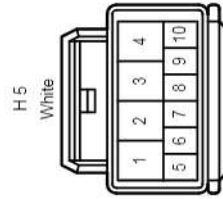
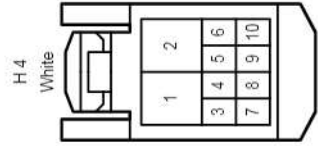
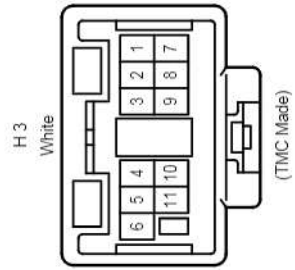
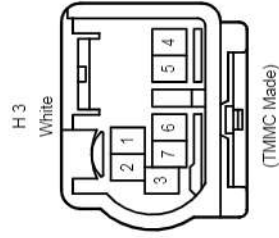
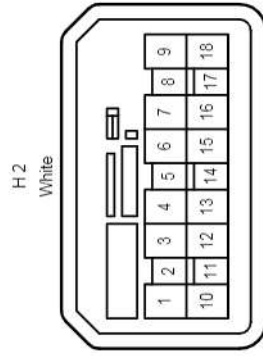

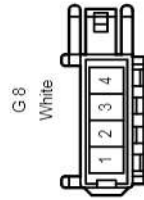

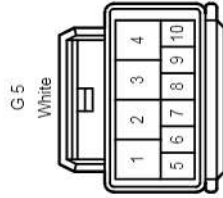
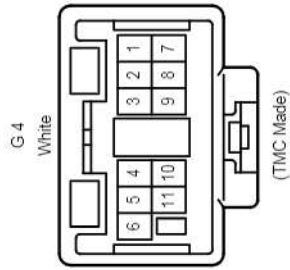
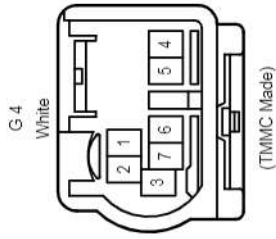
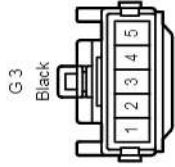


Position of Parts in Body

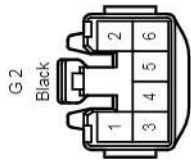


G	1	Speaker (Front Door RH)
G	2	Power Window Regulator Motor (Front RH)
G	3	Power Window SW (Front Passenger's Side)
G	4	Outer Rear View Mirror (RH)
G	4	Outer Rear View Mirror (RH)
G	5	Door Lock Assembly (Front Passenger's Side)
G	6	Door Lock Control SW (Front Passenger's Side)
G	7	Tweeter (Front RH)
G	8	Tweeter (Front RH)
H	1	Speaker (Front Door LH)
H	2	Power Window SW (Driver's Side)
H	3	Outer Rear View Mirror (LH)
H	3	Outer Rear View Mirror (LH)
H	4	Power Window Regulator Motor (Front LH)
H	5	Door Lock Assembly (Driver's Side)
H	6	Tweeter (Front LH)
H	7	Tweeter (Front LH)
I	1	Power Window SW (Rear RH)
I	2	Speaker (Rear RH)
I	3	Power Window Regulator Motor (Rear RH)
I	4	Door Lock Assembly (Rear RH)
J	1	Power Window SW (Rear LH)
J	2	Speaker (Rear LH)
J	3	Power Window Regulator Motor (Rear LH)
J	4	Door Lock Assembly (Rear LH)

Position of Parts in Body



Position of Parts in Body

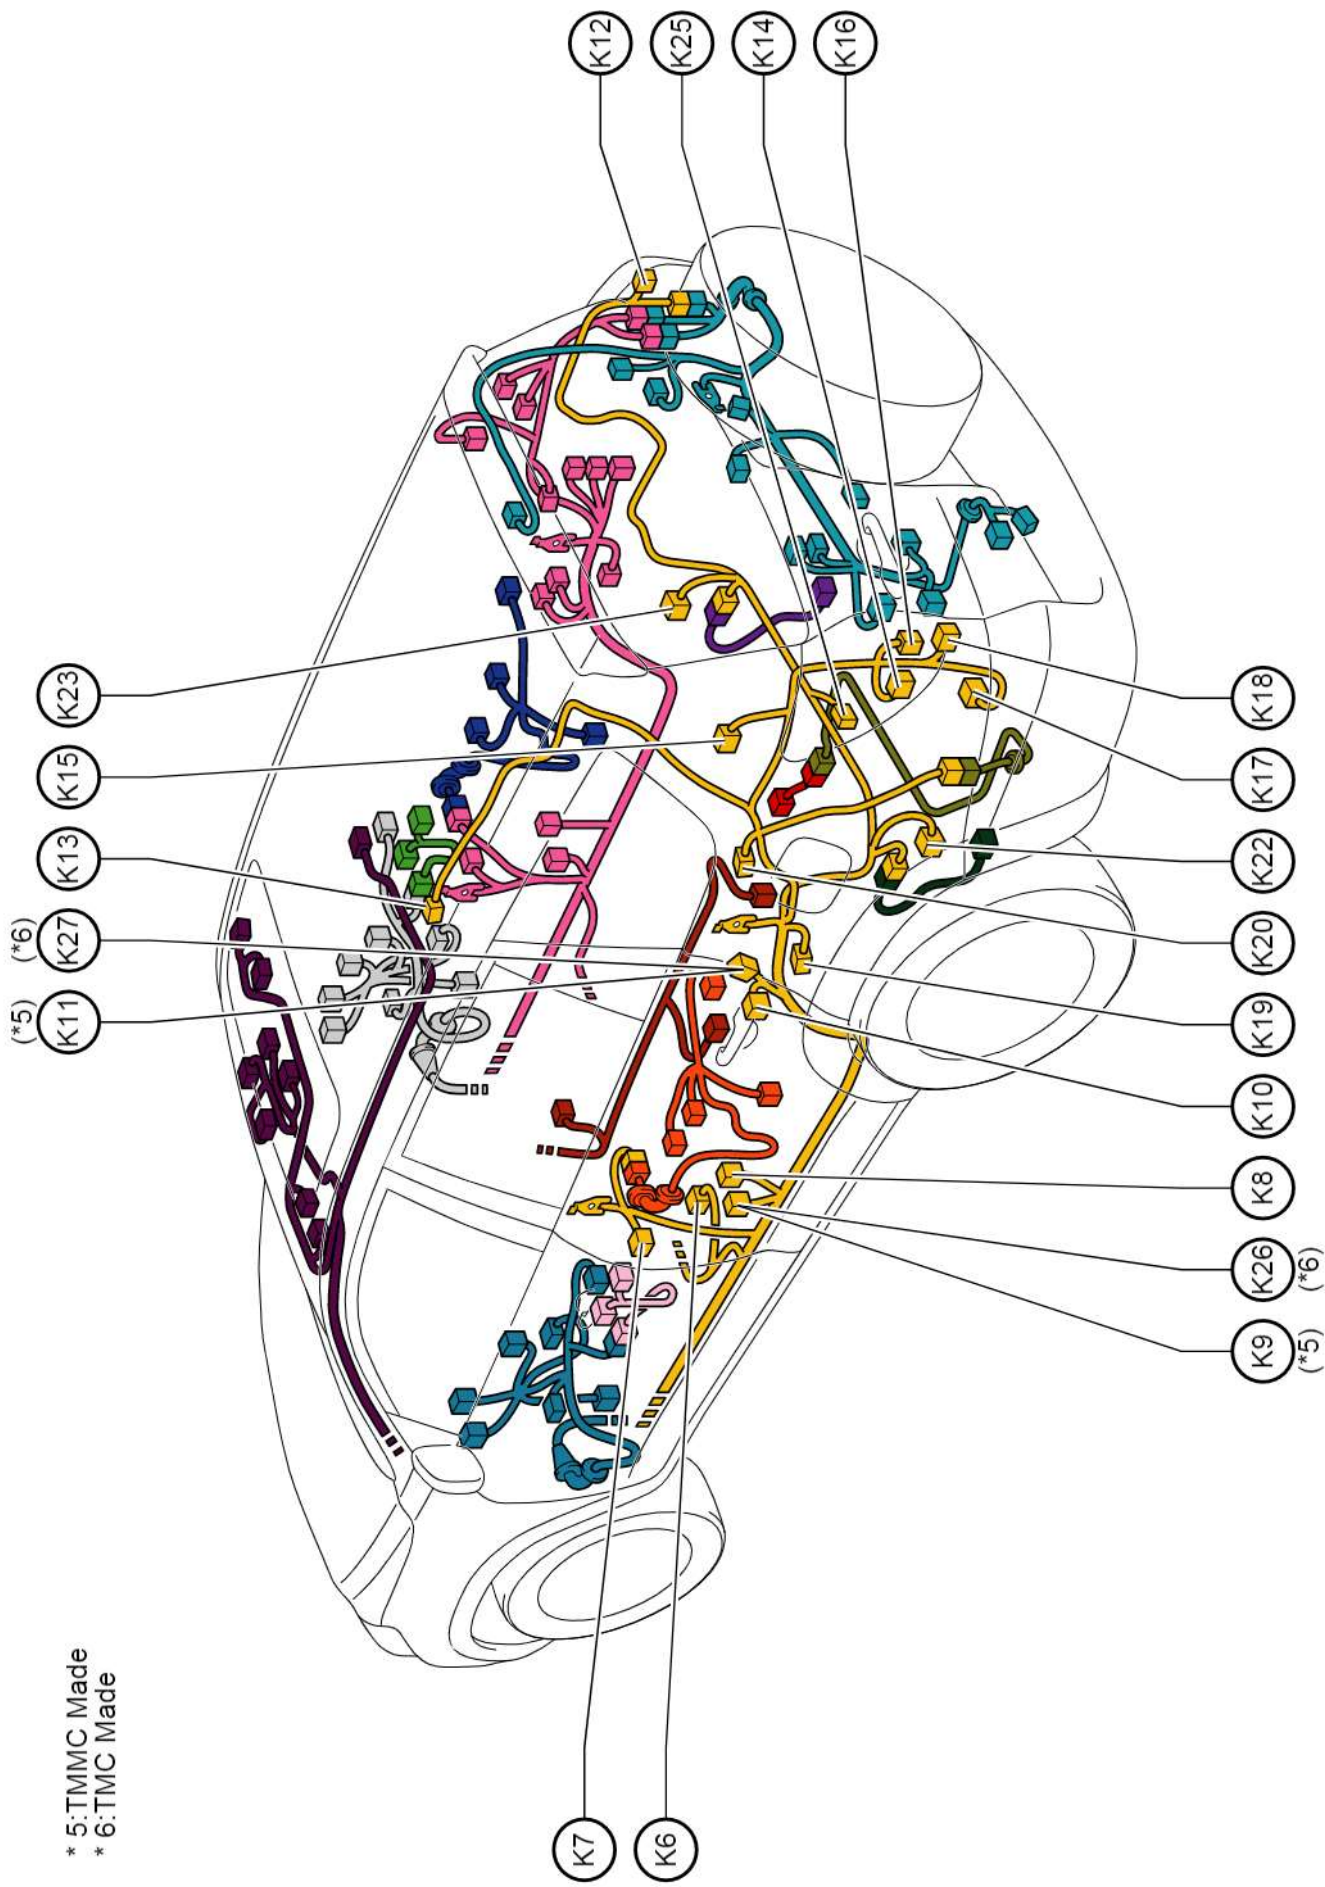


* 5: TMMC Made
* 6: TMC Made

K 6	Yaw Rate Sensor
K 7	Door Courtesy SW (Front LH)
K 8	Pretensioner (LH)
K 9	Side Airbag Sensor (Front LH)
K 10	Door Courtesy SW (Rear LH)
K 11	Side Airbag Sensor (Rear LH)
K 12	Rear Combination Lamp (RH)
K 13	Curtain Shield Airbag Squib (LH)
K 14	Rear Combination Lamp (LH)
K 15	Voltage Inverter
K 16	Diode (Room Lamp)
K 17	Power Outlet Socket (Rear)
K 18	Door Courtesy SW (Back Door)
K 19	Junction Connector
K 20	Junction Connector
K 22	Speed Sensor (Rear LH)
K 23	Speed Sensor (Rear RH)
K 25	Indoor Luggage Compartment Electrical Key Oscillator
K 26	Side Airbag Sensor (Front LH)
K 27	Side Airbag Sensor (Rear LH)

Position of Parts in Body


K 6
Black

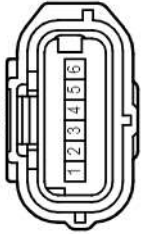


K 7
White



K 8
Yellow

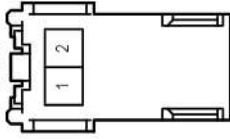


K 9
Yellow

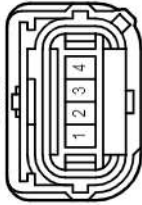


K 10
White




K 11
Yellow

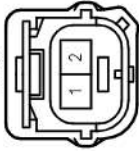


K 12
Gray

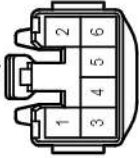

K 13
Black

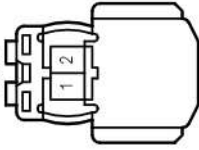

K 14
Gray

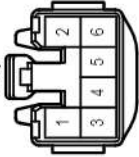


K 15
White



K 16
Black




K 17
White




K 18
White




K 19
Gray




K 20
White

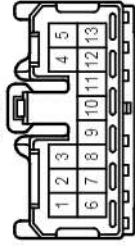


K 22
White




K 23
White




K 25
White

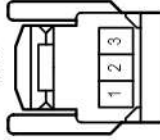


K 26
Yellow

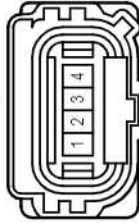

K 27
Yellow














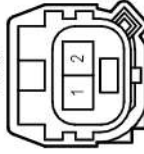



Position of Parts in Body

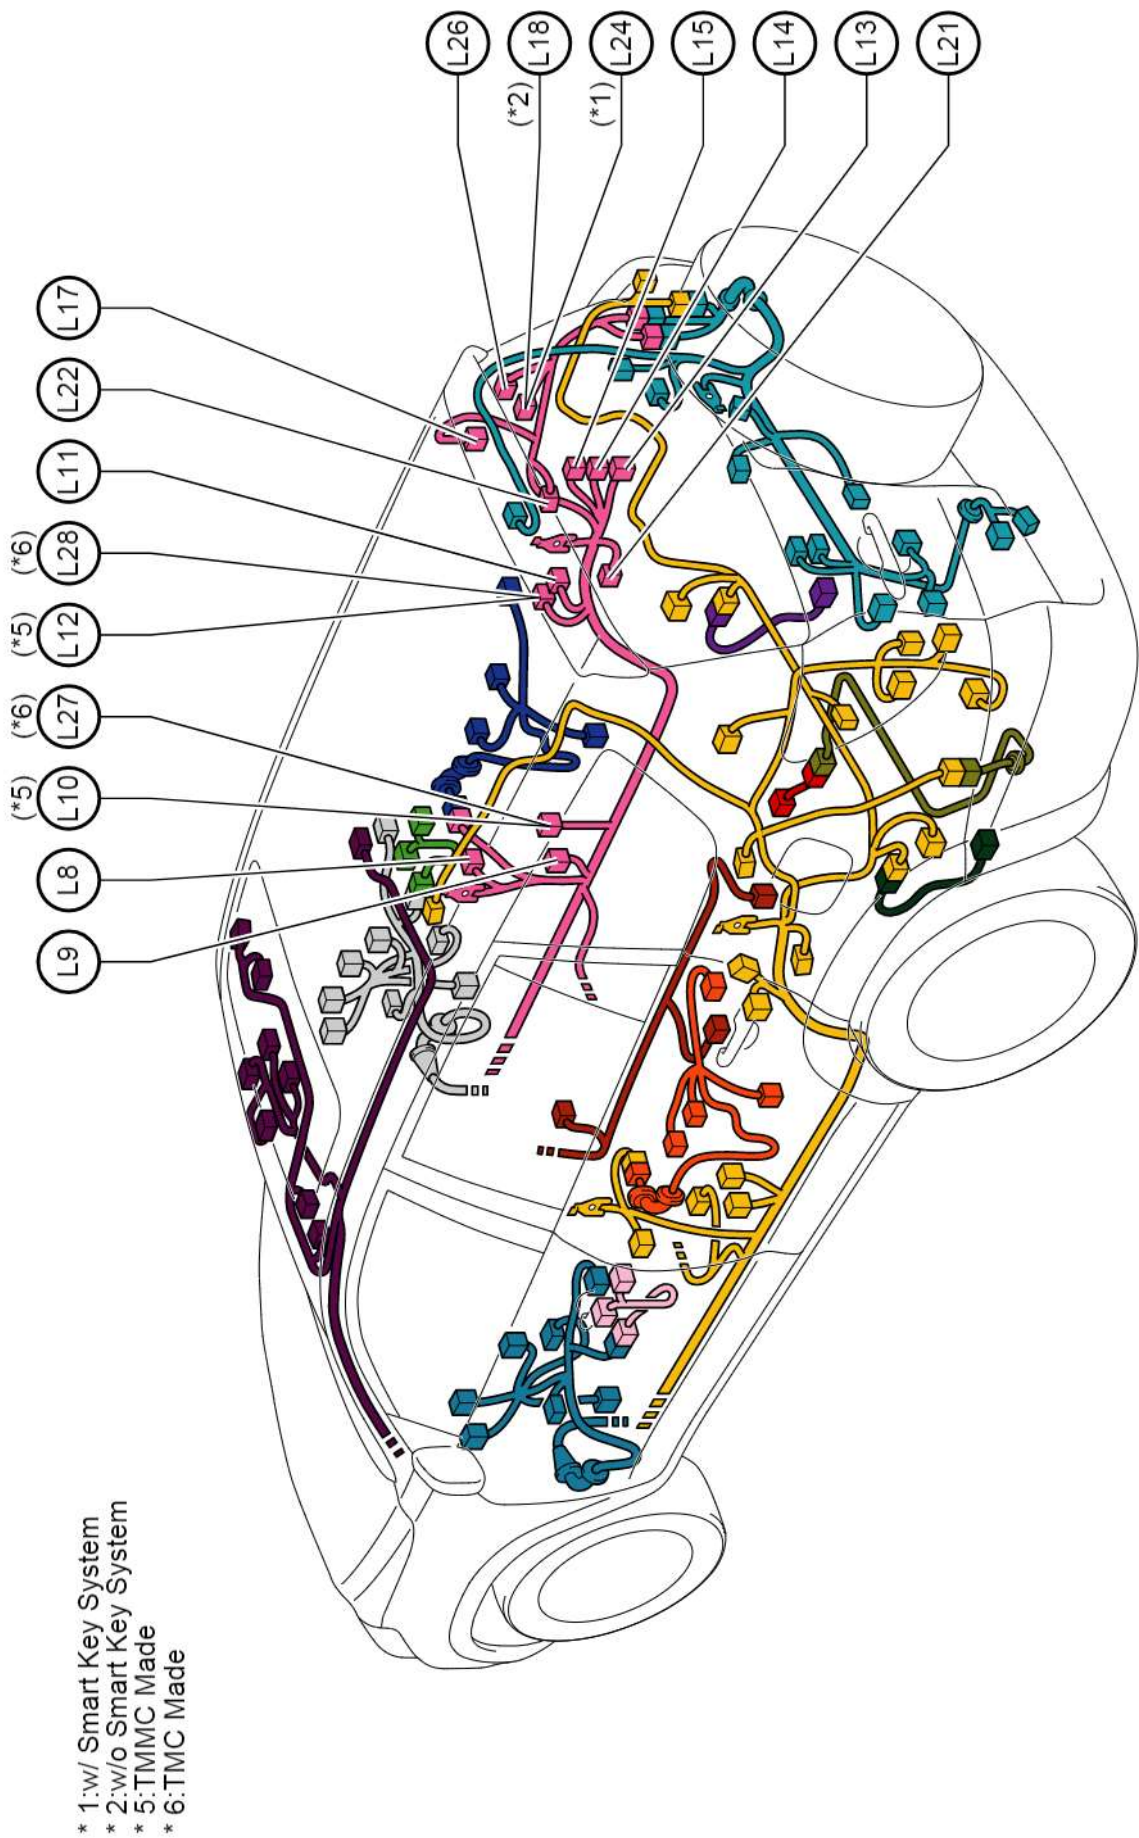

- L 8 Door Courtesy SW (Front RH)
- L 9 Pretensioner (RH)
- L 10 Side Airbag Sensor (Front RH)
- L 11 Door Courtesy SW (Rear RH)
- L 12 Side Airbag Sensor (Rear RH)
- L 13 Stereo Component Amplifier
- L 14 Stereo Component Amplifier
- L 15 Stereo Component Amplifier
- L 17 Curtain Shield Airbag Squib (RH)
- L 18 Door Control Receiver
- L 21 Junction Connector
- L 22 Junction Connector
- L 24 Door Control Receiver
- L 26 Tire Pressure Warning Antenna and Receiver
- L 27 Side Airbag Sensor (Front RH)
- L 28 Side Airbag Sensor (Rear RH)





















Position of Parts in Body

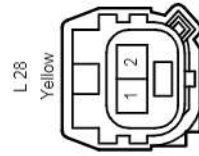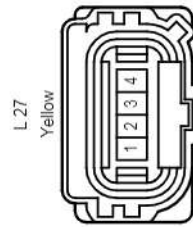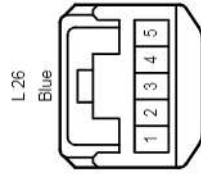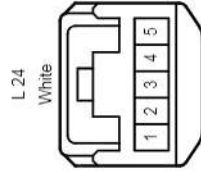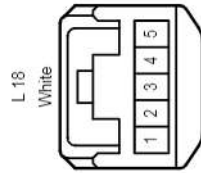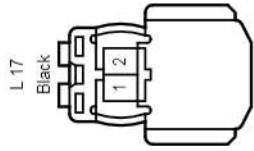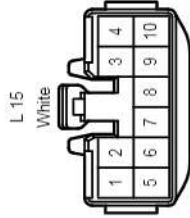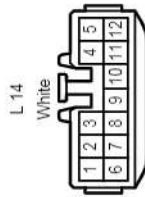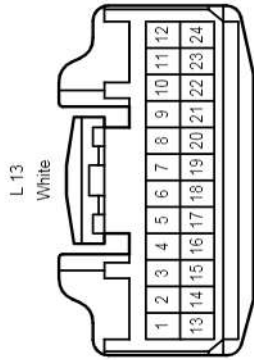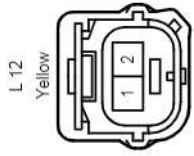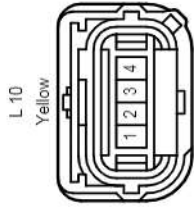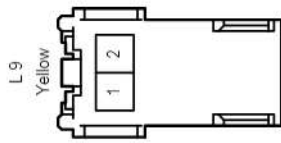










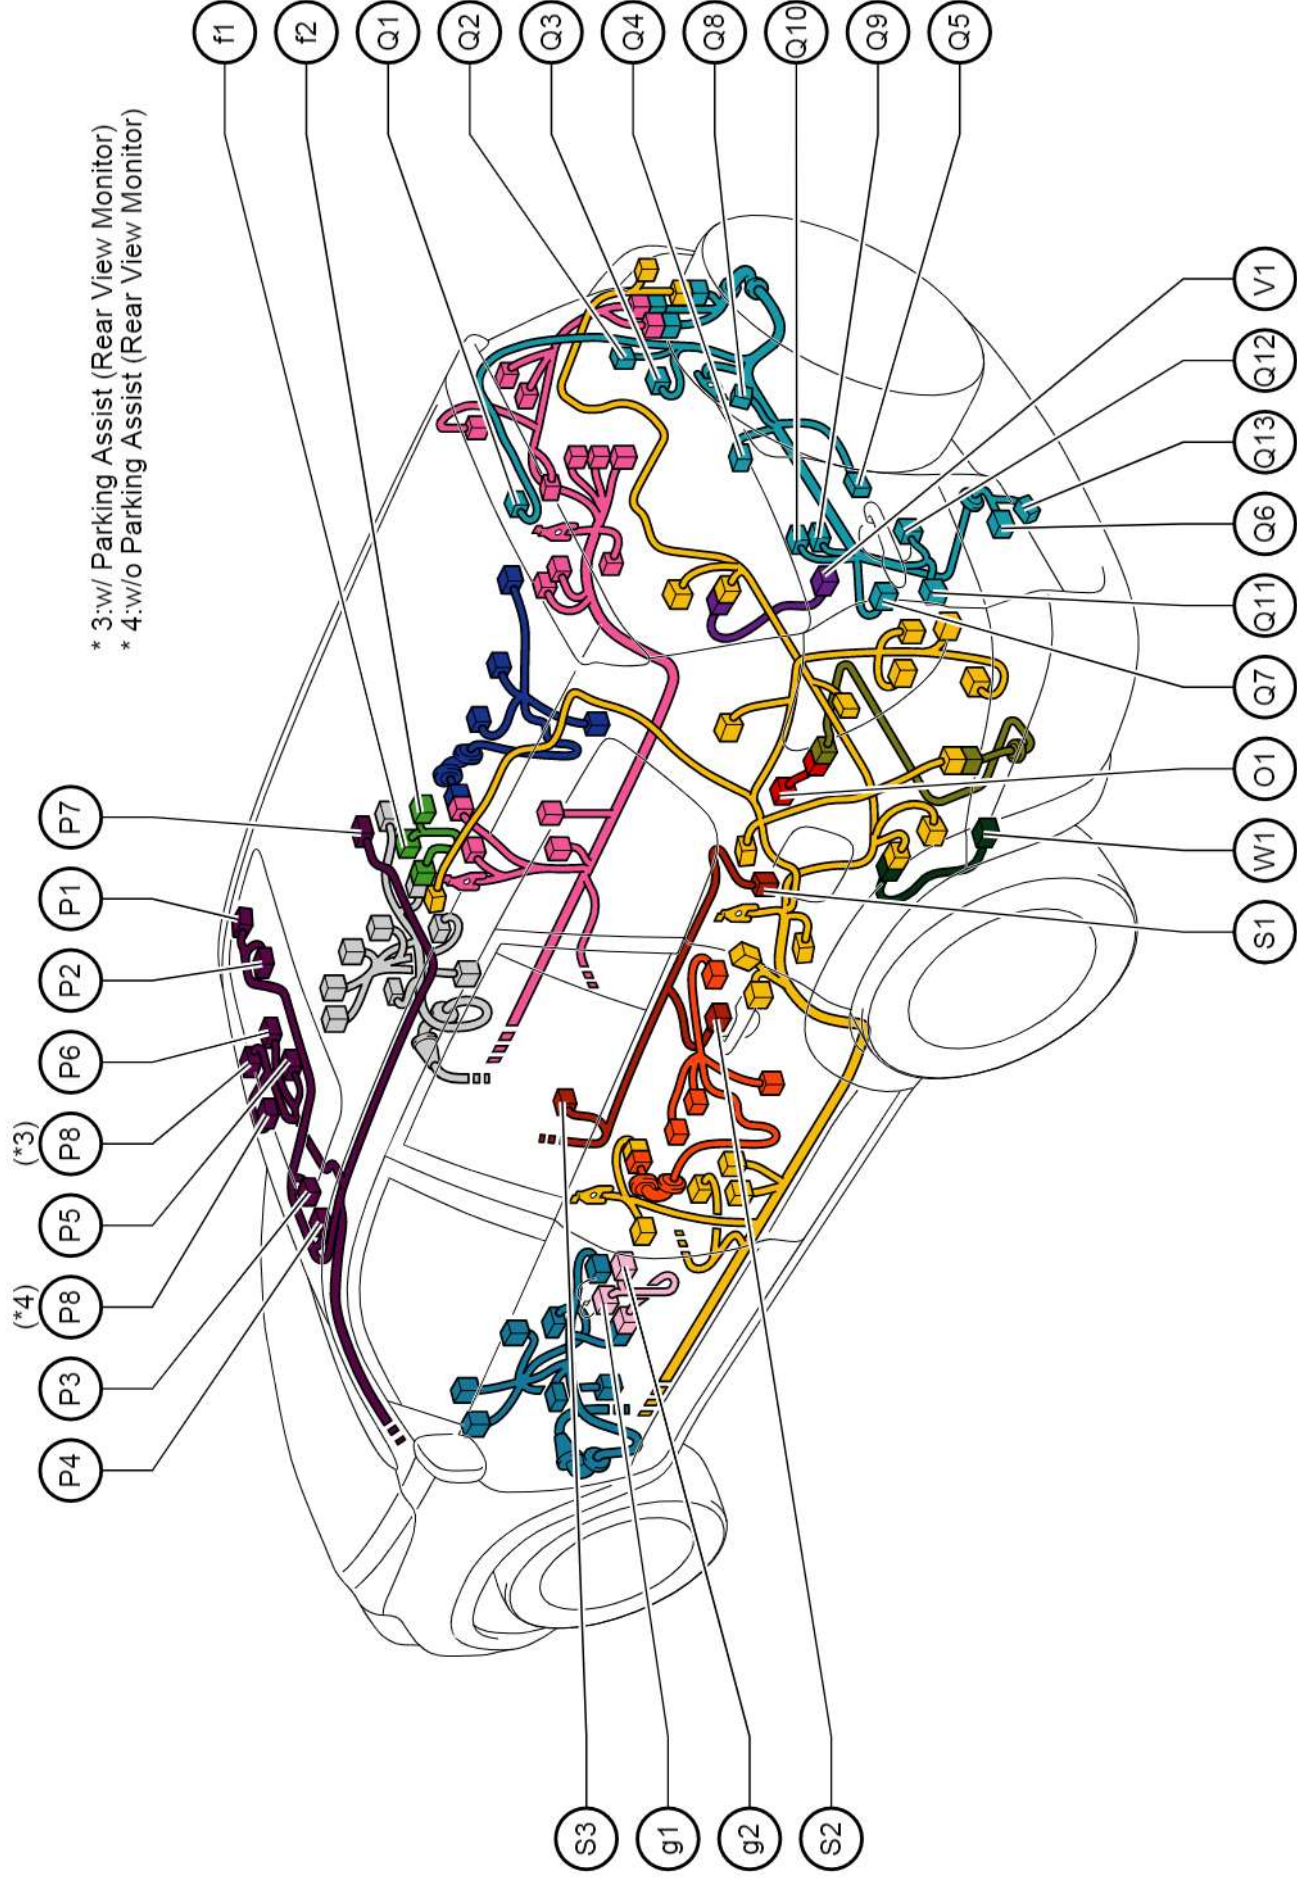


O	1	4WD Linear Solenoid
P	1	Vanity Lamp SW (RH)
P	2	Vanity Lamp (RH)
P	3	Vanity Lamp (LH)
P	4	Vanity Lamp SW (LH)
P	5	Overhead J/B
P	6	Sliding Roof Control ECU
P	7	Room Lamp (Front)
P	8	Inner Rear View Mirror Assembly
Q	1	Center Stop Lamp
Q	2	Rear Window Defogger
Q	3	Room Lamp (Rear)
Q	4	Rear Wiper Motor
Q	5	Speaker (Woofer)
Q	6	License Plate Lamp
Q	7	Back Door Lock Assembly
Q	8	Noise Filter (Rear Window Defogger and Stop)
Q	9	Television Camera Assembly
Q	10	License Plate Lamp
Q	11	Back Door Electrical Key Oscillator
Q	12	Back Door Outside Handle Assembly
Q	13	Television Camera Assembly
S	1	Fuel Suction Pump
S	2	Fuel Sender Gage
S	3	Canister Pump Module
V	1	Speed Sensor (Rear RH)
W	1	Speed Sensor (Rear LH)
f	1	Front Door Outside Handle Assembly RH
f	2	Front Door Electrical Key Oscillator RH
g	1	Front Door Outside Handle Assembly LH
g	2	Front Door Electrical Key Oscillator LH


Position of Parts in Body

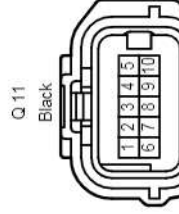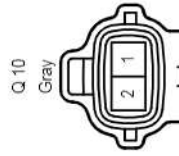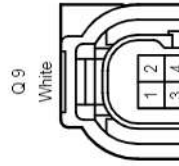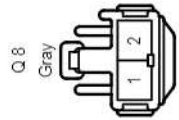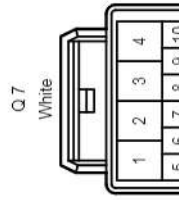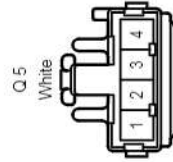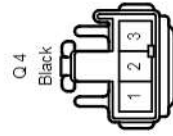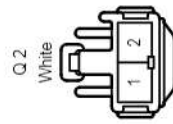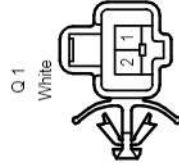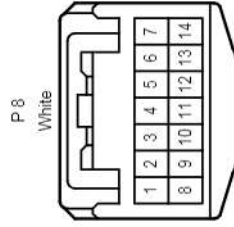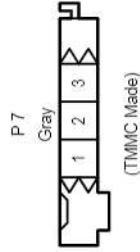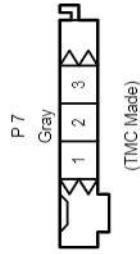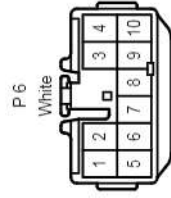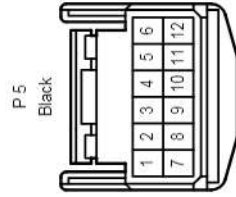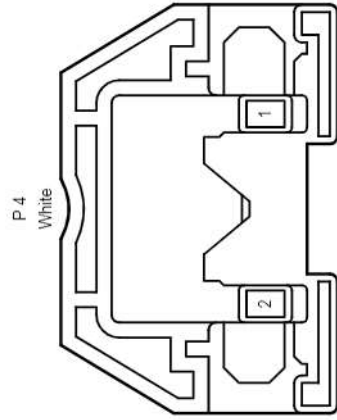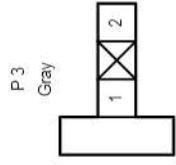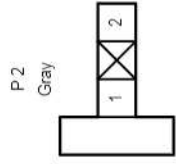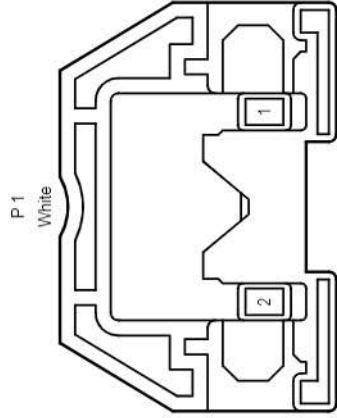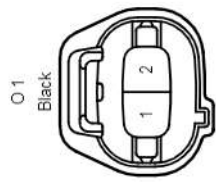

Position of Parts in Body

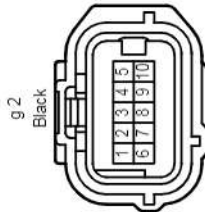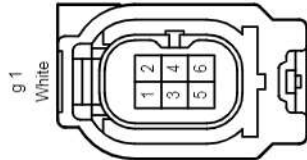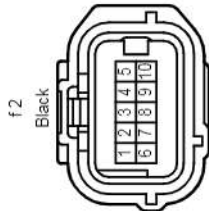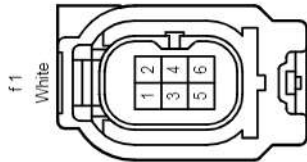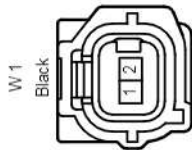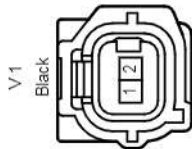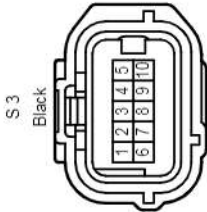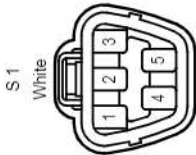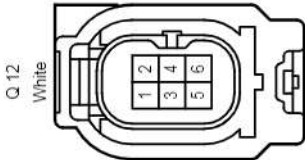


Position of Parts in Engine Compartment <2AR-FE>

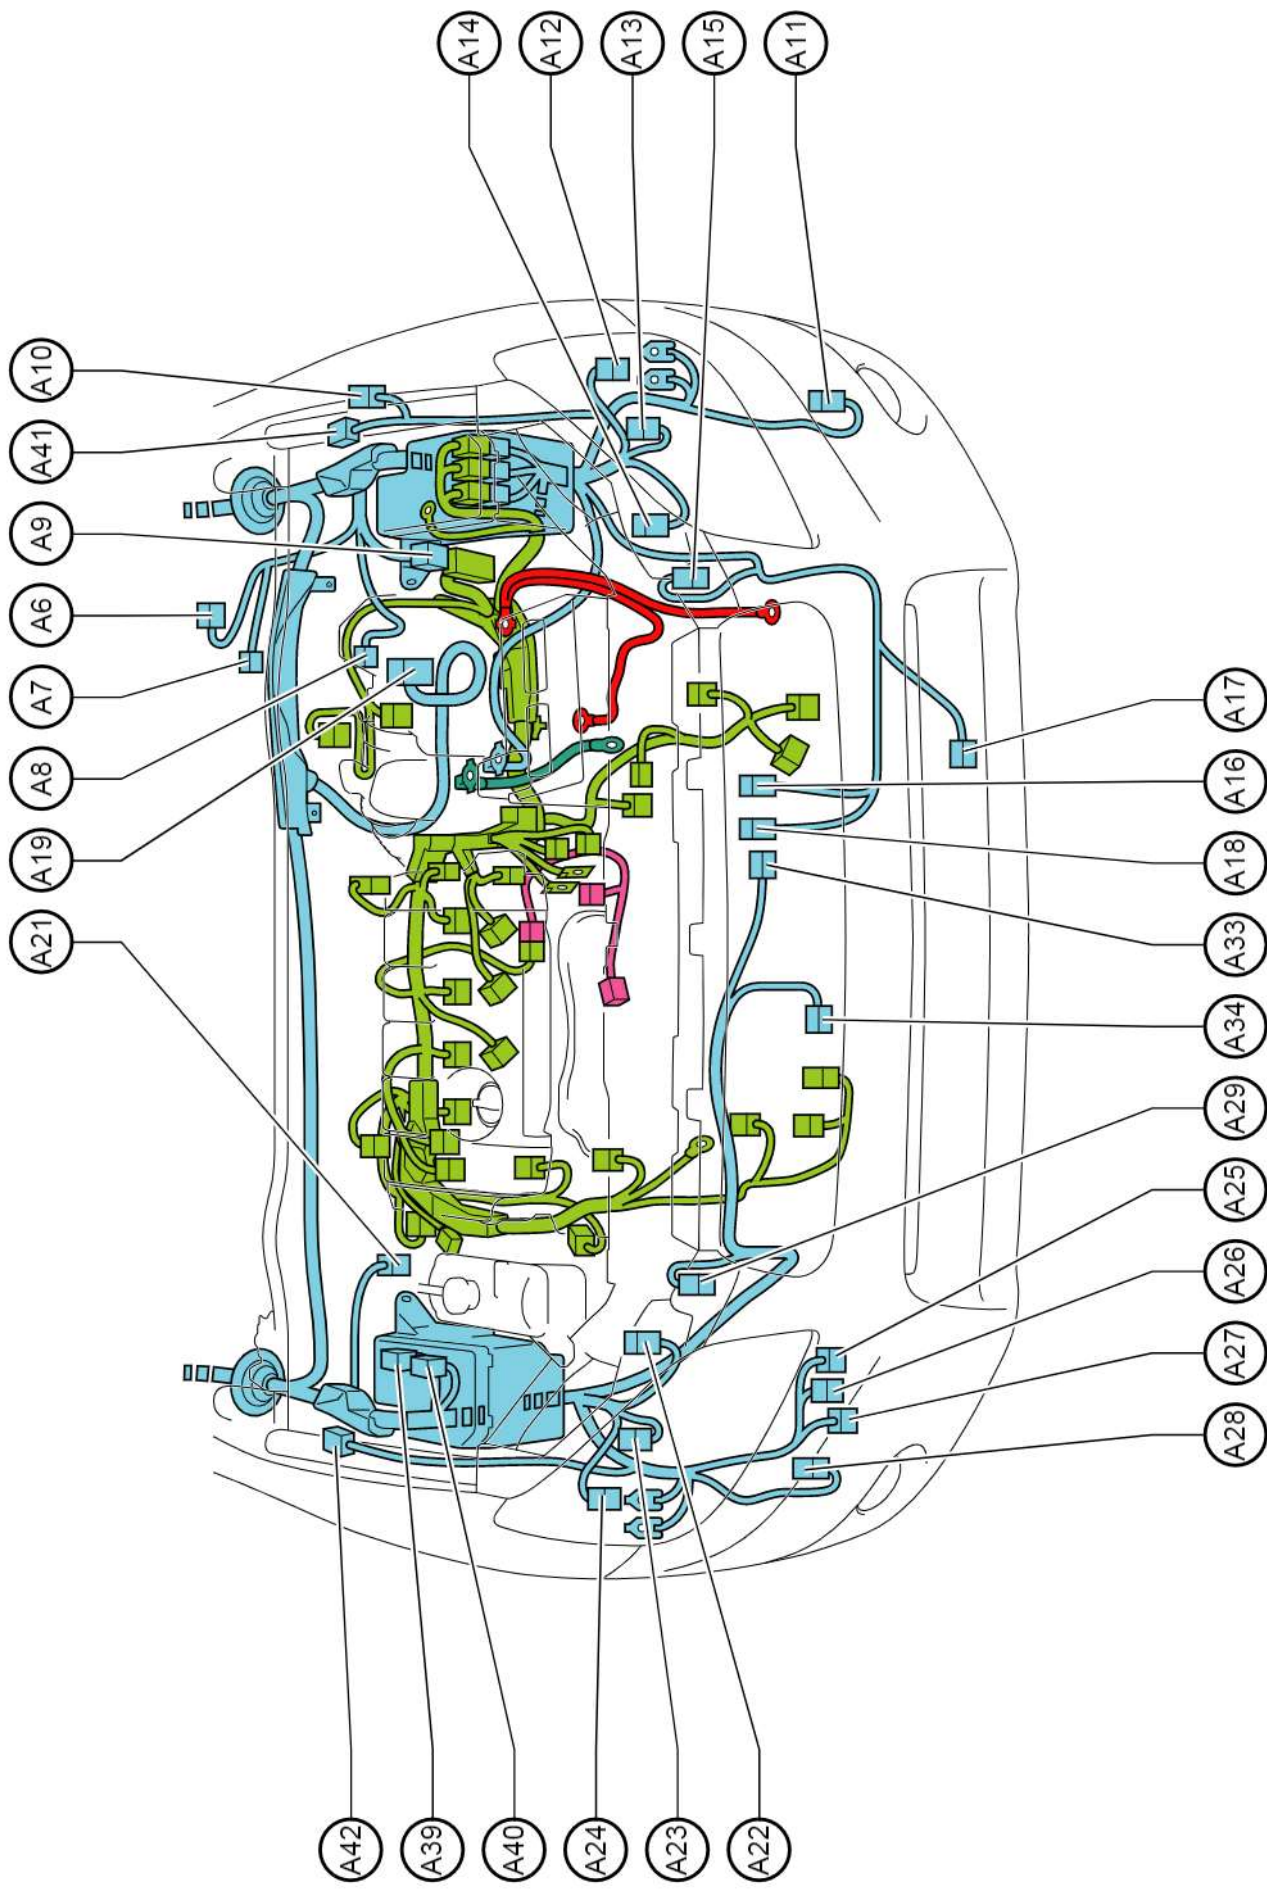


A 6	Windshield Wiper Motor
A 7	Front Wiper Deicer
A 8	Brake Fluid Level Warning SW
A 9	Engine Control Module
A 10	Wireless Door Lock Buzzer
A 11	Fog Light (Front LH)
A 12	Side Marker Lamp (Front LH) , Turn Signal Lamp (Front LH)
A 13	Headlamp (LH Low)
A 14	Headlamp (LH High)
A 15	Airbag Sensor (Front LH)
A 16	Horn (Low)
A 17	Ambient Temp. Sensor
A 18	Horn (High)
A 19	Skid Control ECU with Actuator
A 21	A/C Pressure Sensor
A 22	Headlamp (RH High)
A 23	Headlamp (RH Low)
A 24	Side Marker Lamp (Front RH) , Turn Signal Lamp (Front RH)
A 25	Rear Washer Motor
A 26	Washer Level Warning SW
A 27	Front Washer Motor
A 28	Fog Light (Front RH)
A 29	Airbag Sensor (Front RH)
A 33	Radiator Fan Motor
A 34	A/C Condenser Fan Motor
A 39	Junction Connector
A 40	Junction Connector
A 41	Speed Sensor (Front LH)
A 42	Speed Sensor (Front RH)

cardiagn.com

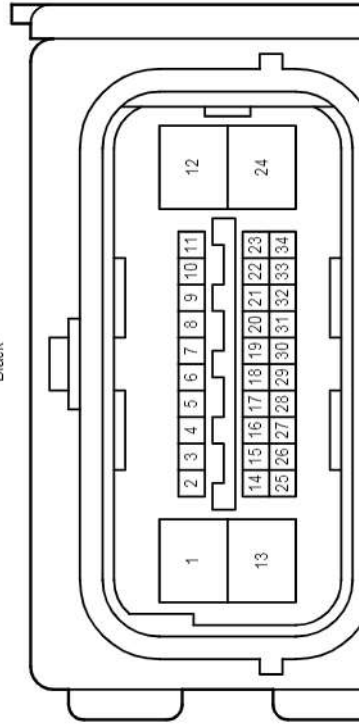


A 26
Black

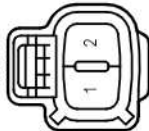


A 27
Gray




A 28
Black

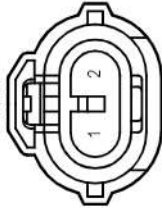


A 29
Yellow

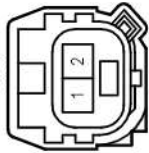


A 33
Gray

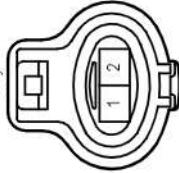


A 34
Black

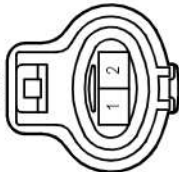


A 39
Black




A 40
Gray




A 41
Black

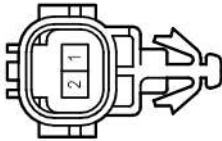

A 42
Black




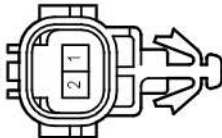


Position of Parts in Engine Compartment <2AR-FE>









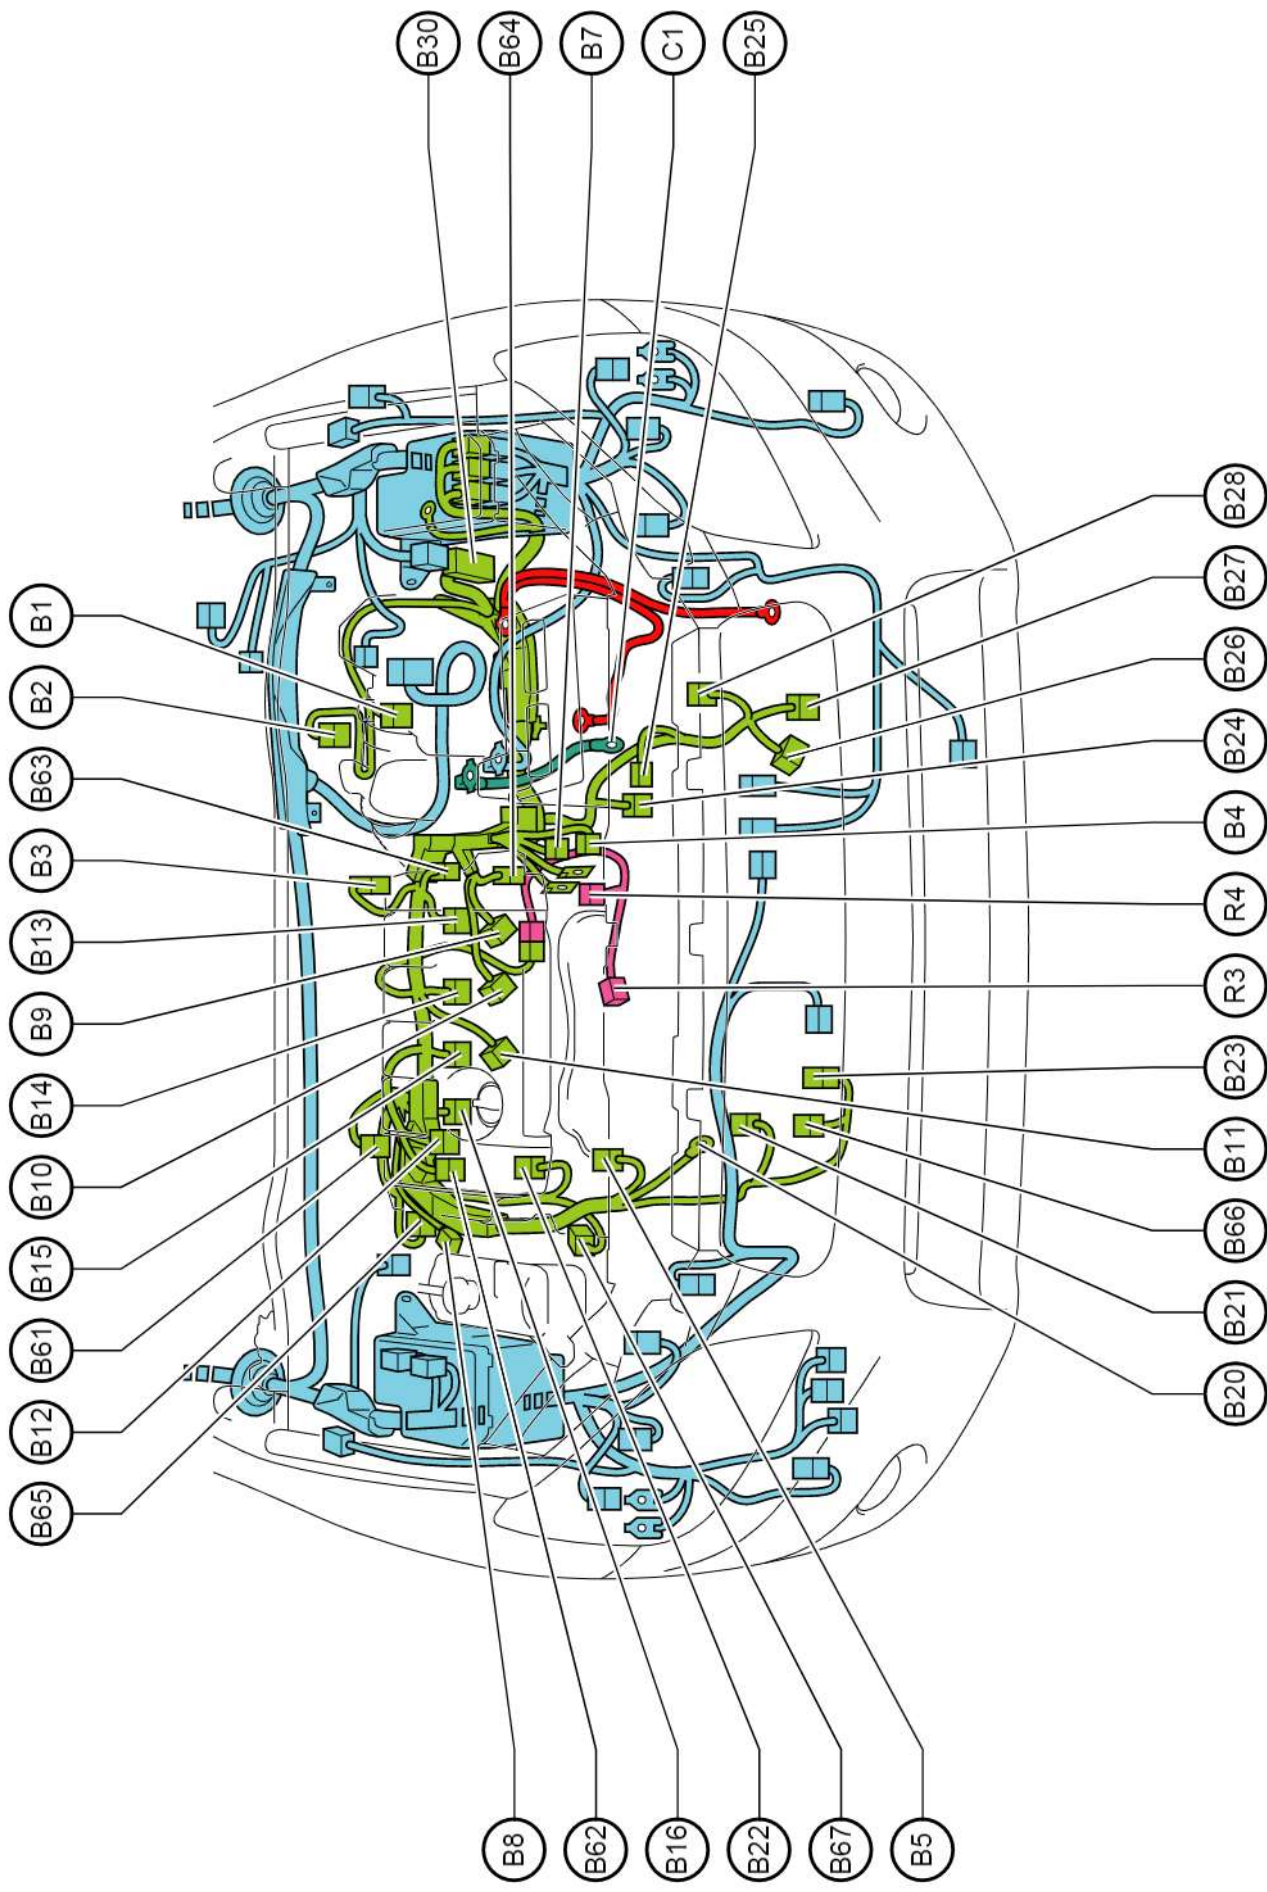


B	1	Mass Air Flow Meter
B	2	VSV (Purge)
B	3	Throttle Body Assembly
B	4	Engine Coolant Temp. Sensor
B	4	Engine Coolant Temp. Sensor
B	5	Engine Oil Pressure SW
B	7	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
B	8	Noise Filter (Ignition)
B	9	Ignition Coil (No.4)
B	10	Ignition Coil (No.3)
B	11	Ignition Coil (No.2)
B	12	Ignition Coil (No.1)
B	13	Fuel Injector (No.4)
B	14	Fuel Injector (No.3)
B	15	Fuel Injector (No.2)
B	16	Fuel Injector (No.1)
B	20	Generator
B	20	Generator
B	21	Generator
B	22	Crankshaft Position Sensor
B	23	A/C Compressor
B	24	Transmission Revolution Sensor (Counter Gear)
B	25	Starter
B	26	Park/Neutral Position SW
B	27	Electronically Controlled Transmission Solenoid
B	28	Transmission Revolution Sensor (Turbine)
B	30	Engine Control Module
B	61	Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
B	62	Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side)
B	63	WT Sensor (Bank 1 Intake Side)
B	64	WT Sensor (Bank 1 Exhaust Side)
B	65	VSV (ACIS)
B	66	With Pulley Compressor Assembly
B	67	Heated Oxygen Sensor (Bank 1 Sensor 2)
C	1	Starter
R	3	Knock Control Sensor (Bank 1)
R	4	Intake Air Control Valve Actuator


Position of Parts in Engine Compartment <2AR-FE>

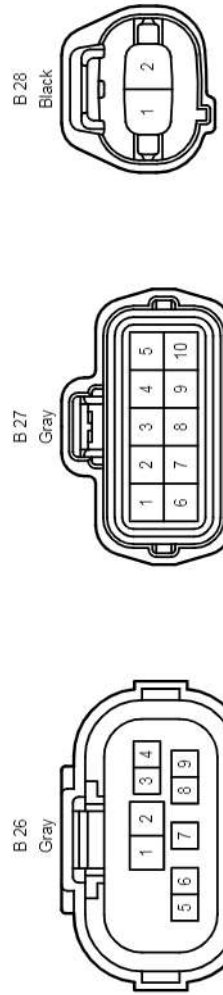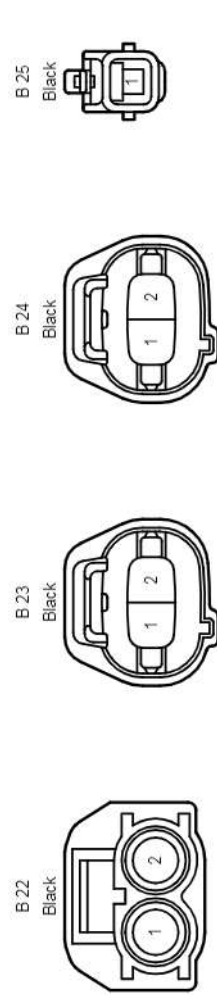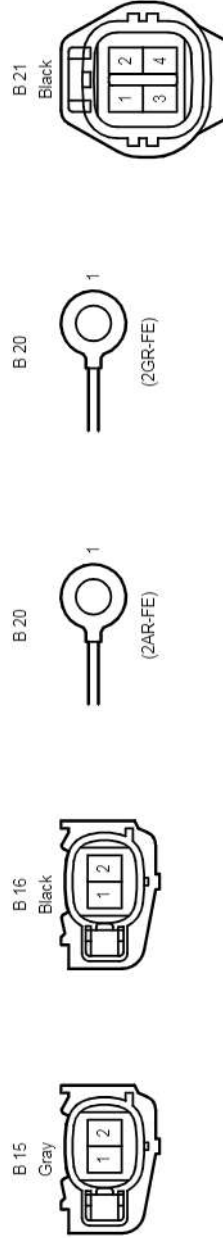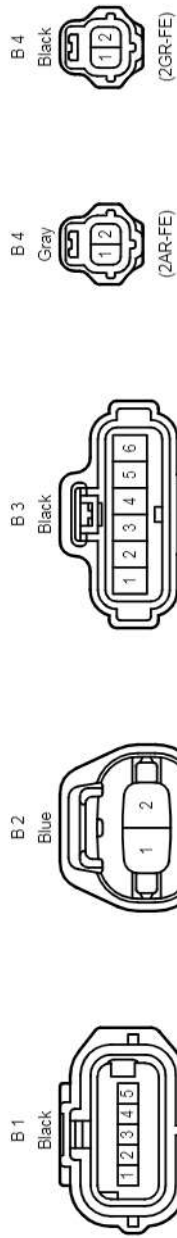

Position of Parts in Engine Compartment <2AR-FE>

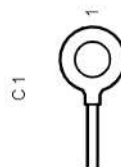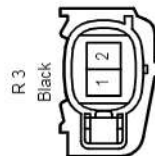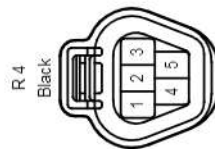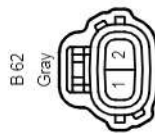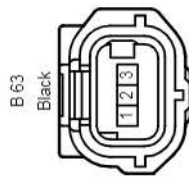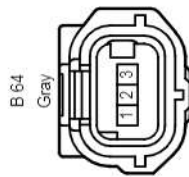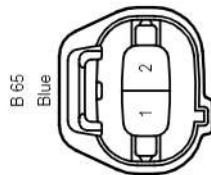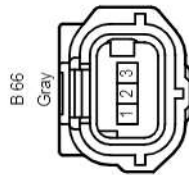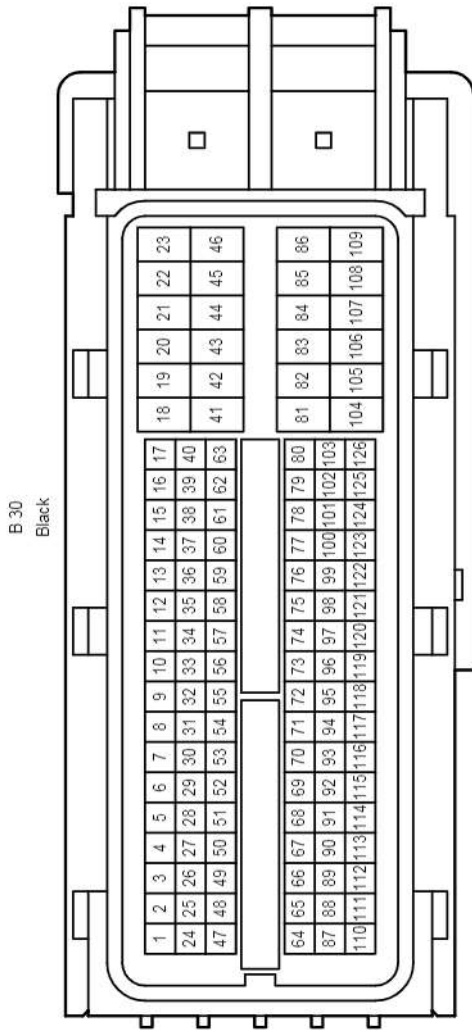


Position of Parts in Engine Compartment <2GR-FE>


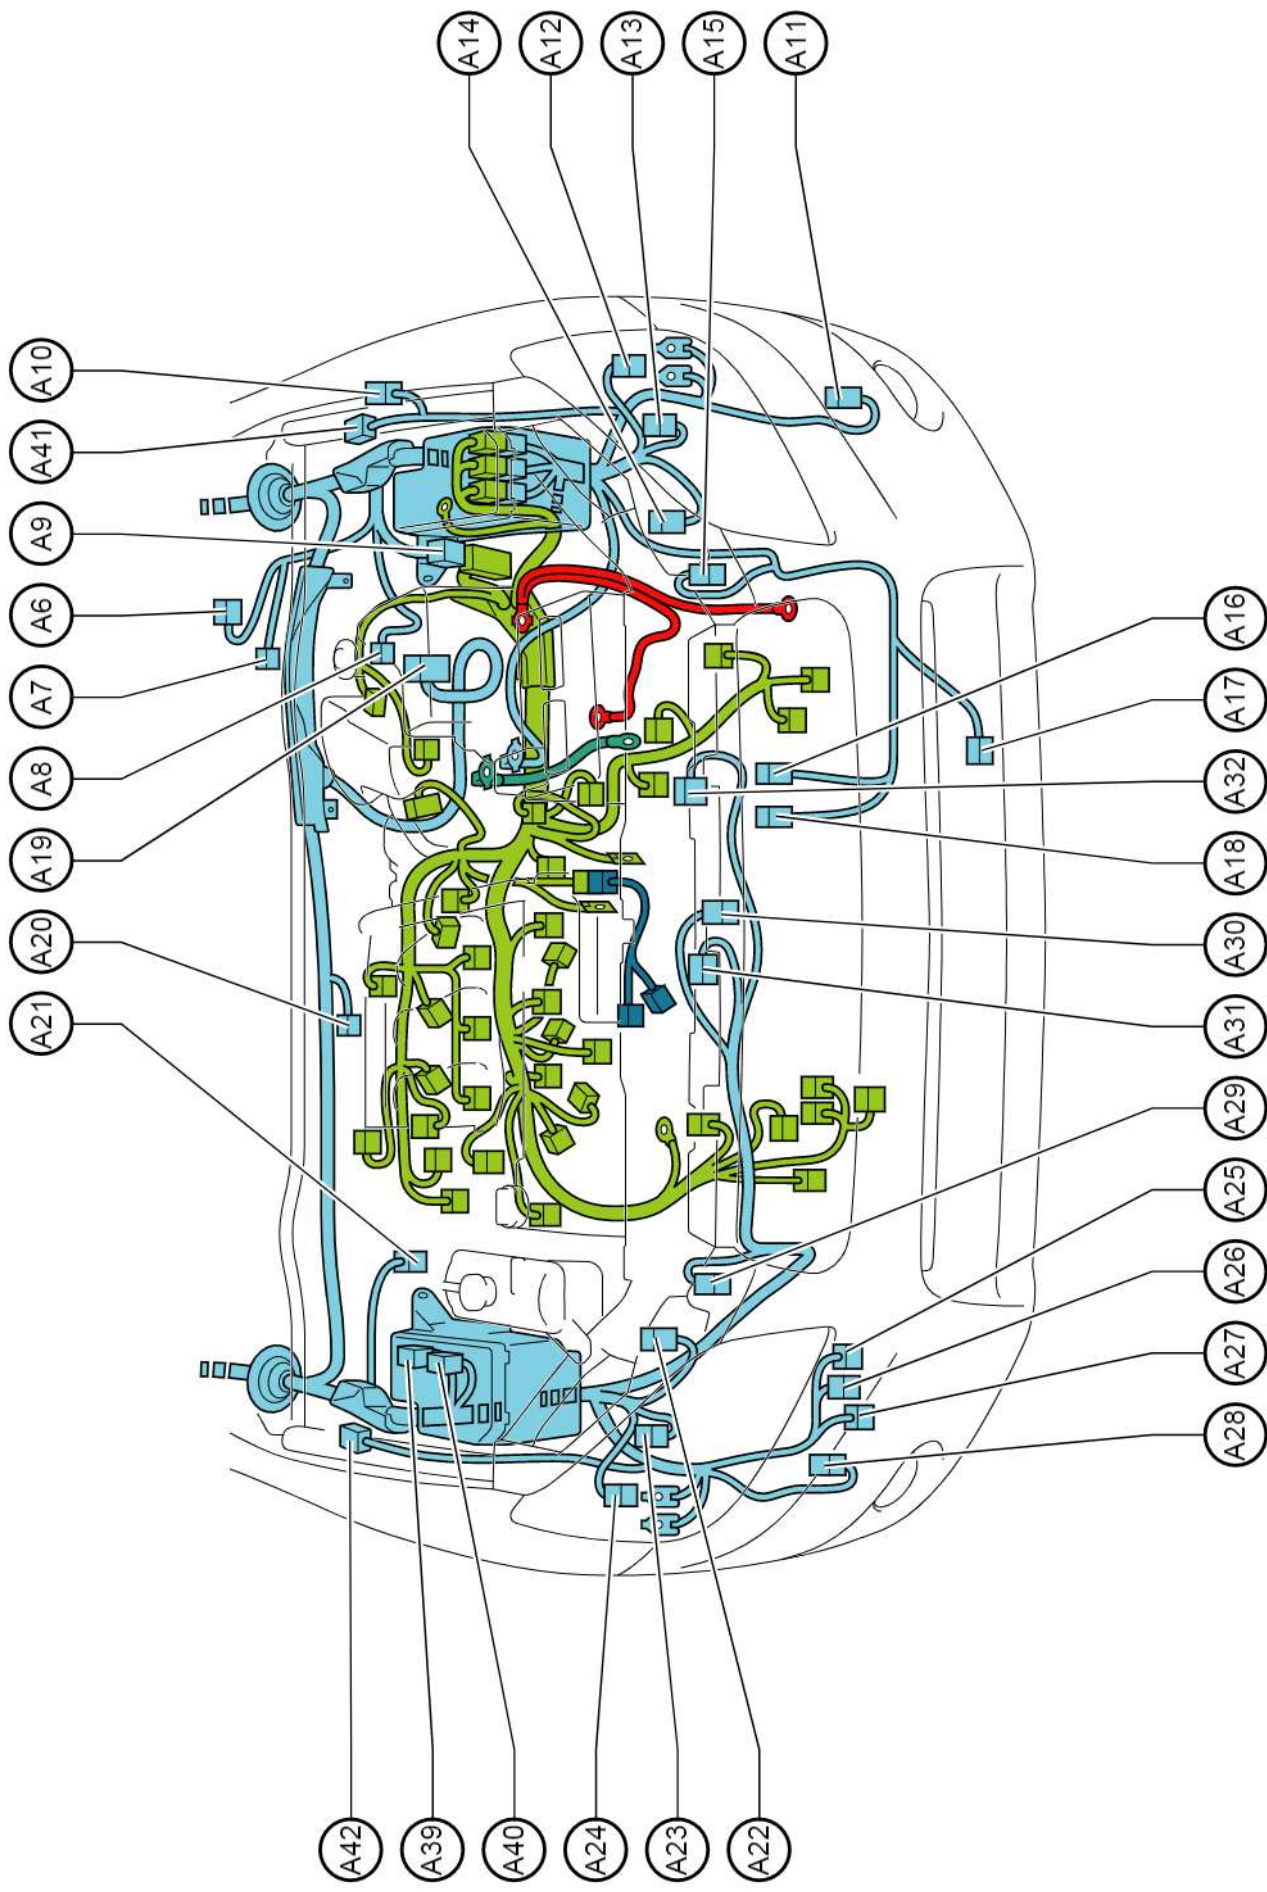


- A 6 Windshield Wiper Motor
- A 7 Front Wiper Deicer
- A 8 Brake Fluid Level Warning SW
- A 9 Engine Control Module
- A 10 Wireless Door Lock Buzzer
- A 11 Fog Light (Front LH)
- A 12 Side Marker Lamp (Front LH) , Turn Signal Lamp (Front LH)
- A 13 Headlamp (LH Low)
- A 14 Headlamp (LH High)
- A 15 Airbag Sensor (Front LH)
- A 16 Horn (Low)
- A 17 Ambient Temp. Sensor
- A 18 Horn (High)
- A 19 Skid Control ECU with Actuator
- A 20 Fuel Pump Resistor
- A 21 A/C Pressure Sensor
- A 22 Headlamp (RH High)
- A 23 Headlamp (RH Low)
- A 24 Side Marker Lamp (Front RH) , Turn Signal Lamp (Front RH)
- A 25 Rear Washer Motor
- A 26 Washer Level Warning SW
- A 27 Front Washer Motor
- A 28 Fog Light (Front RH)
- A 29 Airbag Sensor (Front RH)
- A 30 Cooling Fan ECU
- A 31 Cooling Fan ECU (RH)
- A 32 Cooling Fan ECU (LH)
- A 39 Junction Connector
- A 40 Junction Connector
- A 41 Speed Sensor (Front LH)
- A 42 Speed Sensor (Front RH)


Position of Parts in Engine Compartment <2GR-FE>

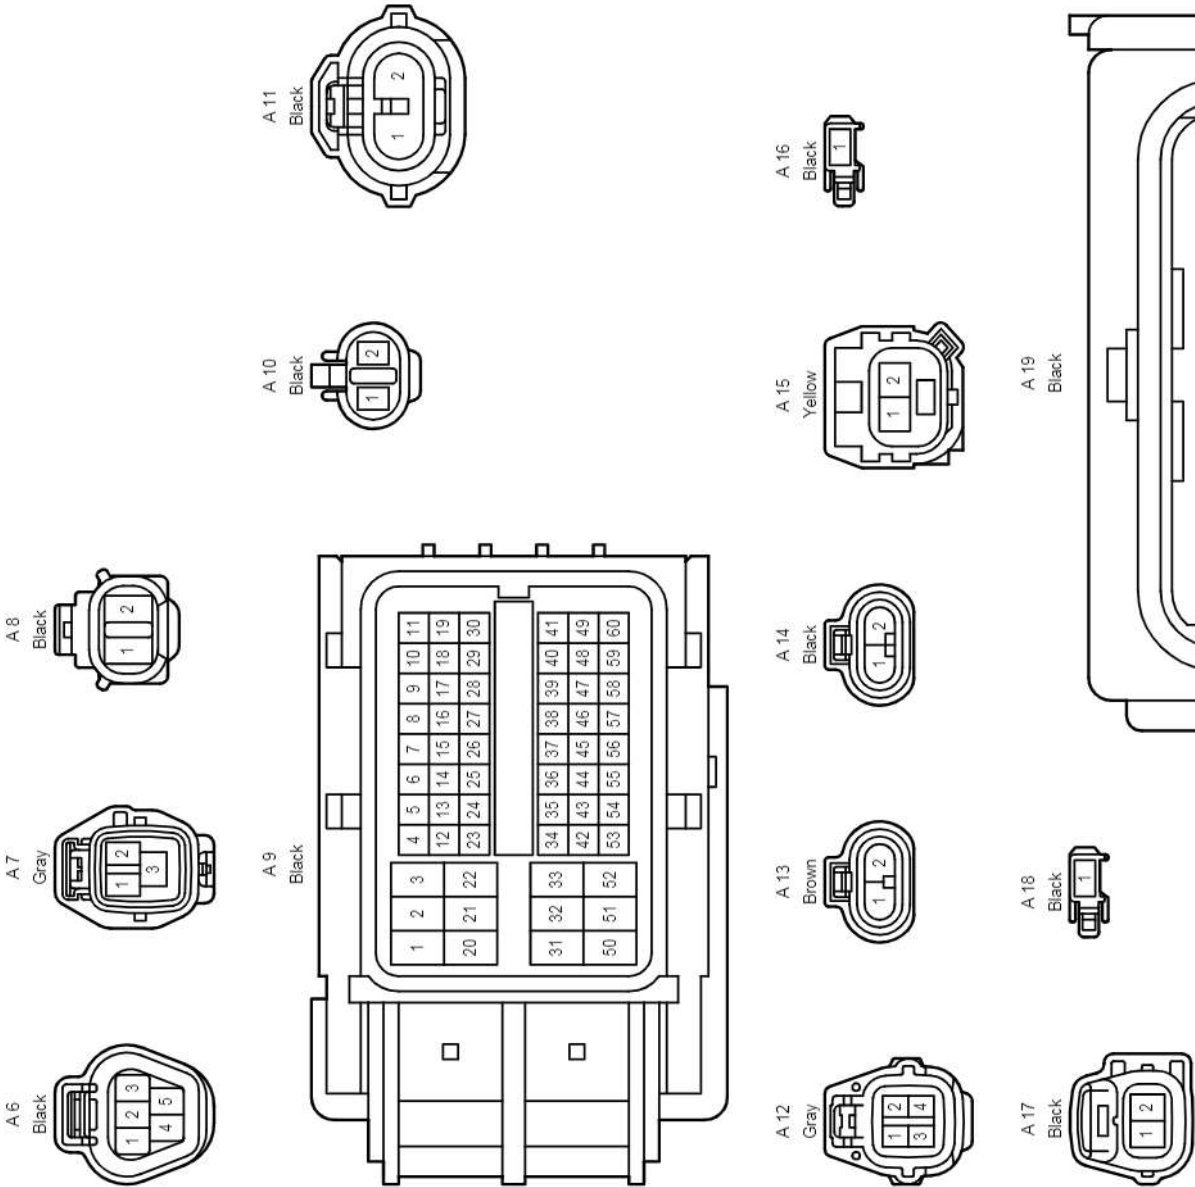

Position of Parts in Engine Compartment <2GR-FE>










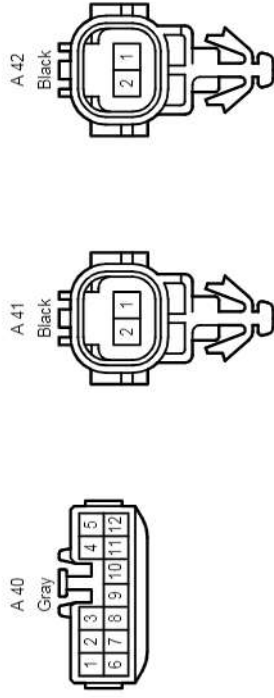
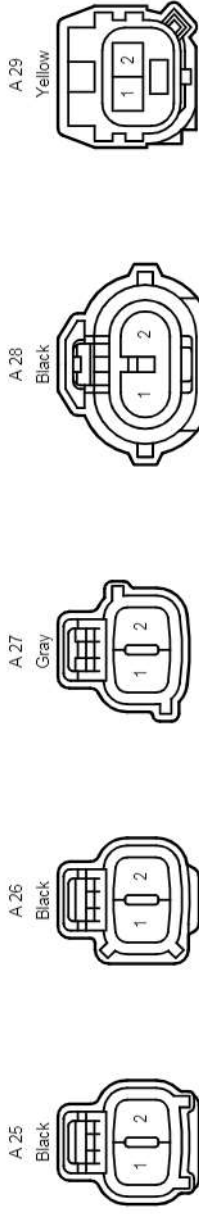


Position of Parts in Engine Compartment <2GR-FE>

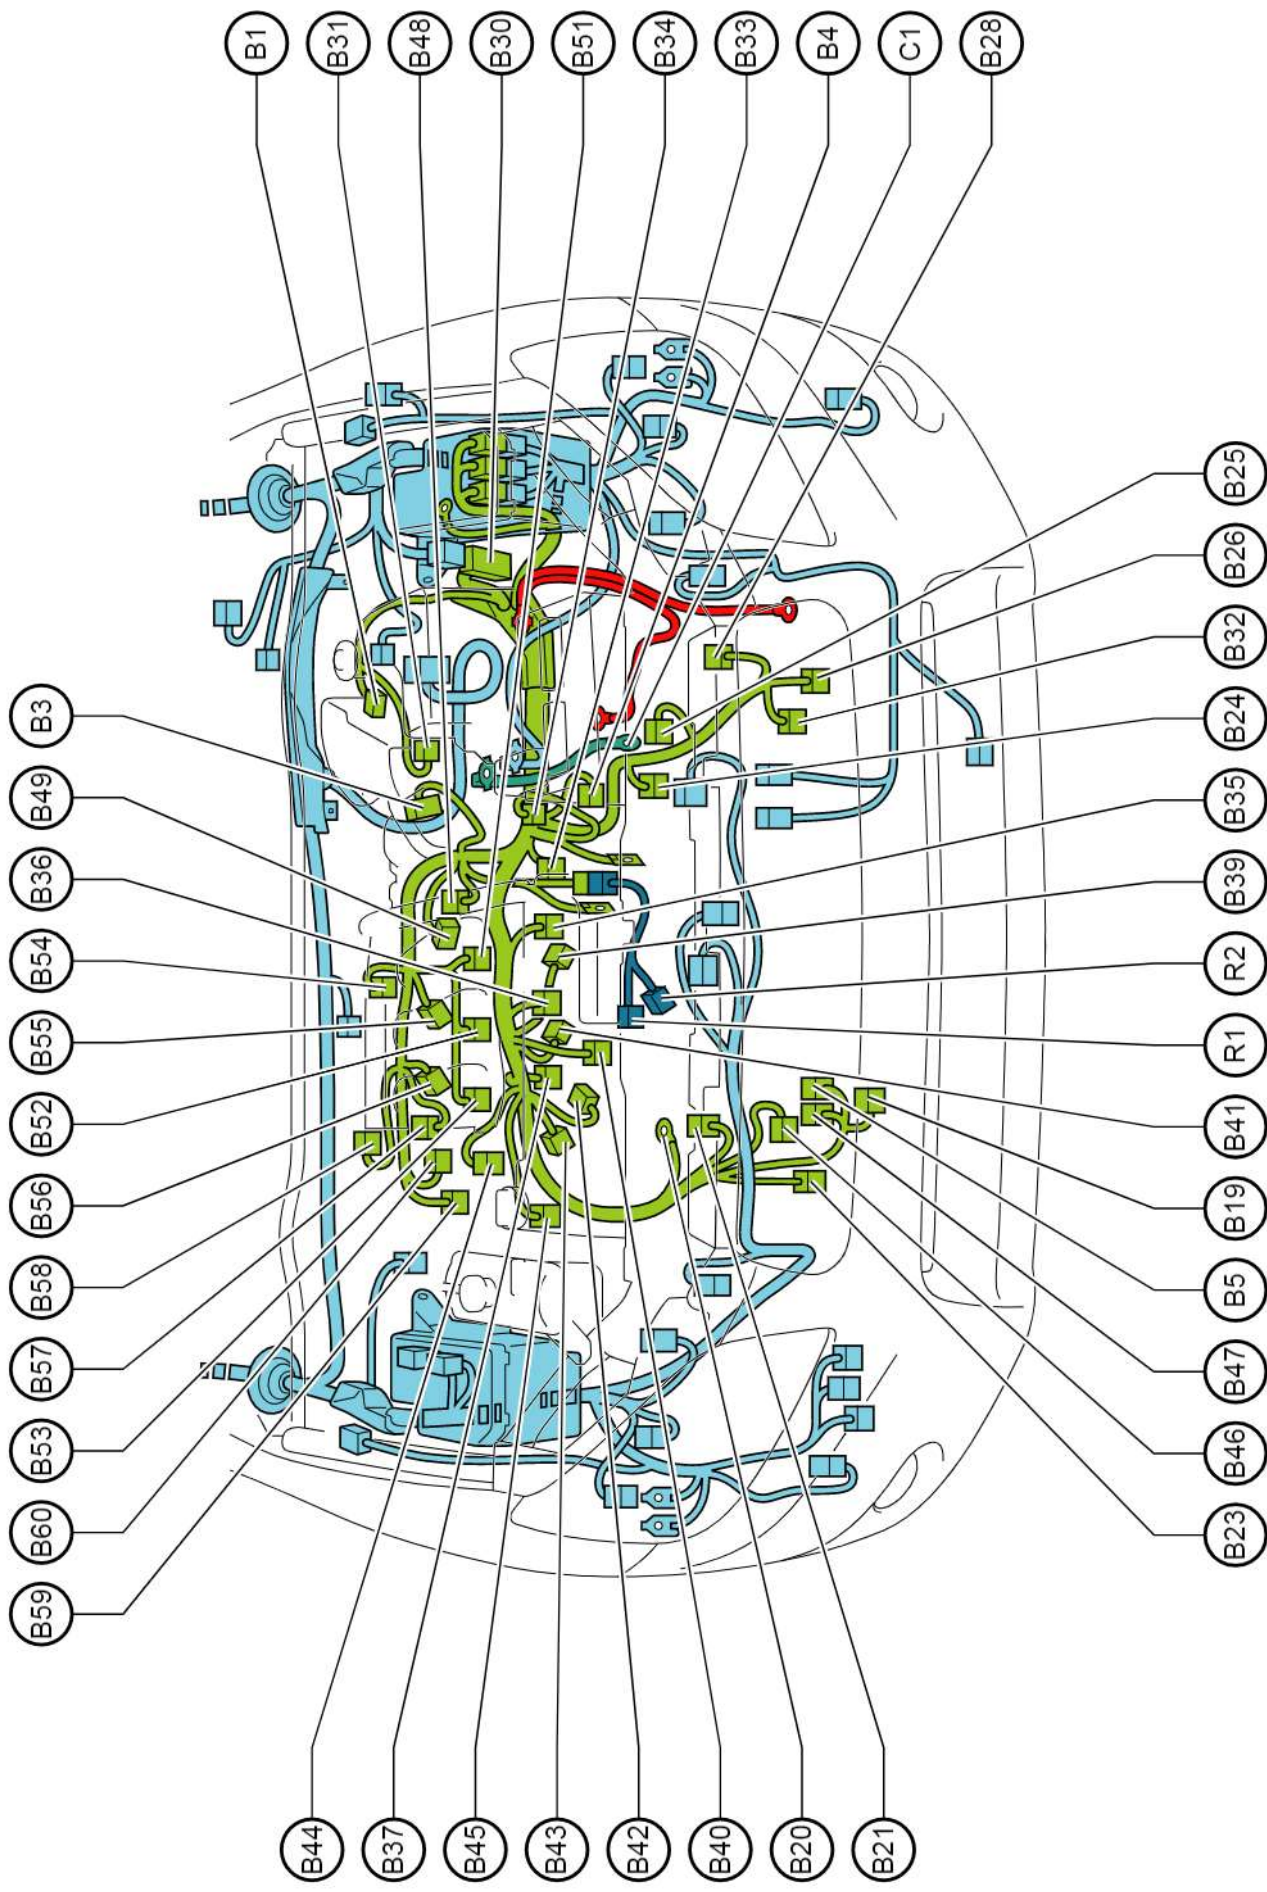


B 1	Mass Air Flow Meter
B 3	Throttle Body Assembly
B 4	Engine Coolant Temp. Sensor
B 4	Engine Coolant Temp. Sensor
B 5	Engine Oil Pressure SW
B 19	Heated Oxygen Sensor (Bank 2 Sensor 2)
B 20	Generator
B 20	Generator
B 21	Generator
B 23	A/C Compressor
B 24	Transmission Revolution Sensor (Counter Gear)
B 25	Starter
B 26	Park/Neutral Position SW
B 28	Transmission Revolution Sensor (Turbine)
B 30	Engine Control Module
B 31	VSV (Air Intake Control)
B 32	Electronically Controlled Transmission Solenoid
B 33	Air Fuel Ratio Sensor (Bank 2 Sensor 1)
B 34	VSV (Purge)
B 35	Fuel Injector (No.6)
B 36	Fuel Injector (No.4)
B 37	Fuel Injector (No.2)
B 39	Ignition Coil (No.6)
B 40	WT Sensor (Bank 2 Exhaust Side)
B 41	Ignition Coil (No.4)
B 42	Ignition Coil (No.2)
B 43	Camshaft Timing Oil Control Valve (LH Exhaust Side)
B 44	Camshaft Timing Oil Control Valve (LH Intake Side)
B 45	WT Sensor (Bank 2 Intake Side)
B 46	Crankshaft Position Sensor
B 47	A/C Compressor
B 48	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
B 49	Ignition Coil (No.5)
B 51	Fuel Injector (No.5)
B 52	Fuel Injector (No.3)
B 53	Fuel Injector (No.1)
B 54	WT Sensor (Bank 1 Exhaust Side)
B 55	Ignition Coil (No.3)
B 56	Ignition Coil (No.1)
B 57	Camshaft Timing Oil Control Valve (RH Exhaust Side)
B 58	VSV (ACIS)
B 59	WT Sensor (Bank 1 Intake Side)
B 60	Camshaft Timing Oil Control Valve (RH Intake Side)

Position of Parts in Engine Compartment <2GR-FE>

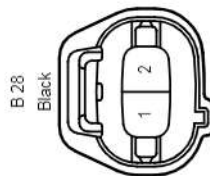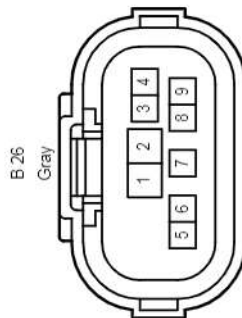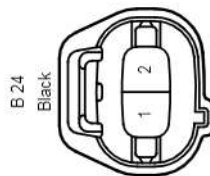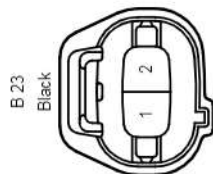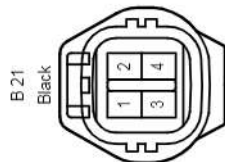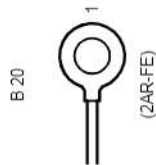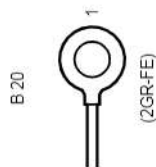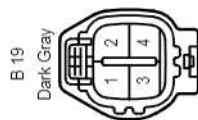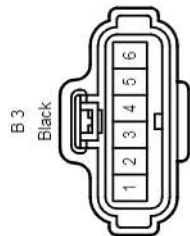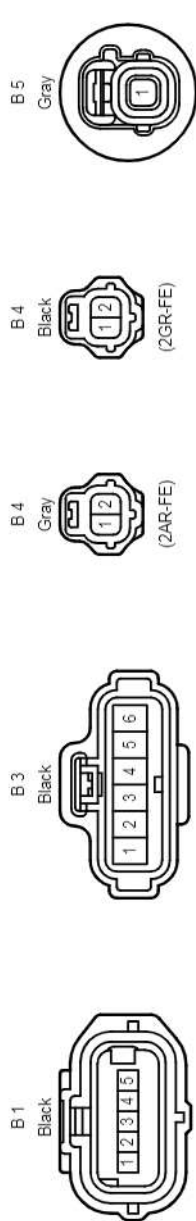

B 30
Black

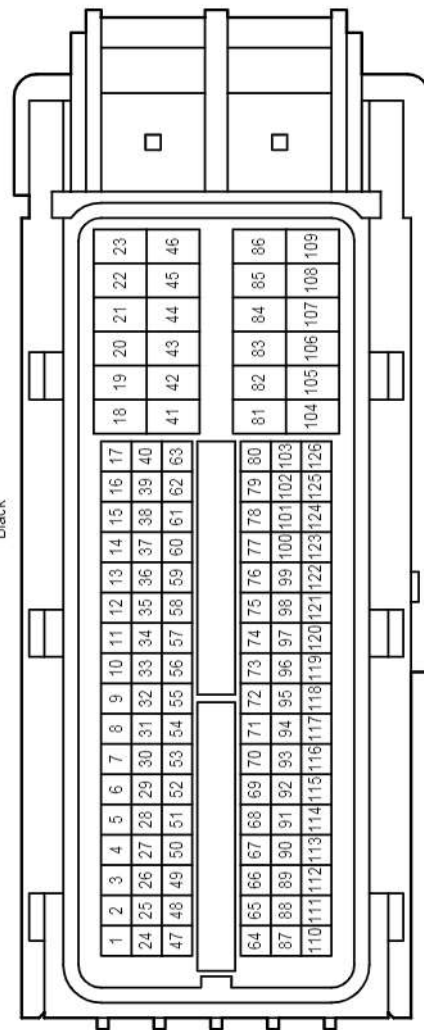




















B 31
Black

B 32
Gray


B 33
Dark Gray

B 34
Black

Position of Parts in Engine Compartment <2GR-FE>

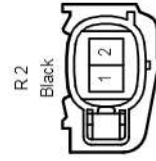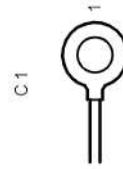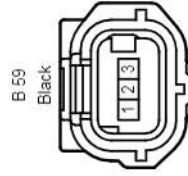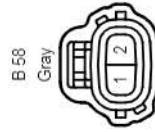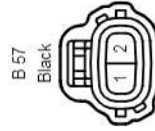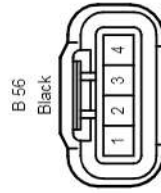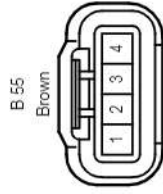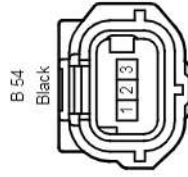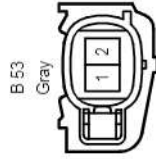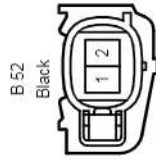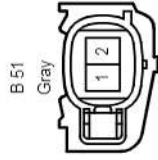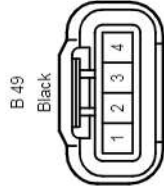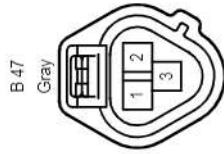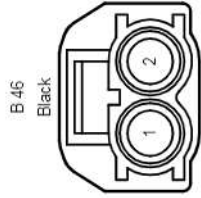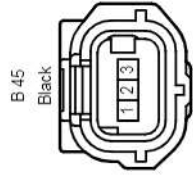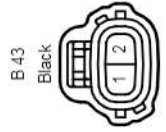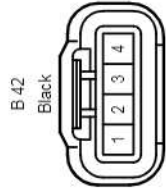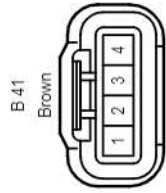

Position of Parts in Instrument Panel

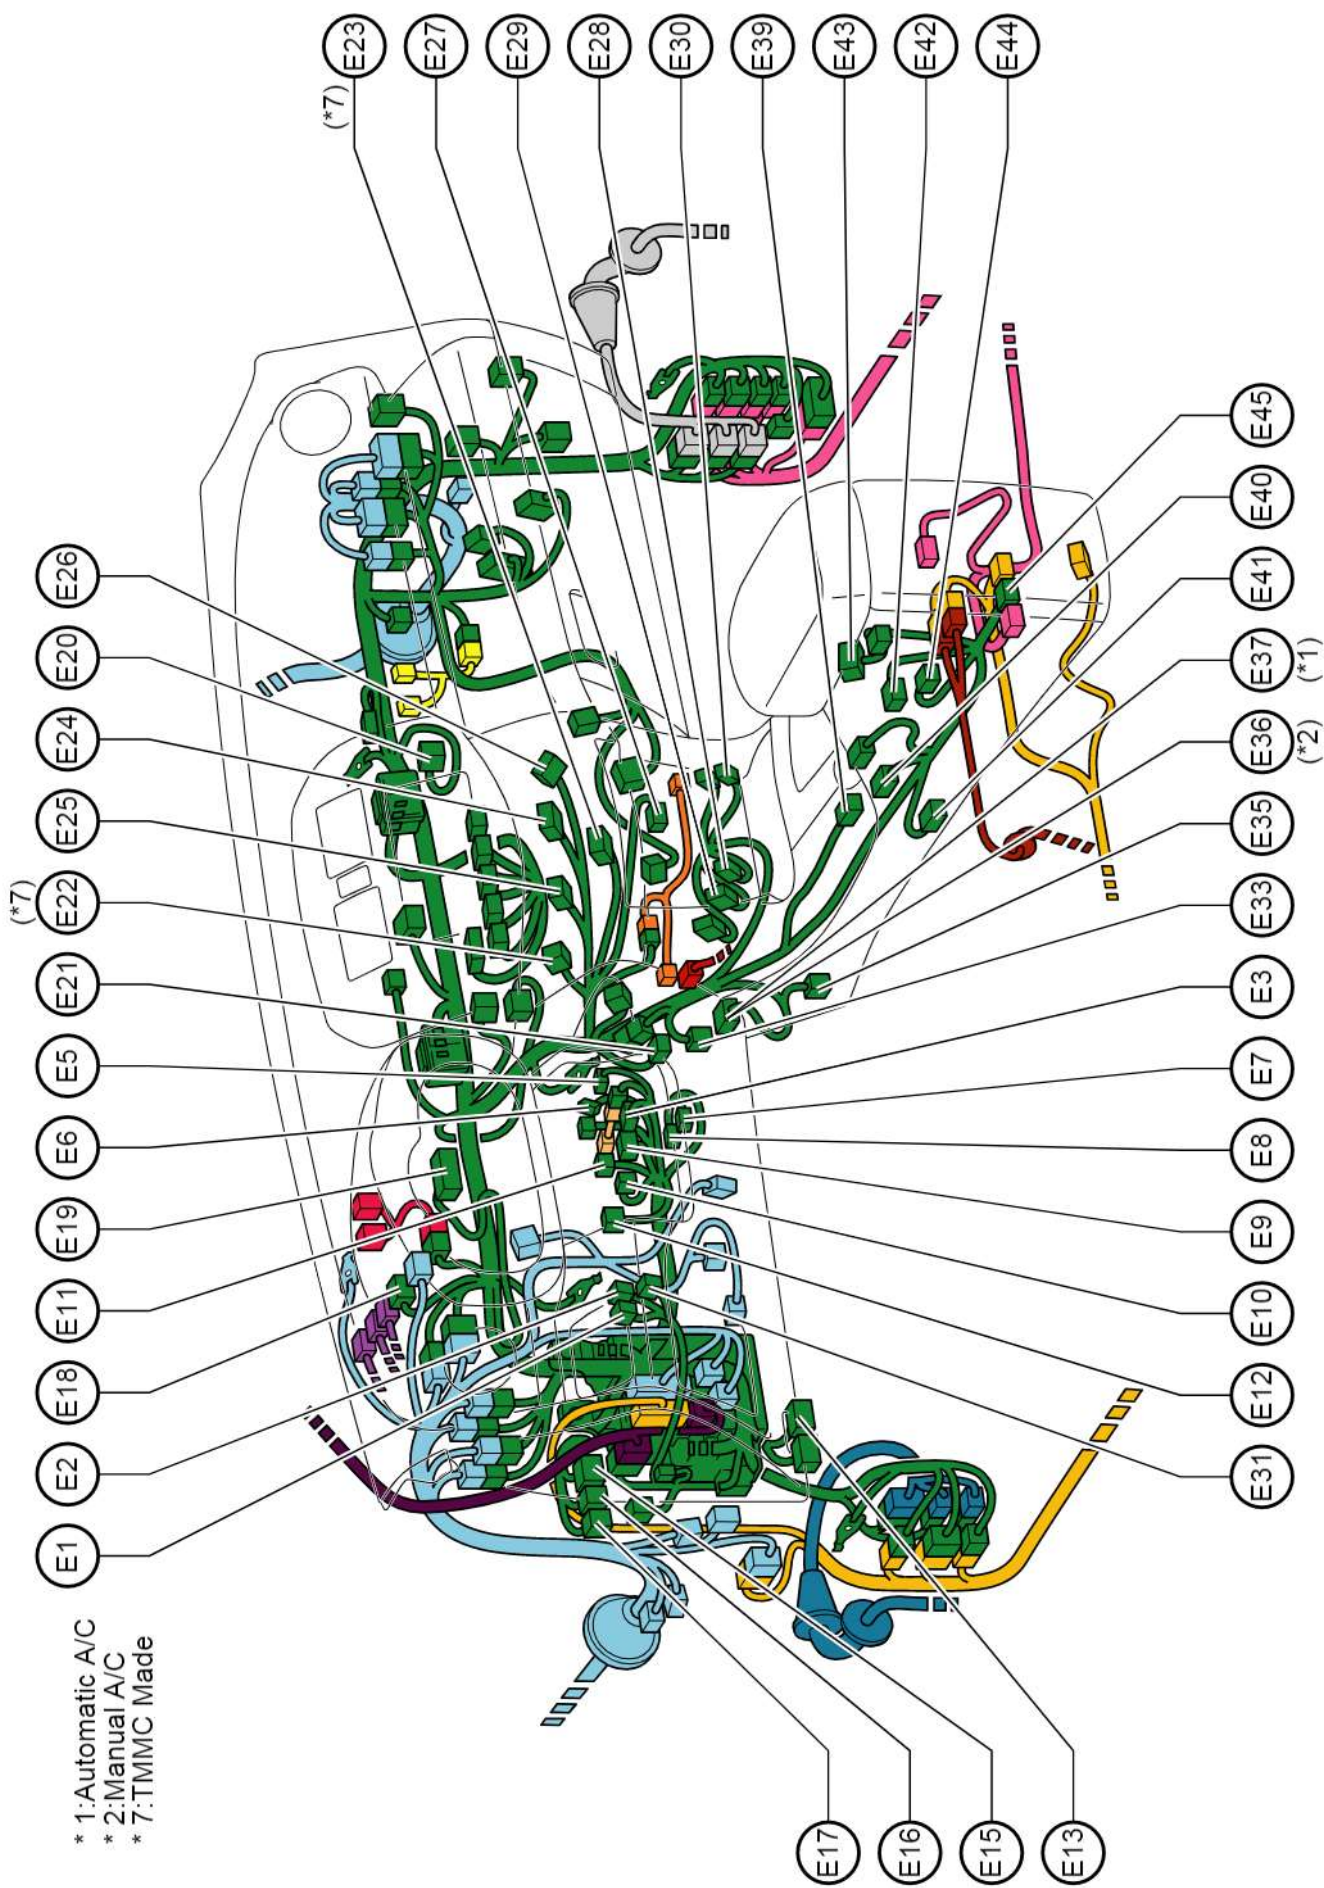


Position of Parts in Instrument Panel


E	1	Main SW	
E	2	Light Control Rheostat	
E	3	Ignition SW	
E	5	Transponder Key Amplifier	
E	6	Unlock Warning SW	
E	7	Spiral Cable	
E	8	Airbag Squib (Steering Wheel Pad)	
E	9	Windshield Wiper SW Assembly	
E	10	Windshield Wiper SW Assembly	
E	11	Steering Sensor	
E	12	Headlamp Dimmer SW Assembly	
E	13	Data Link Connector 3	
E	15	Main Body ECU	
E	16	Main Body ECU	
E	17	Main Body ECU	
E	18	Power Steering ECU	
E	19	Combination Meter	
E	20	Hazard Warning Signal SW	
E	21	A/C Room Temp. Sensor	
E	22	Clock	
E	23	Integration Control and Panel Assembly	
E	24	Integration Control and Panel Assembly	
E	25	Air Vent Mode Control SW	
E	26	A/C SW	
E	27	Front Console Illumination	
E	28	Front Wiper Deicer SW	
E	29	Seat Heater SW	
E	30	Power Outlet Socket (Front)	
E	31	Downhill Assist Control SW	
E	33	A/C Thermistor	
E	35	Heated Oxygen Sensor (Bank 1 Sensor 2)	
E	36	A/C Amplifier	
E	37	A/C Amplifier	
E	39	Shift Lock Control ECU	
E	40	Transmission Control SW	
E	41	Parking Brake SW	
E	42	Outer Mirror SW	
E	43	Power Outlet Socket (Front)	
E	44	Stereo Jack Adapter	
E	45	Airbag Sensor Assembly Center	

Position of Parts in Instrument Panel


E 1
Black

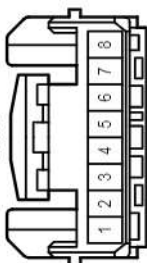


E 2
White

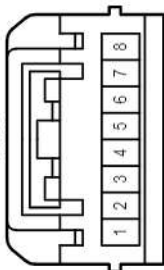

E 3
White

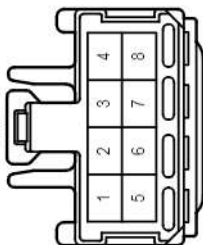


E 5
Black

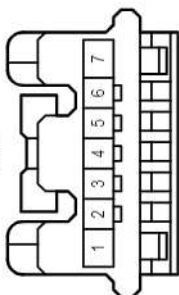


E 6
White




E 7
Black

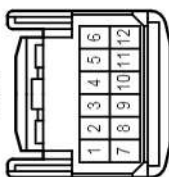


E 8
Yellow

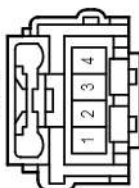


E 9
White

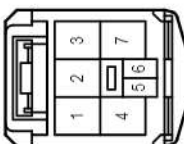


E 10
White

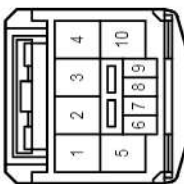


E 11
White

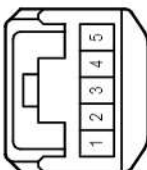


E 12
White

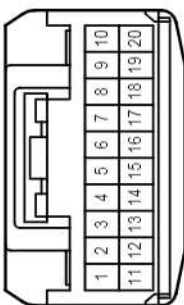


E 13
White

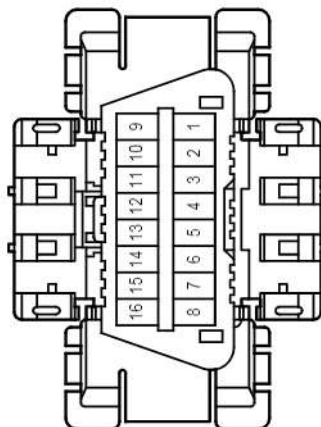


E 15
White

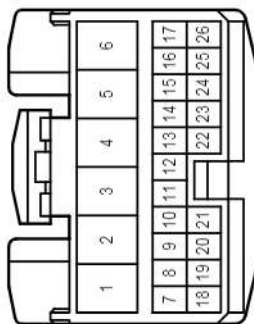

E 16
White

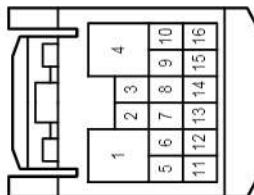


E 17
White



E 18
White




E 19
White




Position of Parts in Instrument Panel

E 25
Gray

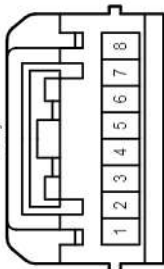


E 26
Black

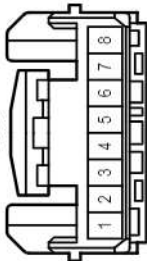


E 27
White




E 28
Black

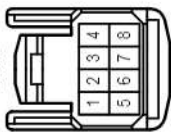


E 29
Black

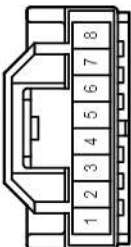

E 30
White




E 31
Gray

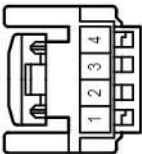


E 33
White




E 35
Gray




E 36
White

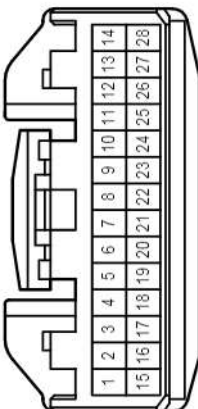


E 37
White

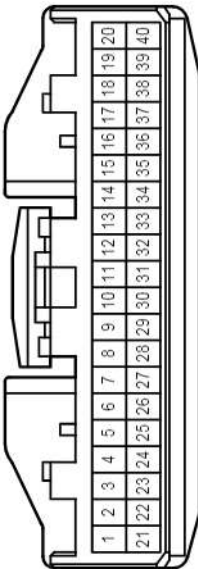

E 39
White

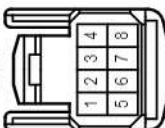


E 40
White

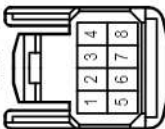


E 41
Black




E 42
White

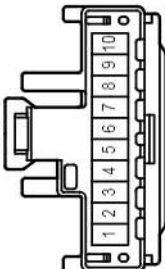


E 43
White



E 44
White

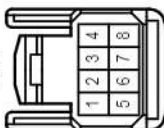


E 45
Yellow

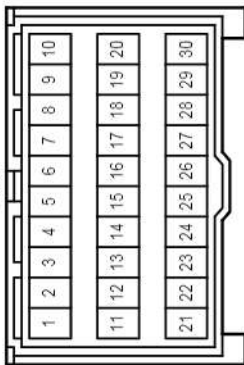

Position of Parts in Instrument Panel






- * 4:w/o Navigation System
- * 5:w/ Smart Key System
- * 6:w/o Smart Key System
- * 7:TMMC Made
- * 8:TMC Made
- * 11:w/ Navigation System South Korea
- * 12:w/ Navigation System Except South Korea
- * 13:w/o Navigation System JBL
- * 14:w/o Navigation System Except JBL

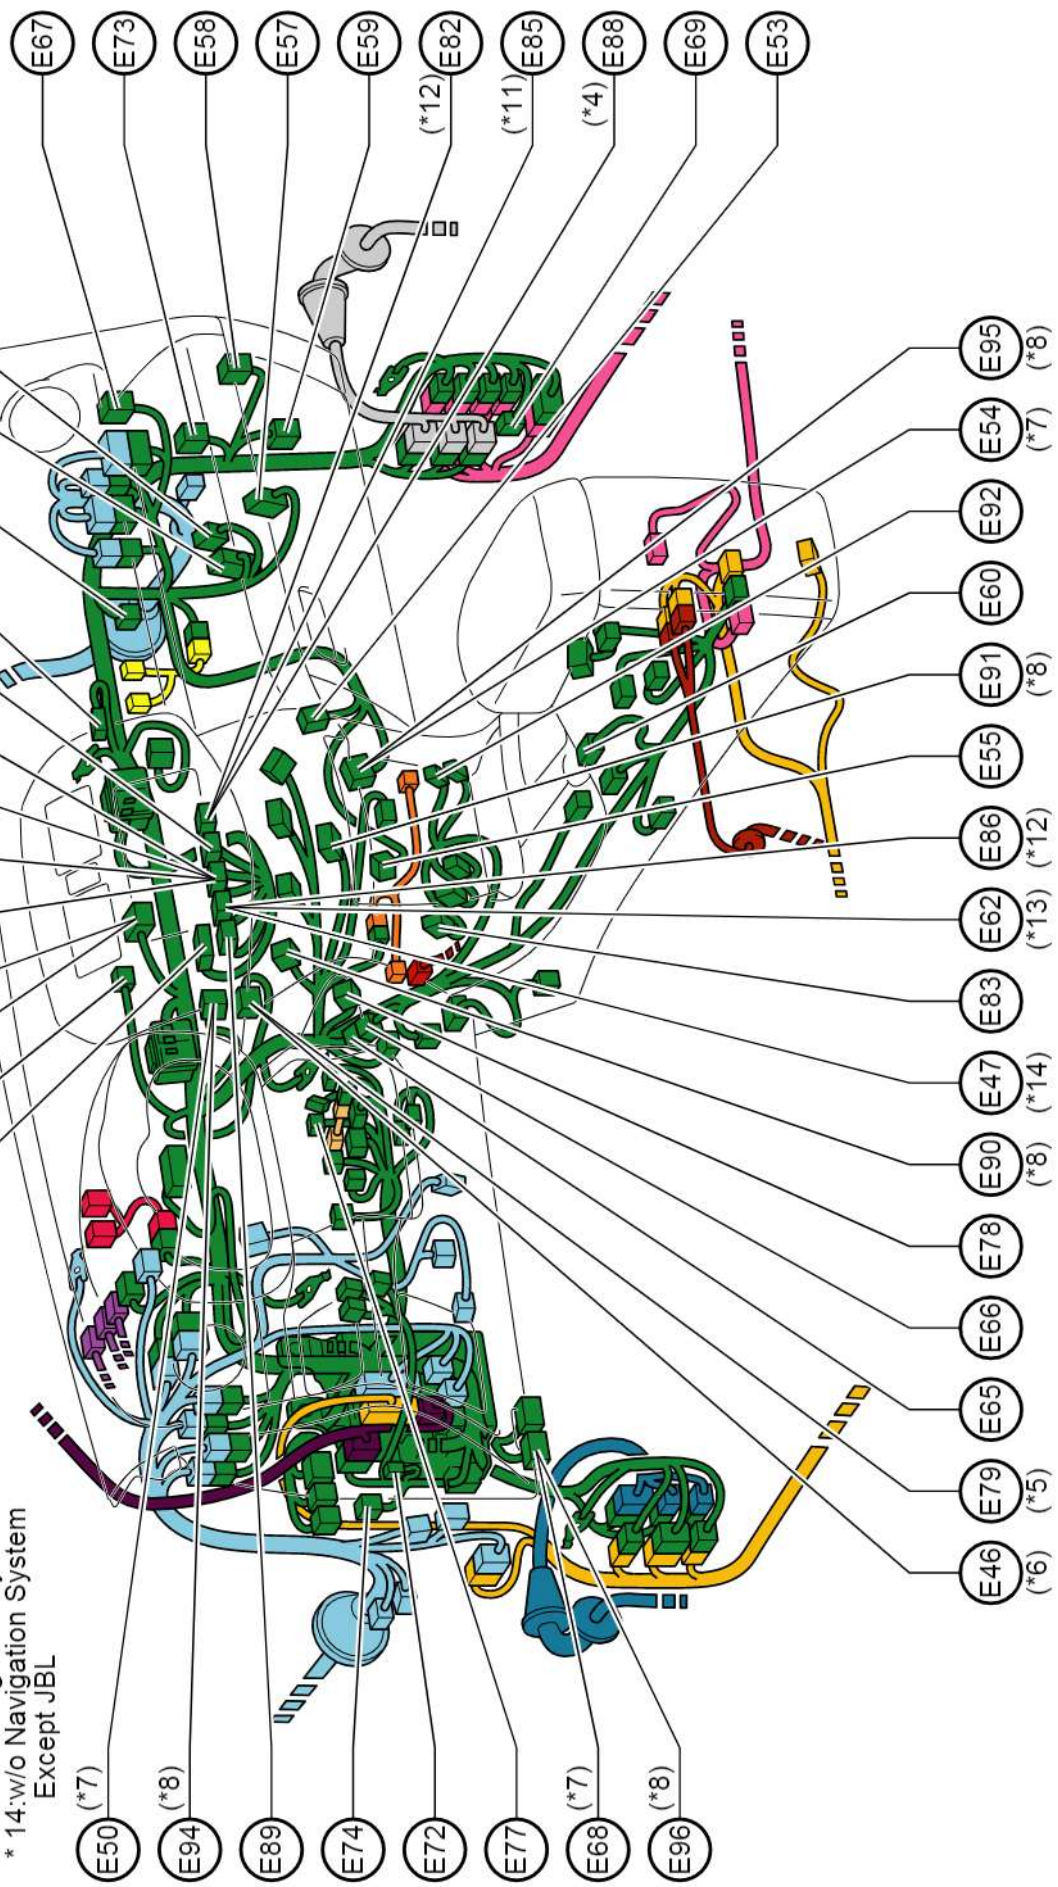

Position of Parts in Instrument Panel

E 46	Transponder Key ECU
E 47	Radio Receiver Assembly
E 48	Radio Receiver Assembly
E 50	4WD Control SW
E 53	Blower Motor
E 54	Blower Motor
E 55	Blower Resistor
E 56	Tire Pressure Warning ECU
E 57	4WD Control ECU
E 58	Option Connector (TVIP)
E 59	Option Connector (Bus Buffer)
E 60	A/T Shift Lever Illumination
E 61	Damper Servo Motor (Air Inlet)
E 62	Radio Receiver Assembly
E 65	Short Connector
E 66	Short Connector
E 67	Junction Connector
E 68	Junction Connector
E 69	Junction Connector
E 70	Junction Connector
E 71	Diode (Rear Wiper)
E 72	Diode (Inverter)
E 73	Junction Connector
E 74	Junction Connector
E 77	Steering Lock Actuator Assembly
E 78	Engine Switch
E 79	ID Code Box
E 80	Radio Receiver Assembly
E 81	Amplifier Antenna Assembly
E 82	Navigation Receiver Assembly
E 83	Traction Control Switch
E 84	Certification ECU Assembly
E 85	Navigation Receiver Assembly
E 86	Navigation Receiver Assembly
E 88	Radio Receiver Assembly
E 89	Navigation Receiver Assembly
E 90	Clock
E 91	Integration Control and Panel Assembly
E 92	Cigarette Lighter Illumination
E 93	Navigation Receiver Assembly
E 94	4WD Control SW
E 95	Blower Motor
E 96	Junction Connector
E 97	Junction Connector

Position of Parts in Instrument Panel

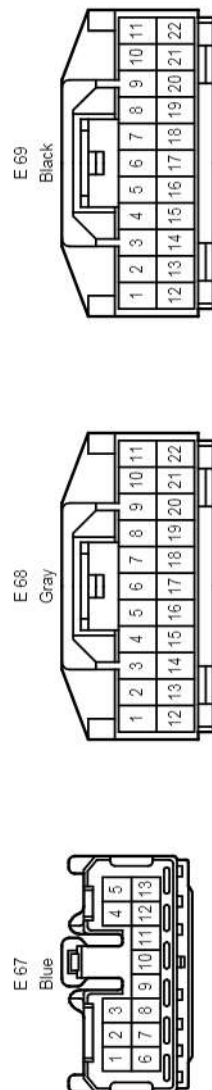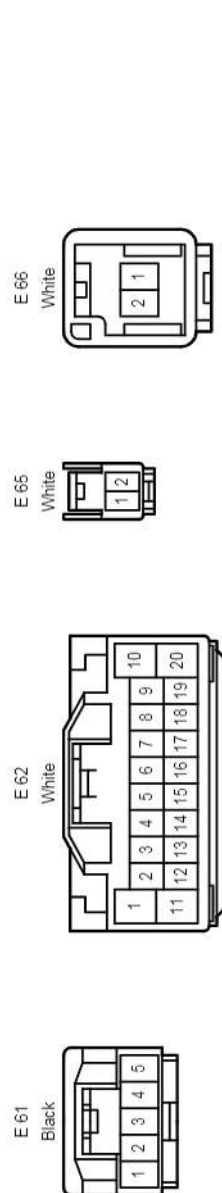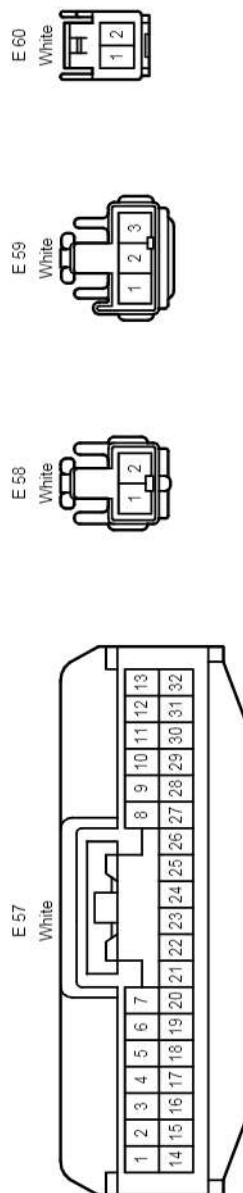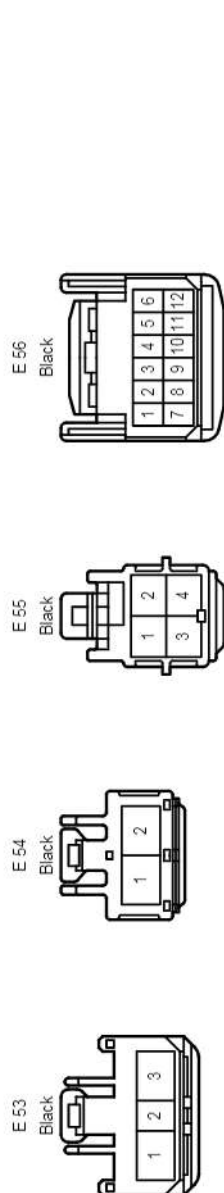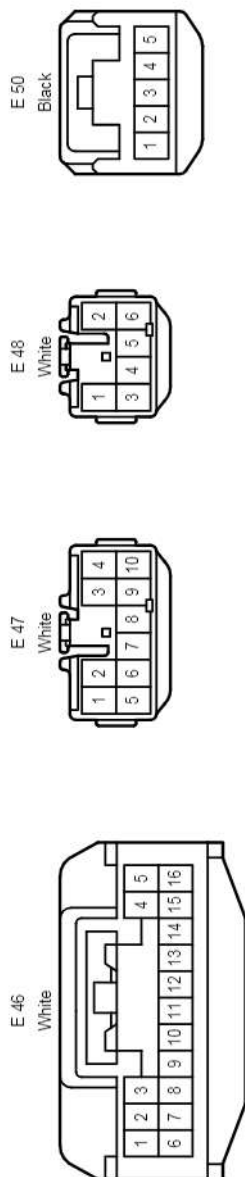


Position of Parts in Instrument Panel


E 81
White




E 82
Gray

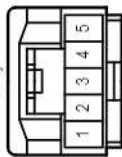


E 83
White

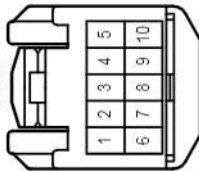


E 84
White

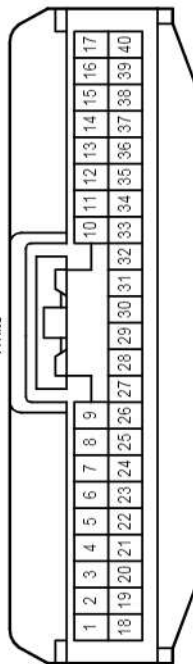


E 85
White




E 86
White




E 88
Blue

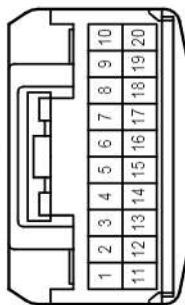


E 89
Blue

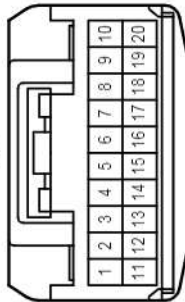

E 90
Black

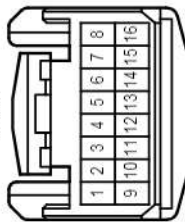


E 91
Black

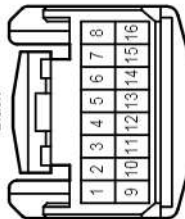


E 92
Gray




E 93
White

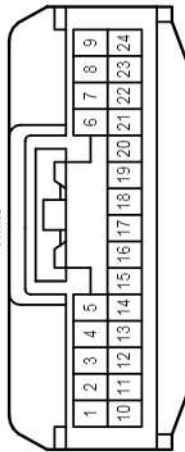


E 94
White

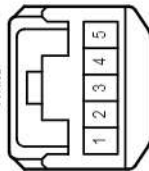


E 95
White

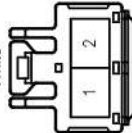


E 96
Gray

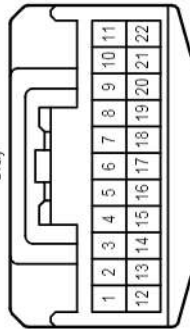

E 97
Gray

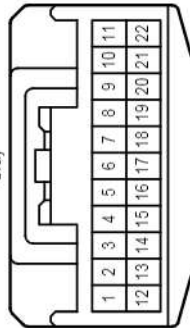










Position of Parts in Instrument Panel

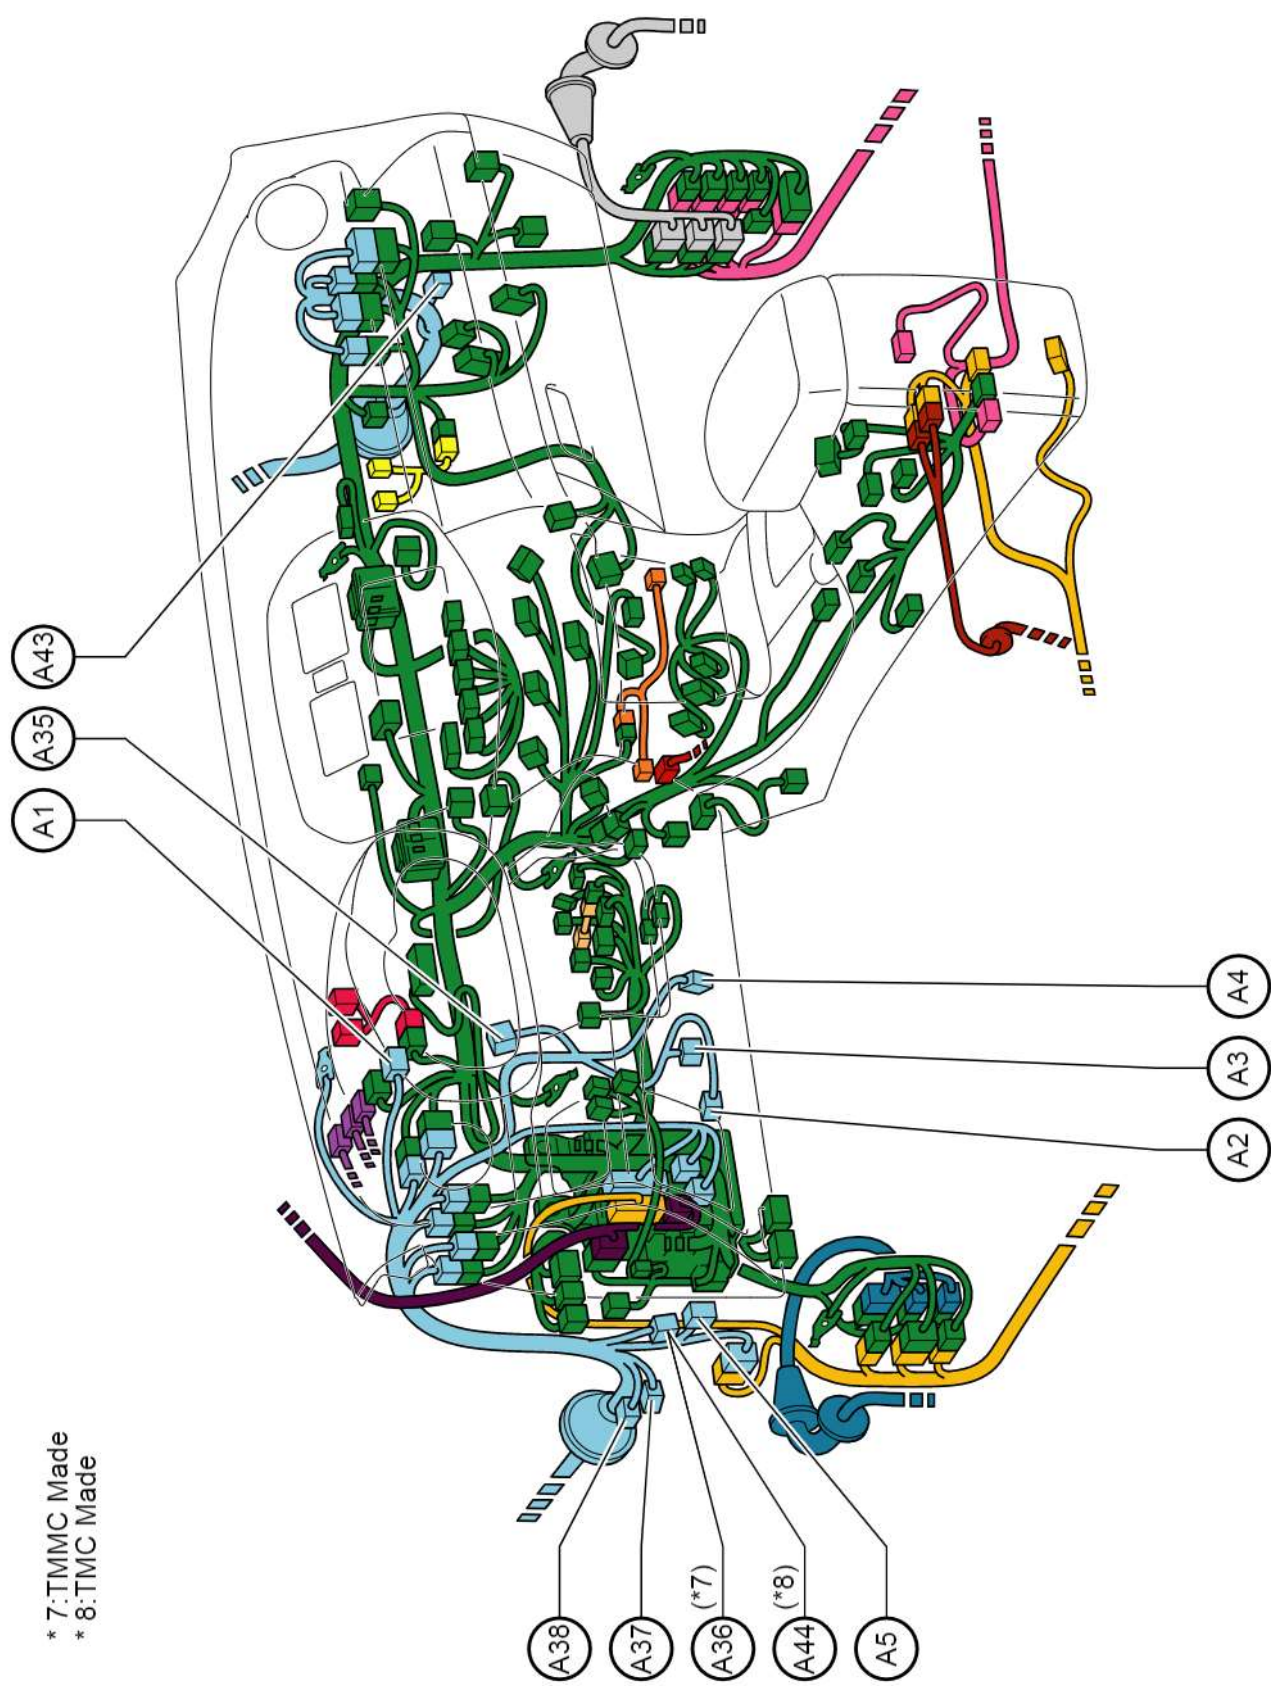


Position of Parts in Instrument Panel

- A 1 Power Steering ECU
- A 2 Brake Pedal Load Sensing SW
- A 3 Stop Lamp SW
- A 4 Accelerator Position Sensor
- A 5 Trailer Socket
- A 35 Junction Connector
- A 36 Junction Connector
- A 37 Junction Connector
- A 38 Junction Connector
- A 43 Stop Light Control Relay Assembly
- A 44 Junction Connector

Position of Parts in Instrument Panel

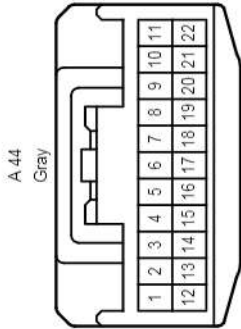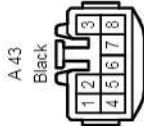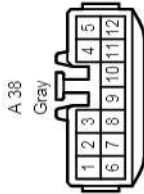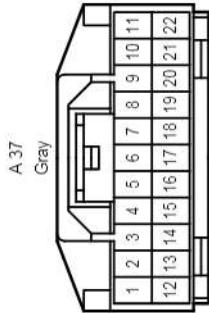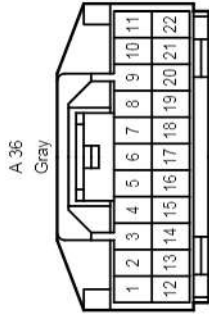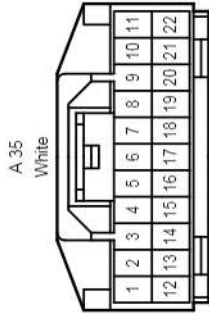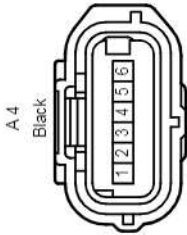

Position of Parts in Instrument Panel

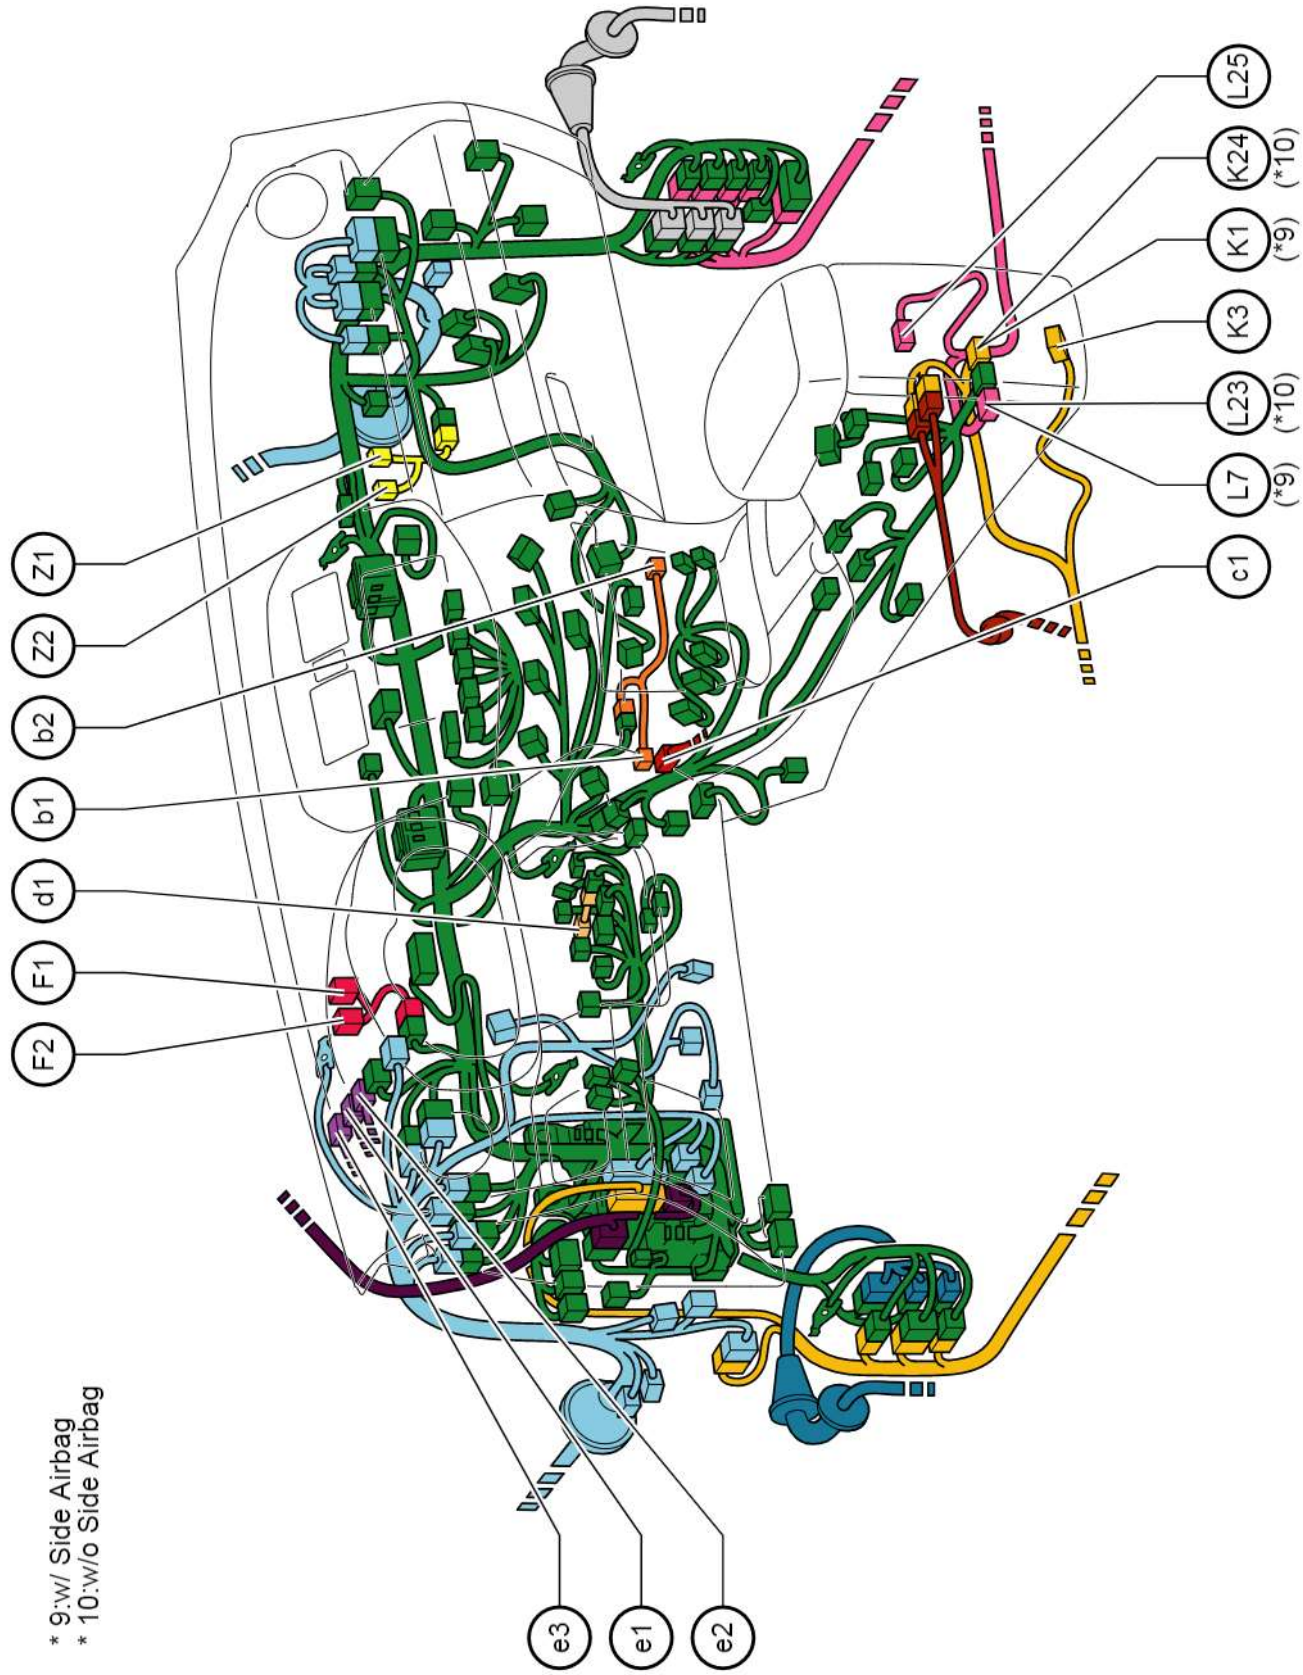

Position of Parts in Instrument Panel

- F 1 A/C Solar Sensor
- F 2 Automatic Light Control Sensor
- K 1 Airbag Sensor Assembly Center
- K 3 Power Outlet Socket (120V)
- K 24 Airbag Sensor Assembly Center
- L 7 Airbag Sensor Assembly Center
- L 23 Airbag Sensor Assembly Center
- L 25 Front Indoor Electrical Key Oscillator
- Z 1 Airbag Squib (Front Passenger's Airbag Assembly)
- Z 2 Airbag Squib (Front Passenger's Airbag Assembly)
- b 1 Foot Lamp (Front LH)
- b 2 Foot Lamp (Front RH)
- c 1 A/C Amplifier , A/C Blower Assembly
- d 1 Key Interlock Solenoid
- e 1 Power Steering ECU , Power Steering Torque Sensor
- e 2 Power Steering ECU , Rotation Angle Sensor
- e 3 Power Steering ECU , Power Steering Motor

Position of Parts in Instrument Panel

