


Citroen Jumper (2006 – 2014) – fuse box diagram

Year of production: 2006, 2007, 2008, 2009, 2007, 2008, 2009, 2010, 2011, 2012, 2013, 2014

Driver's side fascia panel fuses (v1)

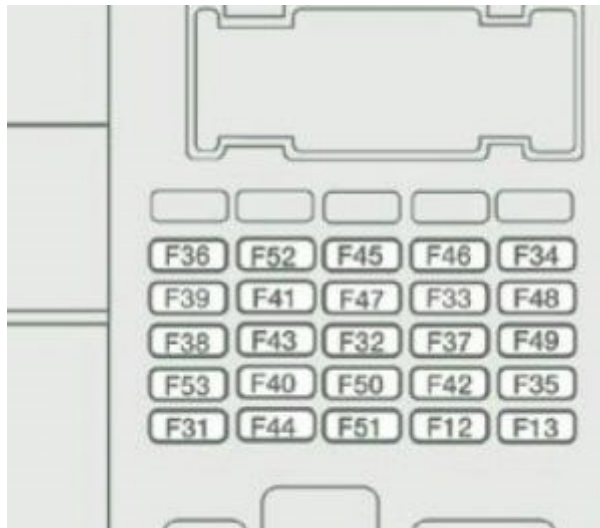


Citroen Jumper – fuse box diagram – driver's side

fascia panel fuses (v1)

No.	A	Allocation
12	7.5	Right-hand dipped beam headlamp
13	7.5	Left-hand dipped beam headlamp – Headlamp height adjuster
31	7.5	Relay supply
32	10	Minibus interior lighting – Hazard warning lamps
33	15	Rear 12 V socket
34	–	Not used
35	7.5	Reversing lamps – Water in Diesel sensor
36	15	Door locking/unlocking unit
37	7.5	Brake lamps switch – Third brake lamp – Instrument panel
38	10	Interior relays
39	10	Audio equipment – Diagnostic socket – Alarm siren – Programmable additional heating controls

40	15	Defrosting: rear screen (left-hand side), mirror (passenger side)
41	15	Defrosting: rear screen (right-hand side), mirror (driver's side)
42	7.5	ABS control unit and sensor – ESP sensor – Brake lamps switch
43	30	Windscreen wiper motor
44	20	Cigar lighter – Front 12 V socket
45	7.5	Electric window and mirror switches (driver's side) – Passenger electric window
46	–	Not used
47	20	Driver's electric window motor
48	20	Passenger electric window motor
49	7.5	Rain/sunshine sensor – Audio equipment – Driver's electric window motor – Alarm – Instrument panel controls
50	7.5	Airbags and pre-tensioners unit
51	7.5	Tachograph – Cruise control – Air conditioning controls
52	7.5	Passenger compartment relays
53	7.5	Instrument panel – Rear fog amps

Driver's side fascia panel fuses (v2)

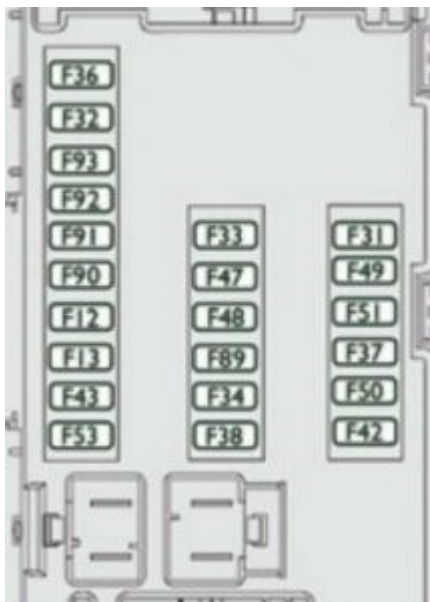


Citroen Jumper – fuse box diagram – driver's side fascia panel fuses (v2)

No.	A	Allocation
12	7.5	Right-hand dipped beam headlamp

13	7.5	Left-hand dipped beam headlamp
31	5	Relay supply
32	7.5	Interior lighting
33	20	Battery sensor
34	20	Minibus interior lighting – Hazard warning
36	10	Audio system – Diagnostic socket – Alarm siren – Programmable additional heating controls – Air conditioning controls – Tachograph – Battery
37	7.5	Brake lamps switch – Third brake lamp – Instrument panel
38	20	Central locking
42	5	ABS control unit and sensor – ASR sensor – ESP sensor – Brake lamps switch
43	20	Windscreen wiper motor
47	20	Driver's electric window motor
48	20	Passenger electric window motor
49	5	Audio system – Instrument panel controls
50	7.5	Airbags and pre-tensioners unit
51	5	Tachograph – Cruise control – Air conditioning controls – Reversing lamps – water in Diesel sensor
53	7.5	Instrument panel
89	–	Not used
90	7.5	Left hand main beam headlamp
91	7.5	Right han main beam headlamp
92	7.5	Left hand foglamp
93	7.5	Right hand foglamp


Passenger pillar fuses

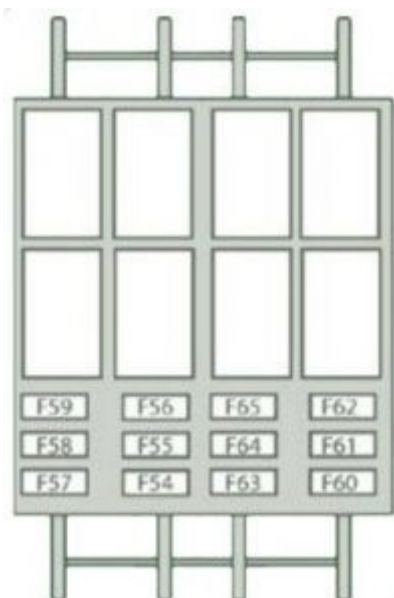

Citroen Jumper – fuse box diagram – passenger pillar fuses

No.	A	Allocation
54	–	Not used
55	15	Heated seats
56	15	12 V socket
57	10	Programmable additional heating
57	10	Ventilation/heating motor under the driver's seat
58	15	Demisting: left hand rear screen
58	10	Direction indicators
59	15	Demisting: right hand rear screen
60	–	Not used
61	–	Not used
62	–	Not used
63	10	Programmable additional heating switch
64	–	Not used
65	30	Programmable additional heating fan

Fuses in the engine compartment (v1)

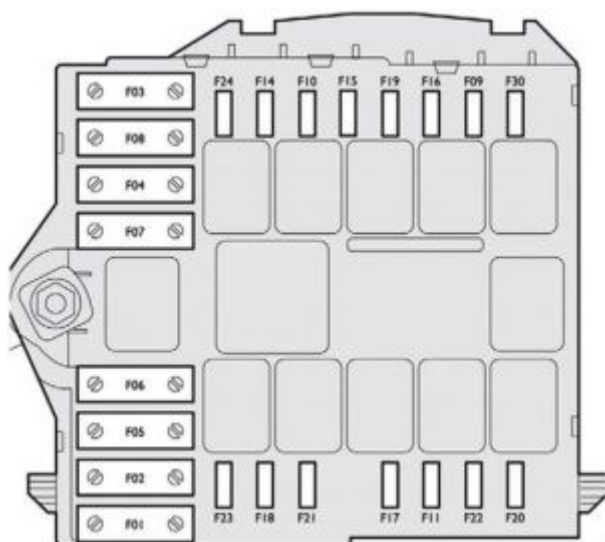


Citroen Jumper – fuse box diagram – engine

compartment

No.	A	Allocation
1	40	ABS/ESP pump supply
2	50	Diesel pre-heat unit
3	30	Ignition switch
4	20	Programmable additional heating burner
5	20	Programmable additional heating controls relay
6	40/60	Fan assembly (high speed)
7	40/50	Fan assembly (low speed)
8	40	Air conditioning
9	20	Windscreen wash pump
10	15	Horn
11	7.5	Diesel pre-heat unit and relay
14	7.5	Right-hand main beam headlamp
15	7.5	Left-hand main beam headlamp
16	7.5	Engine control unit
17	10	Engine control unit
18	7.5	Engine control unit
19	7.5	Air conditioning compressor
20	30	Headlamp wash pump

21	15	Fuel pump supply
22	20	Engine control unit
23	30	ABS/ESP solenoid valves supply
24	–	Not used
30	15	Front fog lamps

Fuses in the engine compartment (v2)

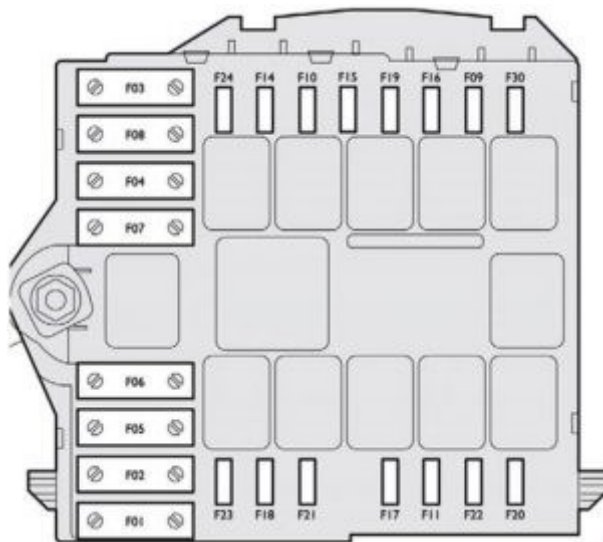

Citroen Jumper – fuse box diagram – engine

compartment

No.	A	Allocation
1	40	ABS/ESP pump supply
2	50	Diesel pre-heater unit
3	30	Ignition switch
4	30	Headlamp washer pump
8	40	Cab fan unit
9	15	Rear 12 V socket
10	15	Horn
14	15	Front 12 V socket
15	10	Cigarette lighter
20	30	Screenwash pump
21	15	Fuel pump supply

24	15	Additional panel for ambulance – Mirrors
30	15	Demisting

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.